



































































## Intelligent Terminal Functions

“C” Group Parameters		Default Setting		User Setting
Func. Code	Name	-MFU2	-MFR2	
C_01	Terminal [1] function	00	00	
C_02	Terminal [2] function	01	01	
C_03	Terminal [3] function	16	02	
C_04	Terminal [4] function	13	03	
C_05	Terminal [5] function	18	18	
C_11	Terminal [1] active state	00	00	
C_12	Terminal [2] active state	00	00	
C_13	Terminal [3] active state	00	00	
C_14	Terminal [4] active state	01	00	
C_15	Terminal [5] active state	00	00	
C_21	Terminal [11] function	01	01	
C_22	Terminal [12] function	00	00	
C_23	[FM] signal selection	00	00	
C_31	Terminal [11] active state	00	—	
C_32	Terminal [12] active state	00	—	
C_33	Alarm relay terminal active state	01	01	
C_41	Overload level setting	Inverter rated current	Inverter rated current	
C_42	Frequency arrival setting for accel	0.0	0.0	
C_43	Arrival frequency setting for decel	0.0	0.0	
C_44	PID deviation level setting	3.0	3.0	
C_70	Data command method	02	02	
C_71	Communication speed selection	04	04	
C_72	Node allocation	01	01	
C_79	Communication error response	01	01	
C_91	Debug mode enable	00	00	Do not edit