HITACHI Inspire the Next

SJ7002Series Inverter Instruction Manual

- Three-phase Input 200V Class
- Three-phase Input 400V Class

U.S. Version Models

European Version Models





Manual Number: NB206XA October 2009 Hitachi Industrial Equipment Systems Co., Ltd.

SJ7002 Inverter

Safety Messages

For the best results with the SJ7002 Series inverter, carefully read this manual and all of the warning labels attached to the inverter before installing and operating it, and follow the instructions exactly. Keep this manual handy for quick reference.

Definitions and Symbols

A safety instruction (message) includes a hazard alert symbol and a signal word, WARNING or CAUTION. Each signal word has the following meaning:



This symbol indicates HIGH VOLTAGE. It calls your attention to items or operations that could be dangerous to you and other persons operation this equipment. Read the message and follow the instructions carefully.



This symbol is the "Safety Alert Symbol." It occurs with either of two signal words: CAUTION or WARNING, as described below.



WARNING: Indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, can result in minor to moderate injury, or serious damage to the product. The situation described in the **CAUTION** may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING), so be sure to observe them.



STEP: A step is one of a series of action steps required to accomplish a goal. The number of the step will be contained in the step symbol.



NOTE: Notes indicate an area or subject of special merit, emphasizing either the product's capabilities or common errors in operation or maintenance.



TIP: Tips give a special instruction that can save time or provide other benefits while installing or using the product. The tip calls attention to an idea that may not be obvious to first-time users of the product.

Hazardous High Voltage



HIGH VOLTAGE: Motor control equipment and electronic controllers are connected to hazardous line voltages. When servicing drives and electronic controllers, there may be exposed components with housings or protrusions at or above line potential. Extreme care should be taken to protect against shock.

Stand on an insulating pad and make it a habit to use only one hand when checking components. Always work with another person in case an emergency occurs. Disconnect power before checking controllers or performing maintenance. Be sure equipment is properly grounded. Wear safety glasses whenever working on electronic controllers or rotating machinery.

General Precautions - Read These First!



WARNING: This equipment should be installed, adjusted, and serviced by qualified electrical maintenance personnel familiar with the construction and operation of the equipment and the hazards involved. Failure to observe this precaution could result in bodily injury.

WARNING: The user is responsible for ensuring that all driven machinery, drive train mechanism not supplied by Hitachi Industrial Equipment Systems Co., Ltd., and process line material are capable of safe operation at an applied frequency of 150% of the maximum selected frequency range to the AC motor. Failure to do so can result in destruction of equipment and injury to personnel should a single-point failure occur.



WARNING: For equipment protection, install a ground leakage type breaker with a fast response circuit capable of handling large currents. The ground fault protection circuit is not designed to protect against personal injury.



HIGH VOLTAGE: HAZARD OF ELECTRICAL SHOCK. DISCONNECT INCOMING POWER BEFORE WORKING ON THIS CONTROL.

WARNING: Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.

CAUTION: These instructions should be read and clearly understood before working on SJ7002 series equipment.

CAUTION: Proper grounds, disconnecting devices and other safety devices and their location are the responsibility of the user and are not provided by Hitachi Industrial Equipment Systems Co., Ltd.

CAUTION: Be sure to connect a motor thermal disconnect switch or overload device to the SJ7002 series controller to assure that the inverter will shut down in the event of an overload or an overheated motor.



HIGH VOLTAGE: Dangerous voltage exists until power light is OFF. Wait at least 10 minutes after input power is disconnected before performing maintenance.

CAUTION: This equipment has high leakage current and must be permanently (fixed) hardwired to earth ground via two independent cables.

WARNING: Rotating shafts and above-ground electrical potentials can be hazardous. Therefore, it is strongly recommended that all electrical work conform to the National Electrical Codes and local regulations. Installation, alignment and maintenance should be performed only by qualified personnel.

Factory-recommended test procedures included in the instruction manual should be followed. Always disconnect electrical power before working on the unit. incoming power for alarm connection is completely disconnected.



CAUTION:

- a) Motor must be connected to protective ground via low resistive path (< 0.1Ω)
- b) Any motor used must be of a suitable rating.
- c) Motors may have hazardous moving parts. In this event suitable protection must be provided.


CAUTION: Alarm connection may contain hazardous live voltage even when inverter is disconnected. When removing the front cover for maintenance or inspection, confirm that



CAUTION: Hazardous (main) terminals for any interconnection (motor, contact breaker, filter, etc.) must be inaccessible in the final installation.

CAUTION: The end application must be in accordance with BS EN60204-1. Refer to the section <u>"Step-by-Step Basic Installation" on page 2–6</u>. The diagram dimensions are to be suitably amended for your application.

CAUTION: Connection to field wiring terminals must be reliably fixed having two independent means of mechanical support. Using a termination with cable support (figure below), or strain relief, cable clamp, etc.

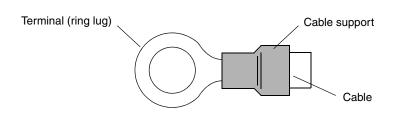



CAUTION: A three-pole disconnection device must be fitted to the incoming main power supply close to the inverter. Additionally, a protection device meeting IEC947-1/IEC947-3 must be fitted at this point (protection device data shown in <u>"Determining Wire and Fuse Sizes"</u> on page 2–18).

_/	<u> </u>	
	\equiv	
1		
1		

NOTE: The above instructions, together with any other requirements are highlighted in this manual, and must be followed for continued LVD (European Low Voltage Directive) compliance.

Index to Warnings and Cautions in This Manual

Installation—Cautions for Mounting Procedures

CAUTION: Be sure to install the unit on flame-resistant material such as a steel plate. Otherwise, there is the danger of fire.	<u>2–6</u>
CAUTION: Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.	<u>2–6</u>
CAUTION: Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.	<u>2–6</u>
CAUTION: Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.	<u>2–6</u>
CAUTION: Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel.	<u>2–6</u>
CAUTION: Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.	<u>2–6</u>
CAUTION: Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt air, etc. Otherwise, there is the danger of fire.	<u>2–6</u>
CAUTION: Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire.	<u>2–8</u>

Wiring—Warnings for Electrical Practices and Wire Specifications



witting—warnings for Electrical Fractices and wite Specification	15
WARNING: Use 75°C Cu wire only or equivalent.	<u>2–17</u>
WARNING: Open Type Equipment. For models SJ700–750H to SJ700–4000H.	<u>2–17</u>
WARNING: A Class 2 circuit wired with Class 1 wire or equivalent.	<u>2–17</u>
WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 240 V maximum. For models with suffix L.	<u>2–17</u>
WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 480 V maximum. For models with suffix H.	<u>2–17</u>



personnel. Otherwise, there is a danger of electric shock and/or fire.

SJ7002 Inverter

V







Wiring—Cautions for Electrical Practices




CAUTION: Be sure that the input voltage matches the inverter specifications: • Three phase 200 to 240V 50/60Hz • Three phase 380 to 480V 50/ 60Hz



CAUTION: Be sure not to power a three-phase-only inverter with single $\frac{2-25}{2}$ has power. Otherwise, there is the possibility of damage to the inverter and the danger of fire.



CAUTION: Be sure not to connect an AC power supply to the output terminals. Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire. 2-25

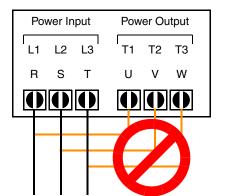

NOTE:

L1, L2, L3: Three-phase 200 to 240V 50/60 Hz Three-phase 380 to 480V 50/60 Hz



CAUTION: Fasten the screws with the specified fastening torque in the <u>2–20</u> table below. Check for any loosening of screws. Otherwise, there is the danger of fire. CAUTION: Remarks for using ground fault interrupter breakers in the main <u>2–25</u> power supply: Adjustable frequency inverters with CE-filters (RFI-filter) and shielded (screened) motor cables have a higher leakage current toward Earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupter breakers. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current. Please observe the following: • Use only short time-invariant and pulse current-sensitive ground fault interrupter breakers with higher trigger current. • Other components should be secured with separate ground fault interrupter breakers. • Ground fault interrupter breakers in the power input wiring of an inverter are not an absolute protection against electric shock. CAUTION: Be sure to install a fuse in each phase of the main power supply <u>2–25</u> to the inverter. Otherwise, there is the danger of fire. CAUTION: For motor leads, ground fault interrupter breakers and electro-..... 2–25 magnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire.



Powerup Test Caution Messages



CAUTION: The heat sink fins will have a high temperature. Be careful not 2-27 to touch them. Otherwise, there is the danger of getting burned.





CAUTION: If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury to personnel.



CAUTION: Check the following before and during the powerup test. Otherwise, there is the danger of equipment damage. • Is the shorting bar between the [P] and [PD] terminals installed? DO NOT power or operate the inverter if the jumper is removed. • Is the direction of the motor rotation correct? • Did the inverter trip during acceleration or deceleration? • Were the rpm and frequency meter readings as expected? • Were there any abnormal motor vibrations or noise?

..... <u>2–28</u>

..... <u>2–28</u>

..... <u>4–3</u>

..... <u>4–3</u>

..... <u>4–3</u>

..... <u>4–3</u>

..... <u>4–15</u>

..... <u>4–24</u>

Warnings for Operations and Monitoring

danger of electric shock.



WARNING: Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of electric shock.







 WARNING: If the power supply is cut OFF for a short period of time, the inverter may restart operation after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel.
 4-3

 WARNING: The Stop Key is effective only when the Stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel.
 4-3

 WARNING: During a trip event, if the alarm reset is applied and the Run command is present the inverter will automatically restart. Be sure to apply
 4-3



WARNING: During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel.



WARNING: Be sure not to touch the inside of the energized inverter or to put any conductive object into it. Otherwise, there is a danger of electric shock and/or fire. WARNING: If power is turned ON when the Run command is already active, the motor will automatically start and injury may result. Before



WARNING: When the Stop key function is disabled, pressing the Stop key does not stop the inverter, nor will it reset a trip alarm.

WARNING: If the power is turned ON and the Run command is already

turning ON the power, confirm that the RUN command is not present.





active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the external Run command is not active. WARNING: After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active. Be sure to set the alarm reset after verifying that the Run command is OFF to



prevent injury to personnel.

..... <u>4–2</u>

..... <u>4–2</u>

..... <u>4–2</u>

..... <u>4–7</u>

..... <u>4–26</u>

..... <u>6–2</u>

..... <u>6–2</u>

Cautions for Operations and Monitoring



CAUTION: The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.



CAUTION: The operation of the inverter can be easily changed from low speed to high speed. Be sure check the capability and limitations of the motor and machine before operating the inverter. Otherwise, it may cause injury to personnel.



CAUTION: If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.



CAUTION: It is possible to damage the inverter or other devices if your application exceeds the maximum current or voltage characteristics of a connection point.



CAUTION: Be careful not to turn PID Clear ON and reset the integrator sum when the inverter is in Run Mode (output to motor is ON). Otherwise, this could cause the motor to decelerate rapidly, resulting in a trip.



CAUTION: When the motor runs at lower speeds, the cooling effect of the $\frac{4-52}{1000}$ motor's internal fan decreases.



CAUTION: If the inverter capacity is more than twice the capacity of the motor in use, the inverter may not achieve its full performance specifications. 4-74

Warnings and Cautions for Troubleshooting and Maintenance





WARNING: Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel.



WARNING: Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C. board). Otherwise, there is danger of fire due to wire breakage and/or injury to personnel.



CAUTION: Do not connect the megger to any control circuit terminals such $\frac{6-19}{100}$ as intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter.



CAUTION: Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground. 6-19

X



WARNING: The screws that retain the capacitor bank assembly are part of the electrical circuit of the high-voltage internal DC bus. Be sure that all power has been disconnected from the inverter, and that you have waited at least 10 minutes before accessing the terminals or screws. Be sure the charge lamp is extinguished. Otherwise, there is the danger of electrocution to personnel.



CAUTION: Do not operate the inverter unless you have replaced the two screws that connect the capacitor bank assembly to the internal DC bus. Otherwise, damage to the inverter may occur. 6-21

Â

HIGH VOLTAGE: Be careful not to touch wiring or connector terminals 6-26 when working with the inverters and taking measurements. Be sure to place the measurement circuitry above in an insulated housing before using them.

General Warnings and Cautions




WARNING: Never modify the unit. Otherwise, there is a danger of electric shock and/or injury.

CAUTION: Withstand voltage tests and insulation resistance tests (HIPOT) are executed before the units are shipped, so there is no need to conduct these tests before operation.

CAUTION: Do not attach or remove wiring or connectors when power is applied. Also, do not check signals during operation.


CAUTION: Do not stop operation by switching OFF electromagnetic contactors on the primary or secondary sides of the inverter.

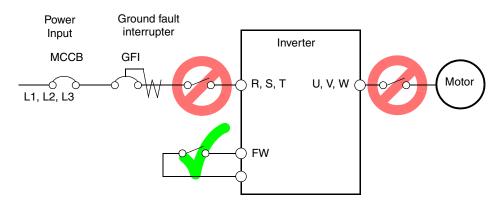

When there has been a sudden power failure while a Run command is active, then the unit may restart operation automatically after the power failure has ended. If there is a possibility that such an occurrence may harm humans, then install an electromagnetic contactor on the power supply side, so that the circuit does not allow automatic restarting after the power supply recovers. If an optional remote operator is used and the retry function has been selected, this will also allow automatic restarting when a Run command is active. So, please be careful.



CAUTION: Do not insert leading power factor capacitors or surge absorbers between the output terminals of the inverter and motor.

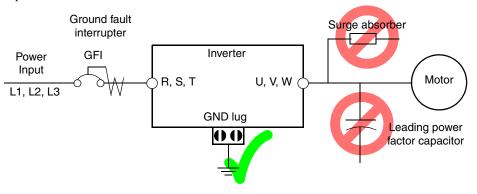

CAUTION: Be sure to connect the grounding terminal to earth ground.


CAUTION: When inspecting the unit, be sure to wait 10 minutes after tuning OFF the power supply before opening the cover.

CAUTION: SUPPRESSION FOR NOISE INTERFERENCE FROM INVERTER

The inverter uses many semiconductor switching elements such as transistors and IGBTs. Thus, a radio receiver or measuring instrument located near the inverter is susceptible to noise interference.

To protect the instruments from erroneous operation due to noise interference, they should be used well away from the inverter. It is also effective to shield the whole inverter structure. The addition of an EMI filter on the input side of the inverter also reduces the effect of noise from the commercial power line on external devices.

Note that the external dispersion of noise from the power line can be minimized by connecting an EMI filter on the primary side of inverter.

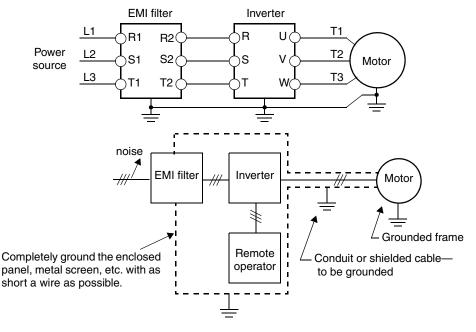

Xİ



CAUTION: MOTOR TERMINAL VOLTAGE SURGE SUPPRESSION FILTER (For 400 V CLASS Inverters)

In a system using an inverter with the voltage control PWM system, a voltage surge caused by the cable constants such as the cable length (especially when the distance between the motor and inverter is 10 m or more) and cabling method may occur at the motor terminals. A dedicated filter of the 400 V class for suppressing this voltage surge is available. Be sure to install a filter in this situation. (See "LCR filter" on page 5-2, part type HRL-xxxC.)



CAUTION: EFFECTS OF POWER DISTRIBUTION SYSTEMS ON INVERTERS

In the cases below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

- 1. The unbalance factor of the power supply is 3% or higher.
- 2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500 kVA or more).
- 3. Abrupt power supply changes are expected, due to conditions such as:
 - a. Several inverters are interconnected with a short bus. b. A thyristor converter and an inverter are interconnected with a short bus.
 - c. An installed phase advance capacitor opens and closes.

Where these conditions exist or when the connected equipment must be highly reliable, you MUST install an input-side AC reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightning strike are possible, install a lightning conductor.



CAUTION: EFFECTS OF SHARING POWER SOURCE BETWEEN INVERTER AND OTHER MOTORS

An electric cooling fan for the motor shall be powered from another system. A motor directly connected to the power source shall also be power from another system. If they are powered from the same system as the inverter, an insufficient voltage protection error (E09)or an instantaneous power failure protection error (E16) may occur when the inverter is turned OFF.



CAUTION: Do not install inverters in a corner-grounded Delta distribution system. The resulting line imbalance will cause premature line fuse failure and failure of the inverter input bridge rectifier. Install in a balanced Delta or Wye distribution system only.



CAUTION: When the EEPROM error E8 occurs, be sure to confirm the setting values again.



CAUTION: When using normally closed active state settings (C011 to C019) for externally commanded Forward or Reverse terminals [FW] or [RV], the inverter may start automatically when the external system is powered OFF or disconnected from the inverter! So, do not use normally closed active state settings for Forward or Reverse terminals [FW] or [RV] unless your system design protects against unintended motor operation.



CAUTION: Do not discard the inverter with household waste. Contact an industrial waste management company in your area who can treat industrial waste without polluting the environment.



General Caution



CAUTION: In all the illustrations in this manual, covers and safety devices are occasionally removed to describe the details. While operating the product, make sure that the covers and safety devices are placed as they were specified originally and operate it according to the instruction manual.

UL[®] Cautions, Warnings, and Instructions

Wiring Warnings for Electrical Practices and Wire Sizes

The Cautions, Warnings, and instructions in this section summarize the procedures necessary to ensure an inverter installation complies with Underwriters Laboratories[®] guidelines.

The SJ7002 series inverter family is an open-type and/or Enclosed Type 1 (when employing accessory Type 1 Chassis Kit) AC inverter with 3-phase input and 3-phase output. The inverter are intended for use in an enclosure. The inverter supplies adjustable voltage and adjustable frequency to an AC motor. The inverter can automatically maintain a constant volts/Hz ratio to enhance the motor capability throughout its entire speed range.



WARNING: Use 65/75°C Cu wire only or equivalent. For SJ700 series except SJ700-300Lxx and SJ700-370Lxx.



WARNING: Use 75°C Cu wire only or equivalent. For SJ700-300Lxx and SJ700-370Lxx.



WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes with 240 V maximum. For models with suffix L (200V class).



WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes with 480 V maximum. For models with suffix H (400V class).



WARNING: The inverter must be installed in an environment that is rated for at least Pollution Degree 2 or equivalent.



WARNING: The ambient temperature must not exceed 50°C.



WARNING: The capacitor discharge time is 10 minutes or more. (Caution: Care must be taken to avoid the risk of electric shock.)



WARNING: Each model of the inverter has a solid-state overload protection circuit or an equivalent feature for the motor.

Wire Size

SJ7002 Inverter

XIII

Input Voltage		otor tput	200V	Wire Size Range (AWG)	Torque		
	ge Inverter Model		Inverter Model		ft-lbs	(N-m)	
	0.5	0.4	SJ700-004LFU2	14 (stranded only)	1.3	1.8	
	1	0.75	SJ700-007LFU2	14 (stranded only)	1.3	1.8	
	2	1.5	SJ700-015LFU2	14 (stranded only)	1.3	1.8	
	3	2.2	SJ700-022LFU2	14 (stranded only)	1.3	1.8	
	5	3.7	SJ700-037LFU2	10 (stranded only)	1.3	1.8	
	7.5	5.5	SJ700-055LFU2	8	3.0	4.0	
	10	7.5	SJ700-075LFU2	6	3.0	4.0	
	15	11	SJ700-110LFU2	6-4	3.0	4.0	
200V	20	15	SJ700-150LFU2	2	3.6	4.9	
	25	18.5	SJ700-185LFU2	1	3.6	4.9	
	30	22	SJ700-220LFU2	1 or 1/0	6.5	8.8	
	40	30	SJ700-300LFU2	2/0 or 1/0 1/0	6.5	8.8	
	50	37	SJ700-370LFU2	4/0 (prepared wire only) or 1/0 ∥ 1/0	14.8	20.0	
	60	45	SJ700-450LFU2	4/0 (prepared wire only) or 1/0 ∥ 1/0	14.8	20.0	
	75	55	SJ700-550LFU2	350 kcmil (prepared wire only) or 2/0 2/0 (prepared wire only	14.5	19.6	

Input Voltage	Motor Output		400V Inverter Model	Power Terminals	Wire Size Range (AWG)	Torque		
voltage	HP	kW	niverter Model			ft-lbs	(N-m)	
	0.5	0.75	SJ700-007HFU2/E	(All)	14 (stranded only)	1.3	1.8	
	1	1.5	SJ700-015HFU2/E	(All)	14 (stranded only)	1.3	1.8	
	2	2.2	SJ700-022HFU2/E	(All)	14 (stranded only)	1.3	1.8	
	3	4.0	SJ700-040HFU2/E	(All)	14 (stranded only)	1.3	1.8	
	7.5	5.5	SJ700-055HFU2/E	(All)	12	3.0	4.0	
	10	7.5	SJ700-075HFU2/E	(All)	10	3.0	4.0	
400V	15	11	SJ700-110HFU2/E	(All)	8	3.0	4.0	
400 V	20	15	SJ700-150HFU2/E	(All)	6	3.6	4.9	
	25	18.5	SJ700-185HFU2/E	(All)	6	3.6	4.9	
	30	22	SJ700-220HFU2/E	(All)	6 or 4	6.5	8.8	
	40	30	SJ700-300HFU2/E	(All)	3	6.5	8.8	
	50	37	SJ700-370HFU2/E	(All)	1	14.8	20.0	
	60	45	SJ700-450HFU2/E	(All)	1	14.8	20.0	
	75	55	SJ700-550HFU2/E	(All)	2/0	14.5	19.6	

Terminal Tightening Torque and The wire size range and tightening torque for field wiring terminals are presented in the table below.

Input	Motor Output HP kW		400V Inverter Model	Power Terminals	Wire Size Range (AWG)	Torque		
Voltage			inverter widder			ft-lbs	(N-m)	
	100	75	SJ700-750HFU2/E	(All)	1/0 1/0	14.8	20.0	
	125	90	SJ700-900HFU2/E	(All)	1/0 1/0	14.8	20.0	
	150	110	SJ700-1100HFU2/E	(All)	3/0 3/0	25.8	35.0	
	150	132	SJ700–1320HFE2, SJ700–1500HFU2	(All)	3/0 3/0	25.8	35.0	
	250	185	SJ700-1850HFU2/E	[R, S, T, U, V, W]	250 kcmil x 2	55.3	75.0	
				[P, PD, N]	300 kcmil x 2	6.0	8.1	
				[P, N] Braking unit	1	55.3	75.0	
400V				Earth GND	250 kcmil	28.9	39.2	
	400	315	SJ700-3150HFU2/E	[R, S, T, U, V, W]	400 kcmil x 2	32.5	44.0	
				[P, PD, N]	500 kcmil x 2	14.8	20	
				[P, N] Braking unit	250 kcmil	32.5	44.0	
				Earth GND	400 kcmil	28.9	39.2	
	500	400	SJ700-4000HFU2/E	[R, S, T, U, V, W]	600 kcmil x 2	38.4	52.0	
				[P, PD, N]	800 kcmil x 2	14.8	20	
				[P, N] Braking unit	250 kcmil x 2	38.4	52.0	
				Earth GND	600 kcmil	28.9	39.2	

XV

Fuse and Circuit Breaker Sizes

uit The inverter's input power wiring must include UL Listed, dual-element, 600V fuses, or UL Listed, inverse-time, 600V circuit breakers.

Input	Motor Output												200V	Ampere Rating for Fuse or			otor tput	400V Inverter Model	Ampere Rating for Fuse or
Voltage HP kW Inverter Model Breaker Vo		voitage	HP	kW	Inverter Model	Breaker													
	0.5	0.4	SJ700-004LFU2	5A			—	—	—										
	1	0.75	SJ700-007LFU2	10A		1	0.75	SJ700-007HFU2/E	5A										
	2	1.5	SJ700-015LFU2	15A		2	1.5	SJ700-015HFU2/E	10A										
	3	2.2	SJ700-022LFU2	20A		3	2.2	SJ700-022HFU2/E	10A										
	5	3.7	SJ700-037LFU2	30A		5	3.7	SJ700-037HFU2/E	15A										
	7.5	5.5	SJ700-055LFU2	30A		7.5	5.5	SJ700-055HFU2/E	15A										
	10	7.5	SJ700-075LFU2	40A		10	7.5	SJ700-075HFU2/E	20A										
200V	15	11	SJ700-110LFU2	60A		15	11	SJ700-110HFU2/E	30A										
	20	15	SJ700-150LFU2	80A		20	15	SJ700-150HFU2/E	40A										
	25	18.5	SJ700-185LFU2	100A		25	18.5	SJ700-185HFU2/E	50A										
	30	22	SJ700-220LFU2	125A		30	22	SJ700-220HFU2/E	60A										
	40	30	SJ700-300LFU2	150A	400V	40	30	SJ700-300HFU2/E	70A										
	50	37	SJ700-370LFU2	175A		50	37	SJ700-370HFU2/E	90A										
	60	45	SJ700-450LFU2	225A		60	45	SJ700-450HFU2/E	125A										
	75	55	SJ700-550LFU2	250A		75	55	SJ700-550HFU2/E	125A										
			·			100	75	SJ700-750HFU2/E	225A										
						125	90	SJ700-900HFU2/E	225A										
						150	110	SJ700-1100HFU2/E	300A										
						200	150	SJ700-1320HFE2 SJ700-1500HFU2	300A										
						250	185	SJ700-1850HFU2/E	400A										
						400	315	SJ700-3150HFU2/E	700A										
						55	400	SJ700-4000HFU2/E	1000A										

Wire Connectors

	WARNING: Field wiring connections must be made by a UL Listed and CSA Certified ring lug terminal connector sized for the wire gauge being used. The connector must be fixed using the crimping tool specified by the connector manufacturer.
Motor Overload Protection	Hitachi SJ7002 inverters provide solid state motor overload protection, which depends on the proper setting of the following parameters:
	B012 "electronic overload protection"
	B212 "electronic overload protection, 2nd motor"
	B312 "electronic overload protection, 3rd motor"
	Set the rated current [Amperes] of the motor(s) with the above parameters. The setting range is $0.2 *$ rated current to $1.2 *$ rated current.
	WARNING: Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the NEC and any additional local codes.
٨	



WARNING: When two or more motors are connected to the inverter, they cannot be protected by the electronic overload protection. Install an external thermal relay on each motor.

xvii

Table of Contents

Safety Messages

Hazardous High Voltage	i
General Precautions - Read These First!	ii
Index to Warnings and Cautions in This Manual	iv
General Warnings and Cautions	ix
UL® Cautions, Warnings, and Instructions	<u>xii</u>

Table of Contents

Revisions	xix
Contact Information	<u>XX</u>

Chapter 1: Getting Started

Introduction	1-2
Inverter Specifications	<u>1–6</u>
Introduction to Variable-Frequency Drives	<u> </u>
Frequently Asked Questions	<u> </u>

Chapter 2: Inverter Mounting and Installation

Orientation to Inverter Features	2-2
Basic System Description	2_5
Step-by-Step Basic Installation	2_6
Powerup Test	2_27
Using the Front Panel Keypad	2–29
Emergency Stop Function	2–37

Chapter 3: Configuring Drive Parameters

Choosing a Programming Device	3-2
Using Keypad Devices	<u>3–3</u>
"D" Group: Monitoring Functions	<u> </u>
"F" Group: Main Profile Parameters	<u>3–9</u>
"A" Group: Standard Functions	<u> </u>
"B" Group: Fine-Tuning Functions	<u>3–30</u>
"C" Group: Intelligent Terminal Functions	<u>3–50</u>
"H" Group: Motor Constants Functions	<u> </u>
"P" Group: Expansion Card Functions	<u>3–69</u>
"U" Group: User-selectable Menu Functions	<u>3–74</u>
Programming Error Codes	<u>3–75</u>

Chapter 4: Operations and Monitoring

Introduction	4-2
Optional Controlled Decel and Alarm at Power Loss	4_4
Connecting to PLCs and Other Devices	4-7
Using Intelligent Input Terminals	4–13
Using Intelligent Output Terminals	4-43
Analog Input Operation	4–63
Analog Output Operation	4–66
Setting Motor Constants for Vector Control	4-69
PID Loop Operation	4-75
Configuring the Inverter for Multiple Motors	4–76

Chapter 5: Inverter System Accessories

Introduction	5_2
Component Descriptions	5_3
Dynamic Braking	5_6

Chapter 6: Troubleshooting and Maintenance

Troubleshooting	6-2
Monitoring Trip Events, History, & Conditions	6-5
Restoring Factory Default Settings	<u>6–16</u>
Maintenance and Inspection	<u>6–17</u>
Warranty	<u>6–29</u>

Appendix A: Glossary and Bibliography

Glossary	<u>A-2</u>
Bibliography	A6

Appendix B: Serial Communications

Introduction	<u>B–2</u>
ASCII Mode Communications	<u>B–5</u>
Communications Reference Information	<u>B–18</u>
ModBus Mode Communications	<u>B–21</u>
ModBus Data Listing	<u>B–33</u>

Appendix C: Drive Parameter Settings Tables

Introduction	<u>C-2</u>
Parameter Settings for Keypad Entry	<u>C–2</u>

Appendix D: CE–EMC Installation Guidelines

CE-EMC Installation Guidelines	<u>D-2</u>
Precautions for EMC. Models SJ700-004 to -1500	<u>D-4</u>
Precautions for EMC, Models SJ700-1850 to -4000	<u>D–5</u>

Index

Revisions

Revision History Table

No.	Revision Comments	Date of Issue	Operation Manual No.
	Initial release of manual NB206X	August 2008	NB206X
А	Add new inverter models from -004xxx to 037xxx, and models -750Hxx to -4000Hxx Numerous additions and corrections throughout manual	October 2009	NB206XA

Contact Information

Hitachi America, Ltd. Industrial Sales Division 50 Prospect Avenue Tarrytown, NY 10591 U.S.A. Phone: +1-914-631-0600 Fax: +1-914-631-3672 Web site: www.hitachi-america.us/inverters

Hitachi Europe GmbH Am Seestern 18 D-40547 Düsseldorf Germany Phone: +49-211-5283-0 Fax: +49-211-5283-649 Web site: www.hitachi-ds.com/en/product/inv/

Hitachi Asia Ltd. 16 Collyer Quay #20-00 Hitachi Tower, Singapore 049318 Singapore Phone: +65-538-6511 Fax: +65-538-9011

Hitachi Asia (Hong Kong) Ltd. 7th Floor, North Tower World Finance Centre, Harbour City Canton Road, Tsimshatsui, Kowloon Hong Kong Phone: +852-2735-9218 Fax: +852-2735-6793 Hitachi Australia Ltd. Level 3, 82 Waterloo Road North Ryde, N.S.W. 2113 Australia Phone: +61-2-9888-4100 Fax: +61-2-9888-4188

Hitachi Industrial Equipment Systems Co., Ltd. AKS Building, 3, Kanda Neribei-cho Chiyoda-ku, Tokyo, 101-0022 Japan Phone: +81-3-4345-6910 Fax: +81-3-4345-6067

Hitachi Industrial Equipment Systems Co, Ltd. Narashino Division 1-1, Higashi-Narashino 7-chome Narashino-shi, Chiba 275-8611 Japan Phone: +81-47-474-9921 Fax: +81-47-476-9517 Web site: www.hitachi-ies.co.jp/english/



NOTE: To receive technical support for the Hitachi inverter you purchased, contact the Hitachi inverter dealer from whom you purchased the unit, or the sales office or factory contact listed above. Please be prepared to provide the following inverter nameplate information:

- 1. Model
- 2. Date of purchase
- 3. Manufacturing number (MFG No.)
- 4. Symptoms of any inverter problem

If any inverter nameplate information is illegible, please provide your Hitachi contact with any other legible nameplate items. To reduce unpredictable downtime, we recommend that you stock a spare inverter.

Getting Started



In This Chapter	page
— Introduction	<u>2</u>
— Inverter Specifications	<u>6</u>
 Introduction to Variable-Frequency Drives 	<u>14</u>
— Frequently Asked Questions	<u>18</u>

Introduction

Call 1(800)985-6929 for Sales

Introduction

Main Features

Congratulations on your purchase of an SJ7002 Series Hitachi inverter! This inverter drive features state-of-the-art circuitry and components to provide high performance. The housing footprint is exceptionally small, given the size of the corresponding motor. The Hitachi SJ7002 product line includes more than twenty inverter models to cover motor sizes from 1/2 horsepower to 500 horsepower, in either 230 VAC or 480 VAC power input versions. The main features are:

- 200V Class and 400V Class inverters
- U.S. or European version available
- Sensorless vector control
- Regenerative braking circuit
- Different operator keypads available for RUN/ STOP control and setting parameters
- Built-in RS-422 communications interface to allow configuration from a PC and for field bus external modules
- Sixteen programmable speed levels
- Motor constants are programmable, or may be set via auto-tuning
- PID control adjusts motor speed automatically to maintain a process variable value

The design of Hitachi inverters overcomes many of the traditional trade-offs between speed, torque and efficiency. The performance characteristics are:

- High starting torque of 150% rating or greater
- Continuous operation at 100% rated torque within a 1:10 speed range (6/60 Hz / 5/50 Hz) without motor derating
- Models from 0.4–22kW (1/2 to 30hp) have builtin dynamic braking circuits
- Models from 0.4–11kW (1/2 to 15hp) have optional built-in dynamic braking resistor
- Cooling fan has ON/OFF selection to provide longer life

A full line of accessories from Hitachi is available to complete your motor control application. These include:

- Digital remote operator keypad
- · Expansion card for sensor feedback
- Braking resistors
- Radio noise filters
- Built-in CE compliance filters
- Additional factory I/O network interface cards (to be announced)



Model SJ700-110HFUF2 (U.S. version)



Model SJ700-037HFEF2 (European version)



Expansion Card - Encoder Input

1–2

SJ7002 Inverter

Digital Operator Interface Components

The SJ7002 Series inverters have a detachable keypad (called a digital operator) on the front panel of the housing. The particular keypad that comes with the inverter depends on the country or continent corresponding to the particular model number. The standard digital operators occupy just part of the keypad recess in the panel. Therefore, the inverter comes with a snap-in panel filler plate that mounts below the keypad as shown.

These detachable keypads can be mounted in a NEMA cabinet panel door cut-out, for example. Threaded metal inserts on the rear of the keypads facilitate this external mounting configuration. A short cable then connects the keypad unit to the connector in the inverter keypad recess. See Chapter 3 for information on how to install and use these keypads and cables.



Digital Operator OPE-SRE standard for -LFU and -HFU models





Digital Operator OPE-S standard for -HFE models

The digital operator / copy unit is optional, and occupies the entire keypad recess when mounted. It has the additional capability of reading (uploading) the parameter settings in the inverter into its memory. Then you can install the copy unit on another inverter and write (download) the parameter settings into that inverter. OEMs will find this unit particularly useful, as one can use a single copy unit to transfer parameter settings from one inverter to many.

Other digital operator interfaces may be available from your Hitachi distributor for particular industries or international markets. Contact your Hitachi distributor for further details.



Optional Digital Operator / Copy Unit SRW-0EX

1-3

Introduction

Removable Components The SJ7002 Series inverters are designed for long life and ease of service. Several components are removable as shown below, aiding installation or parts replacement. Details on how and when to remove these parts are in the referenced chapters.




1_4

sales@hitachiacdrive.com

SJ7002 Inverter

Specifications Label and Agency Approvals

The Hitachi SJ7002 inverters have product specifications labels located on the front and the right side of the housing, as shown below. The director reactor filters also have a product label. Be sure to verify that the specifications on the labels match your power source, motor, and application safety requirements.

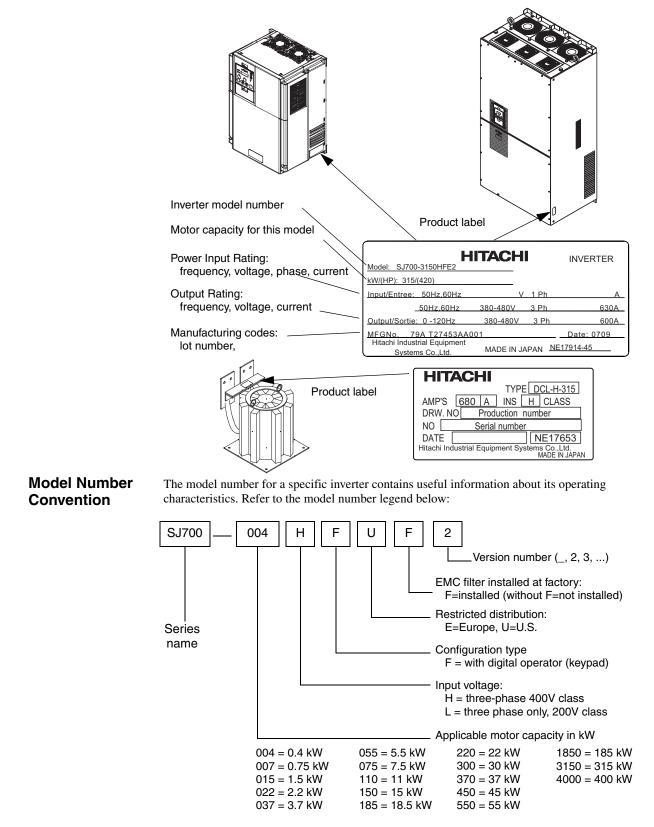

1-5

Inverter Specifications

Inverter Specifications

Tables for 200V class inverters

Note that <u>"General Specifications" on page 1–10</u> covers all SJ7002 inverters, followed by footnotes for all specifications tables. The 200V models from –004 to –220LFU2 (0.5 to 30 HP) include internal dynamic braking units (see <u>"Dynamic Braking" on page 5–6</u>).

Ite	200V Class Specifications							
SJ7002, 200V models	SJ7002, 200V models, U.S. version			004LFUF2 007LFUF2 015LFUF2 022LFUF2 037LFU				
Applicable motor size	, 4-pole *2	HP	0.5	1	2	3	5	
	0.4	0.75	1.5	2.2	3.7			
Rated capacity, kVA,	200V / 240V		1.0 / 1.2	1.7 / 2.0	2.5 / 3.1	3.6 / 4.3	5.7 / 6.8	
Rated input voltage			3-ph	ase: 200 to 24	0V +10%/-15	5%, 50/60 Hz	±5%	
Rated input current (A	()		3.3	5.5	8.3	12	18	
Rated output voltage	*3		3-phase (3-	wire) 200 to 2	240V (corresp	ponding to inj	out voltage)	
Rated output current (A)		3 5 7.5 10.5 16.5					
Overload capacity, ou	tput current (A))		150% for	60 sec., 200%	for 3 sec.		
Efficiency at 100% rat	ted output, %		85.1	89.5	92.3	93.2	94.0	
Watt loss,	at 70% output		64	76	102	127	179	
approximate (W)	at 100% outp	ut	70	88	125	160	235	
Dynamic braking	internal chop	per	20	20	20	20	20	
approx. % torque, short time stop *7 with external res.		>150	>150	>150	>150	110		
Min. external braking	50	50	35	35	35			
DC braking Variable operating frequency, time, and braking f					g force			
Electrical filtering Built-in EMC filter and built-in zero-phase read				eactor				
Weight	3.5 / 7.7	3.5 / 7.7	3.5 / 7.7	3.5 / 7.7	3.5 / 7.7			

Ite	200V Class Specifications							
SJ7002, 200V models	s, U.S. version		055LFUF2 075LFUF2 110LFUF2 150LFUF2 185LFU2 220L					220LFU2
Applicable motor size	e, 4-pole *2	HP	7.5	10	15	20	25	30
		kW	5.5	7.5	11	15	18.5	22
Rated capacity, kVA	, 200V / 240V		8.3/9.9	11.0 / 13.3	15.9 / 19.1	22.1 / 26.6	26.3 / 31.5	32.9 / 39.4
Rated input voltage				3-phase: 20	0 to 240V +1	0%/-15%, 50	/60 Hz ±5%	
Rated input current (A	A)		26 35 51 70 84 105					105
Rated output voltage *3 3-phase (3-				ase (3-wire)	200 to 240V (correspondin	g to input volt	age)
Rated output current	Rated output current (A)			24 32 46 64 76 95				
Overload capacity, output current (A)			150% for 60 sec., 200% for 3 sec.					
Efficiency at 100% ra	ited output, %		94.4	94.6	94.8	94.9	95.0	95.0
Watt loss,	at 70% output		242	312	435	575	698	820
approximate (W)	at 100% output		325	425	600	800	975	1150
Dynamic braking	internal chop	per	20	20	10	10	10	10
approx. % torque, short time stop *7	with external	res.	140	>150	110	110	90	110
Min. external braking resistance Ω			16	10	10	7.5	7.5	5
DC braking Variable operating					ating frequen	cy, time, and	braking force	
Electrical filtering				Built-in EM	IC filter and b	uilt-in zero-p	hase reactor	
Weight kg / lb			6 / 13.2	6 / 13.2	6 / 13.2	14 / 30.8	14/30.8	14 / 30.8

1-6

sales@hitachiacdrive.com

SJ7002 Inverter

Ite	em		200V Class Specifications, continued				
SJ7002, 200V models	s, U.S. version		300LFU2	370LFU2	450LFU2	550LFU2	
Applicable motor size	2 *2	HP	40	50	60	75	
kW		30	37	45	55		
Rated capacity, kVA,	200V / 240V	•	41.9 / 50.2	50.2 / 60.2	63.0 / 75.6	76.2/91.4	
Rated input voltage			3-phas	e: 200 to 240V +	10/-15%, 50/60 1	Hz ±5%	
Rated input current (A	A)		133	160	200	242	
Rated output voltage	*3		3-phase (3-wire) 200 to 240V (corresponding to input voltage)				
Rated output current (A)			121	145	182	220	
Overload capacity, ou	tput current (A)		150% for 60 sec., 200% for 3 sec.				
Efficiency at 100% ra	ted output, %		95.0	95.1	95.1	95.1	
Watt loss,	at 70% outpu	at 70% output		1345	1625	1975	
approximate (W)	at 100% outp	at 100% output		1900	2300	2800	
Dynamic braking	w/o braking u	ınit	10	10	10	10	
approx. % torque, short time stop *7 with braking unit		55-110%	45–90%	35–75%	30-60%		
DC braking	•		Variable operating frequency, time, and braking force				
Electrical filtering			Built-in EMC filter and built-in zero-phase reactor				
Weight	kg / lb		22/48.4	30 / 66	30 / 66	43 / 94.6	

Tables for 400V class inverters

Note that <u>"General Specifications" on page 1–10</u> covers all SJ7002 inverters, followed by footnotes for all specifications tables. The 400V models from –007 to –220HFU2 (7.5 to 30 HP) include internal dynamic braking units (see <u>"Dynamic Braking" on page 5–6</u>).

Iten	Item				400V Class Specifications					
SJ7002 inverters,	U.S. version		007HFUF2	015HFUF2	022HFUF2	040HFUF2	055HFUF2			
400V models	European ve	er.	007HFEF2	015HFEF2	022HFEF2	040HFEF2	055HFEF2			
Applicable motor size	*2	HP	1	2	3	5	7.5			
		kW	0.75	1.5	2.2	4	5.5			
Rated capacity, kVA, 4	-00 / 480V		1.7 / 2.0	2.5 / 3.1	3.6 / 4.3	5.7 / 6.8	9.7 / 11.6			
Rated input voltage			3-phase	e (3-wire) 380	to 480V +10/	-15%, 50/60 I	Hz ±5%			
Rated input current (A)		2.8	4.2	5.8	9.9	13			
Rated output voltage 3	*3		3-phase (3-wire): 380 to 480V (corresponding to input voltage)							
Rated output current (A	4)		2.5	3.8	5.3	9.0	14			
Overload capacity, out	put current (A	A)	150% for 60 sec., 200% for 3 sec.							
Efficiency at 100% rate	ed output, %		89.5	92.3	93.2	94.0	94.4			
Watt loss,	at 70% output		76	102	127	179	242			
approximate (W)	at 100% out	put	88	125	160	235	325			
Dynamic braking	internal cho	pper	20	20	20	20	20			
approx. % torque, short time stop *7 with external res.		al res.	>150	>150	>150	>150	130			
Min. external braking resistance Ω			100	100	100	70	70			
DC braking			Variable operating frequency, time, and braking force							
Electrical filtering			Built-in EMC filter and built-in zero-phase reactor							
Weight	kg / lb		3.5 / 7.7	3.5 / 7.7	3.5 / 7.7	3.5 / 7.7	6/13.2			

Inverter Specifications

Iten	ı		400V Class Specifications					
SJ7002 inverters,	U.S. version	ı	075HFUF2	110HFUF2	150HFUF2	185HFU2	220HFU2	
400V models	European v	er.	075HFEF2	110HFEF2	150HFEF2	185HFE2	220HFE2	
Applicable motor size	*2	HP	10	15	20	25	30	
		kW	7.5	11	15	18.5	22	
Rated capacity, kVA, 4	480V / 480V		11/13.3	15.9/19.1	22.1 / 26.6	26.3 / 31.5	33.2 / 39.9	
Rated input voltage			3-phase	e (3-wire) 380	to 480V +10/	-15%, 50/60 I	Hz ±5%	
Rated input current (A)		18	25	35	42	53	
Rated output voltage	*3		3-phase (3-wire): 380 to 480V (corresponding to input voltage)					
Rated output current (A	A)		16	23	32	38	48	
Overload capacity, out	put current (A	A)	150% for 60 sec., 200% for 3 sec.					
Efficiency at 100% rat	ed output, %		94.6	94.8	94.9	95.0	95.0	
Watt loss,	at 70% output		312	435	575	698	820	
approximate (W)	at 100% output		425	600	800	975	1150	
Dynamic braking	internal cho	pper	20	10	10	10	10	
approx. % torque, short time stop *7 with external res.		al res.	>150	130	140	140	110	
Min. external braking resistance Ω			35	35	24	24	20	
DC braking			Variable operating frequency, time, and braking force					
Electrical filtering			Built-in EMC filter and built-in zero-phase reactor					
Weight	kg / lb		5/11	5/11	12 / 26.4	12/26.4	12 / 26.4	

Item			400V Class Specifications						
SJ7002 inverters,	U.S. version		300HFU2	370HFU2	450HFU2	550HFU2	750HFU2		
400V models	European ve	er.	300HFE2	370HFE2	450HFE2	550HFE2	750HFE2		
Applicable motor size	Applicable motor size *2		40	50	60	75	100		
		kW	30	37	45	55	75		
Rated capacity, kVA, 4	00 / 480V		40.1 / 48.2	51.9 / 62.3	62.3 / 74.8	76.2/91.4	103.2/ 123.8		
Rated input voltage			3-phase	e (3-wire) 380	to 480V +10/	-15%, 50/60 H	Iz ±5%		
Rated input current (A)		64	83	99	121	164		
Rated output voltage *	*3		3-phase (3-wire): 380 to 480V (corresponding to input voltage)						
Rated output current (A	A)		58	75	90	110	149		
Overload capacity, out	put current (A	\)	150% for 60 sec., 200% for 3 sec.						
Efficiency at 100% rate	ed output, %		95.1	95.1	95.1	95.1	95.2		
Watt loss,	at 70% outp	ut	1100	1345	1625	1975	2675		
approximate (W)	at 100% output		1550	1900	2300	2800	3800		
Dynamic braking	w/o braking	w/o braking unit		10%	10%	10%	8%		
approx. % torque, short time stop *7 with braking unit		Refer to separate DB Unit instruction manual or contact your Hitachi distributor							
DC braking			Variable operating frequency, time, and braking force						
Electrical filtering			Built-in EMC filter and built-in zero-phase reactor						
Weight	kg / lb		22 / 48.4	30 / 66	30 / 66	50 / 110	55 / 121		

1–8

SJ7002 Inverter

Item			400V Class Specifications							
SJ7002 inverters,	U.S. version		900HFU2	1100HFU2	1500HFU2	1850HFU2	3150HFU2	4000HFU2		
400V models	European ve	er.	9000HFE2	1100HFE2	1320HFE2	1850HFE2	3150HFE2	4000HFE2		
Applicable motor size	*2	HP	125	150	200	250	425	525		
		kW	90	110	150	185	315	400		
Rated capacity, kVA, 4	400 / 480V		121.9/146.3	150.3/180.4	180.1/216.1	256 / 308	416 / 499	554 / 665		
Rated input voltage				3-phase (3-w	rire) 380 to 480	V +10/-15%, 5	0/60 Hz ±5%			
Rated input current (A	.)		194	239	286	389	630	840		
Rated output voltage	*3		3.	3-phase (3-wire): 380 to 480V (corresponding to input voltage)						
Rated output current (A	A)		176	217	260	370	600	800		
Overload capacity, out	put current (A	A)	50% for 6	60 sec., 200% f	or 0.5 sec.	50% for 60 sec., 180% for 0.5 sec.				
Inv. efficiency at 100%	6 rated output	, %	95.2	95.2	95.2	96.5	96.2	96.3		
Inverter Watt loss,	at 70% output		3375	3900	4670	4700	8000	10500		
approximate (W)	at 100% out	tput	4800	5550	6650	6700	11500	15000		
DCL efficiency at 100	% rated output	ut, %	—	—	—	99.9	99.9	99.9		
DCL Watt loss,	at 70% outp	out	—	—	—	0.1	0.1	0.1		
approximate (kW)	at 100% out	tput	—	—	—	0.2	0.2	0.2		
Dynamic braking	w/o braking	g unit	8%	8%	8%	10%	10%	10%		
approx. % torque, short time stop *7 with braking unit		Refer to separate DB Unit instruction manual or contact your Hitachi distributor								
DC braking			Variable operating frequency, time, and braking force							
Electrical filtering			Built-in EMC	filter and zero	-phase reactor	External D	C reactor and t	ferrite core		
Weight	kg / lb		55 / 121	55 / 121	70 / 54	140 / 308	210 / 463	360 / 792		

The 400V models from -1850 to -4000 HFU2/HFE2 (250 to 525 HP) include a DC reactor and ferrite core.

Footnotes for the preceding tables and the table that follows:

- **Note 2:** The applicable motor refers to Hitachi standard 3-phase motor (4-pole). When using other motors, care must be taken to prevent the rated motor current (50/60 Hz) from exceeding the rated output current of the inverter.
- **Note 3:** The output voltage decreases as the main supply voltage decreases (except when using the AVR function). In any case, the output voltage cannot exceed the input power supply voltage.
- **Note 4:** To operate the motor beyond 50/60 Hz, consult the motor manufacturer for the maximum allowable rotation speed.
- Note 5: When SLV is selected, please set the carrier frequency higher than 2.1 kHz.
- **Note 6:** At the rated voltage when using a Hitachi standard 3-phase, 4-pole motor (when selecting sensorless vector control—SLV).
- **Note 7:** The braking torque via capacitive feedback is the average deceleration torque at the shortest deceleration (stopping from 50/60 Hz as indicated). It is not continuous regenerative braking torque. The average decel torque varies with motor loss. This value decreases when operating beyond 50 Hz. If a large regenerative torque is required, the optional regenerative braking resistor should be used.
- **Note 8:** The frequency command will equal the maximum frequency at 9.8V for input voltage 0 to 10 VDC, or at 19.6 mA for input current 4 to 20 mA. If this characteristic is not satisfactory for your application, contact your Hitachi sales representative.

Note 9: The storage temperature refers to the short-term temperature during transport.

- **Note 10:** Conforms to the test method specified in JIS C0050 (1999). For the model types excluded in the standard specifications, contact your Hitachi sales representative.
- Note 11: NEMA 1 applies up to 22kW. An optional wire-entry conduit box is required for 0.4kW to 55kW models to meet NEMA 1 rating.

1–9

Inverter Specifications

General
Specification

The following table (continued on next page) applies to all SJ7002 inverter models.

ns

Item		m	General Specifications				
Protective en	nclosure *	1, *11	IP20 (NEMA 1); models -750xFU2 to -4000xFU2 is IP00				
Control met	hod		Line-to-line sine wave pulse-width modulation (PWM) control				
Output frequ	iency range	e *4	0.1 to 400 Hz				
Frequency a	ccuracy		Digital command: $\pm 0.01\%$ of the maximum frequency Analog command: $\pm 0.2\%$ (at 25°C ± 10 °C)				
Frequency s	etting resol	lution	Digital: ± 0.01 Hz; Analog: (max. frequency)/4000, [O] terminal: 12-bit 0 to 10V; [OI] terminal: 12-bit, 4-20mA; [O2] terminal: 12-bit -10 to +10V				
Volt./Freq. c	haracterist	ic *5	V/F optionally variable (30 to 400Hz base frequency), V/F control (constant torque, reduced torque), sensorless vector control, 0-Hz-range sensorless vector control				
Speed fluctu	ation		\pm 0.5% (sensorless vector control or 0-Hz range sensorless vector control)				
Acceleration	n/decelerati	ion time	0.01 to 3600 sec., (linear curve profiles, accel./decel. selection), two-stage accel./decel.				
Starting Tore	que *6		200% at 0.3 Hz (SLV or 0Hz-range SLV), 150% at 0 Hz-range SLV, with motor one frame size down) For -750Hxx to -1500Hxx: 180% at 0.3Hz				
			150% at 0 Hz range with feedback board (with 0Hz-range sensorless vector control or with motor one frame size down) For -750Hxx to -1500Hxx: 130% at 0.3Hz				
Carrier frequ	iency rang	e	Models -004xFU2 to -550xFU2: 0.5 to 15.0 kHz; Models -750xFU2 to -1500xFU2: 0.5 to 10.0 kHz; Models -1850HFU2 to -4000HFU2: 0.5 to 3.0 kHz				
DC braking	DC braking		Performs at start under set frequency at declaration, via an external input (braking force, time, and operating frequency)				
Overload ca	pacity (out	put current)	150% for 60 seconds, 200% (180% for 75kW / 100HP and larger) for 0.5 seconds				
	Freq.	Operator keypad	Up and Down keys / Value settings				
	setting	Potentiometer	Analog setting via potentiometer on operator keypad				
		External signal *8	0 to 10 VDC and -10 to +10 VDC (input impedance 10k Ohms), 4 to 20 mA (input impedance 250 Ohms), Potentiometer (1k to 2k Ohms, 2W)				
		Serial port	RS485 interface				
	FW/RV	Operator panel	Run key / Stop key (change FW/RV by function command)				
	Run	External signal	FW Run/Stop (NO contact), RV set by terminal assignment (NC/NO), 3-wire input available				
		Serial port	RS485 interface				
terminals (assign eight functions to terminals) Input signal		s to terminals)	RV (reverse run/stop), CF1~CF4 (multi-speed select), JG (jogging), DB (external DC braking), SET (set 2nd motor data), 2CH (2-stage accel./decel.), FRS (free-run stop), EXT (external trip), USP (unattended start protection), CS (commercial power source), SFT (software lock), AT (analog input voltage/current select), SET3 (set 3rd motor data), RS (reset inverter), STA (start, 3-wire interface), STP (stop, 3-wire interface), F/R (FW/RV 3-wire interface), PID (PID ON/OFF), PIDC (PID reset), CAS (control gain setting), UP (remote control Up function, motorized speed pot.), DWN (remote control Down function, motorized speed pot.), UDC (remote control data clearing), OPE (Operator control), SF1-SF7 (Multispeed bits 0-7), OLR (Overload limit change), TL (torque limit enable), TRQ1 (torque limit selection bit 1, LSB), TRQ2 (torque limit selection bit 2, MSB), PPI (Proportional / Proportional/Integral mode selection), BOK (Brake confirmation signal), ORT (Orientation – home search), LAC (LAC: LAD cancel), PCLR (Position deviation reset), STAT (pulse train position command input enable), ADD (trigger for frequency addition), F-TM (forcible-terminal operation), ATR (permission of torque commend input), KHC (cumulative power clearance), SON (servo ON), FOC (pre-excitation), MI1 (general-purpose input 1), MI2 (general-purpose input 2), MI3 (general-purpose input 3), MI4 (general-purpose input 4), MI5 (general-purpose input 5), MI6 (general-purpose input 6), MI7 (general-purpose input 7), MI8 (general-purpose input 8), AHD (analog command holding), NO (not selected) One terminal (PTC characteristics)				
	Inermis	tor input	One terminal (PTC characteristics)				

SJ7002 Inverter

	Item	General Specifications			
Output signal	Intelligent Output terminals (assign six functions to five open collector outputs and one relay NO-NC contact)	RUN (run signal), FA1 (Frequency arrival type 1 – constant speed), FA2 (Frequency arrival type 2 – over-frequency), OL (overload advance notice signal 1), OD (Output deviation for PID control), AL (alarm signal), FA3 (Frequency arrival type 3 – at-frequency), OTQ (over-torque signal), IP (Instantaneous power failure signal), UV (Under-voltage signal), TRQ (In torque limit), RNT (Run time over), ONT (Power-ON time over), THM (thermal alarm), BRK (Brake release signal), BER (Brake error signal), ZS (Zero speed detect), DSE (speed deviation maximum), POK (Positioning completion), FA4 (Frequency arrival type 4 – over-frequency 2), FA5 (Frequency arrival type 5 – at-frequency 2), OL2 (Overload notice advance signal 2), FBV (PID feedback comparison), NDc (communication line disconnection), LOG1 (logical operation result 1), LOG2 (logical operation result 2), LOG3 (logical operation result 3), LOG4 (logical operation result 4), LOG5 (logical operation result 5), LOG6 (logical operation result 6), WAC (capacitor life warning), WAF (cooling fan speed drop), FR (starting contact signal), OHF (heat sink overheat warning), LOC (low-current indication signal), MO1 (general-purpose output 1), MO2 (general-purpose output 2), MO3 (general-purpose output 3), MO6 (general-purpose output 6), IRDY (inverter ready), FWR (forward rotation signal), RVR (reverse rotation signal), MJA (major failure signal), Terminals 11-13 or 11-14 automatically configured as AC0-AC2 or AC0-AC3 per alarm code output selection			
	Intelligent monitor output terminals	Analog voltage monitor, analog current monitor (8-bit resolution), and PWM output, on terminals [AM], [AMI], [FM]			
Display mon	itor	Output frequency, output current, motor torque, scaled value of output frequency, trip history, I/O terminal condition, electrical power and other parameters			
Other user-settable parameters		V/F free-setting (up to 7 points), freq. upper/lower limit, freq. jump, accel/decel curve selection, manual torque boost value and freq. adjustment, energy saving operation, analog meter tuning, start frequency, carrier frequency, electronic thermal protection level, external frequency output zero/span reference, external frequency input bias start/ end, analog input selection, retry after trip, restart after instantaneous power failure, various signal outputs, reduced voltage start, overload restriction, default value setting (US, Europe, Japan), automatic deceleration at power failure, AVR function, fuzzy accel/decel, auto-tuning (on-line/off-line), high-torque multi-motor operation (sensor-less vector control of two motors by one inverter)			
Protective fu	nctions	Over-current, overload, braking resistor overload, over voltage, EEPROM error, unde voltage error, CT (current transformer) error, CPU error, external trip, USP error, ground fault, input over voltage, instantaneous power failure, expansion card 1 error, expansion card 2 error, inverter thermal trip, phase failure detection, IGBT error, the istor error			
	Temperature (*9)	Operating (ambient): -10 to 50°C / Storage: -20 to 65°C			
	Humidity	20 to 90% relative humidity (non-condensing)			
Environ- ment	Vibration *10 Location	Models SJ700–004xxx to 220xxx: 5.9 m/s ² (0.6G), 10 to 55 Hz Models SJ700–300xx to 1500xxx: 2.94 m/s ² (0.3G), 10 to 55 Hz Models SJ700–3150xx to 4000xxx: 1.96 m/s ² (0.2G), 10 to 55 Hz Altitude 1,000 m or less, indoors (no corrosive gasses or dust)			
Coating colo	r	Gray			
	Feedback expansion card	SJ-FB (vector control loop speed sensor)			
	Digital input exp. card	SJ-DG (4-digit BCD / 16-bit binary)			
	DeviceNet expansion card	Option to support the open-network DeviceNet function			
Accessories	LonWorks expansion card	Option to support the open-network LonWorks function			
	Profibus-DP option	Option to support the open-network Profibus-DP function			
Other optional accessories		EMI filter, AC reactor, DC reactor, radio noise filter, braking resistors, braking units, LCR filter, communication cables			
Operator inp	ut devices	OPE–SRE (4-digit LED with potentiometer) / OPE–S (4-digit LED w/o potentiometer), Optional: OPE-SR (4-digit LED with potentiometer, Japanese/English overlay), SRW–0EX Multilingual operator with copy function (English, Spanish, French, German, Italian, and Portuguese)			

Inverter Specifications

Signal Ratings Detailed ratings are in <u>"Specifications of Control and Logic Connections" on page 4–9</u>.

Signal / Contact	Ratings
Built-in power for inputs	24VDC supply, 100 mA maximum
Intelligent (programmable) logic inputs	27VDC maximum, 4.7kΩ input impedance
Intelligent (programmable) logic outputs	Open collector type, 50mA max. ON state current, 27 VDC maximum OFF state voltage
Thermistor input	Minimum thermistor power 100mW
PWM output	0 to 10VDC, 1.2 mA max., 50% duty cycle
Voltage analog output	0 to 10VDC, 2 mA max.
Current analog output	4-20 mA, nominal load impedance 250Ω
Analog input, current	4 to 19.6 mA range, 20 mA nominal
Analog input, voltage unipolar	0 to 9.6 VDC range, 10VDC nominal, 12VDC max., input impedance 10 k Ω
Analog input, voltage bipolar	-9.6 to 9.6 VDC range, ±10VDC nominal, ±12VDC max., input impedance 10 k Ω
+10V analog reference	10VDC nominal, 10 mA maximum
Alarm relay, normally closed contacts	Maximum loads: 250VAC, 2A; 30VDC, 8A resistive load 250VAC, 0.2A; 30VDC, 0.6A inductive load Minimum loads: 100 VAC, 10mA; 5VDC, 100mA
Alarm relay, normally open contacts	250VAC, 1A; 30VDC 1A max. resistive load / 250VAC, 0.2A; 30VDC, 0.2A max. inductive load Min. loads: 100 VAC, 10mA; 5VDC, 100mA

DCL Filter Specifications

Direct reactor filters (DCL) are available for the Hitachi high-capacity SJ7002 inverters, models -1850HFU2 to -4000HFU2. The DCL specifications are in the following table.

Item	DCL Specifications				
DCL models, DCL-H-xxx	185	315	400		
Rated current (A)	515.0	680	1042		
Insulation class		Type H			
Weight kg / lb.	65	75	90		

Carrier Frequency Derating

The maximum carrier frequency F_c that provides full inverter rated output depends on the particular inverter model. However, you may operate an inverter at the maximum settable F_c with an output derating. Refer to the table below for the carrier frequency values and output deratings.

	200V Class Inverters							
Capacity (kW)	Maximum F _c (kHz)	Derating at Fc = 15 kHz	Capacity (kW)	Maximum F _c (kHz)	Derating at Fc = 15 kHz			
0.4	15	100%	15	12	95% (60.8A or less)			
0.75	15	100%	18.5	10	90% (68.4A or less)			
1.5	15	100%	22	7	70% (66.5A or less)			
2.2	15	100%	30	5	80% (96.8A or less)			
3.7 / 4.0	15	100%	37	10	75% (108.7A or less)			
5.5	15	100%	45	5	70% (127.4A or less)			
7.5	15	100%	55	5	70% (154.0A or less)			
11	12	90% (41.4A or less)	_	—	—			

SJ7002 Inverter

400V Class Inverters					
Capacity (kW)	Maximum F _c (kHz)	Derating at Maximum Fc	Capacity (kW)	Maximum F _c (kHz)	Derating at Maximum Fc
0.75	15	100%	37	8	80% (60.0A or less)
1.5	15	100%	45	9	75% (68.2A or less)
2.2	15	100%	55	6	60% (67.2A or less)
3.7	15	100%	75	6	85% (126.7A or less)
5.5	15	100%	90	4	75% (132.0A or less)
7.5	15	100%	110	6	70% (151.9A or less)
11	15	100%	150	3	60% (156.0A or less)
15	14	95% (30.4A or less)	185	3	100%
18.5	10	90% (34.2A or less)	315	3	100%
22	6	75% (36.0A or less)	400	3	80% (640.0A or less)
30	10	75% (43.5A or less)	_		—



NOTE: When replacing an SJ300 inverter combined with LCR filter, please check the type code of LCR filter and consult for compatibility (75 to132kW).

Introduction to Variable-Frequency Drives

Call 1(800)985-6929 for Sales

Introduction to Variable-Frequency Drives

The Purpose of Motor Speed Control for Industry


Hitachi inverters provide accurate speed control for 3-phase AC induction motors. You connect AC power to the inverter, and connect the inverter to the motor. Many applications can benefit from the use of variable-speed drives in several ways:

- Energy savings HVAC
- · Need to coordinate speed with an adjacent process textiles and printing presses
- Need to control acceleration and deceleration (torque)
- · Sensitive loads elevators, food processing, pharmaceuticals

Variable-frequency Drive

The term *inverter* and *variable-frequency drive* are related and somewhat interchangeable. An electronic drive for an AC motor controls the motor's speed by *varying the frequency* of the power sent to the motor.

An inverter, in general, is a device that converts DC power to AC power. The figure below shows how the variable-frequency drive employs an internal inverter. The drive first converts incoming AC power to DC through a rectifier bridge, creating an internal DC bus voltage. Then the inverter circuit converts the DC back to AC again to power the motor. The special inverter can vary its output frequency and voltage according to the desired motor speed.

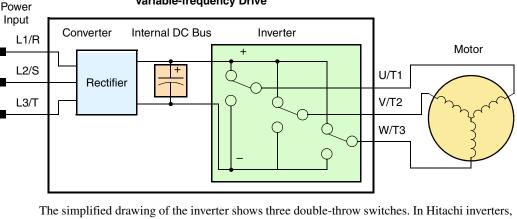


The simplified drawing of the inverter shows three double-throw switches. In Hitachi inverters, the switches are actually IGBTs (isolated gate bipolar transistors). Using a commutation algorithm, the microprocessor in the drive switches the IGBTs ON and OFF at a very high speed to create the desired output waveforms. The inductance of the motor windings helps smooth out the pulses.

Torque and Constant Volts/ Hertz Operation

In the past, AC variable speed drives used an open loop (scalar) technique to control speed. The constant-volts-per-hertz operation maintains a constant ratio between the applied voltage and the applied frequency. With these conditions, AC induction motors inherently delivered constant torque across the operating speed range. For some applications, this scalar technique was adequate.

Today, with the advent of sophisticated microprocessors and digital signal processors (DSPs), it is possible to control the speed and torque of AC induction motors with unprece-

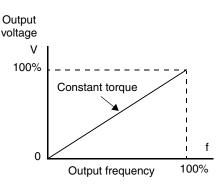

dented accuracy. The SJ7002 utilizes these devices to perform complex mathematical calculations required to achieve superior performance. The technique is referred to as *sensorless vector control*. It allows the drive to continuously monitor its output voltage and current, and their relationship to each other. From this it mathematically calculates two vector currents. One

1_14

vector is related to motor flux current, and the other to motor torque current. The ability to separately control these two vectors is what allows the SJ7002 to deliver extraordinary lowspeed performance and speed control accuracy.

Three-Phase Power

Inverter Input and The Hitachi SJ7002 Series of inverters includes two sub-groups: the 200V class and the 400V class inverters. The drives described in this manual may be used in either the United States or Europe, although the exact voltage level for commercial power may be slightly different from country to country. Accordingly, a 200V class inverter requires (nominal) 200 to 240VAC, and a 400V class inverter requires from 380 to 480VAC. All SJ7002 inverters require three-phase input power, whether 200V or 400V class.




TIP: If your application only has single phase power available, refer to the Hitachi SJ100 Series inverters. SJ100 inverters of 3HP or less can accept single phase input power.

The common terminology for single phase power is Line (L) and Neutral (N). Three-phase power connections are usually labeled Line 1 (L1), Line 2 (L2) and Line 3 (L3). In any case, the power source should include a ground connection. That ground connection will need to connect to the inverter chassis and to the motor frame (see "Wire the Inverter Output to Motor" on page 2-26).

Inverter Output to the Motor

The AC motor must be connected only to the inverter's output terminals. The output terminals are uniquely labeled (to differentiate them from the input terminals) with the designations U/T1, V/T2, and W/T3. This corresponds to typical motor lead connection designations T1, T2, and T3. It is often not necessary to connect a particular inverter output to a particular motor lead for a new application. The consequence of swapping any two of the three connections is the reversal of the motor direction. In applications where reversed rotation could cause equipment damage or personnel injury, be sure to verify direction of rotation before attempting full-speed operation. For safety to personnel, you must connect the motor chassis ground to the ground connection at the bottom of the inverter housing.

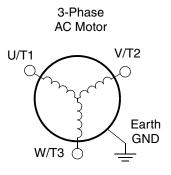

Notice the three connections to the motor do not include one marked "Neutral" or "Return." The motor represents a balanced "Y" impedance to the inverter, so there is no need for a separate return. In other words, each of the three "Hot" connections serves also as a return for the other connections, because of their phase relationship.

The Hitachi inverter is a rugged and reliable device. The intention is for the inverter to assume the role of controlling power to the motor during all normal operations. Therefore, this manual instructs you not to switch OFF power to the inverter while the motor is running (unless it is an emergency stop). Also, do not install or use disconnect switches in the wiring from the inverter to the motor (except thermal disconnect). Of course, safety-related devices such as fuses must be in the design to break power during a malfunction, as required by NEC and local codes.

1–15

Introduction to Variable-Frequency Drives

Call 1(800)985-6929 for Sales

Intelligent Functions and Parameters

Much of this manual is devoted to describing how to use inverter functions and how to configure inverter parameters. The inverter is microprocessor-controlled, and has many independent functions. The microprocessor has an on-board EEPROM for parameter storage. The inverter's front panel keypad provides access to all functions and parameters, which you can access through other devices as well. The general name for all these devices is the *digital operator*, or *digital operator panel*. Chapter 2 will show you how to get a motor running, using a minimal set of function commands or configuring parameters.

hitachiacdrive.com

The optional read/write programmer will let you read and write inverter EEPROM contents from the programmer. This feature is particularly useful for OEMs who need to duplicate a particular inverter's settings in many other inverters in assembly-line fashion.




Braking

In general, braking is a force that attempts to slow or stop motor rotation. So it is associated with motor deceleration, but may also occur even when the load attempts to drive the motor faster than the desired speed (overhauling). If you need the motor and load to decelerate quicker than their natural deceleration during coasting, we recommend installing a braking resistor. The dynamic braking unit (built into certain SJ7002 models) sends excess motor energy into a resistor to slow the motor and load (see <u>"Introduction" on page 5–2</u> and <u>"Dynamic Braking" on page 5–6</u> for more information). For loads that continuously overhaul the motor for extended periods of time, the SJ7002 may not be suitable (contact your Hitachi distributor).

The inverter parameters include acceleration and deceleration, which you can set to match the needs of the application. For a particular inverter, motor, and load, there will be a range of practically achievable accelerations and decelerations.

Velocity Profiles

The SJ7002 inverter is capable of sophisticated speed control. A graphical representation of that capability will help you understand and configure the associated parameters. This manual makes use of the velocity profile graph used in industry (shown at right). In the example, the acceleration is a ramp to a set speed, and the deceleration is a decline to a stop.

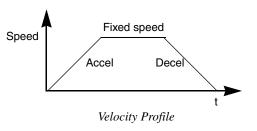


-16

Acceleration and deceleration settings specify the time required to go from a stop to maximum frequency (or visa versa). The resulting slope (speed change divided by time) is the acceleration or deceleration. An increase in output frequency uses the acceleration slope, while a decrease uses the deceleration slope. The accel or decel time a particular speed change depends on the starting and ending frequencies. However, the slope is constant, corresponding to the full-scale accel or decel time setting.


For example, the full-scale acceleration setting (time) may be 10 seconds—the time required to go from 0 to 60 Hz.

The SJ7002 inverter can store up to 16 preset speeds. And, it can apply separate acceleration and deceleration transitions from any preset to any other preset speed. A multispeed profile (shown at right) uses two or more preset speeds, which you can select via intelligent input terminals. This external control can apply any preset speed at any time. Alternatively, the selected speed is infinitely variable across the speed range. You can use the potentiometer control on the keypad for manual control. The drive accepts analog 0-10V signals and 4-20 mA control signals as well.

The inverter can drive the motor in either direction. Separate FW and RV commands select the direction of rotation. The motion profile example shows a forward motion followed by a reverse motion of shorter duration. The speed presets and analog signals control the magnitude of the speed, while the FW and RV commands determine the direction before the motion starts.

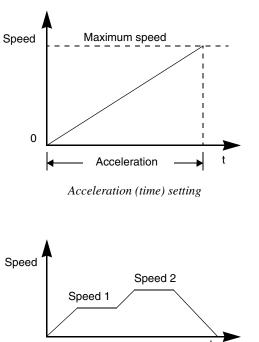

Multi-speed Profile

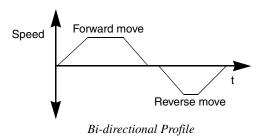



NOTE: The SJ7002 can move loads in both directions. However, it is not designed for use in servo-type applications that use a bipolar velocity signal that determines direction.

1–17

Call 1(800)985-6929 for Sales

Frequently Asked Questions

- **Q.** What is the main advantage in using an inverter to drive a motor, compared to alternative solutions?
 - **A.** An inverter can vary the motor speed with very little energy loss, unlike mechanical or hydraulic speed control solutions. The resulting energy savings can often pay for the inverter in a relatively short time.
- **Q.** The term "inverter" is a little confusing, since we also use "drive" and "amplifier" to describe the electronic unit that controls a motor. What does "inverter" mean?
 - **A.** The terms are used somewhat interchangeably in industry. Nowadays, the terms *drive*, *variable-frequency drive*, *variable-speed drive*, and *inverter* are generally used to describe electronic, microprocessor-based motor speed controllers. In the past, *variable speed drive* also referred to various mechanical means to vary speed. *Ampli-fier* is a term almost exclusively used to describe drives for servo or stepper motors.
- **Q.** Although the SJ7002 inverter is a variable speed drive, can I use it in a fixed-speed application?
 - **A.** Yes, sometimes an inverter can be used simply as a "soft-start" device, providing controlled acceleration and deceleration to a fixed speed. Other functions of the SJ7002 may be useful in such applications, as well. However, using a variable speed drive can benefit many types of industrial and commercial motor applications, by providing controlled acceleration and deceleration, high torque at low speeds, and energy savings over alternative solutions.
- **Q.** Can I use an inverter and AC induction motor in a positioning application?
 - **A.** That depends on the required precision, and the slowest speed the motor must turn and still deliver torque. The SJ7002 inverter will deliver 200% rated torque while turning the motor at only 0.3 Hz. DO NOT use an inverter if you need the motor to stop and hold the load position without the aid of a mechanical brake (use a servo or stepper motion control system).
- **Q.** Does the optional digital operator interface or the PC software (DOP Professional) provide features beyond what is available from the keypad on the unit?
 - **A.** Yes. However, note first that the same set of parameters and functions are equally accessible from either the unit's keypad or from remote devices. The DOP Professional PC software lets you save or load inverter configurations to or from a disk file. And, the hand-held digital operator provides hard-wired terminals, a safety requirement for some installations.
- **Q.** Why does the manual or other documentation use terminology such as "200V class" instead of naming the actual voltage, such as "230 VAC?"
 - A. A specific inverter model is set at the factory to work across a voltage range particular to the destination country for that model. The model specifications are on the label on the side of the inverter. A European 200V class inverter ("EU" marking) has different parameter settings than a USA 200V class inverter ("US" marking). The initialization procedure (see <u>"Restoring Factory Default Settings" on page 6–16</u>) can set up the inverter for European or US commercial voltage ranges.
- **Q.** Why doesn't the motor have a neutral connection as a return to the inverter?
 - **A.** The motor theoretically represents a "balanced Y" load if all three stator windings have the same impedance. The Y connection allows each of the three wires to alternately serve as input or return on alternate half-cycles.
- **Q.** Does the motor need a chassis ground connection?
 - A. Yes, for several reasons. Most importantly, this provides protection in the event of a short in the motor that puts a hazardous voltage on its housing. Secondly, motors exhibit leakage currents that increase with aging. Lastly, a grounded chassis generally emits less electrical noise than an ungrounded one.

- **Q.** What type of motor is compatible with the Hitachi inverters?
 - A. Motor type It must be a three phase AC induction motor. Use an inverter-grade motor that has 800V insulation for 200V class inverters, or 1600V insulation for 400V class.

Motor size – In practice, it's better to find the right size motor for your application; then look for the inverter to match the motor.

NOTE: There may be other factors that will affect motor selection, including heat dissipation, motor operating speed profile, enclosure type, and cooling method.

- **Q.** How many poles should the motor have?
 - **A.** Hitachi inverters can be configured to operate motors with 2, 4, 6, or 8 poles. The greater the number of poles, the slower the top motor speed will be, but it will have higher torque at the base speed.
- **Q.** Will I be able to add dynamic (resistive) braking to my Hitachi SJ7002 drive after the initial installation?
 - A. Yes. Models SJ700-004XXX through SJ700-220XXX have built-in dynamic braking units. You can add an external resistor to these models to improve braking performance. Models SJ700-300XXX through SJ700-4000XXX require you to add an external braking unit. The braking resistor connects to the external braking unit for those models. More information on dynamic braking is located in Chapter 5.
- Q. How will I know if my application will require resistive braking?
 - **A.** For new applications, it may be difficult to tell before you actually test a motor/drive solution. In general, some applications can rely on system losses such as friction to serve as the decelerating force, or otherwise can tolerate a long decel time. These applications will not need dynamic braking. However, applications with a combination of a high-inertia load and a required short decel time will need dynamic braking. This is a physics question that may be answered either empirically or through extensive calculations.
- **Q.** Several options related to electrical noise suppression are available for the Hitachi inverters. How can I know if my application will require any of these options?
 - A. The purpose of these noise filters is to reduce the inverter electrical noise so the operation of nearby electrical devices is not affected. Some applications are governed by particular regulatory agencies, and noise suppression is mandatory. In those cases, the inverter must have the corresponding noise filter installed. SJ700 models from -004XXX (0.4kW) to -1500XXX (150kW) have built-in EMC filters. Other applications may not need noise suppression, unless you notice electrical interference with the operation of other devices.
- **Q.** The SJ7002 features a PID loop feature. PID loops are usually associated with chemical processes, heating, or process industries in general. How could the PID loop feature be useful in my application?
 - **A.** You will need to determine the particular main variable in your application the motor affects. That is the process variable (PV) for the motor. Over time, a faster motor speed will cause a faster change in the PV than a slow motor speed will. By using the PID loop feature, the inverter commands the motor to run at the optimal speed required to maintain the PV at the desired value for current conditions. Using the PID loop feature will require an additional sensor and other wiring, and is considered an advanced application.

1–19



Inverter Mounting and Installation



In This Chapter	page
— Orientation to Inverter Features	<u>2</u>
— Basic System Description	<u>5</u>
- Step-by-Step Basic Installation	
— <u>Powerup Test</u>	
- Using the Front Panel Keypad	<u>29</u>
— Emergency Stop Function	

Orientation to Inverter Features

Orientation to Inverter Features

Unpacking and Inspection

Please take a few moments to unpack your new SJ7002 inverter and perform these steps:

- 1. Look for any damage that may have occurred during shipping.
- 2. Verify the contents of the box include:
 - a. One SJ7002 inverter
 - b. One Instruction Manual (supplied by printed book for -FU2/-FF2 models, supplied on CR-ROM for -FE2 models)
 - c. One SJ7002 Quick Reference Guide
 - d. One packet of desiccant—discard (not for human consumption)
- **3.** Inspect the specifications label on the front or side of the inverter. Make sure it matches the product part number you ordered.

The SJ7002 Series inverters vary in size according to the current output rating and motor size for each model number. All feature the same basic keypad and connector interface for consistent ease of use. The inverter construction has a heat sink at the back of the housing. The fans enhance heat sink performance. Mounting holes are pre-drilled in the heat sink for your convenience. Never touch the heat sink during or just after operation; it can be very hot.

The electronics housing and front panel are built onto the front of the heat sink. The front panel has three levels of physical access designed for convenience and safety:

- **First-level access** for basic use of inverter and editing parameters during powered operation (power is ON)
- Second-level access for wiring the inverter power supply or motor (power is OFF)
- **Third-level access** for accessing the expansion bay for adding/removing expansion boards (power is OFF)
- 1. First-level Access View the unit just as it came from the box as shown. The **OPE-SRE** or **OPE-S** digital operator keypad comes installed in the inverter. The four-digit display can show a variety of performance parameters. LEDs indicate whether the display units are Hertz, Volts, Amperes, or kW. Other LEDs indicate Power (external), and Run/Stop Mode and Program/Monitor Mode status. Membrane keys Run and Stop/Reset, and a Min/Max frequency control knob (OPE-SRE only) control motor operation. These controls and indicators are usually the only ones needed after the inverter installation is complete.

The FUNC., A, \bigtriangledown , \bigtriangledown , and STR keys allow an operator to change the inverter's functions and parameter values, or to select the one monitored on the 4-digit display. Note that some parameters may not be edited if the inverter is in Run mode.




Main Physical Features

2. Second-level access - First, ensure no power source of any kind is connected to the inverter. If power has been connected, wait 10 minutes after powerdown and verify the Charge Lamp indicator is OFF to proceed. Then locate the two screws at the bottom corners of the main front panel. Use a Phillips screwdriver to loosen the screws and tilt the cover outward for removal. (The screws are retained in the cover.)



Notice the large power terminals at the bottom of the wiring area. The rubber grommets below the power terminals are for wire entry/exit to the power source and motor. Never operate the inverter with the front panel removed.

The control terminals connect logic or analog signals for control and monitoring of the inverter. The nearby alarm relay provides both normally-open and normally-closed logic for interface to an external alarm. The alarm circuit may carry hazardous live voltages even when the main power to the inverter is OFF. So, never directly touch any terminal or circuit component.

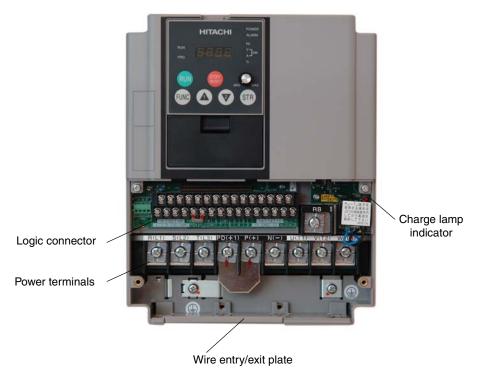



WARNING: Be sure to wait 10 minutes after powerdown and verify the charge lamp indicator is OFF to proceed. Otherwise there is the risk of electric shock.


hitachiacdrive.com

Orientation to Inverter Features

Call 1(800)985-6929 for Sales

3. Third-level access - The SJ7002 provides for field installation of interface circuits. These circuits are on expansion cards, to be installed in the expansion bay. To access the expansion bay, you will need to remove the upper front panel. Use the latch to release the digital operator (the panel filler plate may remain). Remove the two retention screws the bottom corners of the upper front panel. Lift up at the bottom, then disengage the two hinge latches at the top.

Latch to release digital operator

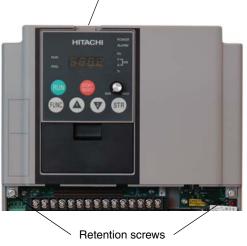

The expansion bay has two sites for adding expansion cards. Each card connects via the interface connector, and mounts using three standoff screw locations. Further details on accessories are in Chapter 5. You may also refer to the instruction manual that comes with each type of expansion card.




The following sections will describe the system design and guide you through a step-by-step installation process. After the section on wiring, this chapter will show how to use the front panel keys to access functions and edit parameters.

2

Basic System Description

A motor control system will obviously include a motor and inverter, as well as a breaker or fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure and table below show a system with all the optional components you may need in your finished application.

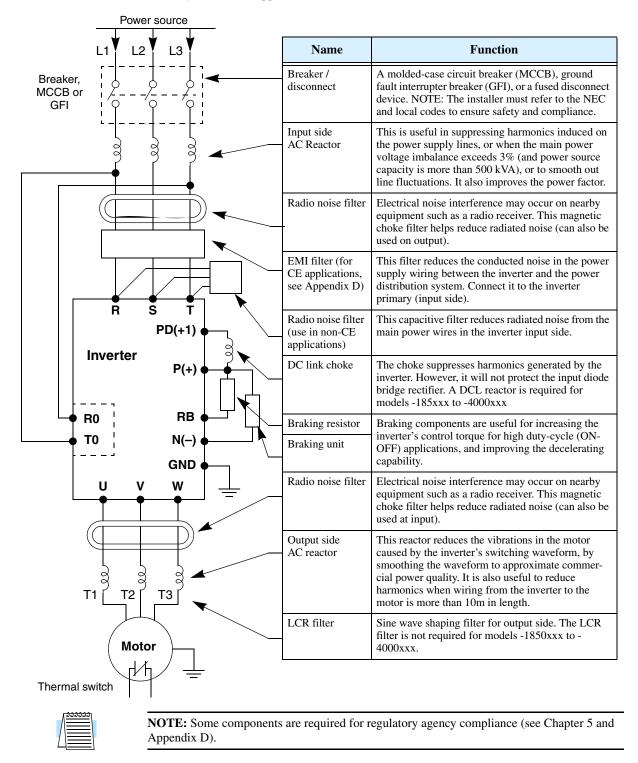

2-

Call 1(800)985-6929 for Sales

hitachiacdrive.com

Step-by-Step Basic Installation

This section will guide you through the following basic steps of installation:

- 1. Study the warnings associated with mounting the inverter.
- 2. Transport or lift the inverter (and DC reactor, if used) in a safe manner.
- 3. Select a suitable mounting location.

NOTE: If the installation is in an EU country, study the EMC installation guidelines in Appendix D.

- **4.** Cover the inverter's top ventilation openings to prevent debris from falling inside.
- 5. Check the inverter mounting dimensions for footprint and mounting hole locations.
- 6. Study the caution and warning messages associated with wiring the inverter.
- 7. Connect wiring for the inverter power input.
- 8. Connect wiring to the motor.
- 9. Uncover the inverter's ventilation openings that were covered in Step 3.
- 10. Perform a powerup test.
- 11. Make observations and check your installation.

Step 1: Study the following caution messages associated with mounting the inverter. This is the time when mistakes are most likely to occur that will result in expensive rework, equipment damage, or personal injury.

CAUTION: Be sure to install the unit on flame-resistant material such as a steel plate. Otherwise, there is the danger of fire.

CAUTION: Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.

CAUTION: Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.

CAUTION: Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.



CAUTION: Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel.

CAUTION: Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.

CAUTION: Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt air, etc. Otherwise, there is the danger of fire.

Choosing a Mounting Location






sales@hitachiacdrive


SJ7002 Inverter

The position and orientation of the inverter are very important. Install the inverter vertically and securely with screws or bolts on a surface that is free from vibrations and that can bear the inverter's weight. If the inverter is not installed vertically, its cooling performance may be degraded and trip events or inverter damage may result. If the inverter requires an external DC reactor, do not install the reactor directly under the inverter.

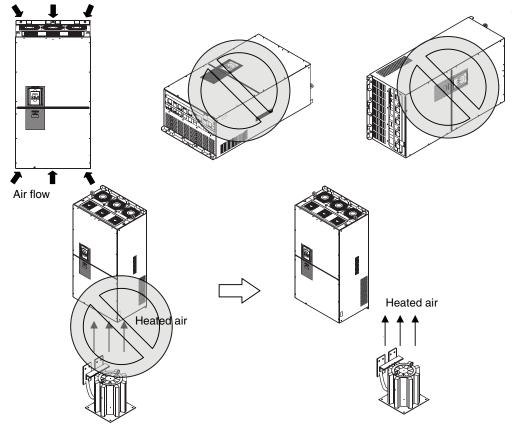



SJ7002 Series inverter models -1850hFx2 to -4000hFx2are very heavy. For example, the 315kW inverter weighs about 463 lbs. (210kg). Therefore, be careful when loading and transporting these inverters. Use the eyebolts on the inverter housing and frame to lift the inverter. The diagrams below show different lifting configurations to fit the orientations you may need.

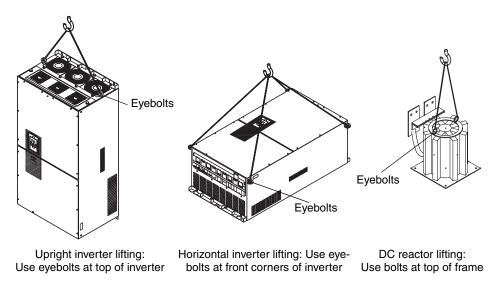

2-

hitachiacdrive.com

hitachiacdrive.com


Step-by-Step Basic Installation



Ventilation

Ensure Adequate

Step 2: To summarize the caution messages—you will need to find a solid, non-flammable, vertical surface that is in a relatively clean and dry environment. In order to ensure enough room for air circulation around the inverter to aid in cooling, maintain the specified clearance around the inverter specified in the diagram.

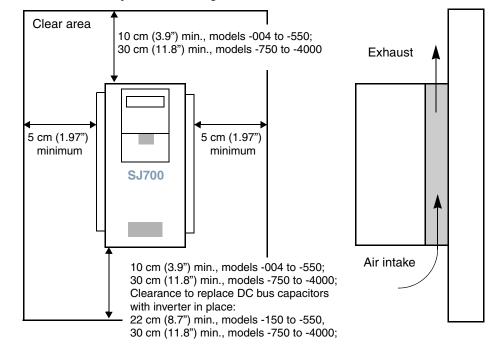




CAUTION: Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire.




Step 3: Before proceeding to the wiring section, it's a good time to *temporarily* cover the inverter's ventilation openings. Paper and masking tape are all that is needed. This will prevent harmful debris such as wire clippings and metal shavings from entering the inverter during installation.

Please observe this checklist while mounting the inverter:

- 1. The ambient temperature must be in the range of -10 to 40°C. If the range will be up to 50°C (maximum rating), you will need to refer to derate the output current performance of the inverter.
- 2. Keep any other heat-producing equipment as far away from the inverter as possible.
- **3.** When installing the inverter in an enclosure, maintain the clearance around the inverter and verify that its ambient temperature is within specification when the enclosure door is closed.
- **4.** Do not open the main front panel door at any time during operation.

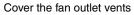

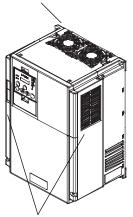

Cover the ventilation slots, both sides

hitachiacdrive.com


sales@hitachiacdrive

SJ7002 Inverter

2–9



Step 4: Locate the applicable drawing on the following pages for your inverter. Dimensions are given in millimeters (inches) format. Smaller models come equipped with NEMA1 adapter (conduit box) for wire entry for U.S. models (LFU and HFU). The NEMA 1 adapter is optional for larger models as indicated in the drawings.

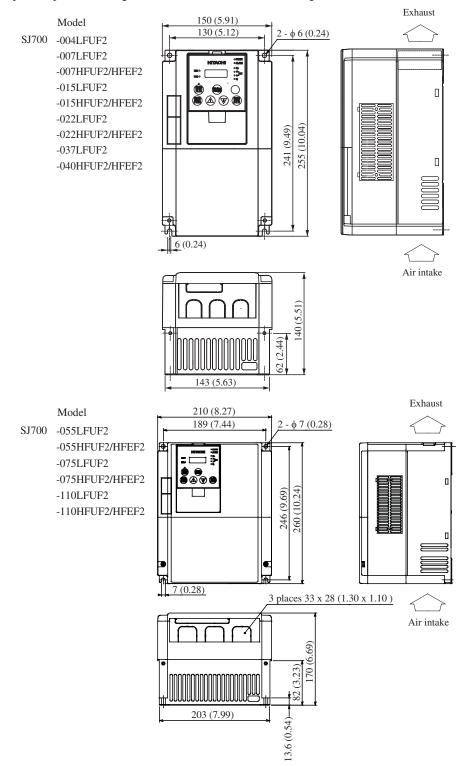




NOTE: Be sure to use lock washers or other means to ensure screws do not loosen due to vibration.

hitachiacdrive.com

Call 1(800)985-6929 for Sales

Dimensional drawings, continued...

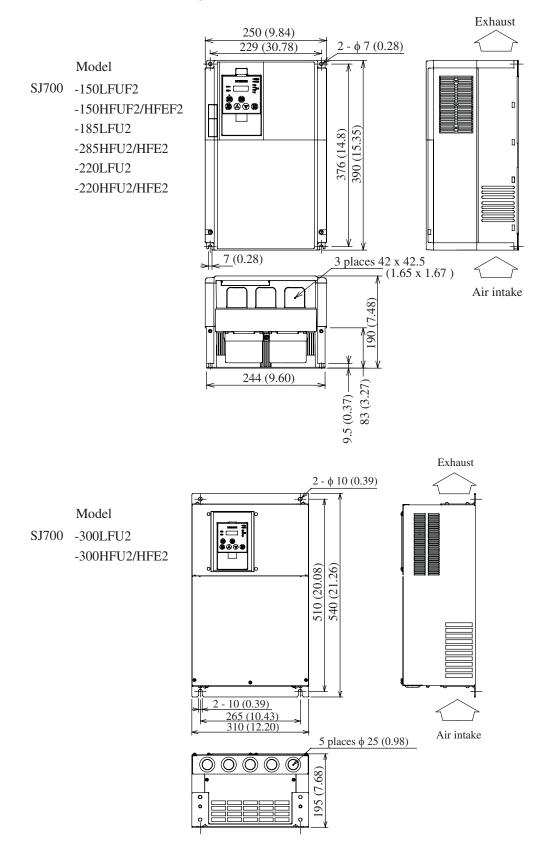

2 - 10

Call 1(800)985-6929 for Sales


4

0

Ф

sales@hitachiacdrive

SJ7002 Inverter

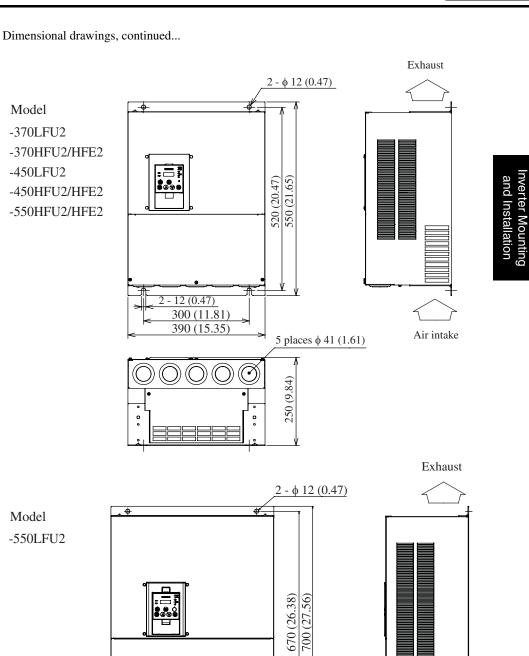

5 places \$\$41 (1.61)

7)

248 (9.76)

Model SJ700 -550LFU2

Model

-450LFU2

-370HFU2/HFE2

-450HFU2/HFE2 -550HFU2/HFE2

SJ700 -370LFU2



hitachiacdrive.com


<u>- φ 12 (0.47)</u> 380 (14.96) 480 (18.90)

sales@hitachiacdrive.com


Air intake

Call 1(800)985-6929 for Sales

Dimensional drawings, continued...

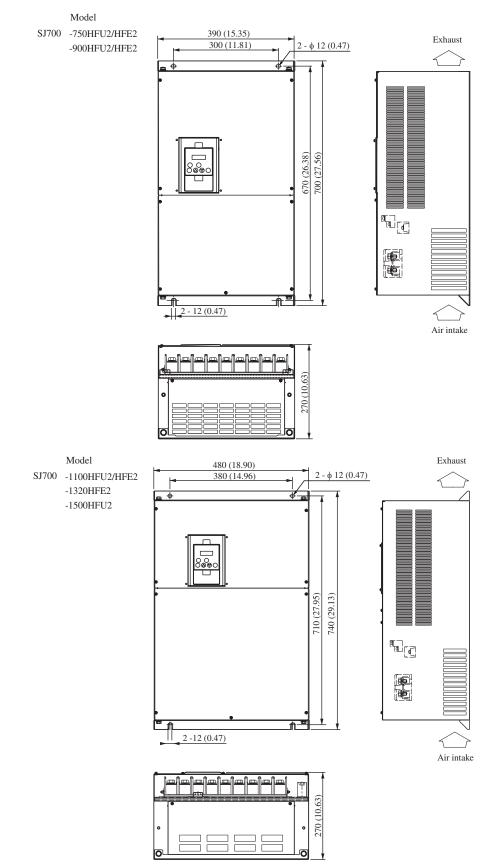

2-12

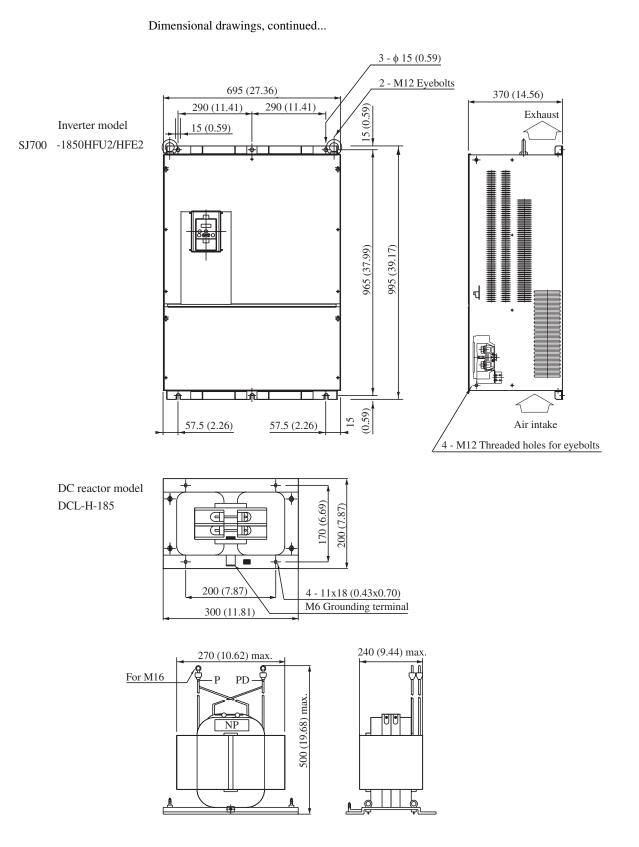

Call 1(800)985-6929 for Sales hitach

hitachiacdrive.com


Dimensional drawings, continued...




NOTE: The following crimp terminals are included with UL Listed inverter models SJ700-1850HFU2/HFE2.

Terminal Type	Corresponding StrandedWire Size, (mm ²)	Corresponding Screw Size
R38–8	R26, 66–42, 42	M8
38–16	R26, 66–42, 42	M16
R150–16	117, 2–152, 05	M16


Model R38 - 8

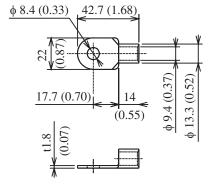


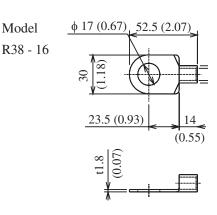

Model

R38 - 8

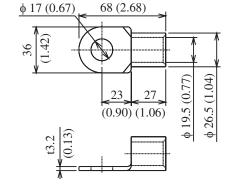


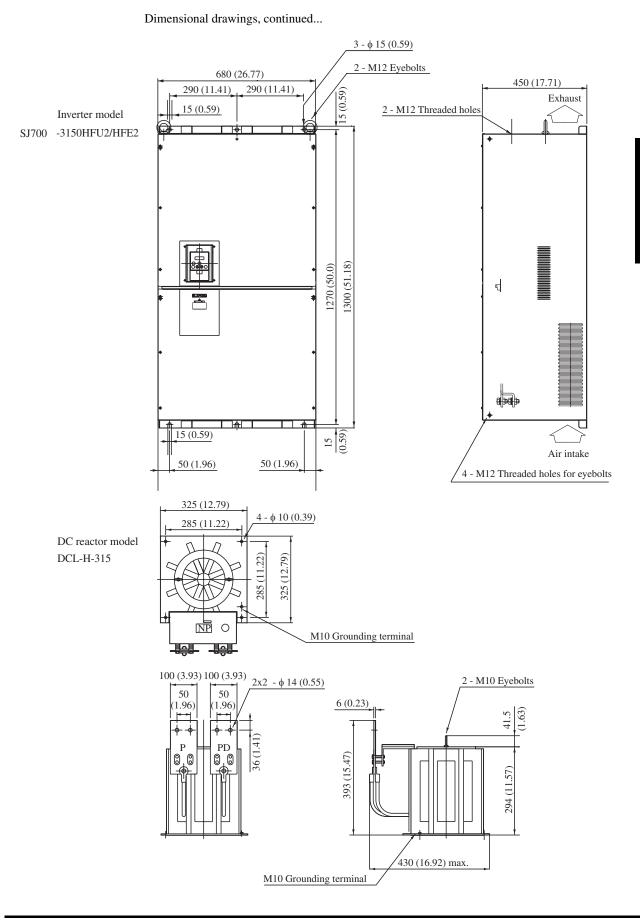

Call 1(800)985-6929 for Sales

hitachiacdrive.com


Dimensional drawings, continued...

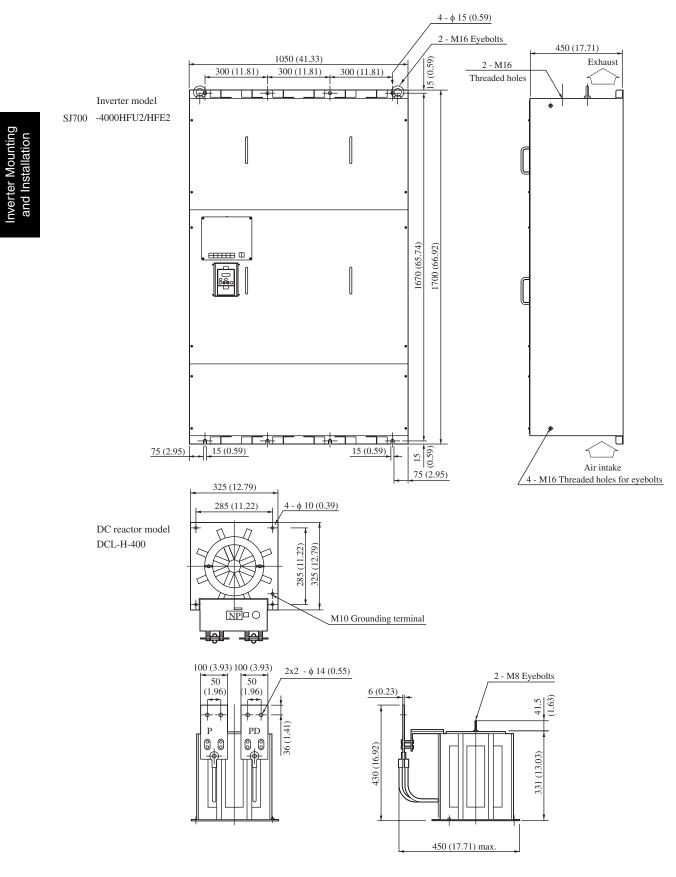


hitachiacdrive.com



Step 5: The wiring enters the inverter through an entry/exit plate. For plastic plates, remove the knockout portions of the plate. For metal plates with rubber grommets, cut an "X" in the center of the grommet as shown. Be especially careful to avoid cutting into the thick outer ring, so that the wiring will have a cushion from contacting the metal plate.

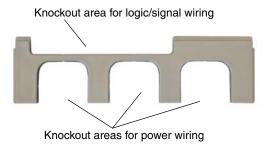

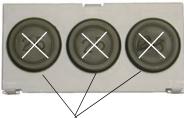

Cut grommet(s) for use as shown





NOTE: Some inverter models will have a wiring box for NEMA rating compliance. Make sure the wire entry to the NEMA box also has protective cushion from chaffing of insulation.

Before proceeding, please study the caution and warning messages below.



WARNING: Use 75°C Cu wire only or equivalent.

WARNING: Open Type Equipment. For models SJ700–750H to SJ700–4000H.



WARNING: A Class 2 circuit wired with Class 1 wire or equivalent.

WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 240 V maximum. For models with suffix L.

WARNING: Suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 480 V maximum. For models with suffix H.

HIGH VOLTAGE: Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire.

HIGH VOLTAGE: Wiring work shall be carried out only by qualified personnel. Otherwise, there is a danger of electric shock and/or fire.

HIGH VOLTAGE: Implement wiring after checking that the power supply is OFF. Otherwise, you may incur electric shock and/or fire.

HIGH VOLTAGE: Do not connect wiring to an inverter or operate an inverter that is not mounted according the instructions given in this manual. Otherwise, there is a danger of electric shock and/or injury to personnel.



Call 1(800)985-6929 for Sales

Determining Wire and Fuse Sizes This section includes tables for 200V class and 400V class inverters (on the next page). The following notes will help you read the tables in this section:

- Locate the row corresponding to the motor size and particular inverter in your application. The maximum motor current determines the recommended wire sizes.
- The length column specifies that some inverters can optionally use a smaller wire gauge if the wires are shorter than 10m and the inverter is located in an enclosure.
- Power Lines columns include wires connecting to terminals [R, S, T, U, V, W, P, PD, and N]. Only power input and motor leads will be fused: [R, S, T, U, V, and W]. The breaker ratings (GFI—ground fault interrupter) are slightly higher than fuse ratings to allow for nominal surges without tripping.
- The chassis ground columns list the Hitachi-recommended AWG and the minimal AWG for UL conformity.
- The optional external braking resistor wiring only applies to a few models that have a builtin braking unit. The other models use an optional external braking unit.
- Parallel wires increase effective wire gauge, and are denoted by "II" in the tables.
- Signal Lines, not listed in these tables, connect to the removable logic connector. The recommended wire gauge for all wiring to the logic connector is 28 AWG (0.75 mm²). Be sure to use shielded wire for any analog signals.

Motor			Wiring *1									
Ou	tput	200V		Power Lines *3 Chassis Ground Bi		Power Lines *3 Chassis Ground Brake		Chassis Groun		e Res.		
НР	kW	Inverter Models	AWG	mm ²	Fuse (UL- rated, class J, 600V)	Breaker (GFI type) *2	AWG, rec.	AWG, UL	mm ²	AWG	mm ²	
0.5	0.4	SJ700-004LFUF2	20	1.25	10A	10A	20	20	1.25	20	1.25	
1	0.75	SJ700-007LFUF2	18	1.25	10A	10A	20	20	1.25	20	1.25	
2	1.5	SJ700-015LFUF2	14	2	10A	10A	14	14	2	14	2	
3	2.2	SJ700-022LFUF2	14	2	15A	15A	14	14	2	14	2	
5	3.7	SJ700-037LFUF2	10	3.5	20A	20A	10	10	3.5	10	3.5	
7.5	5.5	SJ700-055LFUF2	8	5.5	30A	30A	8	10	5.5	8	5.5	
10	7.5	SJ700-075LFUF2	6	8	40A	40A	8	10	8	6	8	
15	11	SJ700-110LFUF2	4	14	60A	60A	4	10	14	10	14	
20	15	SJ700-150LFUF2	2	22	80A	80A	3	8	22	8	22	
25	18.5	SJ700-185LFU2	1	30	100A	100A	3	8	22	8	30	
30	22	SJ700-220LFU2	1	38	125A	125A	2	8	30	6	38	
40	30	SJ700-300LFU2	2/0	60 or 22 22	150A	150A	2	6	30	—	—	
50	37	SJ700-370LFU2	4/0	100 or 38 38	175A	175A	1/0	6	38	—	—	
60	45	SJ700-450LFU2	4/0	100 or 38 38	225A	225A	3/0	6	38	—	—	
75	55	SJ700-550LFU2	2/0 2/0	150 or 60 60	250A	250A	3/0	4	60	—	—	

* See notes for wiring tables on the following page.

-18

M	otor		Wiring *1									
Ou	Output		Power Lines *3				Chassis Ground			Brake Res.		
НР	kW	400V Inverter Models	AWG/ kcmil	mm ²	Fuse (UL- rated, class J, 600V)	Breaker (GFI type) *2	AWG/ kcmil, rec.	AWG/ kcmil, UL	mm ²	AWG	mm ²	
0.5	0.75	SJ700-007HFUF2/E	20	1.25	10A	10A	20	20	1.25	20	1.25	
1	1.5	SJ700-015HFUF2/E	18	2	10A	10A	18	18	2	18	2	
2	2.2	SJ700-022HFUF2/E	16	2	10A	10A	18	18	2	18	2	
3	4.0	SJ700-040HFUF2/E	14	2	15A	15A	18	18	2	18	2	
7.5	5.5	SJ700-055HFUF2/E	12	3.5 *5	15A	15A	10	12	3.3 *5	10	3.5 *5	
10	7.5	SJ700-075HFUF2/E	10	3.5	20A	20A	10	12	3.5	10	3.5	
15	11	SJ700-110HFUF2/E	8	5.5	30A	30A	8	10	5.5	8	5.5	
20	15	SJ700-150HFUF2/E	6	8	40A	40A	8	10	8	10	8	
25	18.5	SJ700-185HFU2/E	6	14	50A	50A	4	10	14	10	14	
30	22	SJ700-220HFU2/E	4	14	60A	60A	4	10	14	10	14	
40	30	SJ700-300HFU2/E	3	22	70A	70A	3	10	22			
50	37	SJ700-370HFU2/E	1	38	90A	90A	3	8	38	_	_	
60	45	SJ700-450HFU2/E	1 1 *6	38	125A	125A	1	8	38		_	
75	55	SJ700-550HFU2/E	2/0	60	125A	125A	1	6	60			
100	75	SJ700-750HFU2/E	1 1 *6	100 or 38 38	175A	175A	3	8	38	—	_	
125	90	SJ700-900HFU2/E	1 1 *6	100 or 38 38	200A	200A	3	8	38	—		
150	110	SJ700-1100HFU2/E	1/0 1/0	150 or 60 60	250A	250A	1	6	60	_		
150	132	SJ700–1320HFE2, SJ700–1500HFU2	3/0 3 0	80 80	300A	300A	3/0	3/0	80	—	—	
250	185	SJ700-1850HFU2/E	300 300	152 II 152	400A	400A	250	250	127	—		
400	315	SJ700-3150HFU2/E	500 500	253 II 253	700A	700A	400	400	203	—	—	
500	400	SJ700-4000HFU2/E	800 800	405 405	1000A	1000A	600	600	304	—		

Determining wire and fuse sizes, continued...

Note 1: Field wiring must be made by a UL-listed and CSA certified ring lug terminal connector sized for the wire gauge involved. The connector must be fixed by using the crimping tool specified by the connector manufacturer.

Note 2: Be sure to consider the capacity of the circuit breaker to be used.

Note 3: Be sure to use a larger wire gauge if power line length exceeds 66 ft (20m).

Note 4: Prepackaged (included) square washer is to be used when the bare wire is directly connected to terminal without using crimp contact (such as ring lug connector).

Note 5: When replacing J300-055HF or SJ300-055HFF2 inverter with SJ700-055HFF2, you may use power wiring size 2mm².

Note 6: Wire must be rated for operation up to 75°C.

Terminal Dimensions and Torque Specs

-20

The following tables list the screw size of terminal and recommended torque for tightening for each of the SJ7002 inverter models (400V models are on the next page).



CAUTION: Fasten the screws with the specified fastening torque in the table below. Check for any loosening of screws. Otherwise, there is the danger of fire.

	200V Class Inverters										
	otor tput	Inverter Model	Screw size o	of terminal	Ring lug connector *1	Tor	que				
HP	kW		AWG-bolt	Metric	connector *1	ft-lbs	N-m				
0.5	0.4	SJ700-004LFUF2	20-#10	M4	1.25–4	0.9	1.2				
1	0.75	SJ700-007LFUF2	20-#10	M4	1.25–4	0.9	1.2				
2	1.5	SJ700-015LFUF2	20-#10	M4	2–4	0.9	1.2				
3	2.2	SJ700-022LFUF2	20-#10	M4	2–4	0.9	1.2				
5	3.7	SJ700-037LFUF2	20-#10	M4	3.5–4	0.9	1.2				
7.5	5.5	SJ700-055LFUF2	8-#12	M5	R5.5–5	1.8	2.4				
10	7.5	SJ700-075LFUF2	8-#12	M5	R8–5	1.8	2.4				
15	11	SJ700-110LFUF2	4–1/4	M6	R14–6	3.0	4.0				
20	15	SJ700-150LFUF2	2-1/4	M6	22–6	3.3	4.5				
25	18.5	SJ700-185LFU2	1–1/4	M6	30–S6	3.3	4.5				
30	22	SJ700-220LFU2	1/0-5/16	M8	38–8	6.0	8.1				
40	30	SJ700-300LFU2	2-5/16	M8	60–8	6.0	8.1				
50	37	SJ700-370LFU2	1-5/16	M8 *2	100-8	6.0	8.1				
60	45	SJ700-450LFU2	1–5/16	M8 *2	100-8	6.0	8.1				
75	55	SJ700-550LFU2	2/0-1/2	M10	150-10	14.5	19.6				

Note 1: The recommended ring lug connector listing consists of wire size – screw size format. The wire sizes are in AWG or mm² format. For AWG wire sizes, bolt sizes for the ring lug centers are: #10, #12, 1/4", 5/16", and 1/2". For metric wire sizes, bolt sizes for the ring lug centers are: 6 = 6M, 8 = 8M, 10 = 10M.

Note 2: Prepackaged square washer is to be used when the bare wire is directly connected to terminal without using crimp contact (such as ring lug connector).

Note 3: [N] terminal for braking unit is common to [N] terminal of power lines.



TIP: AWG = American Wire Gauge. Smaller numbers represent increasing wire thickness. kcmil = 1,000 circular mils, a measure of wire cross-sectional area mm^2 = square millimeters, a measure of wire cross-sectional area

	400V Class Inverters									
	Motor Output Inverter Model		Power connector	Screw size (of terminal	Ring lug connector *1	Torque			
HP	kW		terminals	(AWG-bolt)	Metric	connector *1	ft-lbs	N-m		
0.5	0.75	SJ700-007HFUF2/E	(All)	20-#10	M4	1.25–4	0.9	1.2		
1	1.5	SJ700-015HFUF2/E	(All)	20-#10	M4	1.25–4	0.9	1.2		
2	2.2	SJ700-022HFUF2/E	(All)	20-#10	M4	1.25–4	0.9	1.2		
3	4.0	SJ700-040HFUF2/E	(All)	20-#10	M4	1.25–4	0.9	1.2		
7.5	5.5	SJ700-055HFUF2	(All)	8-#12	M5	5.5–5	1.8	2.4		
10	7.5	SJ700-075HFUF2	(All)	8-#12	M5	8–5	1.8	2.4		
15	11	SJ700-110HFUF2	(All)	4-1/4	M6	14–6	3.0	4.0		
20	15	SJ700-150HFUF2/E	(All)	6–1/4	M6	8–6	3.3	4.5		
25	18.5	SJ700-185HFU2/E	(All)	4-1/4	M6	14–6	3.3	4.5		
30	22	SJ700-220HFU2/E	(All)	4-1/4	M6	14–6	3.3	4.5		
40	30	SJ700-300HFU2/E	(All)	2-1/4	M6	22–6	3.3	4.5		
50	37	SJ700-370HFU2/E	(All)	1/0-5/16	M8 *2	38–8	6.0	8.1		
60	45	SJ700-450HFU2/E	(All)	1/0-5/16	M8 *2	38–8	6.0	8.1		
75	55	SJ700-550HFU2/E	(All)	2-5/16	M8 *2	60–8	6.0	8.1		
100	75	SJ700-750HFU2/E	(All)	1/0-1/2	M10	100–10	14.8	20.0		
125	90	SJ700-900HFU2/E	(All)	1/0-1/2	M10	100–10	14.8	20.0		
150	110	SJ700-1100HFU2/E	(All)	2/0-1/2	M10	150-10	14.8	20.0		
150	132	SJ700–1320HFE2, SJ700–1320HFU2	(All)	2/0-1/2	M10	150–10	14.8	20.0		
250	185	SJ700-1850HFU2/E	R, S, T, U, V, W	127 mm ² x 2	M16	R150–16	55.3	75.0		
250	185	*3	P, PD, N	152 mm ² x 2	M16	R150–16	55.3	75.0		
400	215		R, S, T, U, V, W	203 mm ² x 2	M16	200–16	32.5	44.0		
400	315	SJ700-3150HFU2/E	P, PD, N	253 mm ² x 2	M16	325-16	55.3	75.0		
500	400		R, S, T, U, V, W	304 mm ² x 2	M12	325-12	32.5	44.0		
500	400	SJ700-4000HFU2/E	P, PD, N	405 mm ² x 2	M12	*4	38.4	52.0		

Terminal dimensions and torque specs, continued...

Note 1: The recommended ring lug connector listing consists of wire size – screw size format. The wire sizes are in AWG or mm^2 format. For AWG wire sizes, bolt sizes for the ring lug centers are: #10, #12, 1/4", 5/16", and 1/2". For metric wire sizes, bolt sizes for the ring lug centers are: 6 = 6M, 8 = 8M, 10 = 10M.

Note 2: Prepackaged (included) square washer is to be used when the bare wire is directly connected to terminal without using crimp contact (such as ring lug connector).

Note 3: For 1850HF model, use wires with the prepackaged (included) ring lug terminals when connecting the wires to the main circuit terminals.

Note 4: [N] terminal for braking unit is common to [N] terminal of power lines.

hitachiacdrive.com

Step-by-Step Basic Installation



Step 6: In this step, you will connect wiring to the input of the inverter. All models have the same power connector terminals [R(L1)], [S(L2)], and [T(L3)] for three-phase input. The three phases may be connected in any order, as they are isolated from chassis ground and do not determine motor direction of rotation. **Please refer to the specifica-tions label (on the front or side of the inverter) for the acceptable input voltage ranges!**


NOTE: The wiring example to the right shows an SJ700-110LFU2 inverter. The terminal locations will vary, depending on the inverter model (see below). Note the use of ring lug connectors for a secure connection.



Use the terminal arrangement below corresponding to your inverter model.


NOTE: Be sure that the power is OFF before changing the jumper settings for [P]/[PD] or for the EMC filter selection.

Inverter models: -004 to -037LFUF2, -007 to -037HFUF2/HFEF2

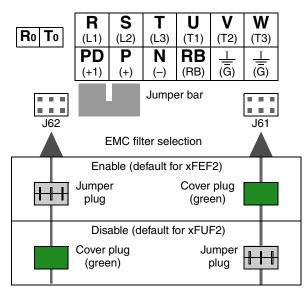




NOTE: For -055xxx and -075xxx (5.5–7.5kW) inverter models: The washer on the main terminal screw (R, S, T, PD, P, N, U, V, W, RB) has two cutouts. To prevent the cable clamping portion of crimp terminal from going under the washer, align the cutouts with the cable as shown below. Otherwise, you run the risk of a loose connection and fire.

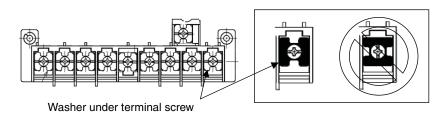



Call 1(800)985-6929 for Sales


hitachiacdrive.com

(Terminal diagrams, continued....)

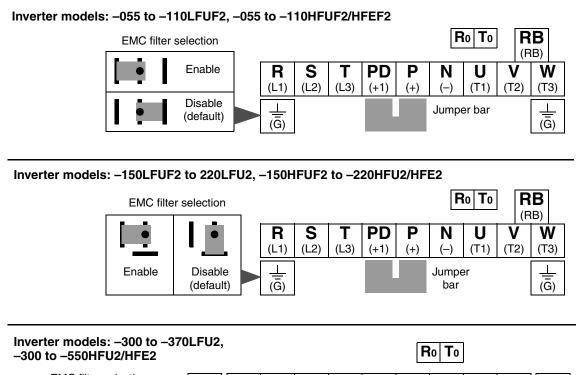

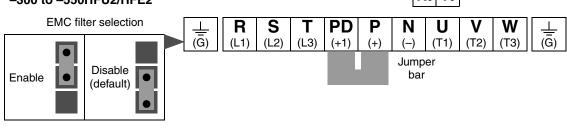

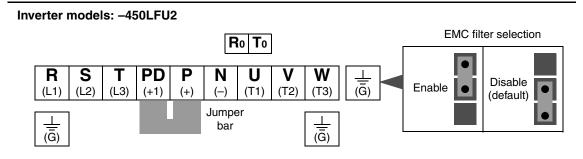

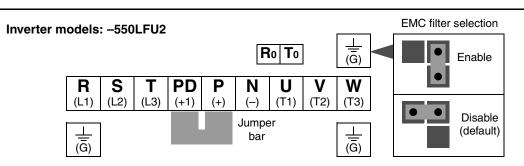


Inverter Mounting and Installation

Call 1(800)985-6929 for Sales


hitachiacdrive.com

Call 1(800)985-6929 for Sales


Inverter model: -750 to 1500HFU2

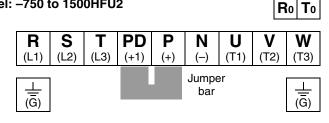


Inverter model: -1850HFU2, HFE2

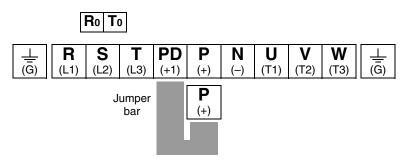

Inverter model: -3150HFU2, HFE2

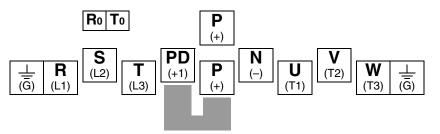

Inverter model: -4000HFU2, HFE2

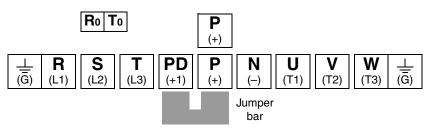

The table below lists the nominal current that may leak from only the inverter when the internal EMC filter is enabled or disabled. Leakage current is in proportion to input power voltage and frequency. The values do not exclude current leakage from external devices and equipment (e.g., power cables). Inverter models from 75 kW to 132 kW does not have a switch to enable/ disable the internal EMC filter. This complies EMC directive C3 level in standard condition.

Internal EMC Filter	Units		200V Class Inverters (Input voltage = 200VAC, 50 Hz)			400V Class Inverters (Input voltage = 400VAC, 50 Hz))
Status	kW	0.4 – 3.7	5.5 – 11	15–37	45–55	.75–3.7	5.5–11	15–37	45–55	75–132
Disabled	~mA	0.1	0.1	0.1	0.1	0.2	0.2	0.2	0.2	0.2
Enabled	~mA	2.5	48	23	23	5	95	56	56	_

-24

sales@hitachiacdrive_

SJ7002 Inverter



NOTE: An inverter powered by a portable or emergency diesel power generator may result in a distorted power waveform, overheating the generator. In general, the generator capacity should be at least five times that of the inverter (kVA).




CAUTION: Be sure that the input voltage matches the inverter specifications: • Three phase 200 to 240V 50/60Hz

• Three phase 380 to 480V 50/60Hz

CAUTION: Be sure not to power a three-phase-only inverter with single phase power. Otherwise, there is the possibility of damage to the inverter and the danger of fire.

CAUTION: Be sure not to connect an AC power supply to the output terminals. Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire.

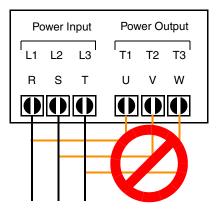

NOTE: L1, L2, L3:

> Three-phase 200 to 240V 50/60 Hz Three-phase 380 to 480V 50/60 Hz



CAUTION: Remarks for using ground fault interrupter breakers in the main power supply: Adjustable frequency inverters with CE-filters (RFI-filter) and shielded (screened) motor cables have a higher leakage current toward Earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupter breakers. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current. Please observe the following:

- Use only short time-invariant and pulse current-sensitive ground fault interrupter breakers with higher trigger current.
- Other components should be secured with separate ground fault interrupter breakers.
- Ground fault interrupter breakers in the power input wiring of an inverter are not an absolute protection against electric shock.



CAUTION: Be sure to install a fuse in each phase of the main power supply to the inverter. Otherwise, there is the danger of fire.

CAUTION: For motor leads, ground fault interrupter breakers and electromagnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire.


Call 1(800)985-6929 for Sales



Step 7: The process of motor selection is beyond the scope of this manual. However, it must be a three-phase AC induction motor. It should also come with a chassis ground lug. If the motor does not have three power input leads, stop the installation and verify the motor type. Other guidelines for wiring the motor include:

- Use an inverter-grade motor for maximum motor life (1600V insulation).
- For standard motors, use an output filter if the wiring between the inverter and motor exceeds 10 meters in length.

Simply connect the motor to the terminals [U/T1], [V/T2], and [W/T3] indicated on the inverter to the right. This is a good time to connect the chassis ground lug on the drive as well. The motor chassis ground must also connect to the same point. Use a star ground (single-point) arrangement, and never daisy-chain the grounds (point-to-point).

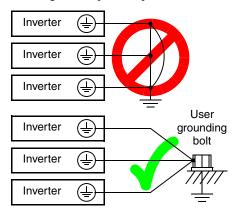



Use the same wire gauge on the motor and chassis ground wiring as you used on the power input wiring in the previous step. After completing the wiring:

Check the mechanical integrity of each wire crimp and terminal connection.

After completing the initial installation and powerup test in this chapter, you may need to wire

the logic signal connector for your application. For new inverter users/applications, we highly recommend that you first complete the powerup test in this chapter without adding any logic control wiring. Then you will be ready to set the required parameters for logic control as

• Replace the front panel and secure the retention screw firmly.

Logic Control Wiring



Uncover the Inverter Vents



CAUTION: Failure to remove all vent opening covers before electrical operation may result in damage to the inverter.

covered in Chapter 4, Operations and Monitoring.


Step 8: After mounting and wiring the inverter,

includes covers over the side ventilation ports as

remove any protective material covering the inverter ventilation openings from Step 3. This

well as the fan outlet area.

Uncover the fan outlet vents

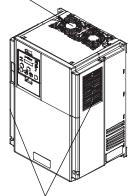

Uncover the ventilation slots, both sides

hitachiacdrive.com

Powerup Test

10 Perform the	Step 9: After wiring the inverter and motor, you're ready to do a powerup test. The procedure that follows is designed for the first-time use of the drive. Please verify the following conditions before conducting the powerup test:						
Powerup Test	• You have followed all the steps in this chapter up to this step.						
	• The inverter is new, and is securely mounted to a non-flammable vertical surface						
	• The inverter is connected to a power source and motor.						
	• No additional wiring of inverter connectors or terminals has been done.						
	• The power supply is reliable, and the motor is a known working unit, and the motor nameplate ratings match the inverter ratings.						
	• The motor is securely mounted, and is not connected to any load.						
Goals for the Powerup Test	If there are any exceptions to the above conditions at this step, please take a moment to take any measures necessary to reach this basic starting point. The specific goals of this powerup test are:						
	1. Verify that the wiring to the power supply and motor is correct.						
	2. Demonstrate that the inverter and motor are generally compatible.						
	3. Give a brief introduction to the use of the built-in operator keypad.						
	The powerup test gives you an important starting point to ensure a safe and successful applica- tion of the Hitachi inverter. We highly recommend performing this test before proceeding to the other chapters in this manual.						
Pre-test and Operational Precautions	The following instructions apply to the powerup test, or to any time the inverter is powered and operating. Please study the following instructions and messages before proceeding with the powerup test.						
	1. The power supply must have fusing suitable for the load. Check the fuse size chart presented in Step 5, if necessary.						
	2. Be sure you have access to a disconnect switch for the drive input power if necessary. However, do not turn OFF power to the inverter during its operation unless it is an emergency.						
	3. Turn the inverter's front panel potentiometer (if it exists) to the <i>MIN</i> position (fully counter-clockwise).						
	CAUTION: The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.						
	CAUTION: The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, there is the danger of injury.						

Powerup Test



CAUTION: If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury to personnel.



CAUTION: Check the following before and during the powerup test. Otherwise, there is the danger of equipment damage.
Is the shorting har between the [P] and [PD] terminals installed? DO NOT power or

- Is the shorting bar between the [P] and [PD] terminals installed? DO NOT power or operate the inverter if the jumper is removed.
- Is the direction of the motor rotation correct?
- Did the inverter trip during acceleration or deceleration?
- Were the rpm and frequency meter readings as expected?
- Were there any abnormal motor vibrations or noise?

Powering the Inverter

If you have followed all the steps, cautions and warnings up to this point, you're ready to apply power. After doing so, the following events should occur:

- The POWER LED will illuminate.
- The numeric (7-segment) LEDs will display a test pattern, then stop at ∂ . ∂ .
- The *Hz* LED will be ON.


If the motor starts running unexpectedly or any other problem occurs, press the *STOP* key. Only if necessary should you remove power to the inverter as a remedy.



NOTE: If the inverter has been previously powered and programmed, the LEDs (other than the POWER LED) may illuminate differently than as indicated above. If necessary, you can initialize all parameters to the factory default settings. See <u>"Restoring Factory Default Settings" on page 6–16</u>.

Using the Front Panel Keypad

Front Panel Introduction Please take a moment to familiarize yourself with the keypad layout shown in the figure below.

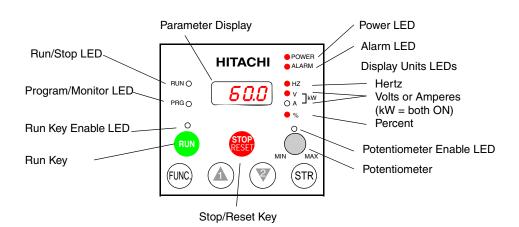

The display is used in programming the inverter's parameters, as well as monitoring specific parameter values during operation. Many functions are applicable only during the initial installation, while others are more useful for maintenance or monitoring.

Parameter Editing The front panel controls and indicators are described as follows:


and Controls

- **Run/Stop LED** ON when the inverter output is ON and the motor is developing torque, and OFF when the inverter output is OFF (Stop Mode).
- **Program/Monitor LED** This LED is ON when the inverter is ready for parameter editing (Program Mode). It is normally OFF when the parameter display is monitoring data (Monitor Mode). However, the PRG LED will be ON whenever you are monitoring the value of parameter D001. (When the keypad is enabled as the frequency source via A001=02, you can edit the inverter frequency directly from D001 monitor display by using the Up/Down keys.)
- **Run Key Enable LED** is ON when the inverter is ready to respond to the Run key, OFF when the Run key is disabled.
- **Run Key** Press this key to run the motor (the Run Enable LED must be ON first). Parameter F004, Keypad Run Key Routing, determines whether the Run key generates a Run FWD or Run REV command.
- **Stop/Reset Key** Press this key to stop the motor when it is running (uses the programmed deceleration rate). This key will also reset an alarm that has tripped.
- **Potentiometer** (OPE–SRE only) allows an operator to directly set the motor speed when the potentiometer is enabled for output frequency control.
- **Potentiometer Enable LED** ON when the potentiometer is enabled for value entry. (OPE–SRE only).
- Parameter Display a 4-digit, 7-segment display for parameters and function codes.
- **Display Units: Hertz/Volts/Amperes**/kW/% These LEDs indicate the units associated with the parameter display. When the display is monitoring a parameter, the appropriate LED is ON. In the case of kW units, both Volts and Amperes LEDs will be ON. An easy way to remember this is that $kW = (V \times A)/1000$.
- **Power LED** This LED is ON when the power input to the inverter is ON.
- Alarm LED This LED is ON when an alarm condition has tripped the inverter. Clearing the alarm will turn this LED OFF again. See Chapter 6 for details on clearing alarms.

Using the Front Panel Keypad

<u>1(800)985-6929</u> for Sales

- Function Key This key is used to navigate through the lists of parameters and functions for setting and monitoring parameter values.
- Up/Down (/1, /2) Keys Use these keys alternately to move up or down the lists of parameter and functions shown in the display, and increment/decrement values.
- **Store** ((str)) **Key** When the unit is in Program Mode and the operator has edited a parameter value, press the Store key to write the new value to the EEPROM. This parameter is then displayed at powerup by default. If you want to change the powerup default, navigate to a new parameter value and press the Store key.

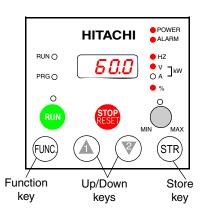

Parameters


Keys, **Modes**, and Purpose of the keypad is to provide a way to change modes and parameters. The term *function* applies to both monitoring modes and parameters. These are all accessible through function codes that are primarily 3 or 4-character codes. The various functions are separated into related groups identifiable by the left-most character, as the table shows.

Function Group	Type (Category) of Function	Mode to Access	PGM LED Indicator
"D"	Monitoring functions	Monitor	O or 🔴
"F"	Main profile parameters	Program	•
"A"	Standard functions	Program	
"В"	Fine tuning functions	Program	•
"С"	Intelligent terminal functions	Program	•
"Н"	Motor constant functions	Program	•
"P"	Expansion card functions	Program	•
"U"	User-selectable menu functions	Monitor	0
"Е"	Error codes		

For example, function "A004" is the *base frequency setting* for the motor, typically 50 Hz or 60 Hz. To edit the parameter, the inverter must be in Program Mode (PGM LED will be ON). You use the front panel keys to first select the function code "A004." After displaying the value for "A004," use the Up/Down (Λ or \checkmark) keys to edit the value.

NOTE: The inverter 7-segment display shows lower case "b" and "d", meaning the same as the upper case letters "B" and "D" used in this manual (for uniformity "A to F").

The inverter automatically switches into Monitor Mode when you access "D" Group functions. It switches into Program Mode when you access any other group, because they all have editable parameters. Error codes use the "E" Group, and appear automatically when a fault event occurs. Refer to "Monitoring Trip Events, History, & Conditions" on page 6-5 for error code details.

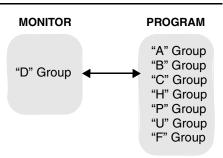

-30


hitachiacdrive.com

sales@hitachiacdrive

SJ7002 Inverter

Keypad Navigational Map

The SJ7002 Series inverter drives have many programmable functions and parameters. Chapter 3 will cover these in detail, but you need to access just a few items to perform the powerup test. The menu structure makes use of function codes and parameter codes to allow programming and monitoring with only a 4-digit display and a few keys and LEDs. So, it is important to become familiar with the basic navigational map of parameters and functions in the diagram below. You can later use this map as a reference.

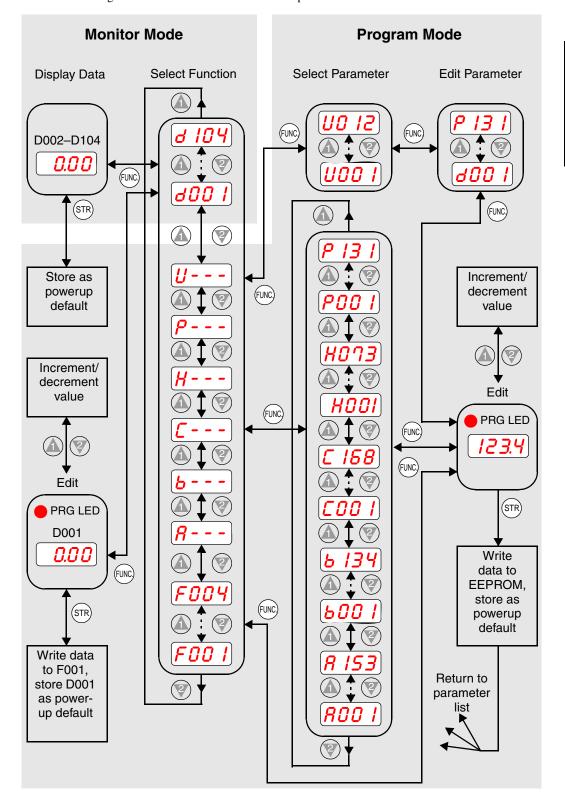

2-31

hitachiacdrive.com

sales@hitachiacdrive.com

Using the Front Panel Keypad

Selecting Functions and Editing Parameters

In order to run the motor for the powerup test, this section will show how to:

- select the inverter's maximum output frequency to the motor
- select the keypad potentiometer as the source of motor speed command
- select the keypad as the source of the RUN command
- set the number of poles for the motor
- enable the RUN command

The following series of programming tables are designed for successive use. Each table uses the previous table's final state as the starting point. Therefore, start with the first and continue programming until the last one. If you get lost or concerned that some of the other parameters settings may be incorrect, refer to <u>"Restoring Factory Default Settings" on page 6–16</u>.



CAUTION: If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.

Setting the Motor Base Frequency -The motor is designed to operate at a specific AC frequency. Most commercial motors are designed for 50/60 Hz operation. First, check the motor specifications. Then follow the steps in the table below to verify the setting or correct for your motor. DO NOT set it for greater than 50/60 Hz unless the motor manufacturer specifically approves operation at the higher frequency.

Action	Display	Func./Parameter
Press the FUNC key.	600 I	Monitor functions
Press the (A) or (keys until ->	<i>R</i>	"A" Group selected
Press the (FUNC) key.	800 I	First "A" parameter
Press the 🕼 key twice.	<i>R003</i>	Base frequency setting
Press the FUNC) key.	50 or	Default value for base frequency US = 60 Hz, Europe = 50 Hz
	50	
Press the (A) or (Y) key as needed.	60	Set to your motor specs (your display may be different)
Press the (STR) key.	<i>R003</i>	Stores parameter, returns to "A" Group list



TIP: If you need to scroll through a function or parameter list, press and hold the Λ or \bigvee key to auto-increment through the list.

Select the Potentiometer for Speed Command - The motor speed may be controlled from the following sources:

- Potentiometer on front panel keypad (if present)
- Control terminals
- Remote panel

Then follow the steps in the table below to select the potentiometer for the speed command (the table resumes action from the end of the previous table).

Action	Display	Func./Parameter
Press the 🕐 key twice.	800 I	Speed command source setting
Press the (FUNC) key.		0 = potentiometer 1 = control terminals (default) 2 = keypad
Press the 😢 key.	00	0 = potentiometer (selected)
Press the STR key.	800 I	Stores parameter, returns to "A" Group list

Select the Keypad for the RUN Command - The RUN command causes the inverter to accelerate the motor to the selected speed. You can program the inverter to respond to either the control terminal signal or the keypad RUN key. Follow the steps in the table below to select the front panel RUN key as the source for the RUN Command (the table resumes action from the end of the previous table).

Action	Display	Func./Parameter
Press the 🕼 key.	SOOS	Run command source
Press the (FUNC) key.		1 = control terminals (default) 2 = keypad
Press the 🔊 key.	50	2 = keypad (selected)
Press the STR key.	S008	Stores parameter, returns to "A" Group list



NOTE: When you press the STR key in the last step above (and the display = 02), the Run Enable LED above the RUN switch on the keypad will turn ON. This is normal, and does not mean the motor is trying to run. It means that the RUN key is now enabled. DO NOT press the RUN key at this time—finish out the programming exercise first.

Using the Front Panel Keypad

<u>Call 1</u>(800)985-6929 for Sales

Configure the Inverter for the Number of Motor Poles- The number of magnetic poles of a motor is determined by the motor's internal winding arrangement. The specifications label on the motor usually indicates its number of poles. For proper operation, verify the parameter setting matches the motor poles. Many industrial motors have four poles, corresponding to the default setting in the inverter.

Follow the steps in the table below to verify the motor poles setting and change it if necessary (the table resumes action from the end of the previous table.)

Action	Display	Func./Parameter
Press the (FUNC) key.	<i>R</i>	"A" Group selected
Press the 🕼 key three times.	<i>H</i>	"H" Group selected
Press the (FUNC) key.	HOO I	First "H" parameter
Press the 🔊 key five times.	<i>H004</i>	Motor poles parameter
Press the (UNC) key.	4	2 = 2 poles 4 = 4 poles (default) 6 = 6 poles 8 = 8 poles
Press the (a) or (b) key as needed.	4	Set to match your motor (your display may be different)
Press the STR key.	HOOY	Stores parameter, returns to "H" Group list

This step concludes the parameter setups for the inverter. You are almost ready to run the motor for the first time!

TIP: If you became lost during any of these steps, first observe the state of the PRG LED. Then study the <u>"Keypad Navigational Map" on page 2–31</u> to determine the current state of the keypad controls and display. As long as you do not press the STR key, no parameters will be changed by keypad entry errors. Note that power cycling the inverter will not cause it to reset to a particular programming state.

The next section will show you how to monitor a particular parameter from the display. Then you will be ready to run the motor.

-34



sales@hitachiacdrive.cc

SJ7002 Inverter

2–35

Monitoring Parameters with the Display

After using the keypad for parameter editing, it's a good idea to switch the inverter from Program Mode to Monitor Mode. This will turn out the PRG LED, and the Hertz, Volt, Ampere, or % LED indicates the display units.



For the powerup test, monitor the motor speed indirectly by viewing the inverter's output frequency. The *output frequency* must not be confused with *base frequency* (50/60 Hz) of the motor, or the *carrier frequency* (switching frequency of the inverter, in the kHz range). The monitoring functions are in the "D" list, located near the top left of the diagram in the <u>"Keypad Navigational Map" on page 2–31</u>.

Output frequency (speed) monitor - Resuming the keypad programming from the previous table, follow the steps in the table below.

Action	Display	Func./Parameter
Press the FUNC key.	<i>H</i>	"H" Group selected
Press the 🔊 key.	600 I	Output frequency selected
Press the (FUNC) key.	0.00	Output frequency displayed

When the *d001* function code appeared, the PRG LED went OFF. This confirms the inverter is no longer in programming mode, even while you are selecting the particular monitoring parameter. After pressing the FUNC. key, the display shows the current speed (is zero at this point).

Running the Motor

If you have programmed all the parameters up to this point, you're ready to run the motor! First, review this checklist:

- 1. Verify the Power LED is ON. If not, check the power connections.
- **2.** Verify the Run Key Enable LED is ON. If not, review the programming steps to find the problem.
- 3. Verify the PRG LED is OFF. If it is ON, review the instructions above.
- 4. Make sure the motor is disconnected from any mechanical load.
- 5. Turn the potentiometer to the MIN position (completely counterclockwise).
- 6. Now, press the RUN key on the keypad. The RUN LED will turn ON.
- **7.** Slowly increase the potentiometer setting in clockwise fashion. The motor should start turning when the indicator is in the 9:00 position and beyond.
- **8.** Press the STOP key to stop the motor rotation.

Using the Front Panel Keypad

<u>Call 1(800)985-6929</u> for Sales



K[6

Powerup Test Observations and Summary **Step 10:** Reading this section will help you make some useful observations when first running the motor.

Error Codes - If the inverter displays an error code (LED format is "*E* - -"), see <u>"Monitoring</u> <u>Trip Events, History, & Conditions" on page 6–5</u> to interpret and clear the error.

Acceleration and Deceleration - The SJ7002 inverter has programmable acceleration and deceleration values. The test procedure left these at the default value, 10 seconds. You can observe this by setting the potentiometer at about half speed before running the motor. Then press RUN, and the motor will take 5 seconds to reach a steady speed. Press the STOP key to see a 5 second deceleration to a stop.

State of Inverter at Stop - If you adjust the motor's speed to zero, the motor will slow to a near stop, and the inverter turns the outputs OFF. The high-performance SJ7002 can rotate at a very slow speed with high torque output, but not zero (must use servo systems with position feedback for that feature). This characteristic means you must use a mechanical brake for some applications.


Interpreting the Display - First, refer to the output frequency display readout. The maximum frequency setting (parameter A004) defaults to 50 Hz or 60 Hz (Europe and United States, respectively) for your application.

Example: Suppose a 4-pole motor is rated for 60 Hz operation, so the inverter is configured to output 60 Hz at full scale. Use the following formula to calculate the RPM.

$$RPM = \frac{Frequency \times 60}{Pairs of poles} = \frac{Frequency \times 120}{\# of poles} = \frac{60 \times 120}{4} = 1800RPM$$

The theoretical speed for the motor is 1800 RPM (synchronous speed). However, an induction motor cannot generate torque unless its shaft turns at a slightly different speed. This difference is called *slip*. So it's common to see a rated speed of approximately 1750 RPM on a 60 Hz, 4-pole motor. Using a tachometer to measure shaft speed, you can see the difference between the inverter output frequency and the actual motor speed. The slip increases slightly as the motor's load increases. This is why the inverter output value is called "frequency," since it is not exactly equal to motor speed. You can program the inverter to display output frequency in units more directly related to the load speed by entering a constant (discussed more in depth on page 3-45).

Run/Stop Versus Monitor/Program Modes – The Run LED on the inverter is ON in Run Mode, and OFF in Stop Mode. The Program LED is ON when the inverter is in Program Mode, and OFF for Monitor Mode. All four mode combinations are possible. The diagram to the right depicts the modes and the mode transitions via keypad.

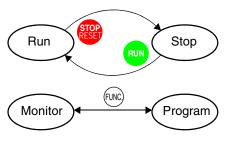

Г	333333	
	$\equiv $	
	=	
L		

NOTE: Some factory automation devices such as PLCs have alternate Run/Program modes; the device is in either one mode or the other. In the Hitachi inverter, however, Run Mode alternates with Stop Mode, and Program Mode alternates with Monitor Mode. This arrangement lets you program some values while the inverter is operating—providing flexibility for maintenance personnel.

Emergency Stop Function

Introduction

The SJ700 series inverter has the function of "uncontrolled stopping by removal of motor power" in accordance with Stop Category 0 defined by EN60204-1. The inverter is also designed to comply with Safety Category 3 of EN954-1. This function is generally called Safe Stop function. The emergency stop function shuts off the inverter output (i.e. stops the switching operation of the main circuit elements) in response to a command from a hardware circuit via an intelligent input terminal without the operation by internal CPU software.

Carefully note the following points when installing or using the Emergency Stop Function:

- The emergency stop function does not electrically shut off the inverter but merely stops the switching operation of the main circuit elements. Therefore, do not touch any terminals of the inverter or any power lines, e.g., motor cables. Otherwise, electric shock, injury, or ground fault may result.
- All systems that include an inverter must comply with the requirements of EN60204-1 (safety of machinery) and other applicable standards. You must confirm the contents of standards applicable to your system.
- Before installing a system using Safe Stop function, you must fully examine whether Safe Stop function and the safety category to be applied are adequate for your system. For details, refer to the standards required for your system.
- Every system must be configured with an inverter, a motor, and an external shutoff device. The external shutoff device must at least comply with Safety Category 3 of EN954-1.
- Safe Stop function is not intended for electrical insulation between the inverter and motor. If necessary, connect a shut off device (e.g., contactor) to the motor connection cable.
- Safe Stop function is not designed to prevent malfunctions in drive process control and application functions.
- Carefully note that digital outputs (i.e., relay and open collector outputs) are not regarded as the safety-related signals described here. The signals output from externally installed safety relays must be used for the safety-related control circuits installed for your system.


Inverter Configuration

Г	<u>ລອອອອອ</u>	
Λ		
/	\equiv	
<u> </u>		

To enable the emergency stop function, set the slide lever of slide switch SW1 to ON. The factory default SW1 setting is OFF (Emergency Stop disabled).

NOTE: Before operating slide switch SW1, make sure that the input power supply is off.

NOTE: Carefully note that improperly turning slide switch SW1 ON or OFF will automatically change function assignments to the control terminals of the inverter.

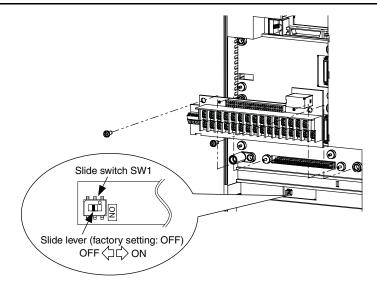

2-37

Emergency Stop Function

<u>all 1(800)985-6929</u> for Sales

When the emergency stop function is enabled, intelligent input terminals [1] and [3] are used exclusively for this function, and no other functions can be assigned to these terminals. Even if other functions have been assigned to these terminals, these are automatically disabled and these terminals are used exclusively for the emergency stop function.

Terminal [1] function – This terminal always serves as the "a" (N.O.) contact for the reset [RS] signal. This signal resets the inverter and releases the inverter from the trip due to emergency stop (error code E37).

Terminal [3] function – This terminal always serves as the "b" (N.C.) contact for the emergency stop [EMR] signal. This signal shuts off the inverter output without the operation by internal CPU software. This signal makes the inverter trip due to emergency stop (error code E37).

NOTE: If intelligent input terminal [3] is left unconnected, the cable connected to the terminal is disconnected, or the signal logic is improper, the inverter trips due to emergency stop (E37). If this occurs, check and correct the wiring and signal logic, and then input the reset [RS] signal. Only the reset [RS] signal input from intelligent input terminal [1] can release the inverter from tripping due to emergency stop (E37). The inverter cannot be released from the E37 trip status by any operation from the digital operator.

	Intelligent input terminal [1]			Intelligent input terminal [3]					
SW1 Switch Setting		selection ly C001)		a/b (N.O./N.C.) selection (use C011) *1		Function selection (normally C003)		a/b (N.O./N.C.) selection (use C013) *1, *2	
OFF – Emergency	User sele	ctable *4	User sele	ctable *4	User sele	ctable *4	User sele	ctable *4	
Stop disabled (factory setting)	Factory setting	[RS], code 18	Factory setting	N.O., code 00	Factory setting	[JG], code 06	Factory setting	N.O., code 00	
ON – Emergency Stop enabled Automatic assignment of functions to intelligent inpu [RS] (code 1			1 23 23 8						
	Fixed (cannot be changed)	[RS], code 18	Fixed (cannot be changed)	N.O., code 00	Fixed (cannot be changed)	[EMR], code 64	Fixed (cannot be changed)	N.C., code 01	
ON (after set to	User sele	ctable *4	User sele	User selectable *4 User se		ctable *4	User sele	ctable *4	
OFF once) – Emergency Stop disabled *3, *5	Setting retained when SW1 is set ON	[RS], code 18	Setting retained when SW1 is set ON	N.O., code 00	Released from emergency stop function	(No function assigned)	Setting retained when SW1 is set ON	N.C., code 01	

Note 1: When function [RS] (code 18) is assigned to the input terminal, "a/b (N.O./N.C.)" selection is always 00 (N.O.).

Note 2: When terminal setting C003 is [EMR] (code 64), terminal setting C013 is always 01 (N.C.).

Note 3: If function [RS] (code18) has been assigned to an intelligent input terminal other than intelligent input terminals [1] and [3] before slide switch SW1 is set to ON, the input terminal setting for that terminal is automatically changed to NO (no function assigned) when slide switch SW1 is set to ON. This prevents any duplication of terminal functions. Even if slide switch SW1 is subsequently turned OFF, the original function setting for the terminal will not be restored. If necessary, the original function will have to be reassigned to the terminal.

Example – If slide switch SW1 is set to ON when function [RS] (code18) has been assigned to input terminal 2 (by terminal setting C002), terminal setting C002 is changed to NO (no function assigned), and function [RS] (code 18) is assigned to input terminal 1 (by terminal setting C001). Even if slide switch SW1 is subsequently

	 turned OFF, terminal [2] function C002 and terminal [1] function C001 will remain as NO (no function assigned) and [RS] (code 18), respectively. Note 4: Function [EMR] (code 64) cannot be assigned to input terminal 3 by an operation from the digital operator. The function is automatically assigned to the terminal when slide switch SW1 is set to ON. Note 5: After slide switch SW1 has been set to ON once, function assignments to intelligent input terminals [1] and [3] are <i>not</i> returned to their original assignments. If necessary, reassign original functions to the intelligent input terminals.
Copying Inverter Data	Note that data from an inverter configured for the emergency stop function can affect copy operations when using an optional operator (SRW or SRW-EX).
	f operator data is copied to a SJ700 series inverter that has slide switch SW1 in the ON position from another SJ700 series inverter whose slide switch SW1 is OFF or an SJ300 series nverter, the digital operator on your SJ700 series inverter may display [R-ERROR COPY ROM] for a moment. This event may occur because the data on intelligent input terminals [1] and [3] cannot be copied since, on your inverter, exclusive functions have already been assigned to intelligent input terminals [1] and [3] due to the slide switch SW1 setting to ON. Note that other data is copied. If this event occurs, check the settings on both copy-source and copy-destination inverters.
	NOTE: To use the copied data in inverter operation, power OFF and ON again after the copy operation is complete.

Safety Categories The following Safety Categories are defined by EN954-1 (JIS B 9705).

Category	Safety requirement	System behavior	Principle for achieving safety
В	Components, safety-related parts of control system, and protective equipment must be designed, manufactured, selected, assembled, and combined in accordance with related standards to ensure resistance to the anticipated adverse effects of faults.	A defect (fault) may cause a loss of the safety function.	Characterized mainly by the selection of
1	The requirements of Category B must be applied. Proven components and safety principles must be applied.	A defect (fault) may cause a loss of the safety function. However, the probability of loss is less than that specified for Category B.	components
2	 The requirements of Category B and proven safety principle specifications must be applied. The safety function must be checked by the machine control system at appropriate intervals. The requirements of category B and proven safety principle specifications must be applied. Safety-related parts must be designed to meet the following requirements: Any single defect (fault) in a part must not cause any loss of the safety functions. If a single defect (fault) occurs, it must always be detected when the safety function can be reasonably implemented. 	 A defect (fault) occurring during checking may cause a loss of the safety function. A loss of the safety function is detected by checking. 	Characterized mainly by the structure

Emergency Stop Function

Category	Safety requirement	System behavior	Principle for achieving safety
3	 The requirements of category B and proven safety principle specifications must be applied. Safety-related parts must be designed to meet the following requirements: The safety function always operates when a single defect (fault) occurs. Each single defect (fault) is eventually detected to prevent the loss of the safety function. 	 The safety function always operates when a single defect (fault) occurs. Almost all defects (faults) are detected. Accumulation of undetected defects (faults) may cause a loss of the safety function. 	
4	 The requirements of category B and proven safety principle specifications must be applied. Safety-related parts must be designed to meet the following requirements: Any single defect (fault) in a part must not cause any loss of the safety function. If a single defect (fault) occurs, it must be detected when or before the next operation request is made to the safety function. If single defects (faults) cannot be detected, the accumulation of defects (faults) must not cause any loss of the safety function. 	 The safety function always operates when a single defect (fault) occurs. Each single defect (fault) is eventually detected to prevent the loss of the safety function. 	Characterized mainly by the structure

NOTE: The system manufacturer is responsible for selecting the level of risk factors in accordance with EN954-1. (Stop categories are defined by EN60204-1.)

Wiring Examples

The examples of wiring shown below are based on the three stop categories compliant with European Machinery Directive EN60204-1.

- Category 0: (Uncontrolled) stopping by immediate removal of power to machine actuators
- Category 1: Stopping by removal of power after controlled stopping with power to machine actuators retained
- · Category 2: Controlled stopping with power to machine actuators retained




NOTE: The Safe Stop function must be activated at least once a year for preventive maintenance purposes.

_[333333	
	\equiv	
1	≡=ľ	
-		

NOTE: Before preventive maintenance, the machine must be turned off. If the power supply to the motor is not turned off during testing, the Safe Stop function will not operate. In such case, the inverter must be replaced.

The examples of wiring below are intended to implement the Safe Stop function through safety input of the EMR signal by the method complying with EN954-1 Category 3.

- The emergency stop circuit is monitored via an external safety relay (safety switching device).
- One safety relay (safety switching device) can be used for multiple inverters.

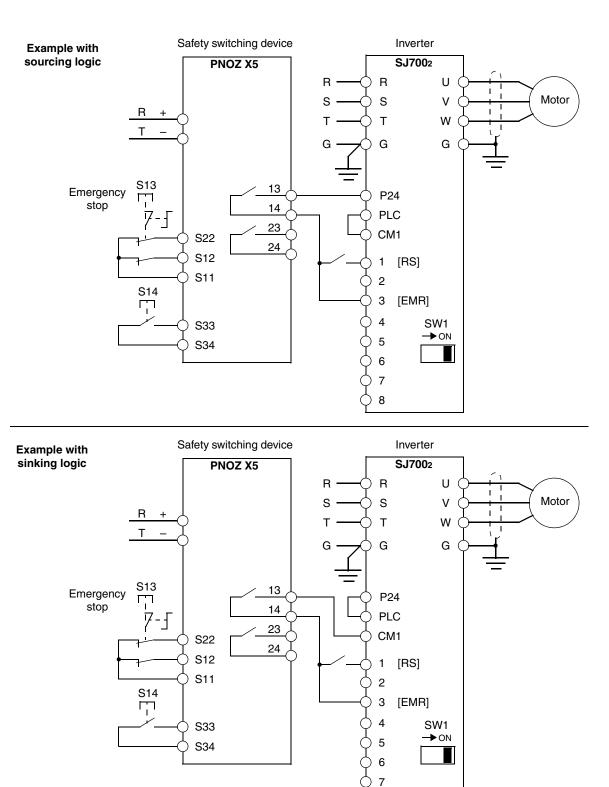



NOTE: The safety relay (safety switching device) used in these examples is the PNOZ X5 made by Pilz. Use a safety switching device equivalent to the PNOZ X5.

8

Call 1(800)985-6929 for Sales hitachi

hitachiacdrive.com

sales@hitachiacdrive.com

Emergency Stop Function

- S13 Emergency stop button Switches the inverter into safe stop mode and the motor into free-running status
- S14 Start/stop button Switches the inverter into safe stop mode by [EMR] signal input to a digital input terminal and sets the motor into free-running status. (This operation corresponds to EN60204-1 Stop Category 0.)
- Safe stop mode continues as long as the [EMR] signal is input or until the [RS] signal is input even after the [EMR] signal is canceled.
- To use the inverter for an application in which a mechanical brake (such as a crane or elevator) must be controlled, the safety output from an external safety relay must be serially connected to the brake control circuit.

NOTE: The cables used for safety relay wiring, the EMR signal, and RS signal must be shielded coaxial cables, such as type RG174/U complying with MIL-C17 (made by LAPP) or KX3B complying with NF C 93-550. Each cable must be 2.8 mm in outer diameter and 2 m or less in length. The cable shielding must be grounded.

Г	ລລລລລວ

Inverter Mounting and Installation

NOTE: Every inductor-related device, such as a relay or contactor, must have an over-voltage protection circuit.

Configuring Drive Parameters



 Choosing a Programming Device Using Keypad Devices "D" Group: Monitoring Functions "F" Group: Main Profile Parameters "F" Group: Main Profile Parameters "A" Group: Standard Functions "B" Group: Fine-Tuning Functions "C" Group: Intelligent Terminal Functions "H" Group: Motor Constants Functions "P" Group: Expansion Card Functions "U" Group: User-selectable Menu Functions "T 	n This Chapter pag	je
	— Choosing a Programming Device 2	
- "F" Group: Main Profile Parameters 9 - "A" Group: Standard Functions 10 - "B" Group: Fine-Tuning Functions 30 - "C" Group: Intelligent Terminal Functions 50 - "H" Group: Motor Constants Functions 66 - "P" Group: Expansion Card Functions 69 - "U" Group: User-selectable Menu Functions 74	— Using Keypad Devices	6
— "A" Group: Standard Functions 10 — "B" Group: Fine-Tuning Functions 30 — "C" Group: Intelligent Terminal Functions 50 — "H" Group: Motor Constants Functions 66 — "P" Group: Expansion Card Functions 69 — "U" Group: User-selectable Menu Functions 74	— <u>"D" Group: Monitoring Functions</u> <u>6</u>	<u>j</u>
— "B" Group: Fine-Tuning Functions30— "C" Group: Intelligent Terminal Functions50— "H" Group: Motor Constants Functions66— "P" Group: Expansion Card Functions69— "U" Group: User-selectable Menu Functions74	— <u>"F" Group: Main Profile Parameters</u> 9	1
— "C" Group: Intelligent Terminal Functions 50 — "H" Group: Motor Constants Functions 66 — "P" Group: Expansion Card Functions 69 — "U" Group: User-selectable Menu Functions 74	— <u>"A" Group: Standard Functions</u> <u>10</u>	1
— "H" Group: Motor Constants Functions 66 — "P" Group: Expansion Card Functions 69 — "U" Group: User-selectable Menu Functions 74	— <u>"B" Group: Fine-Tuning Functions</u> <u>30</u>	1
 <u>"P" Group: Expansion Card Functions</u>	— <u>"C" Group: Intelligent Terminal Functions</u> <u>50</u>	1
— <u>"U" Group: User-selectable Menu Functions</u>	— <u>"H" Group: Motor Constants Functions</u>	<u>i</u>
· · · · · · · · · · · · · · · · · · ·	— <u>"P" Group: Expansion Card Functions</u>	1
— Programming Error Codes	— <u>"U" Group: User-selectable Menu Functions</u> <u>74</u>	
	— Programming Error Codes	2

Choosing a Programming Device

Choosing a Programming Device

Introduction

Inverter

Keypads

Programming

Hitachi variable frequency drives (inverters) use the latest electronics technology for getting the right AC waveform to the motor at the right time. The benefits are many, including energy savings and higher machine output or productivity. The flexibility required to handle a broad range of applications has required ever more configurable options and parameters—inverters are now a complex industrial automation component. And this can make a product seem difficult to use, but the goal of this chapter is to make this easier for you.

As the powerup test in Chapter 2 demonstrated, you do not have to program very many parameters to run the motor. In fact, most applications would benefit only from programming just a few, specific parameters. This chapter will explain the purpose of each set of parameters, and help you choose the ones that are important to your application.

If you are developing a new application for the inverter and a motor, finding the right parameters to change is mostly an exercise in optimization. Therefore, it is okay to begin running the motor with a loosely tuned system. By making specific, individual changes and observing their effects, you can achieve a finely tuned system. And, the SJ7002 Series inverters have a built-in auto-tuning algorithm to set certain motor parameters.

The front panel keypad is the first and best way to get to know the inverter's capabilities. Every function or programmable parameter is accessible from the keypad. All keypads have the same basic layout, but with different features. The OPE–SRE has a potentiometer knob for frequency setting input. The SRW–0EX Read/write Copy Unit has the ability to upload (copy) or download (write) all inverter parameter data to/from memory in the copy unit itself. This unit is useful in transferring one inverter's settings to another.

The following table shows various programming options, the features unique to each device, and the cables required.

Device	Part	Parameter	Parameter setting	Cables (for optional external mounting)		
Device	Number	Access	storage	Part number	Length	
Inverter keypad,	OPE-SRE	Monitor and program	EEPROM in inverter	ICS-1	1 meter	
U.S. version	S. version			ICS-3	3 meters	
Inverter keypad, European version	OPE-S	Monitor and program	EEPROM in inverter	Use same two cables above		
Read/write Copy Unit with Keypad	SRW-0EX	Monitor and program; read or write all data	EEPROM in inverter or in copy unit	Use same tw abo		



TIP: Other special-purpose keypads are available, such as ones to serve the needs of the HVAC market (heating, ventilating & air conditioning). Please contact your Hitachi distributor for details.


3

3 - 3

Using Keypad Devices

Inverter Front Panel Keypad

The SJ7002 Series inverter front keypad contains all the elements for both monitoring and programming parameters. The keypad layout (OPE–SRE) is shown below. All other programming devices for the inverter have a similar key arrangement and function.

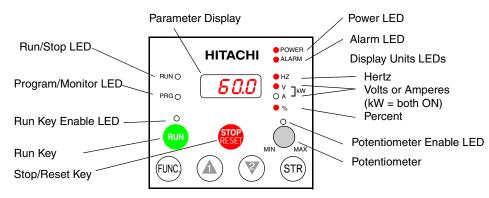


Key and Indicator Legend

- **Run/Stop LED** ON when the inverter output is ON and the motor is developing torque, and OFF when the inverter output is OFF (Stop Mode).
- **Program/Monitor LED** This LED is ON when the inverter is ready for parameter editing (Program Mode). It is normally OFF when the parameter display is monitoring data (Monitor Mode). However, the PRG LED will be ON whenever you are monitoring the value of parameter D001. (When the keypad is enabled as the frequency source via A001=02, you can edit the inverter frequency directly from D001 monitor display by using the Up/Down keys.)
- **Run Key** Press this key to run the motor (the Run Enable LED must be ON first). Parameter F004, Keypad Run Key Routing, determines whether the Run key generates a Run FWD or Run REV command.
- **Run Key Enable LED** is ON when the inverter is ready to respond to the Run key, OFF when the Run key is disabled.
- **Stop/Reset Key** Press this key to stop the motor when it is running (uses the programmed deceleration rate). This key will also reset an alarm that has tripped.
- **Potentiometer** (OPE–SRE only) allows an operator to directly set the motor speed when the potentiometer is enabled for output frequency control
- **Potentiometer Enable LED** ON when the potentiometer is enabled for value entry (OPE–SRE only).
- Parameter Display a 4-digit, 7-segment display for parameters and function codes.
- **Display Units: Hertz/Volts/Amperes**/kW/% These LEDs indicate the units associated with the parameter display. When the display is monitoring a parameter, the appropriate LED is ON. In the case of kW units, both Volts and Amperes LEDs will be ON. An easy way to remember this is that kW = (V x A)/1000.
- **Power LED** This LED is ON when the power input to the inverter is ON.
- Alarm LED This LED is ON when an alarm condition has tripped the inverter. Clearing the alarm will turn this LED OFF again. See Chapter 6 for details on clearing alarms.
- Function Key This key is used to navigate through the lists of parameters and functions for setting and monitoring parameter values.
- Up/Down (⚠, ♥) Keys Use these keys to alternately move up or down the lists of parameter and functions shown in the display, and increment/decrement values.
- Store (() Key When the unit is in Program Mode and the operator has edited a parameter value, press the Store key to write the new value to the EEPROM. This parameter is then displayed at powerup by default. If you want to change the powerup default, navigate to a new parameter value and press the Store key.

Using Keypad Devices

Keypad Whether you use the keypad on the inverter or the read-write copy unit, each navigates the same way. The diagram below shows the basic navigational map of parameters and functions.

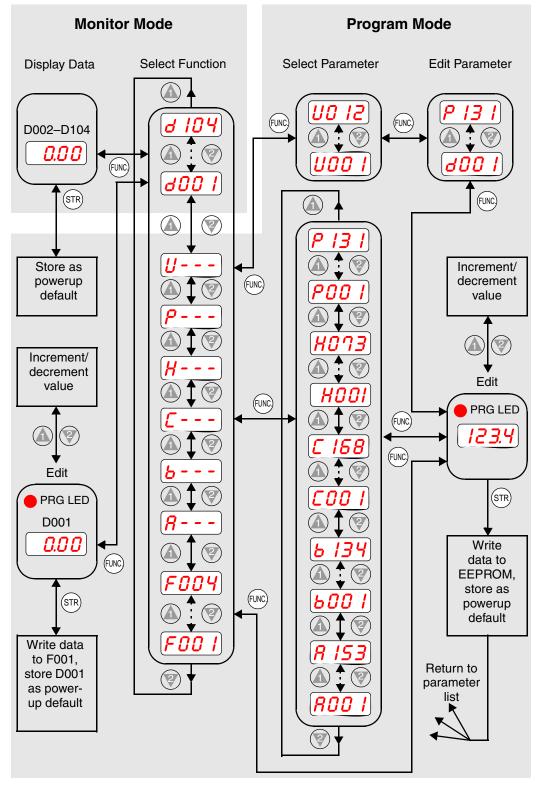



NOTE: The inverter 7-segment display shows lower case "b" and "d", meaning the same as the upper case letters "B" and "D" used in this manual (for uniformity "A to F").

3 - 4

hitachiacdrive.com

sales@hitachiacdrive.com

SJ7002 Inverter

Operational Modes	The RUN and PGM LEDs tell just part of the story; Run Mode and Program Modes are independent modes, not opposite modes. In the state diagram to the right, Run alternates with Stop, and Program Mode alternates with Monitor Mode. This is a very important ability, for it shows that a technician can approach a running machine and change some parameters without shutting down the machine.
	The occurrence of a fault during operation will cause the inverter to enter the Trip Mode as shown. An event such as an output overload will cause the inverter to exit the Run Mode and turn OFF its output to the motor. In the Trip Mode, any request to run the motor is ignored. You must clear the error by pressing the Stop/Reset switch. See "Monitoring Trip Events, History, & Conditions" on page 6–5.
Run Mode Edits	The inverter can be in Run Mode (inverter output is controlling motor) and still allow you to edit certain parameters. This is useful in applications that must run continuously, yet need some inverter parameter adjustment.
	The parameter tables in this chapter have a column titled "Run Mode Edit." An Ex mark \checkmark means the parameter cannot be edited; a Check mark \checkmark means the parameter can be edited. You'll notice in the table example to the right the two adjacent marks: " $\checkmark \checkmark$ ". The two marks (that can also be " $\checkmark \checkmark$ " or " $\checkmark \checkmark$ ") correspond to these levels of access to editing: $\checkmark \checkmark$
	• Low-access level to Run Mode edits (indicated by <i>left-most</i> mark)
	• High-access level to Run Mode edits (indicated by <i>right-most</i> mark)
	The Software Lock Setting (parameter B031) determines the particular access level that is in effect during Run Mode and access in other conditions, as well. It is the responsibility of the user to choose a useful and safe software lock setting for the inverter operating conditions and personnel. Please refer to <u>"Software Lock Mode" on page 3–38</u> for more information.
Control Algorithms	The motor control program in the SJ7002 inverter has several sinusoidal PWM switching algorithms. The intent is that you algorithm generates the frequency output in a unique way. Once configured, the algorithm is the basis for other parameter settings as well (see <u>'Torque Control</u> <u>Algorithms'' on page 3–14</u>). Therefore, choose the best algorithm early in your application design process.

Call 1(800)985-6929 for Sales

"D" Group: Monitoring Functions

Parameter Monitoring Functions

3-6

You can access important system parameter values with the "D" Group monitoring functions, whether the inverter is in Run Mode or Stop Mode. After selecting the function code number for the parameter you want to monitor, press the Function key once to show the value on the display. In Functions D005 and D006 the intelligent terminals use individual segments of the display to show ON/OFF status.

Func. Code	Name	Description	Units
D001	Output frequency monitor	Real-time display of output frequency to motor, from 0.0 to 400.0 Hz	0.0 to 400.0 Hz
D002	Output current monitor	Filtered display of output current to motor (100 mS internal filter time constant)	А
D003	Rotation direction monitor	Three different indications:	_
D004	Process variable (PV), PID feedback monitor	Displays the scaled PID process variable (feedback) value (A75 is scale factor)	—
D005	Intelligent input terminal status	Displays the state of the intelligent input terminals:	_
D006	Intelligent output terminal status	Displays the state of the intelligent output terminals: ON OFF AL 15 14 13 12 11 Terminal symbols	_
D007	Scaled output frequency monitor	Displays the output frequency scaled by the constant in B0086. Decimal point indicates range: XX.XX 0.00 to 99.99 XXXX 100.0 to 999.9 XXXX 1000 to 99999 XXXX 10000 to 99990	User- defined
D008	Actual frequency monitor	Displays the actual shaft speed of the motor, converted to frequency	Hz
D009	Torque command monitor	Displays the level of the torque command when the inverter is set to torque control mode	%
D010	Torque bias monitor	Displays the level of the torque bias, if enabled, when the inverter is in vector control mode with feedback	%

sales@hitachiacdrive

SJ7002 Inverter

51	

Func. Code	Name	Description	Units
D012	Torque monitor	Estimated output torque value, range is -300.0 to +300.0%	%
D013	Output voltage monitor	Voltage of output to motor, range is 0.0 to 600.0V	VAC
D014	Power monitor	Input power to inverter, range is 0.0 to 999.9	kW
D015	Cumulative power monitor	Displays cumulative input power to inverter; B079 selects the multiplier for units. Range is 0.0 to 999.9, 1000 to 9999, or 100 to 999	kW/h
D016	Cumulative operation RUN time monitor	Displays total time the inverter has been in RUN mode in hours. Range is 0 to 9999 / 1000 to 9999/ 100 to 999 (10,000 to 99,900) hrs.	hours
D017	Cumulative power-on time monitor	Displays total time the inverter has had input power (ON) in hours. Range is: 0 to 9999 / 100.0 to 999.9 / 1000 to 9999 / 100 to 999 hrs.	hours
D018	Heat sink temperature monitor	Displays the temperature of the inverter's heat sink	°C
D019	Motor temperature monitor	Displays motor internal temperature (requires an NTC thermistor installed in the motor and connected to [TH] and [CM1]).	°C
D022	Component life monitor	Displays estimated life status of DC bus capacitors and cooling fans	—
D023	Program counter	Displays the current program step being executed when the inverter is operating under the control of an EZ Sequence program	Programs
D024	Program number counter	Displays the EZ Sequence program identifica- tion number, if defined in the program, when a program is loaded in the inverter	Program
D025	User monitor 0	Displays state of internal EZ Sequence register User Monitor 0	—
D026	User monitor 1	Displays state of internal EZ Sequence register User Monitor 1	_
D027	User monitor 2	Displays state of internal EZ Sequence register User Monitor 2	
D028	Pulse counter	Displays accumulated pulse count of [PCNT] intelligent input terminal (option code 74)	Pulses
D029	Position setting monitor	Displays absolute position command for motor shaft in absolute position control mode	Pulses
D030	Position feedback monitor	Displays absolute position of motor shaft when in absolute position control mode	Pulses
D102	DC voltage monitoring	Displays the DC Bus voltage	V
D103	BRD load factor monitoring	Displays the running average Dynamic Braking usage ratio (%ED)	%
D104	Electronic thermal overload monitoring	Displays the motor electronic thermal overload estimated temperature ratio. If the value reaches 100%, the inverter will trip (E05).	%

Call 1(800)985-6929 for Sales hitachiacdrive.com

Call 1(800)985-6929 for Sales

Trip Event and Programming Error Monitoring

3-8


The trip event and history monitoring feature lets you cycle through related information using the keypad. See <u>"Monitoring Trip Events, History, & Conditions" on page 6–5</u> for more details.

Programming errors generate an error code that begins with the special $\frac{1}{2}$ character. See <u>"Programming Error Codes" on page 3–75</u> for more information.

Func. Code	Name	Description	Units
D080	Trip Counter	Number of trip events	—
D081 to D086	Trip monitor 1 to 6	Displays trip event information	
D090	Programming error monitor	Displays programming error code	—

"F" Group: Main Profile Parameters

The basic frequency (speed) profile is defined by parameters contained in the "F" Group as shown to the right. The output frequency is set in Hz, but acceleration and deceleration are specified seconds (the time to ramp from zero to maximum frequency, or from maximum frequency to zero). The motor direction parameter determines whether the keypad Run key produces a FW or RV command. This parameter does not

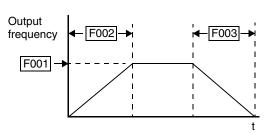

affect the [FW] terminal or [RV] intelligent terminal function, which you configure separately.

Acceleration 1 and Deceleration 1 are the standard default accel and decel values for the main profile. Accel and decel values for an alternative profile are specified by using parameters Ax92 through Ax93. The motor direction selection (F004) determines the direction of rotation as commanded only from the keypad. This setting applies to any motor profile (1st, 2nd, or 3rd) in use at a particular time.

		Keypad			Defaults			Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn) 0.00 30.0 30.0 30.0 30.0 30.0 30.0 30.	Mode Edit Lo Hi
F001	Output frequency setting			0 to 400 (Hz)	0.00	0.00	0.00	~~
	Standard default target frequency that deter- mines constant motor speed							
F002	Acceleration (1) time setting	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default acceleration							
F202	Acceleration (1) time setting, 2nd motor	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default acceleration, 2nd motor							
F302	Acceleration (1) time setting, 3rd motor	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default acceleration, 3rd motor							
F003	Deceleration (1) time setting	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default deceleration							
F203	Deceleration (1) time setting, 2nd motor	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default deceleration, 2nd motor							
F303	Deceleration (1) time setting, 3rd motor	_		0.01 to 3600 (seconds)	30.0	30.0	30.0	~~
	Standard default deceleration, 3rd motor	1						
F004	Keypad Run key routing	FW	00	Forward	00	00	00	××
		RV	01	Reverse				

"A" Group: Standard Functions


<u>Call 1(800)985-6929</u> for Sales

"A" Group: Standard Functions

Basic Parameter Settings

These settings affect the most fundamental behavior of the inverter—the outputs to the motor. The frequency of the inverter's AC output determines the motor speed. You may select from three different sources for the reference speed. During application development you may prefer using the potentiometer, but you may switch to an external source (control terminal setting) in the finished application, for example.

The base frequency and maximum frequency settings interact according to the graph below (left). The inverter output operation follows the constant V/f curve until it reaches the full-scale output voltage. This initial straight line is the constant-torque part of the operating characteristic. The horizontal line over to the maximum frequency serves to let the motor run faster, but at a reduced torque. This is the constant-horsepower part of the characteristic. If you want the motor to output constant torque over its entire operating range (limited to the motor nameplate voltage and frequency rating), then set the base frequency and maximum frequency equal as shown (below right).

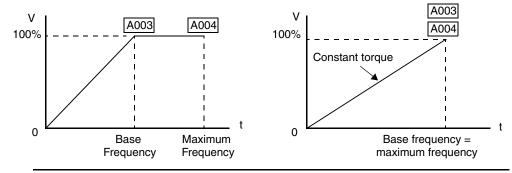

NOTE: The "2nd motor" and "3rd motor" settings in the tables in this chapter store an alternate set of parameters for additional motors. The inverter can use the 1st, 2nd, or 3rd set of parameters to generate the output frequency to the motor. See <u>"Configuring the Inverter for Multiple Motors" on page 4–76</u>.

		Keypad				Defaults		Run
Func. Code	Name/ Description	SRW	OPERange and SettingsFEF2 FE2 (EU)FUF2 (USA)FUF2 (USA)FUF2 (USA)FUF2 (USA)FUF2 	FF2 F2 (Jpn)	Mode Edit Lo Hi			
A001	Frequency source setting	VR	00	Keypad potentiometer	01	01	02	××
		TRM	01	Control terminal				
		REM	20	Function F001 setting				
		RS485	03	RS485 serial command				
		0P1	04	Expansion board 1				
		0P2	05	Expansion board 2				
		PLS	06	Pulse train input				
		PRG	01	Easy sequence				
		MATH	10	Calculate function input				
A002	Run command source setting	TRM	01	Input terminal [FW] or [RV] (assignable)	01	01	02	××
		REM	20	Run key on keypad of digital operator				
		RS485	03	RS485 serial command				
		0P1	04	Start/Stop, expansion card #1				
		0P2	05	Start/Stop, expansion card #2				

3

sales@hitachiacdrive_c

SJ7002 Inverter

3–11

Func. Code	Keypad				Run			
	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Edit Lo Hi
A003	Base frequency setting			30. to maximum frequency (Hz)	50.	60.	60.	××
A203	Base frequency setting, 2nd motor			30. to maximum frequency (Hz)	50.	60.	60.	××
A303	Base frequency setting, 3rd motor			30. to maximum frequency (Hz)	50.	60.	60.	××
A004	Maximum frequency setting			30. to 400. (Hz)	50.	60.	60.	xx
A204	Maximum frequency setting, 2nd motor			30. to 400. (Hz)	50.	60.	60.	××
A304	Maximum frequency setting, 3rd motor			30. to 400. (Hz)	50.	60.	60.	xx

NOTE: Intelligent terminals [OPE] (option code 31) or [F-TM] (option code 51) can override settings A001 and A002 when either terminal is ON and the operation commands for that terminal is enabled.

NOTE: When using a remote operator (SRW) to operate the inverter, the REMT (remote) key allows you to enter the frequency setting and operation commands remotely.

NOTE: When the DeviceNet option board (SJ-DN) is installed, you may keep the A002 default setting because the Run Command Source is automatically set via DeviceNet. Otherwise, only use settings A002 = 01, 02, or 03.




NOTE: The base frequency must be less than or equal to the maximum frequency (ensure that $A003 \le A004$).

Analog Input and Miscellaneous Settings

The inverter has the capability to accept external analog inputs that can command the output frequency to the motor. Signals including voltage input (0 to +10V) at terminal [O], bipolar input (-10 to +10V) at terminal [O2], and current input (4 to 20mA) at terminal [OI] are available. Terminal [L] serves as signal ground for the three analog inputs. The analog input settings adjust the curve characteristics between the analog input and the frequency output.


Adjusting [O-L] characteristics – In the graph to the right, A013 and A014 select the active portion of the input voltage range. Parameters A011 and A012 select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin (A011 and A013 > 0), then A015 defines whether the inverter outputs 0Hz or the A011-specified frequency when the analog input value is less than the A013 setting. When the input voltage is greater than the A014 ending value, the inverter outputs the ending frequency specified by A012.

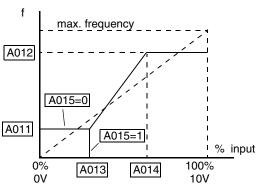

sales@hitachiacdrive.com


Call 1(800)985-6929 for Sales

Adjusting [OI–L] characteristics – In the graph to the right, A103 and A104 select the active portion of the input current range. Parameters A101 and A102 select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin (A101 and A103 > 0), then A105 defines whether the inverter outputs 0Hz or the A101-specified frequency when the analog input value is less than the A103 setting. When the input voltage is greater

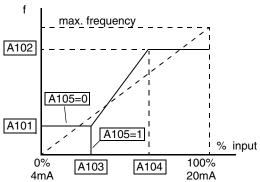

than the A104 ending value, the inverter outputs the ending frequency specified by A102.

Adjusting [O2–L] characteristics – In the graph to the right, A113 and A114 select the active portion of the input voltage range. Parameters A111 and A112 select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the input voltage is less than the A113 input starting value, the inverter outputs the starting frequency specified by A111. When the input voltage is greater than the A114 ending value, the inverter outputs the ending frequency specified by A112.

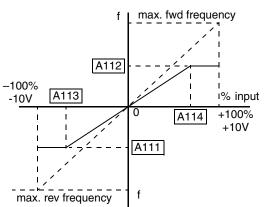

Func. Code		Keypa	ad			Defaults		Run
	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A005	[AT] selection	0/0I	00	Select between [O] and [OI] at [AT]	00	00	00	××
		0/02	01	Select between [O] and [O2] at [AT]				
		0/VR	50	Select between [O] and keypad pot.				
		OI/VR	03	Select between [OI] and keypad pot.				
		02/VR	04	Select between [O2] and keypad pot.				
A006	[O2] selection	02	00	No summing, [O2] and [OI]	03	03	03	xx
		0/0I-P	01	Sum of [O2] and [OI], neg. sum (reverse speed reference) inhibited				
		0/0I-PM	02	Sum of [O2] and [OI], neg. sum (reverse speed reference) allowed				
		OFF	03	Disable [O2] input				
A011	[O]–[L] input active range star	rt frequency	•	0.00 to 99.99, 100.0 to 400.00 (Hz);	0.00	0.00	0.00	×v
-	The output frequency corresponding to the voltage input range starting point			model -4000HFx2 is 0.00 to 120.00 (Hz)				
A012	[O]–[L] input active range end	l frequency		0.00 to 99.99, 100.0 to 400.00 (Hz);	0.00	0.00	0.00	×v
	The output frequency correspondence voltage input range ending po		e	model -4000HFx2 is 0.00 to 120.00 (Hz)				

3-

sales@hitachiacdrive

SJ7002 Inverter

9	6
	г

		Keyp	ad			Defaults	1	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A013	IO]-[L] input active range start voltage The starting point for the voltage input range			0. to [O]-[L] input active range end	0.	0.	0.	× 🗸
				voltage (%)				
A014	014 [O]–[L] input active range end voltage		[O]-[L] input active range start voltage to	100.	100.	100.	× 🗸	
	The ending point for the voltage	ge input ran	ge	100. (%)				
A015	[O]–[L] input start frequency	0-EXS	00	Use A011 start value	01	01	01	×v
	enable	OHz	01	Use 0 Hz				
A016	External frequency filter time	constant		n = 1 to 30 (where n = number of samples for average); 31=500ms filter	8.	8.	8.	× 🗸
A017	Easy sequence function	OFF	00	Disable	00	00	00	xx
	enable	ON	01	Enable				

Multi-speed and Jog Frequency Settings

The SJ7002 inverter has the capability to store and output up to 16 preset frequencies to the motor (A020 to A035). As in traditional motion terminology, we call this *multi-speed profile* capability. These preset frequencies are selected by means of digital inputs to the inverter. The inverter applies the current acceleration or deceleration setting to change from the current output frequency to the new one. The first multi-speed setting is duplicated for the second motor settings (the remaining 15 multi-speeds apply only to the first motor).

The jog speed setting is used whenever the Jog command is active. The jog speed setting range is arbitrarily limited to 10 Hz to provide safety during manual operation. The acceleration to the jog frequency is instantaneous, but you can choose from six modes for the best method for stopping the jog operation.

		Keyp	ad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A019	Multi-speed operation selec- tion	BINARY	00	Binary; up to 16-stage speed using 4 intelligent terminals	00	00	00	××
		BIT	01	Single-bit; up to 8-stage speed using 7 intelligent terminals	-			
A020	Multi-speed frequency setting Defines the first speed of a multi-speed profile			0 to 360 (Hz)	0.00	0.00	0.00	~~
				A020 = Speed 0 (1st motor)				
A220	Multi-speed frequency setting, 2nd motor			0 to 360 (Hz) A220 = Speed 0 (2nd motor)	0.00	0.00	0.00	~~
	Defines the first speed of a multi-speed profile for 2nd motor							
A320	Multi-speed frequency setting	, 3rd motor		0 to 360 (Hz)	0.00	0.00	0.00	~~
	Defines the first speed of a mu for 3rd motor	ılti-speed p	rofile	A320 = Speed 0 (3rd motor)				
A021 to	Multi-speed frequency setting (for multiple motors)	s		0 to 360 (Hz) A021 = Speed 1	0.00	0.00	0.00	~~
A035	Defines 15 additional speeds			A035 = Speed 15				

"A" Group: Standard Functions

		Кеур	ad			Defaults		Run Mode
Func Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A038	Jog frequency setting			0.5 to 9.99 (Hz)	1.00	1.00	1.00	~~
	Defines limited speed for jog							
A039	Jog stop mode	FRS	00	Free-run stop, jogging disabled during motor run	00	00	00	× 🗸
	Defines how end of jog stops the motor	DEC	01	Controlled deceleration, jogging disabled during motor run				
		DB	02	DC braking to stop, jogging disabled during motor run				
		R-FRS	03	Free-run stop, jogging always enabled				
		R-DEC	04	Controlled deceleration, jogging always enabled				
		R-DB	05	DC braking to stop, jogging always enabled				


Torque Control Algorithms

The inverter generates the motor output according to the V/f algorithm or the sensorless vector control algorithm. Parameter A044 selects the inverter torque control algorithm for generating the frequency output, as shown in the diagram to the right (A244 and A344 for 2nd and 3rd motors, respectively). The factory default is 00 (constant torque V/f control).

Review the following descriptions to help you choose the best torque control algorithm for your application.

- The built-in V/f curves are oriented toward developing constant torque or variable torque characteristics (see graphs below).
- The free-setting curve provides an even more flexible characteristic, but it requires more parameter settings.
- Sensorless vector control calculates an ideal torque vector based on current motor position, winding currents, and so

Inverter Torque Control Algorithms

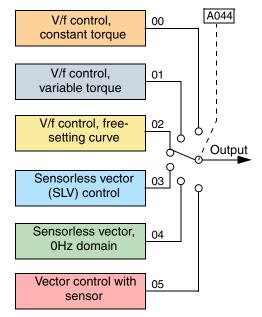


on. It is a more robust control method than the V/f control methods. However, it is more dependent on actual motor parameters and will require you to set these values carefully or to perform the auto-tuning procedure (see <u>"Auto-tuning of Motor Constants" on page 4–71</u>) to obtain optimum performance.

- Sensorless vector control, 0Hz domain increases the low-speed torque performance (0–2.5Hz) via an advanced Hitachi torque control algorithm. However, you will need to size the inverter for one frame size larger than the motor for proper operation.
- Vector control with sensor requires expansion card SJ-FB encoder feedback board and a motor shaft encoder. Choose this method when precise position/velocity control is required.

3–15

Constant and Variable Torque – The graph below (left) shows the constant torque characteristic from 0Hz to the base frequency A003. The voltage remains constant for output frequencies higher than the base frequency.

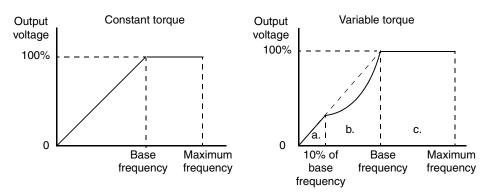


The graph above (right) shows the general characteristic for variable torque. The curve may be best described in three sections, as follows:

- **a.** The range from 0Hz to 10% of the base frequency is the constant torque characteristic. For example, a base frequency of 60Hz ends the constant torque characteristic segment at 6Hz.
- **b.** The range from 10% of the base frequency to the base frequency is the variable (reduced) torque characteristic. The voltage is output in the curve of frequency to the 1.7 power.
- **c.** After reaching the base frequency, the characteristic maintains a constant output voltage for higher frequencies.

Using parameter A045 you can modify the voltage gain of the inverter. This is specified as a percentage of the full-scale setting AVR (Automatic Voltage Regulation) in parameter A082. The gain can be set from 20% to 100%. It must be adjusted in accordance with the motor specifications.

Torque Boost – The Constant and Variable Torque algorithms feature an adjustable *torque boost* curve. When the motor load has a lot of inertia or starting friction, you may need to increase the low frequency starting torque characteristics by boosting the voltage above the normal V/f ratio (shown at right). The boost is applied from zero to 1/2 the base frequency. You set the breakpoint of the boost (point A on the graph) by using parameters A042 and A043. The manual boost is calculated as an

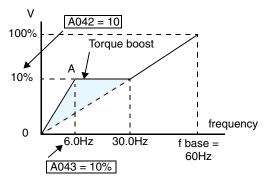

addition to the standard straight V/f line (constant torque curve).

Be aware that running the motor at a low speed for a long time can cause motor overheating. This is particularly true when manual torque boost is ON or if the motor relies on a built-in fan for cooling.



NOTE: Manual torque boost applies only to constant torque (A044=00) and variable torque (A044=01) V/f control.



NOTE: The motor stabilization parameter H006 is effective for constant torque (A044=00) and variable torque (A044=01) V/f control.


"A" Group: Standard Functions

<u>Call 1(800)985-6929</u> for Sales

V/f Free-setting – The free-setting V/f inverter mode of operation uses voltage and frequency parameter pairs to define seven points on a V/f graph. This provides a way to define a multi-segment V/f curve that best suits your application.

The frequency settings do require that $F1 \le F2 \le F3 \le F4 \le F5 \le F6 \le F7$; their values must have this ascending order relationship. However, the voltages V1 to V7 may either increase or decrease from one to the next. The example to the right shows the definition of a complex curve by following the setting requirements.


Free-setting f7 (B112) becomes the maximum frequency of the inverter. Therefore, we recommend setting f7 first, since the initial value of all default frequencies f1–f7 is 0Hz.

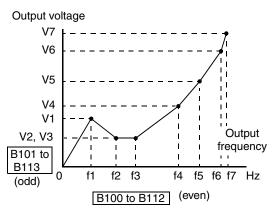

NOTE: The using of V/f free-setting operation specifies parameters that override (make invalid) certain other parameters. The parameters that become invalid are torque boost (A041/A241), base frequency (A003/A203/A303), and maximum frequency (A004/A204/A304). In this case, we recommend leaving their settings at the factory default values.

The V/f free-setting endpoint f7/V7 parameters must stay within the more basic inverter limits in order for the specified free-setting characteristic curve to be achieved. For example, the inverter cannot output a higher voltage than the input voltage or the AVR setting voltage (Automatic Voltage Regulation), set by parameter A082. The graph to the right shows how the inverter input voltage would clip (limit) the characteristic curve if exceeded.

Output voltage

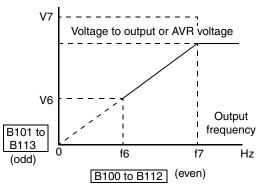

Sensorless Vector Control and, **Sensorless Vector Control**, **0Hz Domain** – These advanced torque control algorithms improve the torque performance at very low speeds:

- Sensorless Vector Control improved torque control at output frequencies down to 0.5 Hz
- Sensorless Vector Control, 0Hz Domain improved torque control at output frequencies from 0 to 2.5 Hz.

These low-speed torque control algorithms must be tuned to match the characteristics of the particular motor connected to your inverter. Simply using the default motor parameters in the inverter will not work satisfactorily for these control methods. Chapter 4 discusses motor/ inverter size selection and how to set the motor parameters either manually or by using the built-in auto-tuning. Before using the sensorless vector control methods, please refer to <u>"Setting Motor Constants for Vector Control" on page 4–69</u>.



NOTE: When the inverter is in SLV (sensorless vector) mode, use B083 to set the carrier frequency greater than 2.1 kHz for proper operation.

NOTE: You must disable sensorless vector operation when two or more motors are connected (parallel operation) to the inverter.



Vector Control with Encoder Feedback – This method of torque control uses an encoder as a motor shaft position sensor. Accurate position feedback allows the inverter to close the velocity loop and provide very accurate speed control, even with variations in motor loads. To use encoder feedback you will need to add an SJ–FB Encoder Feedback Card in the inverter's expansion bay. Please refer to <u>"Expansion Cards" on page 5–5</u> in this manual or the SJ–FB manual for details. The following table shows the methods of torque control selection.

		Keypa	ıd			Defaults	6	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A041	Torque boost method selection	MANUAL	00	Manual torque boost	00	00	00	xx
		AUTO	01	Automatic torque boost				
A241	Torque boost method selection, 2nd	MANUAL	00	Manual torque boost	00	00	00	××
	motor	AUTO	01	Automatic torque boost				
A042	Manual torque boost value			0.0 to 20.0 (%)	1.0	1.0	1.0	~~
	Can boost starting torque between 0 a normal V/f curve	nd 20% above	e					
A242	Manual torque boost value, 2nd motor	r		0.0 to 20.0 (%)	1.0	1.0	1.0	~~
	Can boost starting torque between 0 a normal V/f curve	nd 20% above	e					
A342	Manual torque boost value, 3rd motor			0.0 to 20.0 (%)	1.0	1.0	1.0	~~
	Can boost starting torque between 0 a normal V/f curve	nd 20% above	9					
A043	Manual torque boost frequency adjust	0.0 to 50.0 (%)	5.0	5.0	5.0	~~		
	Sets the frequency of the V/f breakpoi previous page) for torque boost	(top of						
A243	Manual torque boost frequency adjust	ment, 2nd mo	otor	0.0 to 50.0 (%)	5.0	5.0	5.0	~~
	Sets the frequency of the V/f breakpoi previous page) for torque boost	nt A in graph	(top of					
A343	Manual torque boost frequency adjust	ment, 3rd mo	tor	0.0 to 50.0 (%)	5.0	5.0	5.0	~~
	Sets the frequency of the V/f breakpoi previous page) for torque boost	nt A in graph	(top of					
A044	V/f characteristic curve selection, 1st motor	VC	00	V/f constant torque	00	00	00	××
	Torque control modes	VP	01	V/f variable torque				
		FREE-V/F	50	V/f free-setting curve				
		SLV	03	Sensorless vector SLV				
		ØSLV	04	0Hz domain SLV				
		V2	05	Vector control with encoder feedback				
A244	V/f characteristic curve selection, 2nd motor	VC	00	V/f constant torque	00	00	00	××
	Torque control modes	VP	01	V/f variable torque]			
		FREE-V/F	02	V/f free-setting curve]			
		SLV	03	Sensorless vector SLV				
		ØSLV	04	0Hz domain SLV				

Call 1(800)985-6929 for Sales

Call 1(800)985-6929 for Sales


"A" Group: Standard Functions


		Кеура	ad			Defaults	1	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A344	V/f characteristic curve selection, 3rd motor	VC	00	V/f constant torque	00	00	00	××
	Torque control modes	VP	01	V/f variable torque				
A045	V/f gain setting		•	0. to 255.	100.	100.	100.	~~
	Sets voltage gain of the inverter							
A046	Automatic torque boost voltage gain	0. to 255.	100.	100.	100.	~~		
	Voltage compensation gain for autom	atic torque bo	oost					
A246	Automatic torque boost voltage gain,	2nd motor		0. to 255.	100.	100.	100.	~~
	Voltage compensation gain for autom							
A047	Automatic torque boost slip gain			0. to 255.	100.	100.	100.	~~
	Slip compensation gain for automatic							
A247	Automatic torque boost slip gain, 2nd	Automatic torque boost slip gain, 2nd motor			100.	100.	100.	~~
	Slip compensation gain for automatic	torque boost	1					

The DC braking feature can provide additional stopping torque when compared to a normal deceleration to a stop. It can also ensure the motor and load are stopped before acceleration.

When decelerating – DC braking is particularly useful at low speeds when normal deceleration torque is minimal. During deceleration, the inverter injects a DC voltage into the motor windings during deceleration below a frequency you can specify (A052). The braking power (A054) and duration (A055) can both be set. You can optionally specify a wait time before DC braking (A053), during which the motor will free run (coast).

When starting – You can also apply DC braking upon the application of a Run command, specifying both the DC braking force level (A057) and the duration (A058). This will serve to stop the rotation of the motor and the load, when the load is capable of driving the motor. This effect, sometimes called "windmilling," is common in fan applications. Often, air moving in duct work will drive the fan in a backward direc-

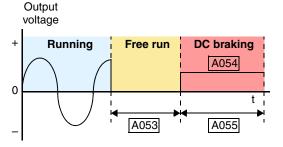

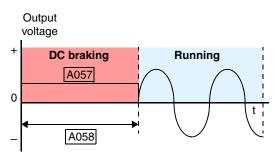

tion. If an inverter is started into such a backward-rotating load, over-current trips can occur. Use DC braking as an "anti-windmilling" technique to stop the motor and load, and allow a normal acceleration from a stop. See also the <u>"Acceleration Pause Function" on page 3–21</u>.

You can configure the inverter to apply DC braking at stopping only, at starting only, or both. DC braking power (0-100%) can be set separately for stopping and starting cases.

You can configure DC braking to initiate in one of two ways:

- **1. Internal DC braking** Set A051=01 to enable internal braking. The inverter automatically applies DC braking as configured (during stopping, starting, or both).
- 2. External DC braking Configure an input terminal with option code 7 [DB] (see <u>"Exter-nal Signal for DC Injection Braking" on page 4–19</u> for more details). Leave A051=00, although this setting is ignored when a [DB] input is configured. The DC braking force settings (A054 and A057) still apply. However, the braking time settings (A055 and A058) do not apply (see level and edge triggered descriptions below). Use A056 to select level or edge detection for the external input.
 - **a.** Level triggered When the [DB] input signal is ON, the inverter immediately applies DC injection braking, whether the inverter is in Run Mode or Stop Mode. You control DC braking time by the duration of the [DB] pulse.
 - **b.** Edge triggered When the [DB] input transitions OFF-to-ON and the inverter is in Run Mode, it will apply DC braking only until the motor stops... then DC braking is OFF. During Stop Mode, the inverter ignores OFF-to-ON transitions. Therefore, do not use edge triggered operation when you need DC braking before acceleration.




CAUTION: Be careful to avoid specifying a braking time that is long enough to cause motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor and wiring it to the inverter's thermistor input (see <u>"Thermistor Thermal Protection" on page 4–</u>25). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.

		Keyj	pad			Defaults	5	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A051	DC braking enable	OFF	00	Disable	00	00	00	×v
		ON	01	Enable				×v
		DON	02	Brake at set frequency only				×v
A052	DC braking frequency setting			0.00 to 60.00 (Hz)	0.50	0.50	0.50	×v
	Frequency at which DC braking activa	ates during	g decel.					× 🗸
A053	DC braking wait time			0.0 to 5.0 (seconds)	0.0	0.0	0.0	× 🗸
	The delay after reaching the DC braki [DB] signal, before DC braking begin					× 🗸		
A054	DC braking force during deceleration			0. to 80. (%)	0.	0.	0.	× 🗸
	Variable DC braking force							×v
A055	DC braking time for deceleration	0.0 to 60.0 (seconds)	0.0	0.0	0.0	×v		
	Sets the duration for DC braking durin	ng decel		1				× 🗸
A056	DC braking / edge or level detection	EDGE	00	Edge detection	01	01	01	×v
	for [DB] input	LEVEL	01	Level detection				
A057	DC braking force for starting			0. to 80. (%)	0.	0.	0.	×v
	Variable DC braking force							
A058	DC braking time for starting			0.0 to 60.0 (seconds)	0.0	0.0	0.0	×v
	Sets the duration for DC braking before accel.							
A059	DC braking carrier frequency setting			0.5 to 15 (kHz) up to SJ700-1500; 0.5 to 3.0kHz for models SJ700- 1850 to SJ700-4000	3.0	3.0	3.0	××


"A" Group: Standard Functions

Call 1(800)985-6929 for Sales

Derating of DC Braking – The inverter uses an internal carrier frequency (set by A059) to generate a DC braking voltage (do not confuse with main inverter output carrier frequency set by B083). The maximum DC braking force available to the inverter is more limited with higher DC braking carrier frequency settings for A059 according to the graphs below.

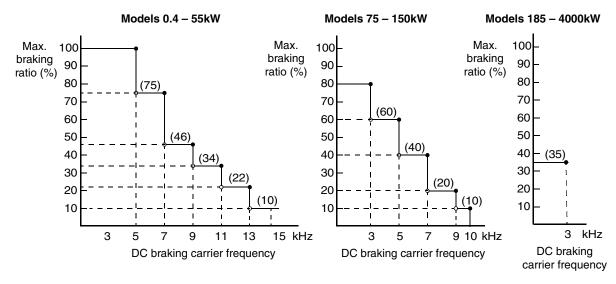


Frequencyrelated Functions **Frequency Limits** – Upper and lower limits can be imposed on the inverter output frequency. These limits will apply regardless of the source of the speed reference. You can configure the lower frequency limit to be greater than zero as shown in the graph to the right. The upper limit must not exceed the rating of the motor or capability of the machinery.

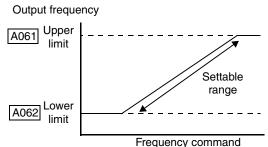

Defaults Keypad Run Func. Name/ Mode FEF2 FUF2 FF2 **Range and settings** Code SRW Display Edit OPE SRW FE2 FU2 F2 Lo Hi (EU) (USA) (Jpn) A061 Frequency upper limit setting 0000.00 0.00 Setting is disabled 0.00 0.00 0.00 XV 0000.50 >0.50 XV Sets a limit on output frequency less Setting is enabled, 0.50 to 400.0 (Hz) than the maximum frequency (A004) A261 Frequency upper limit setting, 2nd 0000.00 0.00 Setting is disabled 0.00 0.00 0.00 XV motor 0000.50 >0.50 XV Sets a limit on output frequency less Setting is enabled, than the maximum frequency (A004) 0.50 to 400.0 (Hz) 0000.00 0.00 0.00 0.00 0.00 XV A062 Frequency lower limit setting Setting is disabled Sets a limit on output frequency 0000.50 >0.50 XV Setting is enabled, 0.50 to 400.0 (Hz) greater than zero 0000.00 0.00 0.00 0.00 0.00 XV A262 Frequency lower limit setting, 2nd Setting is disabled motor XV Sets a limit on output frequency 0000.50 >0.50 Setting is enabled, greater than zero 0.50 to 400.0 (Hz)

3 - 21

Jump Frequencies – Some motors or machines exhibit resonances at particular speed(s), which can be destructive for prolonged running at those speeds. The inverter has up to three *jump frequencies* as shown in the graph. The hysteresis around the jump frequencies causes the inverter output to skip around the sensitive frequency values.

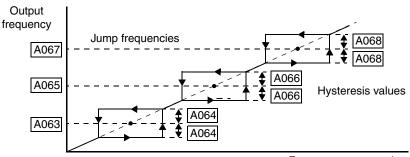


				Run		
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A063 A065	Jump (center) frequency setting	0.00 to 400.0 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)	0.00	0.00	0.00	× •
A067	Up to three output frequencies can be avoid motor resonances (center freque				× 🗸	
A064 A066	Jump (hysteresis) frequency width setting	Range is 0.0 to 10.0 Hz	0.50	0.50	0.50	× 🗸
A068	Defines the distance from the center from				× 🗸	

Acceleration Pause Function

The acceleration pause function can be used to minimize the occurrence of over-current trips when accelerating high inertia loads. It introduces a dwell or pause in the acceleration ramp. You can control the frequency at which this dwell occurs (A069), and the duration of the pause time (A070). This function can also be used as an anti-windmilling tool, when the load might have a tendency to drive the motor in a reverse



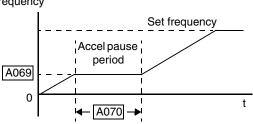

direction while the inverter is in a Stop mode. Initiating a normal acceleration in such a situation may result in over-current trips. This function can be used to keep the inverter output frequency and voltage at low levels long enough to bring the load to a stop, and commence turning in the desired direction before the acceleration ramp resumes. See also <u>"DC Braking Settings" on page 3–18</u>.

	Name/ Description			Run		
Func. Code		Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A069	Acceleration pause frequency setting	0.00 to 400.0 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)	0.00	0.00	0.00	× 🗸
A070	Acceleration pause time setting	0.0 to 60.0 (seconds)	0.0	0.0	0.0	× 🗸

Call 1(800)985-6929 for Sales

PID Control

When enabled, the built-in PID loop calculates an ideal inverter output value to cause a loop feedback process variable (PV) to move closer in value to the setpoint (SP). The current frequency command serves as the SP. The PID loop algorithm will read the analog input for the process variable (you specify either current or voltage input) and calculate the output.

- A scale factor in A075 lets you multiply the PV by a factor, converting it into engineering units for the process.
- Proportional, integral, and derivative gains are all adjustable.

hitachiacdrive.com

- Optional You can assign an intelligent input terminal the option code 23, PID Disable. When active, this input disables PID operation. See <u>"Intelligent Input Terminal Overview"</u> on page 3–51.
- See <u>"PID Loop Operation" on page 4–75</u> for more information.

	Name/ Description	Key	pad			Defaults		Run
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A071	PID Enable	OFF	00	PID operation OFF	00	00	00	×v
		ON	01	PID operation ON				×v
		R-ON	50	PID operation ON with inverted output				×v
A072	PID proportional gain		•	0.2 to 5.0	1.0	1.0	1.0	~~
A073	PID integral time constant			0.0 to 999.9, 1000. to 3600. (seconds)	1.0	1.0	1.0	~~
A074	PID derivative time constant			0.0 to 99.99, 100.0 (seconds)	0.0	0.0	0.0	~~
A075	PV scale conversion			0.01 to 99.99, 100.0 (seconds)	1.00	1.00	1.00	×v
	Process Variable (PV) scale factor (multiplier)							×v
A076	PV source setting	OI	00	[OI] terminal (current input)	00	00	00	× 🗸
	Selects source of Process	0	01	[O] terminal (voltage input)				×v
	Variable (PV)	COM	02	Communication input				×v
		PLS	03	Pulse train frequency input				× 🗸
		MATH	10	CALCULATE function output				×v
A077	Reverse PID Action	OFF	00	PID input = SP – PV (normal)	00	00	00	×v
	Changes response to error	ON	01	PID input = $-(SP - PV)$ (reverse)				×v
A078	PID output limit			Range is 0.0 to 100.0	0.00	0.00	0.00	×v
A079	PID feed forward select	no	00	Disable	00	00	00	×v
		0	01	[O] terminal (voltage input)	1			×v
		OI	50	[OI] terminal (current input)				×v
		02	03	[O2] terminal (voltage input)				×v



NOTE: The setting A073 for the integrator is the integrator's time constant Ti, not the gain. The integrator gain Ki = 1/Ti. When you set A073 = 0, the integrator is disabled.

3 - 22

3-

Automatic Voltage Regulation (AVR) Function

The Automatic Voltage Regulation (AVR) feature keeps the inverter output voltage at a relatively constant amplitude during power input fluctuations. This can be useful if the installation is subject to input voltage disturbances. However, the inverter cannot boost its motor output to a voltage higher than the power input voltage. If you enable this feature, be sure to select the proper voltage class setting for your motor.

	Name/ Description	Keypad					Run	
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A081	AVR function select	ON	00	AVR enabled	00	00	02	××
	Automatic (output) voltage	OFF	01	AVR disabled				
	regulation	DOFF	20	AVR enabled except during deceleration				
A082	AVR voltage select			200V class inverter settings: 200/215/220/230/240 (V) 400V class inverter settings: 380/400/415/440/460/480 (V)	230/ 400	230/ 460	200/ 400	××

Energy Savings Mode / Optimal Accel/Decel

Energy Savings Mode – This function allows the inverter to deliver the minimum power necessary to maintain speed at any given frequency. This works best when driving variable torque characteristic loads such as fans and pumps. Parameter A085=01 enables this function and A086 controls the degree of its effect. A setting of 0.0 yields slow response but high accuracy, while a setting of 100 will yield a fast response with lower accuracy.

	Name/ Description	Keypad			Defaults			Run
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A085	Operation mode selection	NOR	00	Normal operation	00	00	00	××
		EC0	01	Energy-saver operation				××
		FUZZY	50	Optimal accel/decel operation				xx
A086	Energy saving mode tuning	•		0.0 to 100 (seconds)	50.0	50.0	50.0	~~

Optimal Accel/Decel Operation – This feature uses "fuzzy" logic to optimize acceleration and deceleration curves in real time. It is enabled by A085=02. Optimal accel/decel operation automatically adjusts the acceleration and deceleration times in response to changes in load or inertia to take advantage of the maximum output current capability of the inverter. In general, optimal accel/decel will allow for the shortest accel and decel times based on the actual load conditions. The function continuously monitors output current and DC bus voltage to avoid reaching their respective trip levels.



NOTE: In this mode, the settings of acceleration and deceleration times (F002 and F003) are disregarded.

The acceleration time is controlled to maintain output current below the level set by the Overload Restriction Function if enabled (Parameters B021/B024, B022/B025, and B023/B026). If Overload Restriction is not enabled, then the current limit used is 150% of the inverter's rated output current.

The deceleration time is controlled so that the output current is maintained below 150% of the inverter's rated current, *and* the DC bus voltage is maintained below the OV Trip level (358V or 770V).

• has a requirement for constant acceleration or deceleration • has a load inertia more than (approx.) 20 times the motor inertia

NOTE: DO NOT use Optimal Accel/Decel (A085 = 02) when an application...

"A" Group: Standard Functions

		 uses internal or external regenerative braking uses any of the vector control modes (A044 = 03, 04, or 05). This function is ONLY compatible with V/F control. 										
		NOTE: If the load exceeds the rating of the inverter, the acceleration time may be increased.										
	<u>[</u>]	NOTE: If using a motor with a capacity that is one size smaller than the inverter rating, enable										
		the Overload Restriction function (B021/B024) and set the Overload Restriction Level (B022/ B025) to 1.5 times the motor nameplate current.										
		NOTE: Be aware that the acceleration and deceleration times will vary, depending on the actual load conditions during each individual operation of the inverter.										
Second Acceleration and Deceleration Functions		The SJ7002 inverter features two-stage acceleration and deceleration ramps. This gives flexibil- ity in the profile shape. You can specify the frequency transition point, the point at which the standard acceleration (F002) or deceleration (F003) changes to the second acceleration (A092) or deceleration (A093). These profile options are also available for the second motor settings and third motor settings. All acceleration and deceleration times are time to ramp from zero speed to full speed or full speed to zero speed. Select a transition method via A094 as depicted below. Be careful not to confuse the <i>second acceleration/deceleration settings</i> with settings for the <i>second motor</i> !										
	freque		=00 Accel 2		frequenc	у	A094=0		_			
	2CH input	Accel 1			t A095	Ac	cel 1		Freque ransitior			
			Keypad				Defaults			Run		
unc. Code	Nam Descrip	SRW	OPE	Range and Set	tings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi			
092	Acceleration (2) time setting				0.01 to 99.99, 100.0 t 1000. to 3600. (secon	15.0	15.0	15.0	~~			
	Duration of 2nd segme											

3

Fune Cod

Call 1(800)985-6929 for Sales

hitachiacdrive.com

sales@hitachiacdrive

SJ7002 Inverter

3-25

		Key	pad			Defaults	;	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A093	Deceleration (2) time setting	—	—	0.01 to 99.99, 100.0 to 999.9,	15.0	15.0	15.0	~~
	Duration of 2nd segment of deceleration			1000. to 3600. (seconds)				
A293	Deceleration (2) time setting, 2nd motor	—		0.01 to 99.99, 100.0 to 999.9,	15.0	15.0	15.0	~~
	Duration of 2nd segment of deceleration, 2nd motor			1000. to 3600. (seconds)				
A393	Deceleration (2) time setting, 3rd motor	_	_	0.01 to 99.99, 100.0 to 999.9,	15.0	15.0	15.0	~~
	Duration of 2nd segment of deceleration, 3rd motor			1000. to 3600. (seconds)				~~
A094	Select method to switch to Acc2/Dec2	ТМ	00	[2CH] input from terminal	00	00	00	××
	profile	FREE	01	transition frequency				
		F-R	02	when motor direction reverses				
A294	Select method to switch to Acc2/Dec2	ТМ	00	[2CH] input from terminal	00	00	00	××
	profile, 2nd motor	FREE	01	transition frequency				
		F-R	02	when motor direction reverses				
A095	Acc1 to Acc2 frequency transition point			0.00 to 400.0 (Hz); model	0.0	0.0	0.0	xx
	Output frequency at which Accel1 switch	es to Acc	el2	-4000HFx2 is 0.00 to 120.0 (Hz)				
A295	Acc1 to Acc2 frequency transition point,	2nd moto	or	0.00 to 400.0 (Hz); model	0.0	0.0	0.0	××
	Output frequency at which Accel1 switch	es to Acc	el2	-4000HFx2 is 0.00 to 120.0 (Hz)				
A096	Dec1 to Dec2 frequency transition point			0.00 to 400.0 (Hz); model	0.0	0.0	0.0	××
	Output frequency at which Decel1 switch	es to Dec	el2	-4000HFx2 is 0.00 to 120.0 (Hz)				
A296	Dec1 to Dec2 frequency transition point,	2nd moto	or	0.00 to 400.0 (Hz); model	0.0	0.0	0.0	××
	Output frequency at which Decel1 switch	es to Dec	el2	-4000HFx2 is 0.00 to 120.0 (Hz)				



NOTE: For A095 and A096 (and for 2nd motor settings), if you set a very rapid Acc1 or Dec1 time (less than 1.0 second), the inverter may not be able to change rates to Acc2 or Dec2 before reaching the target frequency. In that case, the inverter decreases the rate of Acc1 or Dec1 in order to achieve the second ramp to the target frequency.

Call 1(800)985-6929 for Sales

Accel/Decel Characteristics

Standard (default) acceleration and deceleration is linear with time. The inverter CPU can also calculate other curves shown in the graphs below. The sigmoid, U-shape, and reverse U-shape curves are useful for favoring the load characteristics in particular applications. Curve settings for acceleration and deceleration are independently selected via parameters A097 and A098, respectively. You can use the same or different curve types for acceleration and deceleration.

Set value	00	01	02	03
Curve	Linear	Sigmoid	U-shape	Reverse U-shape
Accel	Output frequency	Output frequency	Output frequency	Output frequency
Decel	Output frequency	Output frequency	Output frequency	Output frequency
Typical applications	Linear acceleration and deceleration for general-purpose use	Avoid jerk on start/stop for elevators; use for delicate loads on con- veyors	Tension control for windi presses, roller/accumula	


Func.	Name/	Keypa	d			Defaults		Run Mode
Code	Description	SRW	OPE	Range and Settings	xFE2 (EU)	xFU2 (USA)	xFF2 (Jpn)	Edit Lo Hi
A097	Acceleration curve selection	Linear	00	Linear	00	00	00	××
	Set the characteristic curve of	S-curve	01	S-curve				
	Accel1 and Accel2	U-curve	50	U-shape				
		RU-curve	03	Reverse U-shape				
		EL-curve	04	EL-S curve				
A098	Deceleration curve selection	Linear	00	Linear	00	00	00	××
	Set the characteristic curve of	S-curve	01	S-curve				
	Decel1 and Decel2	U-curve	02	U-shape				
		RU-curve	03	Reverse U-shape				
		EL-curve	04	EL-S curve				

3-

-26

SJ7002 Inverter

The acceleration and deceleration curves can deviate from a straight line to a varying degree. Parameters A131 and A132 control the amount of deviation for the acceleration and deceleration curves respectively. The following graphs show intermediate output frequency points as a percentage of the target frequency, for 25%, 50%, and 75% acceleration time intervals.

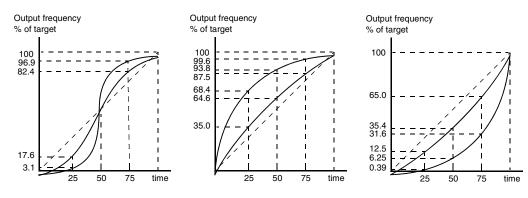

		Key	pad			Defaults	i	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A131	Acceleration curve constants setting	01 •••	0 I 	Smallest deviation	02	02	02	× 🗸
	Sets the curve deviation from straight-line acceleration in 10 levels	10	10	Largest deviation				× 🗸
A132	Deceleration curve constants setting	01 •••	0 I 	Smallest deviation	02	02	02	× 🗸
	Sets the curve deviation from straight-line deceleration in 10 levels	10	10	Largest deviation				× •

Additional Analog Input Settings

The parameters in the following table adjust the input characteristics of the analog inputs. When using the inputs to command the inverter output frequency, these parameters adjust the starting and ending ranges for the voltage or current, as well as the output frequency range. Related characteristic diagrams are located in <u>"Analog Input and Miscellaneous Settings" on page 3–11</u>.

		Keyj	pad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A101	[OI]–[L] input active range start frequency	_	—	0.00 to 400.0 (Hz);	00.0	00.0	00.0	× 🗸
	Output frequency corresponding to the current input range starting point			model -4000HFx2 is 0.00 to 120.0 (Hz)				
A102	[OI]–[L] input active range end frequency	_		0.00 to 400.0 (Hz);	00.0	00.0	00.0	×v
	Output frequency corresponding to the current input range ending point			model -4000HFx2 is 0.00 to 120.0 (Hz)				
A103	[OI]–[L] input active range start current	_		0 to 100%	20.	20.	20.	× 🗸
	Starting point for the current input range							
A104	[OI]–[L] input active range end current	_		0 to 100%	100.	100.	100.	× 🗸
	Ending point for the current input range							

Call 1(800)985-6929 for Sales 3 - 28

"A" Group: Standard Functions

		Key	oad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A105	[OI]-[L] input start frequency enable	OI-EXS	00	Use A101 start value	01	01	01	×v
		0Hz	01	Use 0Hz				
A111	[O2]–[L] input active range start frequency	—		-400. to 400. (Hz);	0.00	0.00	0.00	×v
	Output frequency corresponding to the bipolar voltage input range starting point			model -4000HFx2 is 0.00 to 120.0 (Hz)				
A112	[O2]–[L] input active range end frequency	_		-400. to 400. (Hz);	0.00	0.00	0.00	×v
	Output frequency corresponding to the bipolar voltage input range ending point			model -4000HFx2 is 0.00 to 120.0 (Hz)				
A113	[O2]–[L] input active range start voltage	_		-100 to 100 (%)	-100.	-100.	-100.	×v
	Starting point for the bipolar voltage input range							
A114	[O2]–[L] input active range end voltage	—	_	-100 to 100 (%)	100.	100.	100.	×v
	Ending point for the bipolar voltage input range							

Operation

Target Frequency Analog Input Calculate Function – The inverter can mathematically combine two input sources into one value. The Calculate function can either add, subtract, or multiply the two selected sources. This provides the flexibility needed by various applications. You can use the result for the output frequency setting (use A001=10) or for the PID Process Variable (PV) input (use A075=03).

		Key	pad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A141	A input select for Calculate Function	REM	00	Digital operator (A020/A220/A320)	02	02	02	× 🗸
	Function	VR	01	Keypad potentiometer				
		0	50	[O] input				
		OI	03	[OI] input				
		COM	04	Comm. port				
		0P1	05	Expansion card 1				
		0P2	06	Expansion card 2				
		PLS	07	Pulse train frequency train input				
A142	B input select for Calculate	REM	00	Digital operator (A020/A220/A320)	03	03	03	×v
	Function	VR	01	Keypad potentiometer				
		0	02	[O] input				
		OI	03	[OI] input				
		COM	04	Comm. port				
		0P1	05	Expansion card 1				
		0P2	06	Expansion card 2				
		PLS	רס	Pulse train frequency train input				

sales@hitachiacdrive.com

SJ7002 Inverter

Func	Name/ Description	Key	pad			Run		
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A143	Calculation symbol	ADD	00	ADD (A input + B input)	00	00	00	× 🗸
	Calculates a value based on	SUB	01	SUB (A input – B input)				
	the A input (A141 selects) and the B input (A142 selects)	MUL	02	MUL (A input x B input)				
A145	ADD frequency	_		0.00 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	×v
A146	ADD direction select	F₩	00	Plus (adds A145 value to output frequency)	00	00	00	× 🗸
		RV	01	Minus (subtracts A145 value from output frequency)				

Elevator Accel/ Pa Decel Curves re

Parameters A150 to A153 affect the slope of the acceleration and deceleration for the elevator-related S curves.

				Defaults	1	Run
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
A150	EL-S curve accel. ratio 1	Range is 0. to 50. (%)	25.	25.	25.	××
A151	EL-S curve accel. ratio 2	Range is 0. to 50.	25.	25.	25.	××
A152	EL-S curve decel. ratio 1	Range is 0. to 50.	25.	25.	25.	××
A153	EL-S curve decel. ratio 3	Range is 0. to 50.	25.	25.	25.	××

Call 1(800)985-6929 for Sales

"B" Group: Fine-Tuning Functions

The "B" Group of functions and parameters adjust some of the more subtle but useful aspects of motor control and system configuration.

Automatic Restart Mode and Phase Loss


30

The restart mode determines how the inverter will resume operation after a fault causes a trip event. The four options provide advantages for various situations. Frequency matching allows the inverter to read the motor speed by virtue of its residual magnetic flux and restart the output at the corresponding frequency. The inverter can attempt a restart a certain number of times depending on the particular trip event:

- Over-current trip, restart up to 3 times
- Over-voltage trip, restart up to 3 times
- Under-voltage trip, restart up to 16 times

When the inverter reaches the maximum number of restarts (3 or 16), you must power-cycle the inverter to reset its operation.

Other parameters specify the allowable under-voltage level and the delay time before restarting. The proper settings depend on the typical fault conditions for your application, the necessity of restarting the process in unattended situations, and whether restarting is always safe.

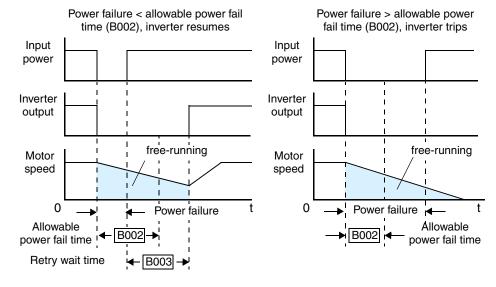

						Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range or Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B001	Selection of automatic restart mode	ALM	00	Alarm output after trip, automatic restart disabled	00	00	00	× 🗸
		ZST	01	Restart at 0Hz				
		RST	20	Resume operation after frequency matching				
		FTP	03	Resume previous freq. after freq. matching, then decelerate to stop and display trip info				
		FIX	04	Restart with active matching frequency				

hitachiacdrive.com

sales@hitachiacdrive

SJ7002 Inverter

3 - 31	
3–3 I	

						Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range or Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B002	Allowable under-voltage powe	er failure	time	0.3 to 25.0 (seconds)	1.0	1.0	1.0	×v
		longer th	an this t	te can occur without tripping the power failure ime, the inverter trips, even if the restart mode will be attempted.				
B003	Retry wait time before motor	restart		0.3 to 100 (seconds)	1.0	1.0	1.0	×v
	Time delay after a trip condition before the inverter restarts the		iway					
B004	Instantaneous power failure /	OFF	00	Disable	00	00	00	×v
	under-voltage trip alarm enable	ON	01	Enable				
		DOFF	02	Disable during stop and ramp to stop				
B005	Number of restarts on power	16	00	Restart 16 times	00	00	00	×v
	failure / under-voltage trip events	FREE	01	Always restart				
B006	Phase loss detection enable	OFF	00	Disable – no trip on phase loss	00	00	00	×v
		ON	01	Enable – trip on phase loss				
B007	Restart frequency threshold	•	•	0.00 to 400.0 (Hz);	0.00	0.00	0.00	×v
	When the frequency of the mo this value, the inverter will res			model -4000HFx2 is 0.00 to 120.0 (Hz)				
B008	Retry after trip select	ALM	00	Always retry after trip	00	00	00	×v
		ZST	01	Start with 0 Hz				
		RST	02	Start with frequency matching				
		FTP	03	Retry after deceleration and stop with matching frequency				
		FIX	04	Start with active matching frequency				
B009	Retry after undervoltage	16	00	16 times	00	00	00	×v
	select	FREE	01	Unlimited				
B010	Retry count select after over-v	oltage or	•	1 to 3 (times)	3	3	3	× 🗸
B011	Retry wait time after trip			0.3 to 100.0 (seconds)	1.0	1.0	1.0	×v



CAUTION: When a loss of phase occurs, increased ripple current will markedly reduce main capacitor life over time. Diode bridge failure can also result. If phase loss occurs under load, the inverter could be damaged. Please pay particular attention to the setting of function B006.


Configuring Drive Parameters

all 1(800)985-6929 for Sales

Electronic Thermal Overload Alarm Setting

The thermal overload detection protects the inverter and motor from overheating due to an excessive load. It uses a current/ inverse time curve to determine the trip point. The thermal overload alarm [THM] is the resulting intelligent output.

First, use B013 to select the torque characteristic that matches your load. This allows the inverter to utilize the best thermal overload characteristic for your application.

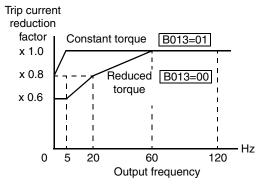


The torque developed in a motor is directly proportional to the current in the

windings, which is also proportional to the heat generated (and temperature, over time). Therefore, you must set the thermal overload threshold in terms of current (amperes) with parameter B012. The range is 50% to 120% of the rated current for each inverter model. If the current exceeds the level you specify, the inverter will trip and log an event (error E05) in the history table. The inverter turns the motor output OFF when tripped. Separate settings are available for the second and third motors (if applicable), as shown in the table below.

Function Code	Function/Description	Data or Range
B012/B212 /B312	Electronic thermal setting (calculated within the inverter from current output)	Range is 0.2 x rated current to 1.0 x rated current

Example 1, setting for SJ700-110LFE2 (0.4 to 55kW) - The rated motor current is 64A. The setting range is (0.2 * 64) to rated current, or 12.8A to 64.0A. For a setting of B012 = 64A (current at 100% rated current), the curve is shown below.

Example 2, setting for SJ700-750LFE2 (75 to 150 kW) - The rated motor current is 149A. The setting range is (0.2 * 149) to rated current, or 29.8A to 149A. For a setting of B012 = 149A (current at 100% rated current), the curve is shown below.

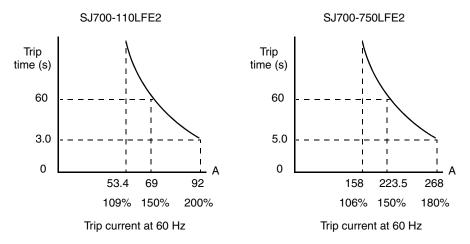

Configuring Drive Parameters

SJ7002 Inverter

3


33

Example 3, setting for SJ700-3150LFE2 (185 to 400kW) - The rated motor current is 600A. The setting range is (0.2 * 64) to rated current, or 120A to 600A. For a setting of B012 = 600A (current at 100% rated current), the curve is shown to the right.


The electronic thermal characteristic adjusts the way the inverter calculates thermal heating, based on the type of load connected to the motor, as set by parameter B013.


CAUTION: When the motor runs at lower speeds, the cooling effect of the motor's internal fan decreases.


The table below shows the torque profile settings. Use the one that matches your load.

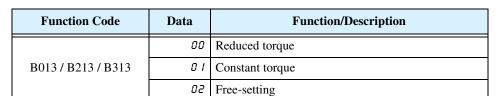



Reduced Torque Characteristic – The example below shows the effect of the reduced torque characteristic curve (for example motor and current rating). At 20Hz, the output current is reduced by a factor of 0.8 for given trip times.

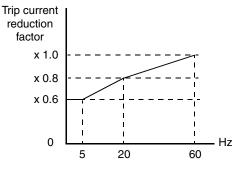

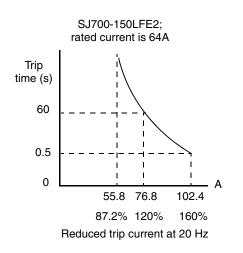

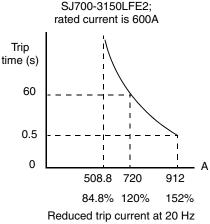


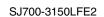

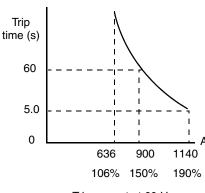

Trip current at 60 Hz


all 1(800)985-6929 for Sales

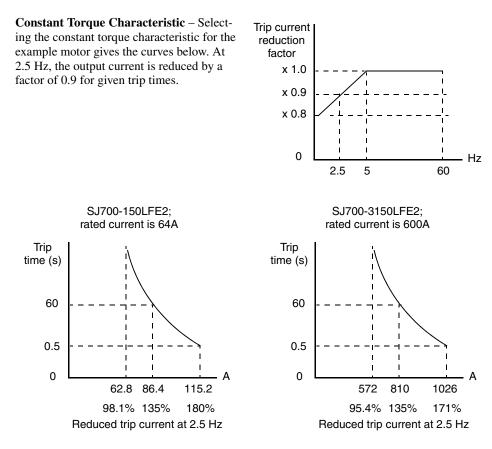

Free Thermal Characteristic - It is possible to set the electronic thermal characteristic using a free-form curve defined by three data points, according to the table below.

Function Code	Name	Description	Range
B015 / B017 / B019	Free-setting electronic thermal frequency 1, 2, 3	Data point coordinates for Hz axis (horizontal) in the free-form curve	0 to 400 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)
B016 / B018 / B020	Free setting electronic thermal current 1, 2, 3	Data point coordinates for Ampere axis (vertical) in the free-form curve	0.0 = (disable) 0.1 to 1000.

The left graph below shows the region for possible free-setting curves. The right graph below shows an example curve defined by three data points specified by B015 - B020.

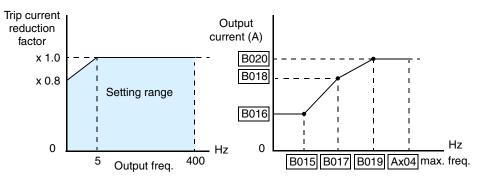


3

.34

SJ7002 Inverter

3-35

Suppose the electronic thermal setting (B012) is set to 44 Amperes. The left graph below shows the effect of the free setting torque characteristic curve. For example, at (B017) Hz, the output current level to cause overheating in a fixed time period is reduced by a factor of (B018). The right graph below shows the reduced trip current levels in those conditions for given trip times.

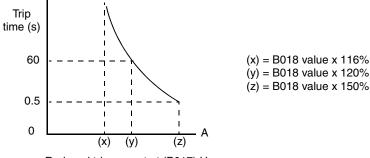

Reduced trip current at (B017) Hz

Any intelligent output terminal may be programmed to indicate a thermal warning [THM]. Parameter C061 determines the warning threshold. Please see <u>"Thermal Warning Signal" on page 4–52</u> for more details.


		Key	pad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B012	Level of electronic thermal setting	5		0.20 x rated current) to (2.00 x rated current) (A)	rated cu	urrent of	inverter	× 🗸
B212	Level of electronic thermal setting	, 2nd mo	otor	0.20 x rated current) to (2.00 x rated current) (A)	rated cu	urrent of	inverter	× 🗸
B312	Level of electronic thermal setting	, 3rd mo	tor	0.20 x rated current) to (2.00 x rated current) (A)	rated cu	urrent of	inverter	× 🗸
B013	Electronic thermal characteristic	SUB	00	Reduced torque	01	01	00	× 🗸
		CRT	01	Constant torque				
		FREE	02	V/f free-setting				
B213	Electronic thermal characteristic,	SUB	00	Reduced torque	01	01	00	× 🗸
	2nd motor	CRT	01	Constant torque				
		FREE	20	V/f free-setting				
B313	Electronic thermal characteristic,	SUB	00	Reduced torque	01	01	00	× 🗸
	3rd motor	CRT	01	Constant torque				
		FREE	20	V/f free-setting				
B015	Free setting, electronic thermal free	equency ((1)	0.0 to 400.0 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)	0.	0.	0.	× •
B016	Free setting, electronic thermal cu	rrent (1)		0.0 to 1000. (A)	0.0	0.0	0.0	× 🗸
B017	Free setting, electronic thermal frequency (2)			0.0 to 400.0 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)	0.	0.	0.	× •
B018	Free setting, electronic thermal current (2)			0.0 to 1000. (A)	0.0	0.0	0.0	×v
B019	Free setting, electronic thermal free	0.0 to 400.0 (Hz); model -4000HFx2 is 0.00 to 120.0 (Hz)	0.	0.	0.	× •		
B020	Free setting, electronic thermal cu	rrent (3)		0.0 to 1000. (A)	0.0	0.0	0.0	×v

Call 1(800)985-6929 for Sales

Call 1(800)985-6929 for Sales

Overload Restriction

If the inverter's output current exceeds a preset current level you specify during acceleration or constant speed, the overload restriction feature automatically reduces the output frequency to restrict the overload. This feature does not generate an alarm or trip event. You can instruct the inverter to apply overload restriction only during constant speed, thus allowing higher currents for acceleration. Or, you may use the same threshold for both acceleration and constant speed. In the case of

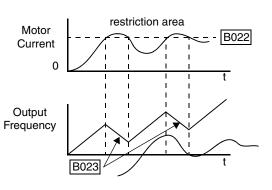

controlled deceleration, the inverter monitors both output current and DC bus voltage. The inverter will increase output frequency to try to avoid a trip due to over-current or over-voltage (due to regeneration).

When the inverter detects an overload, it must decelerate the motor to reduce the current until it is less than the threshold. You can choose the rate of deceleration that the inverter uses to lower the output current.

		Keyp	ad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B021	Overload restriction operation mode	OFF	00	Disable	01	01	01	× 🗸
	Select the operating	ON	01	Enable for acceleration and constant speed				
	mode during overload conditions	CRT	20	Enable for constant speed only				
		N-R	03	Enable for accel, decel, and constant speed				
B022	Overload restriction settin	ng		(0.20 x rated current) to (1.80 x rated current) (A)	rated cu	irrent tim	nes 1.50	× 🗸
B023	Deceleration rate at overl	oad restricti	on	0.10 to 30.00 (seconds)	1.00	1.00	1.00	× 🗸
B024	Overload restriction operation mode (2)	OFF	00	Disable	01	01	01	× 🗸
	Select the operating	ON	01	Enable for acceleration and constant speed				
	mode during overload conditions	CRT	02	Enable for constant speed only				
		N-R	03	Enable for accel, decel, and constant speed				
B025	Overload restriction setting (2)			Models -004xxx to -550xxx: (0.20 x rated current) to (2.0 x rated current) (A); Models -750xxx to -4000xxx: (0.20 x rated current) to (1.80 x rated current) (A)	rated cu	irrent tim	nes 1.50	× 🗸
B026	Deceleration rate at overl	oad restricti	on (2)	0.10 to 30.00 (seconds)	1.00	1.00	1.00	× 🗸
B027	Overcurrent suppres-	OFF	00	Disable	01	01	01	× 🗸
	sion enable	ON	01	Enable				
B028	8 Current limit for active frequency-matching restart			Models -004xxx to -550xxx: (0.20 x rated current) to (2.0 x rated current) (A); Models -750xxx to -4000xxx: (0.20 x rated current) to (1.80 x rated current) (A)	rated current times 1.0		× 🗸	
B029	Scan time constant for ac	tive freq. ma	atching	0.10 to 30.00 (seconds)	0.50	0.50	0.50	× 🗸

3

-36

sales@hitachiacdrive

SJ7002 Inverter

3–37

			ad		Defaults			Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B030	Restart freq. select for	CUTOFF	00	Frequency at last shutoff	00	00	00	× 🗸
	active freq. matching	MAX	01	<i>G 1</i> Maximum frequency				
		SET	50	Set frequency				




NOTE: Two sets of overload restriction parameters are available. The set that is in use may be selected by means of an intelligent input terminal (see <u>"Overload Restriction" on page 4–29</u>).

<u>1(800)985-6929</u> for Sales

Software Lock Mode	The software lock function keeps personnel from accidentally changing pa inverter memory. Use B031 to select from various protection levels.	rameters in the
	The table below lists all combinations of B031 option codes and the ON/OFF state of the [SFT] input. Each Check ✓ or Ex ★ indicates whether the corresponding parameter(s) can be edited. The Standard Parameters column below lists Low and High level access for some	Run Mode Edit

lock modes. These refer to the parameter tables throughout this chapter, each of which includes a column titled Run Mode Edit as shown to the right. The two marks (Check \checkmark or Ex \bigstar) under the "Lo Hi" subtitle indicate whether Low-level and/or High-level access applies to each parameter as defined in the table below. In some lock modes, you can edit only

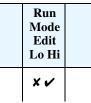

F001 and the Multi-speed parameter group that includes A020, A220, A320, A021-A035, and A038 (Jog). However, it does not include A019, Multi-speed operation selection. The editing access to B031 itself is unique, and is specified in the right-most two columns below.

B031 Lock Mode	[SFT] Intelligent	Multi-speed		B031		
Widue	Input	Stop	Run	Stop or Run	Stop	Run
00	OFF	~	Low-level	✓	~	×
	ON	×	×	×	~	×
01	OFF	~	Low-level	✓	~	×
	ON	×	×	✓	~	×
02	(ignored)	×	×	×	~	×
03	(ignored)	×	×	~	~	×
10	(ignored)	~	High-level	v	~	~

NOTE: Since the software lock function B031 is always accessible when the motor is stopped, this feature is not the same as password protection used in other industrial control devices.

		Key	pad	Range and Settings		Defaults			
Func. Code	Name/ Description	SRW	OPE			FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi	
B031	Software lock mode	MDØ	00	Low-level access, [SFT] input blocks all edits	01	01	01	×v	
	selection	MD1	01	Low-level access, [SFT] input blocks edits (except F001 and Multi-speed parameters)					
		MD2	20	No access to edits					
		MD3	03	No access to edits except F001 and Multi-speed parameters					
		MD10	10	High-level access, including B031					



NOTE: To disable parameter editing when using B031 lock modes 00 and 01, assign the [SFT] function to one of the intelligent input terminals. See "Software Lock" on page 4-23.

SJ7002 Inverter

3 - 39

Miscellaneous Settings

The miscellaneous settings include scaling factors, initialization modes, and others. This section covers some of the most important settings you may need to configure.

			pad			Run		
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B034	Run/power-on warning time	—	—	0 to 9999. (0 to 99990), 1000 to 6553 (10000 to 655300) (hours)	0.	0.	0.	× •
B035	Rotational direction restriction	FREE	00	Enable for both directions	00	00	00	xx
		F₩	01	Enable for forward only				××
		RV	20	Enable for reverse only				××
B036	Reduced voltage start selection	—	—	000 (short) to 255 (long)	06	06	06	× 🗸

Function Display Settings

The inverter has the (optional) capability to suppress the display and editing of certain parameters. Use B037 to select the display options. The purpose of this feature is to hide particular secondary parameters that become unused or not applicable based on more fundamental parameter settings. For example, setting A001 = 01 configures the inverter to get its frequency command from the front keypad potentiometer. In this case, the inverter will not use the analog inputs nor their adjustment parameters for an external frequency command.

Func.	Name/	Keypa	d			Run Mode		
Code	Description	SRW	OPE	Range and Settings	xFE2 (EU)	xFU2 (USA)	xFF2 (Jpn)	Edit Lo Hi
B037	Function code display	ALL	00	Display all	04	04	04	× •
	restriction	FUNCTION	01	Display only utilized functions (see table on next page)				
		USER	02	Display user-selected functions only (configure with U01 to U12)				
		COMPARE	03	Data comparison display				
		BASIC	04	Basic display				
B038	Initial display selection	STR	00	Last value dislayed when STR key was pressed	01	01	01	× 🗸
		FM	01	D001				
		Iout	02	D002				
		Dir	03	D003				
		F-CNV	04	D007				
		F-SET	05	F001				
B039	Automatic user parame-	OFF	00	Disable	00	00	00	× •
	ter function enable	ON	01	Enable				

For example, you can set B037=01 to have the inverter suppress the displaying of all analog input parameters when A001=01, as shown in the first row of the following table.

Function Code	Data	Resulting Non-displayed Functions (when B37 = 01)	Notes
A001	01	A005, A006, A011 – A016, A101 – A114, C081 – C083, C121 – C123	[O], [OI], [O2] terminal functions

Function Code	Data	Resulting Non-displayed Functions (when B37 = 01)	Notes
A002	01, 03, 04, 05	B087	Stop key function
A019	00	A028 – A035	Multi-speed function
C001 – C008	02, 03, 04, 05		

Function Code	Data	Resulting Non-displayed Functions (when B37 = 01)	Notes			
A044, A244	02	B100 – B113	Control methods			
A051	01	A052 – A059	DC braking			
A071	01	A072 – A076, C044	PID function			
A094	01	A095 – A096	2-stage adjustable frequency			
A294	01	A0295 – A296				
B013, B213, B313	02	B015 – B020	Electric thermal characteris- tic			
B021	01, 02	B022, B023	Overload restriction			
B024	01, 02	B025, B026	Overload restriction 2			
B095	01, 02	B090 – B096	Dynamic braking function			
	06	A038, A039	Jogging			
C001 C008	08	F202, F203, A203, A204, A220, A241 – A244, A261, A262, A292 – A296, B212, B213, H202 – H206, H220 – H224, H230 – H234, H250 – H252, H260	2nd motor control			
C001 – C008	11	B088	Free-run stop			
	17	F302, F303, A303, A304, A320, A342 – A344, A392, A393, B312, B313, H306	3rd motor control			
	18	C102	Reset			
	27, 28, 29	C101	UP/DWN			
A044	00, 01	A041 – A043	Torque boost function			
A044	04	H060	0Hz domain SLV limiter			
A244	00, 01	A241 – A243	Torque boost function			
A244	04	H260	0Hz SLV limiter			
A044	03, 04, 05	B040 – B046, H001, H070 – H072, H002, H005, H020 – H024, H030 – H034, H050 – H052, H060	Vector control			
A244	03, 04	B040 – B046, H001, H070 – H072, H202, H205, H220 – H224, H230 – H234, H250 – H252, H260	Vector control			
A097	01, 02, 03	A131	Acceleration pattern constant			
A098	01, 02, 03	A132	Deceleration pattern constant			

sales@hitachiacdrive.com

SJ7002 Inverter

Function Code	Data	Resulting Non-displayed Functions (when B37 = 01)	Notes
B098	01, 02	B099, C085	Thermistor function
B050	01	B051 – B054	Instantaneous power failure
B120	01	B121 – B126	External brake control

Function Code	Data	Resulting Non-displayed Functions (when B37 = 01)	Notes		
	02,06	C042, C043	Frequency arrival signal		
03		C040, C041	Overload advance notice		
C021–C025,	07	C055 – C058	Over-torque		
C026	21	C063	Zero-speed detection signal		
	24, 25	C045, C046	Frequency arrival signal		
	26	C011	Overload advance notice 2		
H002	00	H020 – H024	Motor constant		
	01, 02	H030 – H034	Motor constant (auto-tuning)		
H202	00	H220 – H224	Motor constant		
	01, 02	H023 – H0234	Motor constant (auto-tuning)		
P010	01	P011 – P023, P025 – P027	Expansion card function		

		Keyj	pad			Defaults		Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B040	Torque limit selection	4-SET	00	4-quadrant mode	00	00	00	× 🗸
		ТМ	01	Selected by two input terminals (see p. $4-30$)				
		02	02	From analog [O2] input (0 to 10V = 0 to 200%)				
		OP1	03	From expansion card 1				
		0P2	04	From expansion card 2				
B041	Torque limit (1) (forward-driving in	150%	150	0. to 200. (%)	150.	150.	150.	×v
	4-quadrant mode)	no	по	Disable torque limit				
B042	Torque limit (2) (reverse-regenerat-	150%	150	0. to 200. (%)	150.	150.	150.	×v
	ing in 4-quadrant mode)	no	по	Disable torque limit				
B043	Torque limit (3) (reverse-driving in	150%	150	0. to 200. (%)	150.	150.	150.	×v
	4-quadrant mode)	no	по	Disable torque limit				
B044	Torque limit (4) (forward-regenerat-	150%	150	0. to 200. (%)	150.	150.	150.	× 🗸
	ing in 4-quadrant mode)	no	no	Disable torque limit				

Call 1(800)985-6929 for Sales

		Keypad				Run		
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B045	Torque limit LADSTOP enable	OFF	00	Disable	00	00	00	× 🗸
	Temporarily stops accel/decel ramps during torque limit. Available for SLV, 0 Hz domain, or vector control with feedback mode	ON	01	Enable				× ~
B046	Reverse Run protection enable	OFF	00	Disable	00	00	00	× 🗸
	Prohibits reverse motor rotation	ON	01	Enable				

Controlled Deceleration at Power Loss – When enabled, this feature permits the inverter to control final motor deceleration upon loss of inverter input power. First, you must make a wiring change to the inverter. See <u>"Optional Controlled Decel and Alarm at Power Loss" on page 4–4</u> for complete instructions including wiring and signal timing diagrams for using the *controlled deceleration at power loss* feature.

After making the wiring change, use function B050 to enable the feature. Use B051 to determine the point at which a decaying DC bus voltage will trigger the controlled deceleration. Use parameter B054 to specify an initial step-wise deceleration at power loss, and B053 to specify the duration of the linear deceleration.

During the controlled deceleration the inverter itself acts as a load to decelerate the motor. With either a high-inertia load or a short deceleration time (or both), it is possible that the inverter impedance will not be low enough to continue linear deceleration and avoid an over-voltage condition on the DC bus. Use parameter B052 to specify a threshold for the over-voltage. In this case, the inverter pauses deceleration (runs at constant speed). When the DC bus decays again below the threshold, linear deceleration resumes. The pause/resume process will repeat as necessary until the DC bus energy is depleted (under-voltage condition occurs).

The case when setting B052 is lower than the inverter supply voltage has special considerations:

- If B052 Over-voltage Threshold During Power Loss is less than B051 DC Bus Voltage Trigger Level During Power Loss, the over-voltage threshold during power loss will be increased to the DC bus voltage trigger level with the stop level is applied. However, the parameter setting will not be changed.
- When B052 is less than the supply voltage (the rectified DC voltage or the AC voltage times square root of two), when power recovers the inverter will be in the LAD-stop state and cannot decelerate. (The Stop Command and frequency change command are ignored until deceleration is complete.) be sure to set B052 higher than the standard supply voltage.
- A non-stop deceleration function cannot be canceled until it is complete. To restart the inverter operations after power recovery, wait until the inverter stops. Then enter a Stop Command and then an operation command (FW, RV).
- Setting a higher value for B054 Initial Output Frequency Decrease During Power Loss results in an over-current trip due to sudden deceleration. Setting a lower value for B054 or larger value for B053 Deceleration Time Setting During Power Loss results in under-voltage trip due to reduced regenerative energy.

Non-stop deceleration at instantaneous power failure (B050=01) has these characteristics:

- The nonstop deceleration at instantaneous power failure is the function making the inverter decelerate and stop the motor while maintaining the voltage below the overvoltage level (over-voltage threshold during power loss [b052]) when an instantaneous power failure occurs during the inverter operation.
- To use this function, remove the J51 connector cables from terminals R0 and T0, connect the main circuit terminals P and R0 to each other, and connect the main circuit terminals N and T0 to each other. Use 0.75 mm2 or heavier wires for the connections.

3 - 43

- If an instantaneous power failure has occurred while the inverter is operating the motor and the output voltage falls to the DC bus voltage trigger level during power loss (b051) or less, the inverter reduces the output frequency by the initial output frequency decrease during power loss (b054) once, and then decelerates the motor for the deceleration time setting during power loss (b053).
- If the voltage increases to an overvoltage level (exceeding the over-voltage threshold during power loss [b052]) because of regeneration, the inverter enters the LAD stop state (decelerate to stop) until the voltage falls below the overvoltage level.

If the over-voltage threshold during power loss (B052) is less than the DC bus voltage trigger level during power loss (B051), the over-voltage threshold during power loss will be increased to the DC bus voltage trigger level during power loss when the stop level is applied. (However, the stored setting will not be changed.) And, in case B052 is lower than the supply voltage (equivalent to rectified DC voltage which is square root of 2 times the supply AC voltage), when power recovers while this function is activated, inverter will be in the LAD stop status and cannot decelerate. (Stop command and frequency change command are not accepted until deceleration is complete). Be sure to set b052 higher than the normal supply voltage.

		Key	pad			5	Run	
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B050	Controlled deceleration and stop on power loss	OFF	00	Disable	00	00	00	××
	Allows inverter control	DEC	01	Constant decel to stop				××
	using regenerative energy to decelerate after loss of input power (requires	NS1	02	Constant DC voltage control with resume				xx
	jumper change)	NS2	03	Constant DC voltage control				××
B051	DC bus voltage trigger level loss	l during J	ower	0.0 to 999.9, 1000. (V)	220.0/ 440.0	220.0/ 440.0	220.0/ 440.0	xx
	Sets trigger for controlled de stop on power loss function		on and	*				
B052	Over-voltage threshold duri	ng powe	loss	0.0 to 999.9, 1000. (V)	360.0/	360.0/	360.0/	××
	Sets over-voltage threshold deceleration function	for contr	olled	*	720.0	720.0	720.0	
B053	Deceleration time setting du	iring pow	er loss	0.01 to 99.99, 100.0 to 999.9, 1000 to 3600 (seconds)	1.00	1.00	1.00	××
B054	Initial output frequency dec power loss	rease dui	ing	0.00 to 10.00 (Hz)	0.00	0.00	0.00	××
	Sets the initial decrease in o upon power loss	utput fre	quency	*				
B055	Proportional gain setting for non-stop operation at power loss			0.00 to 2.55	0.20	0.20	0.20	××
B056	Integral time setting for non at power loss	-stop op	eration	0.0 to 9.999, 10.00 to 65.55	0.10	0.10	0.10	××

Window Comparators

The window comparator function controls digital outputs based on the comparison of analog input values to user-defined upper and lower limits.

F		Key	pad			Run		
Func. Code	Name/ Description	SRW	OPE	Range and Settings	xFE2 (EU)	xFU2 (USA)	xFF2 (Jpn)	Mode Edit Lo Hi
B060	[O] input maximum limit level of window	compar	ator	0. to 100. (%) Lower limit = B061 + B062 x 2	100	100	100	× ~
B061	[O] input minimum limit level of window	ator	0. to 100. (%) Lower limit = B060 – B062 x 2	0	0	0	× ~	
B062	[O] input hysteresis width of window com		0. to 10. (%) Lower limit = B061 – B062 x 2	0	0	0	× ~	
B063	[OI] input maximum limit level of window	rator	0. to 100. (%) Lower limit = B064 + B066 x 2	100	100	100	× ~	
B064	[OI] input minimum limit level of window	rator	0. to 100. (%) Lower limit = B063 – B066 x 2	0	0	0	× ~	
B065	[OI] input hysteresis width of window cor	nparator	•	0. to 10. (%) Lower limit = B063 – B064 x 2	0	0	0	× ~
B066	[O2] input maximum limit level of window	w compa	arator	-100. to 100. (%) Lower limit = B067 + B068 x 2	100	100	100	× ~
B067	[O2] input minimum limit level of window	v compa	rator	-100. to 100. (%) Lower limit = B066 – B068 x 2	-100	-100	-100	× ~
B068	[O2] input hysteresis width of window con	mparato	r	0. to 10. (%) Lower limit = B066 – B067 x 2	0	0	0	× ~
B070	[O] input disconnect threshold			0 to 100 (%)	255	255	255	×v
		no	255	Ignore setting				× 🗸
B071	[OI] input disconnect threshold	_		0 to 100 (%)	255	255	255	×v
		no	255	Ignore setting				× 🗸
B072	[O2] input disconnect threshold		—	0 to 100 (%)	127	127	127	×v
		no	15.1	Ignore setting				×v

Miscellaneous Functions

B083: Carrier frequency adjustment – The internal *switching frequency* of the inverter circuitry (also called the *chopper frequency*). It is called the carrier frequency because the lower AC output frequency of the inverter "rides" the carrier. The faint, high-pitched sound you hear when the inverter is in Run Mode is characteristic of switching power supplies in general. The carrier frequency is adjustable from 500 Hz to 15 kHz (the upper limit varies, depending on the inverter rating). The audible sound decreases at the higher frequencies, but RFI noise and leakage current may be increased. Refer to the specification derating curves in Chapter 1 to determine the maximum allowable carrier frequency setting for your particular inverter and environmental conditions.

_/	ລລລລລວ
L	

NOTE: When the inverter is in sensorless vector mode, use B083 to set the carrier frequency greater than 2.1 kHz for proper operation.

Г	<u>ລລລລລລ</u>	
Λ	$\equiv $	
/ 1		
L		

NOTE: The carrier frequency setting must stay within specified limits for inverter-motor applications that must comply with particular regulatory agencies. For example, a European CE-approved application requires the inverter carrier to be less than 5 kHz.

SJ7002 Inverter

3-45

B084, B085: Initialization codes – These functions allow you to restore the factory default settings. Please refer to <u>"Restoring Factory Default Settings" on page 6–16</u>.

B086: Frequency display scaling – You can convert the output frequency monitor on D001 to a scaled number (engineering units) monitored at function D007. For example, the motor may run a conveyor that is monitored in feet per minute. Use this formula:

Scaled output frequency (D007) = Output frequency (D001) × Factor (B086)

		Key	pad	Range and Settings	Defaults			Run
Func. Code	Name/ Description	SRW	OPE		FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B078	Clear cumulative input power data	CNT	00	No change	00	00	00	~~
	Set = 01, press STR key to clear	CLR	01	Clear the data				
B079	Cumulative input power display g	ain setting	g	1. to 1000.	1.	1.	1.	~~
B082	Start frequency adjustment			0.10 to 9.99 (Hz)	0.50	0.50	0.50	×v
	Sets the starting frequency for the	inverter o	output					
B083	Carrier frequency setting			Most models, 0.5 to 15.0 (kHz);	3.0	3.0	3.0	×v
	Sets the PWM carrier (internal sw all models are subject to derating	itching fr	eq.);	-1850 and -3150 are 0.5 to 10 (kHz); -4000 is 0.5 to 3 (kHz)	2.1 1.9	2.1 1.9	2.1 1.9	× •
B084	Initialization mode (parameters or trip history)	TRP	00	Trip history clear	00	00	00	xx
		DATA	01	Parameter initialization				
		TRP/ DATA	02	Trip history clear and parameter initialization				
B085	Country code for initialization	JPN	00	Japan version	01	02	00	xx
	Select default parameter values	EUR	01	Europe version				
	for country on initialization	USA	02	USA version				
B086	Frequency scaling conversion fact	or		0.1 to 99.9	1.0	1.0	1.0	~~
	Specify a constant to scale D007 t engineering units	o display	in					
B087	STOP key enable	ON	00	Enable	00	00	00	×v
	Select whether the STOP key on	OFF	01	Disable	1			
	the keypad is enabled (req. A002=01, 03, 04, or 05)	S-OFF	50	Disable only the STOP function				

B091/B088: Stop Mode / Restart Mode Configuration – You can configure how the inverter performs a standard stop (each time Run FWD and REV signals turn OFF). Setting B091 determines whether the inverter will control the deceleration, or whether it will perform a free-run stop (coast to a stop). When using the free-run stop selection, it is imperative to also configure how you want the inverter to resume control of motor speed. Setting B088 determines whether the inverter will ensure the motor always resumes at 0 Hz, or whether the motor resumes from its current coasting speed (also called *frequency matching*). The Run command may turn OFF briefly, allowing the motor to coast to a slower speed from which normal operation can resume.

In most applications a controlled deceleration is desirable, corresponding to B091=00. However, applications such as HVAC fan control will often use a free-run stop (B091=01). This practice decreases dynamic stress on system components, prolonging system life. In this case, you will typically set B088=01 in order to resume from the current speed after a free-run stop (see diagram below, right). Note that using the default setting, B088=00, can cause trip events when the inverter attempts to force the load quickly to zero speed.


Call 1(800)985-6929 for Sales hitachiacdrive.com

sales@hitachiacdrive.com

Call 1(800)985-6929 for Sales

NOTE: Other events can cause (or be configured to cause) a free-run stop, such as power loss (see <u>"Automatic Restart Mode and Phase Loss" on page 3–30</u>), and inverter trip events in general (see <u>"Miscellaneous Functions" on page 3–62</u>). If all free-run stop behavior is important to your application (such as HVAC), be sure to configure each event accordingly.

Some additional parameters further configure all instances of a free-run stop. Parameter B003, Retry Wait Time Before Motor Restart, sets the minimum time the inverter will free-run. For example, if B003 = 4 seconds (and B091=01) and the cause of the free-run stop lasts 10 seconds, the inverter will free-run (coast) for a total of 14 seconds before driving the motor again. Parameter B007, Restart Frequency Threshold, sets the motor frequency at which the inverter will no longer resume and accelerate, instead resuming from 0 Hz (complete stop).

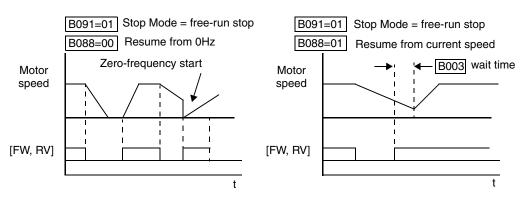

		Кеур	ad			Run		
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B088	Restart mode after FRS	ZST	00	Restart from 0Hz	00	00	00	× 🗸
	Selects how the inverter resumes operation when	fST	01	Restart from frequency detected from actual speed of motor				
	the free-run stop (FRS) is cancelled	FIX	02	Restart from active matching frequency				
B089	Automatic carrier	OFF	00	Disable	00	00	00	×v
	frequency reduction	ON	01	Enable				× 🗸
B090	Dynamic braking usage ratio			0.0 to 100.0 (%) Set = 0.0 to disable dynamic braking	00	00	00	× •
	Selects the braking duty cy (total brake % ON-time pe				× 🗸			
B091	Stop mode selection	DEC	00	DEC (decelerate and stop)	00	00	00	××
	Selects how the inverter stops the motor	FRS	01	FRS (free run to stop)				××
B092	Cooling fan control	OFF	00	Fan always ON	00	00	00	××
	(see note below)	ON	01	Fan ON during RUN, OFF during STOP				××
B095	Dynamic braking control	OFF	00	Disable	00	00	00	× 🗸
		ON STPOFF	01	Enable during RUN only				× 🗸
		ON STPON	02	Enable always			× •	

3

46

sales@hitachiacdrive

SJ7002 Inverter

3-47

Func. Code	Name/ Description	Keypad				Run		
		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B096	Dynamic braking activation level			330 to 380 (V) (200V class), 660 to 760 (V) (400V class)	360/ 720	360/ 720	360/ 720	× 🗸
B098	Thermistor for thermal	OFF	00	Disable	00	00	00	X 🗸
	protection control	PTC	01	Enable-PTC thermistor				× 🗸
		NTC	20	Enable-NTC thermistor				× 🗸
B099	Thermal protection level s	etting		0.0 to 9999 Ohms	3000	3000	3000	× 🗸
	Thermistor resistance threshold at which trip occurs							× 🗸

B090: Dynamic braking usage ratio – This parameter limits the amount of time the inverter can use the dynamic braking accessory device without entering the Trip Mode. Please refer to <u>"Dynamic Braking" on page 5–6</u> for more information on dynamic braking accessories.



NOTE: When cooling fan control is enabled (B092=01) the inverter always turns the fan ON for five minutes immediately after powerup. This will cool the inverter in case the inverter / motor is still warm from prior running before a short power outage.

Free-setting V/f Pattern

The free-setting V/f inverter mode of operation uses voltage and frequency parameter pairs to define seven points on a V/f graph. This provides a way to define a multi-segment V/f curve that best suits your application.

The frequency settings do require that $F1 \le F2 \le F3 \le F4 \le F5 \le F6 \le F7$; their values must have this ascending order relationship. To satisfy this criterion during initial parameter editing, set F7 (B112) and work backwards when setting these values, since the defaults are all 0 Hz. However, the voltages V1 to V7 may either increase or decrease from one to the next. Therefore, you may set these parameters in any order.

				Defaults		Run
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B100	Free-setting V/f frequency (1)	0. to Free-setting V/f frequency (2) (Hz)	0.	0.	0.	××
B101	Free-setting V/f voltage (1)	0.0 to 800.0 (V)	0.0	0.0	0.0	××
B102	Free-setting V/f frequency (2)	0. to Free-setting V/f frequency (3) (Hz)	0.	0.	0.	××
B103	Free-setting V/f voltage (2)	0.0 to 800.0 (V)	0.0	0.0	0.0	××
B104	Free-setting V/f frequency (3)	0. to Free-setting V/f frequency (4) (Hz)	0.	0.	0.	××
B105	Free-setting V/f voltage (3)	0.0 to 800.0 (V)	0.0	0.0	0.0	××
B106	Free-setting V/f frequency (4)	0. to Free-setting V/f frequency (5) (Hz)	0.	0.	0.	××
B107	Free-setting V/f voltage (4)	0.0 to 800.0 (V)	0.0	0.0	0.0	××
B108	Free-setting V/f frequency (5)	0. to Free-setting V/f frequency (6) (Hz)	0.	0.	0.	××
B109	Free-setting V/f voltage (5)	0.0 to 800.0 (V)	0.0	0.0	0.0	xx
B110	Free-setting V/f frequency (6)	0. to Free-setting V/f frequency (7) (Hz)	0.	0.	0.	xx
B111	Free-setting V/f voltage (6)	0.0 to 800.0 (V)	0.0	0.0	0.0	xx
B112	Free-setting V/f frequency (7)	0. to 400.0 (Hz)	0.	0.	0.	××
B113	Free-setting V/f voltage (7)	0.0 to 800.0 (V)	0.0	0.0	0.0	××

Call 1(800)985-6929 for Sales

External Brake Control

The brake control function in the inverter controls external braking used in systems such as elevators. The purpose of this function is to ensure the inverter is powering the motor before releasing external brakes that would permit the load to move or coast. This function requires the configuration and wiring of intelligent input and output terminals. See <u>"External Brake Control Function" on page 4–32</u> for more information.

		Key	pad			Defaults		Run	
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi	
B120	Brake Control Enable	OFF	00	Disable	00	00	00	× 🗸	
		ON	01	Enable					
B121	Brake Wait Time for Release			0.00 to 5.00 (seconds)	0.00	0.00	0.00	×v	
_	Sets time delay between arriva	l at rele	ase freq	uency and the brake release signal					
B122	Brake Wait Time for Accelera	tion		0.00 to 5.00 (seconds)	0.00	0.00	0.00	×v	
	Sets time delay from receipt of	f brake o	confirma	ation signal to start of motor acceleration					
B123	Brake Wait Time for Stopping			0.00 to 5.00 (seconds)	0.00	0.00	0.00	×v	
	Sets time delay from brake con	nfirmati	on signa	l turns OFF to inverter deceleration to 0 Hz					
B124	Brake Wait Time for Confirma	tion		0.00 to 5.00 (seconds)	0.00	0.00	0.00	× 🗸	
				N/OFF of brake release. If confirmation is not verter will trip with an external brake error.					
B125	Brake Release Frequency Sett	ase Frequency Setting 0.00 to 99.99, 100.0 to 400.0 (Hz)		0.00	0.00	0.00	×v		
	Sets the frequency of the brake	ts the frequency of the brake release output signal after delay set by B121							
B126	Brake Release Current Setting	tting 0 to 1.80 x rated current		0 to 1.80 x rated current		Rate	ed curren	t for	×v
	Sets the minimum inverter current level above which the brake release signal is permitted					inverter			
B127	Braking Frequency			0.00 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	× 🗸	

Inverter	[BRK] Brake release	External Brake
inverter	[BOK] Brake confirmation	System
	[BER] Brake error	Emergency Brake (or alarm, etc.)
		(or alarm, etc.)

3-


-48

SJ7002 Inverter

Overvoltage Functions

B130/B131: Over-voltage LADSTOP Enable / Over-voltage LADSTOP Level – The overvoltage LADSTOP function monitors the DC bus voltage and actively changes the output frequency profile to maintain the DC bus voltage within settable limits. Although "LAD" refers to "linear acceleration / deceleration," the inverter only "STOPs" the deceleration slope so that regenerative voltage will not cause the DC bus to rise enough to cause an over-voltage trip event. Note that acceleration is not affected.

The graph below shows an inverter output profile that starts decelerating to a stop. At two different points during the deceleration, regenerative voltage elevates the DC bus level, exceeding the LADSTOP threshold set by B131. When the Over-voltage LADSTOP feature is enabled by B130 = 01, the inverter stops the deceleration ramp in each case until the DC bus level is again less than the threshold value.

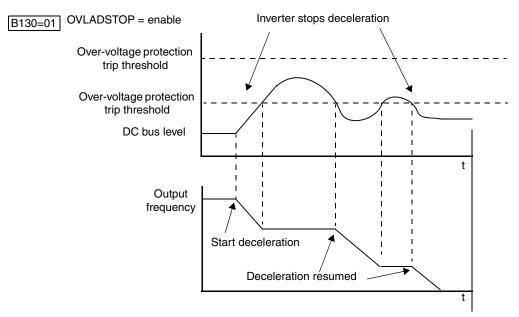

		Key	pad			Defaults	6	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings		FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
B130	Over-voltage LADSTOP enable	OFF	00	Disable	00	00	00	××
	Pauses deceleration ramp when DC bus voltage rises above	ON	01	Enable during deceleration and constant speed				xx
	threshold level, in order to avoid over-voltage trip	AON	02	Enable during acceleration				××
B131	Over-voltage LADSTOP level			330 to 390 (V) for 200V class, 660 to 780 (V) for 400V class	380/ 760	380/ 760	380/ 760	× 🗸
	Sets the threshold level for over-voltage LADSTOP. When the DC bus voltage is above the threshold value, the inverter stops deceleration until the DC bus voltage is less than the threshold setting again.							× •
B132	Acceleration and deceleration rate at overvoltage suppression			0.10 to 30.00 (seconds)	1.00	1.00	1.00	× 🗸
B133	Overvoltage suppression proportional gain 0			0.00 to 2.55	0.50	0.50	0.50	××
B134	Overvoltage suppression integral t	ime		0.000 to 9.999, 10.00 to 63.53 (seconds)	0.060	0.060	0.060	××

"C" Group: Intelligent Terminal Functions

Call 1(800)985-6929 for Sales

"C" Group: Intelligent Terminal Functions

The eight input terminals [1], [2], [3], [4], [5], [6], [7], and [8] can be configured for any of 44 different functions. The next two tables show how to configure the eight terminals. The inputs are logical, in that they are either OFF or ON. We define these states as OFF=0, and ON=1.

The inverter comes with default options for the eight terminals. These default settings are initially unique, each one having its own setting. Note that European and US versions have different default settings. You can use any option on any terminal, and even use the same option twice to create a logical OR (though usually not required).

Input Terminal Configuration

-50

Functions and Options –The *function codes* in the following table let you assign one of 44 options to any of the eight logic inputs for the SJ7002 inverters. The functions C001 through C008 configure the terminals [1] through [8] respectively. The "value" of these particular parameters is not a scalar value, but it is a discrete number that selects one option from many available *options*.

For example, if you set function C001=01, you have assigned option 01 (Reverse Run) to terminal [1]. The option codes and the specifics of how each one works are in Chapter 4.

				Run			
Func. Name/ Code Description	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi	
C001	Terminal [1] function	-	18 [RS]	18 [RS]	18 [RS]	× 🗸	
C002	Terminal [2] function		16 [AT]	16 [AT]	16 [AT]	× 🗸	
C003	Terminal [3] function		06 [JG]	06 [JG]	06 [JG]	× 🗸	
C004	Terminal [4] function	63 programmable functions	11 [FRS]	11 [FRS]	11 [FRS]	× 🗸	
C005	Terminal [5] function	available for terminals (see next section)	09 [2CH]	09 [2CH]	09 [2CH]	× 🗸	
C006	Terminal [6] function		03 [CF2]	13 [USP]	03 [CF2]	× 🗸	
C007	C007 Terminal [7] function		02 [CF1]	02 [CF1]	02 [CF1]	× 🗸	
C008	Terminal [8] function		01 [RV]	01 [RV]	01 [RV]	× 🗸	

The input logic convention is programmable for each of the six inputs. Most inputs default to normally open (active high), but you can select normally closed (active low) in order to invert the sense of the logic.

		Key	pad		Defaults			Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C011	Terminal [1] active state	NO	00	Normally open (N.O.)	00	00	00	× 🗸
		NC	01	Normally closed (N.C.)				×v
C012	Terminal [2] active state	NO	00	Normally open (N.O.)	00	00	00	× 🗸
		NC	01	Normally closed (N.C.)				× 🗸
C013	Terminal [3] active state	NO	00	Normally open (N.O.)	00	00	00	× 🗸
		NC	01	Normally closed (N.C.)				× 🗸
C014	Terminal [4] active state	NO	00	Normally open (N.O.)	00	00	00	× 🗸
		NC	01	Normally closed (N.C.)				× 🗸

sales@hitachiacdrive_c

SJ7002 Inverter

3-51

		Key	pad		Defaults			Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C015	Terminal [5] active state	NO	00	Normally open (N.O.)	00	00	00	× 🗸
		NC	01	Normally closed (N.C.)				×v
C016	Terminal [6] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				×v
C017	Terminal [7] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				×v
C018	Terminal [8] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				×v
C019	Terminal [FW] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				× 🗸



NOTE: An input terminal configured for option code 18 ([RS] Reset command) cannot be configured for normally closed operation.

Intelligent Input Terminal Overview

Each of the eight intelligent terminals may be assigned any of the options in the following table. When you program one of the option codes for terminal assignments C001 to C008, the respective terminal assumes the function role of that option code. The terminal functions have a symbol or abbreviation, which we use to label a terminal using that function. For example the "Reverse Run" command is [RV]. The physical label on the terminal block connector is simply **1**, **2**, **3**, **4**, **5**, **6**, **7**, **or 8**. However, schematic examples in this manual also use the terminal function symbol (such as [RV]) to show the assigned option. The option codes for C011 to C019 determine the active state of the logical input (active high or active low).

Summary Table - This table shows all forty-four intelligent input functions at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in <u>"Using Intelligent Input Terminals" on page 4–13</u>.

	Input Function Summary Table							
Option Code	Terminal Symbol	Function Name	Description					
01	RV	Reverse Run/Stop	Puts the inverter in Run Mode, motor runs reverse					
02	CF1	Multi-speed select, Bit 0 (LSB)	Binary encoded speed select, Bit 0					
03	CF2	Multi-speed select, Bit 1	Binary encoded speed select, Bit 1					
04	CF3	Multi-speed select, Bit 2	Binary encoded speed select, Bit 2					
05	CF4	Multi-speed select, Bit 3 (MSB)	Binary encoded speed select, Bit 3					
06	JG	Jogging	Puts the inverter in Run Mode, output to motor runs at jog parameter frequency A038					
07	DB	External Signal for DC Injection Braking	Applies DC braking during deceleration					

"C" Group: Intelligent Terminal Functions

		Input Fun	ction Summary Table
Option Code	Terminal Symbol	Function Name	Description
08	SET	Set (select) 2nd Motor Data	Switch from normal (1st) to 2nd motor parameters for gener- ating frequency output to motor
09	2CH	2-stage Acceleration and Deceleration	Frequency output uses 2nd-stage acceleration and decelera- tion values
11	FRS	Free-run Stop	Causes output to turn OFF, allowing motor to free run (coast) to stop
12	EXT	External Trip	At OFF to ON transition, inverter latches trip event and displays E12 (until a reset occurs)
13	USP	Unattended Start Protec- tion	On powerup, the inverter will not resume a Run command that was active before power loss (mostly used in the US)
14	CS	Commercial Power Source	OFF-to-ON transition signals the inverter that the motor is already running at powerup (via bypass), thus suppressing the inverter's motor output in Run Mode; ON-to-OFF transition signals the inverter to apply a time delay (B003), frequency match its output to existing motor speed, and resume normal Run Mode operation
15	SFT	Software Lock	The keypad and remote programming devices are prevented from changing parameters
16	AT	Analog Input Voltage/ current Select	ON condition: If A005=00, terminal [OI] is enabled for input. If A005=01, terminal [O2] is enabled for input. (Use terminal [L] for signal return.) OFF condition: Terminal [O] is enabled for voltage input (use terminal [L] for signal return).
17	SET3	Set (select) 3rd motor data	Switch from normal (1st) to 3rd motor parameters for gener- ating frequency output to motor
18	RS	Reset Inverter	Resets the trip condition, turns OFF the motor output, and asserts powerup reset
20	STA	START (3-wire interface)	Starts the motor rotation
21	STP	STOP (3-wire interface)	Stops the motor rotation
22	F/R	FWD, REV (3-wire interface)	Selects the direction of motor rotation: ON =FWD; OFF =REV. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction.
23	PID	PID Disable	Temporarily disables PID loop control. Inverter output turns OFF as long as PID Enable is active (A071=1).
24	PIDC	PID Reset	Resets the PID loop controller. The main consequence is that the integrator sum is forced to zero.
26	CAS	Control gain setting	To select the source of internal speed loop gain OFF selects parameters H050 to H052 (or H250 to H252 for 2nd motor); ON selects alternate parameters H070 to H072
27	UP	Remote Control UP Function (motorized speed pot.)	Accelerates (increases output frequency) motor from current frequency
28	DWN	Remote Control DOWN Function (motorized speed pot.)	Decelerates (decreases output frequency) motor from current frequency

3-

sales@hitachiacdrive.com

SJ7002 Inverter

	Input Function Summary Table						
Option Code	Terminal Symbol	Function Name	Description				
29	UDC	Remote Control Data Clearing	Clears the UP/DWN frequency memory by forcing it to equal the set frequency parameter F001. Setting C101 must be set=00 to enable this function to work.				
31	OPE	Operator Control	Forces the source of the output frequency setting (A001) and the RUN command (A002) to be from the digital operator (F001 and the Run key, respectively)				
32	SF1	Multi-speed bit 1	Multiple speed select, Bit 1				
33	SF2	Multi-speed bit 2	Multiple speed select, Bit 2				
34	SF3	Multi-speed bit 3	Multiple speed select, Bit 3				
35	SF4	Multi-speed bit 4	Multiple speed select, Bit 4				
36	SF5	Multi-speed bit 5	Multiple speed select, Bit 5				
37	SF6	Multi-speed bit 6	Multiple speed select, Bit 6				
38	SF7	Multi-speed bit 7	Multiple speed select, Bit 7				
39	OLR	Overload restriction	Turn ON to select current overload parameter set 2 (B024, B025, B026); OFF selects set 1(B021, B022, B023)				
40	TL	Torque limit enable	ON enables torque limit feature; OFF disables all torque limit sources and defaults to 200% of inverter rated torque output				
41	TRQ1	Torque limit selection, bit 1	Binary encoded torque limit select, Bit 1 (LSB)				
42	TRQ2	Torque limit selection, bit 2	Binary encoded torque limit select, Bit 2 (MSB)				
43	PPI	Proportional / Proportional/Integral mode selection	ON selects Proportional-only control; OFF selects Propor- tional-Integral control				
44	BOK	Brake confirmation signal	Indicates external brake has released (used only for external brake control function)				
45	ORT	Orientation (home search)	The encoder is in the home (oriented) position				
46	LAC	LAC: LAD cancel	Disables the normal Linear Accel / Decel (LAD) mode				
47	PCLR	Position deviation reset	Clears the position deviation by setting the actual position equal to the desired position				
48	STAT	Pulse train position command input enable	Enables the pulse train control of motor				
50	ADD	Add frequency enable	Adds the A145 value (Add Frequency) to the output frequency				
51	F-TM	Force terminal mode	Force inverter to use input terminals for output frequency and Run command sources				
52	ATR	Torque control enable	Inverter operates by controlling torque instead of speed				
53	КНС	Clear cumulative power value	Clears cumulative power data displayed by parameter D015				
54	SON	Speed servo ON	Enables the inverter to accept FW/REV commands; for use with V/F curve vector control with sensor (A044=05)				

"C" Group: Intelligent Terminal Functions

	Input Function Summary Table						
Option Code	Terminal Symbol	Function Name	Description				
55	FOC	Current forcing	Forces excitation current in motor at 0 speed; for use with V/f curve settings $A044/A244 = 03, 04$, and 05				
56	MI1	General-purpose input 1	Easy sequence function, general input 1				
57	MI2	General-purpose input 2	Easy sequence function, general input 2				
58	MI3	General-purpose input 3	Easy sequence function, general input 3				
59	MI4	General-purpose input 4	Easy sequence function, general input 4				
60	MI5	General-purpose input 5	Easy sequence function, general input 5				
61	MI6	General-purpose input 6	Easy sequence function, general input 6				
62	MI7	General-purpose input 7	Easy sequence function, general input 7				
63	MI8	General-purpose input 8	Easy sequence function, general input 8				
65	AHD	Analog holding command	Causes the inverter to sample and hold the analog speed input, maintaining constant speed while this signal is ON				
66	CP1	Multi-stage position select 1	Binary-encoded position select, bit 1 (LSB)				
67	CP2	Multi-stage position select 2	Binary-encoded position select, bit 2 (LSB)				
68	CP3	Multi-stage position select 3	Binary-encoded position select, bit 3 (MSB)				
69	ORL	Zero-return limit function	Indicates that the load has reached the zero-return point, so the inverter stops the zero-return operation in progress				
70	ORG	Zero-return trigger function	Starts a zero-return operation (load moves toward the zero-return point)				
71	FOT	Forward drive stop	Limits the forward rotational torque to 10%; for use at the end of travel in position control mode				
72	ROT	Reverse drive stop	Limits the reverse rotational torque to 10%; for use at the end of travel in position control mode				
73	SPD	Speed/position control select	Causes the inverter to perform only speed control (ignores encoder pulses) while in position control mode				
74	PCNT	Pulse counter input	Pulse counter input				
75	PCC	Pulse counter clear	Clears the pulse count				
no		Not selected	(input ignored)				
		•					

SJ7002 Inverter

3 - 55

Output Terminal Configuration

The inverter provides configuration for logic (discrete) and analog outputs, shown in the table below.

					Run	
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C021	Terminal [11] function *		01 [FA1]	01 [FA1]	01 [FA1]	×v
C022	Terminal [12] function *		00 [RUN]	00 [RUN]	00 [RUN]	×v
C023	Terminal [13] function *	51 programmable functions	03 [OL]	03 [OL]	03 [OL]	×v
C024	Terminal [14] function *	available for logic (discrete) outputs (see next	07 [OTQ]	07 [OTQ]	07 [OTQ]	×v
C025	Terminal [15] function	section)	08 [IP]	08 [IP]	08 [IP]	×v
C026	Alarm relay terminal function		05 [AL]	05 [AL]	05 [AL]	× 🗸
C027	[FM] signal selection	12 programmable functions	00) (output free] .)	×v
C028	[AM] signal selection	available for analog outputs	00) (output free	1 .)	×v
C029	[AMI] signal selection	(see after next section)	00) (output free	1 .)	×v
C030	Digital current monitor reference value	0.20 x rated current to 2.00 x rated current (A)	Rated current x 1.0		1.0	~~
	Current with digital current	monitor output at 1.44 kHz				~~



NOTE: *Terminals [11] - [13] or [11] - [14] are automatically configured as AC0 – AC2 or AC0 – AC3 when C62 is configured to enable alarm code output.

The output logic convention is programmable for terminals [11] - [15], and the alarm relay terminals. The open-collector output terminals [11] - [15] default to normally open (active low), but you can select normally closed (active high) for the terminals in order to invert the sense of the logic. You can invert the logical sense of the alarm relay output as well.

Func. Code	Name/ SRW Display	Key	pad	Range and Settings		Run		
		SRW	OPE		FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C031	Terminal [11] active state	NO	00	Normally open (N.O.)	00	00	00	× •
		NC	01	Normally closed (N.C.)				
C032	Terminal [12] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				
C033	Terminal [13] active state	NO	00	Normally open (N.O.)	00	00	00	×v
		NC	01	Normally closed (N.C.)				
C034	Terminal [14] active state	NO	00	Normally open (N.O.)	00	00	00	× •
		NC	01	Normally closed (N.C.)				
C035	Terminal [15] active state	NO	00	Normally open (N.O.)	00	00	00	× •
		NC	01	Normally closed (N.C.)				
C036	Alarm relay terminal active	NO	00	Normally open (N.O.)	01	01	01	× 🗸
	state	NC	01	Normally closed (N.C.)				

"C" Group: Intelligent Terminal Functions

Output Summary Table - This table shows all twenty-two functions for the logic output terminals [11] – [15] at a glance. Detailed function descriptions, related parameters, settings, and example wiring diagrams are in <u>"Using Intelligent Output Terminals" on page 4–43</u>.

	Output Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description			
00	RUN	Run signal	Inverter is in Run Mode, motor running			
01	FA1	Frequency arrival type 1 – constant speed	When output to motor is at the standard set frequency F001			
02	FA2	Frequency arrival type 2 – over-frequency	Turns ON when output to motor is at or above the FA Threshold 1 (C042) during accel; turns OFF when motor output goes below the threshold during decel			
03	OL	Overload advance notice signal (1)	Output current is more than the set Threshold 1 for the overload signal (set with C041)			
04	OD	Output deviation for PID control	PID error is more than the set threshold for the deviation signal			
05	AL	Alarm signal	Alarm condition has been met and not reset			
06	FA3	Frequency arrival type 3 – at frequency	Output to motor is at the FA Threshold 1 (C042) during accel, or at C043 during decel			
07	OTQ	Over-torque signal	Over-torque feature is enabled and the motor is generating excess torque			
08	IP	Instantaneous power failure signal	Inverter input power has decreased below the acceptable input voltage level			
09	UV	Under-voltage signal	Inverter input power has decreased below the acceptable input voltage level			
10	TRQ	In torque limit	Output torque exceeds level set for the particular torque/ frequency quadrant in effect during operation			
11	RNT	Operation time over	er Inverter Run time exceeds the limit set by Run/power-on warning time (B034)			
12	ONT	Plug-in time over	Inverter plug-in time exceeds the set limit			
13	THM	Thermal alarm signal	Thermal limit for the motor is exceeded			
19	BRK	Brake release signal	ON when the inverter signals the external braking system to release (open) its brake; OFF when the inverter is not driving the motor and needs the external brake engaged			
20	BER	Brake error signal	ON when the output current is less than the set releasing current; OFF when the braking function is not in use, or when the output current to the motor is correct and it is safe to release the brake			
21	ZS	Zero speed detect	Encoder pulses of the motor have stopped			
22	DSE	Speed deviation maximum	Velocity error exceeds the error threshold defined for the encoder input			
23	POK	Positioning completion	Load position is at the target			
24	FA4	Frequency arrival type 4 – over-frequency (2)	ON when output to motor is at or above the FA threshold 2 (C045) during accel; OFF when the output to motor is below the FA threshold 2 (C046) during decel			
25	FA5	Frequency arrival type 5 – at frequency (2)	Output to motor is at the FA threshold 2 (C045) during accel or at C046 during decel			

sales@hitachiacdrive.com

SJ7002 Inverter

	Output Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description			
26	OL2	Overload notice advance signal (2)	Output current is more than the set Threshold 2 for the overload signal (set with C111)			
27	Odc	Analog [O] disconnect detect	Input signal level at terminal [O] is below threshold (set with B070)			
28	OIDc	Analog [OI] disconnect detect	Input signal level at terminal [OI] is below threshold (set with B071)			
29	O2Dc	Analog [O2] disconnect detect	Input signal level at terminal [O2] is below threshold (set with B072)			
31	FBV	PID feedback second stage output	Stage #1 inverter is indicating to Stage # inverter that the Process Variable (PV) is in saturation. The system needs Stage #2 output contribution to stabilize system control.			
32	NDc	Network detection signal	The communications watchdog timer (period specified by C077) has timed out			
33	LOG1	Logic output 1	Boolean operation specified by C144 has a logical "1" result			
34	LOG2	Logic output 2	Boolean operation specified by C147 has a logical "1" result			
35	LOG3	Logic output 3	Boolean operation specified by C150 has a logical "1" result			
36	LOG4	Logic output 4	Boolean operation specified by C153 has a logical "1" result			
37	LOG5	Logic output 5	Boolean operation specified by C156 has a logical "1" result			
38	LOG6	Logic output 6	Boolean operation specified by C159 has a logical "1" result			
39	WAC	Capacitor life warning	Capacitor bank on the main board needs replacement			
40	WAF	Low cooling fan speed	Cooling fan is enabled but it is rotating below normal speed			
41	FR	Starting contact signal	ON while the inverter receives a FW or REV command			
42	OHF	Heat sink overheat warning	Inverter heat sink temperature is above the threshold set by C064			
43	LOC	Low output current signal	Output current to motor is below threshold set by C039			
44	MO1	General output 1	Easy sequence function, general output 1			
45	MO2	General output 2	Easy sequence function, general output 2			
46	MO3	General output 3	Easy sequence function, general output 3			
47	MO4	General output 4	Easy sequence function, general output 4			
48	MO5	General output 5	Easy sequence function, general output 5			
49	MO6	General output 6	Easy sequence function, general output 6			
50	IRDY	Inverter ready signal	Inverter is ready to accept commands (FW, REV, JOG, etc.)			
51	FWR	Forward rotation signal	Inverter output is driving motor in forward direction			
52	RVR	Reverse rotation signal	Inverter output is driving motor in reverse direction			
53	MJA	Major failure signal	Inverter trip caused by internal hardware error			
54	WCO	[O] terminal window [O] input is within comparator window set by B060 and B06 comparator				
55	WCOI[OI] terminal window comparator[OI] input is within comparator window set by B063 and B064					

"C" Group: Intelligent Terminal Functions

	Output Function Summary Table						
Option CodeTerminal SymbolFunction Name			Description				
56	56WCO2[O2] terminal window comparator		[O2] input is within comparator window set by B066 and B067				

Analog Summary Table - The following tables show all functions available for assignment to the three analog output terminals [FM], [AM], [AMI] at a glance. Detailed descriptions, related parameters, and settings are in <u>"Analog Output Operation" on page 4–66</u>.

	C027 Setting for Terminal FM						
Option Code	Function Name	Description	Corresponding Signal Range				
00	Output frequency	Actual motor speed, represented by PWM signal	0 to max. frequency in Hz				
01	Output current	Motor current (% of maximum rated output current), represented by PWM signal	0 to 200%				
02	Output torque	Rated output torque	0 to 200%				
03	Digital output frequency	Output frequency (available only at FM output)	0 to max. frequency in Hz				
04	Output voltage	Rated output voltage to motor	0 to 100%				
05	Input power	Rated input power	0 to 200%				
06	Electronic thermal overload	Percentage of electronic overload attained	0 to 100%				
07	LAD frequency	Internal ramp generator frequency	0 to max. frequency in Hz				
08	Digital current monitor	Signal freq. = 1,440 Hz when output current = C030 setting	0.2 x rated current to 2.0 x rated current (A)				
09	Motor temperature	Thermistor input temp. reading in PWM format	0 to 200°C				
10	Heat sink temperature	Inverter heatsink temp. reading in PWM format	0 to 200°C				
12	General YA(0) analog output	Internal analog value from EZ-Sequence	0 to 100%				

	C028 Setting for Terminal [AM]; C029 Setting for Terminal [AMI]					
Option Code	Function Name Description		Corresponding Signal Range			
00	Output frequency	Actual motor speed, represented by PWM signal	0 to max. frequency in Hz			
01	Output current	Motor current (% of maximum rated output current), represented by PWM signal	0 to 200%			
02	Output torque	Rated output torque	0 to 200%			
03	Digital output frequency	Output frequency (available only at FM output)	0 to max. frequency in Hz			
04	Output voltage	Rated output voltage to motor	0 to 100%			

3-

Call 1(800)985-6929 for Sales

sales@hitachiacdrive.co

SJ7002 Inverter

3–59


C028 Setting for Terminal [AM]; C029 Setting for Terminal [AMI]					
Option Code	Function Name	Description	Corresponding Signal Range		
05	Input power	Rated input power	0 to 200%		
06	Electronic thermal overload	Percentage of electronic overload attained	0 to 100%		
07	LAD frequency	Internal ramp generator frequency	0 to max. frequency in Hz		
09	Motor temperature	Thermistor input temp. reading in PWM format	0 to 200°C		
10	Heat sink temperature	Inverter heatsink temp. reading in PWM format	0 to 200°C		
13	General YA(1) analog output	Internal analog value from EZ-Sequence	0 to 100% (output only from terminal [AM])		
14	General YA(2) analog output	Internal analog value from EZ-Sequence	0 to 100% (output only from terminal [AMI])		


Output Function Adjustment Parameters

The following parameters work in conjunction with the intelligent output function, when configured. The overload level parameter (C041) sets the motor current level at which the overload signal [OL] turns ON. The range of settings is from 0% to 200% of the rated current for the inverter. This function is for generating an early warning logic output, without causing either a trip event or a restriction of the motor current (those effects are available on other functions).

The frequency arrival signal, [FA1] to [FA5], is intended to indicate when the inverter output has reached (arrived at) the target frequency. You can adjust the timing of the leading and trailing edges of the signal via two parameters specific to acceleration and deceleration ramps, C042 and C043.

The Error for the PID loop is the magnitude (absolute value) of the difference between the Setpoint (desired value) and Process Variable (actual value). The PID output deviation signal [OD] (output terminal function option code 04) indicates when the error magnitude has exceeded a magnitude you define.

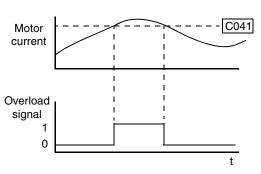

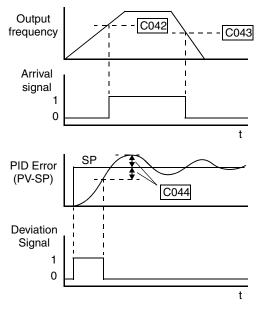

"C" Group: Intelligent Terminal Functions

	Name/ Description	Keypad			Defaults			Run
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FU2 F2	Mode Edit Lo Hi	
C038	Low current indication output mode select	ON	00	Output during acceleration/deceleration and constant speed operation	01	01	01	×v
		CRT	01	Output only during constant speed				
C039	Low current indication detecti	on level	•	0.0 to 1.80 x rated inverter current	Rateo	d current	x 1.0	×v
	Low current threshold, used for	or intellig	gent outp	out [LOC]				×v
C040	Overload signal output mode	ON	00	During accel / decel / constant speed	01	01	01	×v
	Choose when the overload signal is enabled	CRT	01	During constant speed only				
C041	Overload level setting 1			0.00 x rated current to 1.80 x rated current (A)	Rate	ed curren inverter	t for	×v
C042	Frequency arrival setting for a	ccelerati	on	0.00 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	×v
	Sets the frequency arrival setti	ng thres	hold for	the output frequency during acceleration				
C043	Arrival frequency setting for d	lecelerati	ion	0.00 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	×v
	Sets the frequency arrival setti	ng thres	hold for	the output frequency during deceleration				
C044	PID deviation level setting 0.0 to 100.0			0.0 to 100.0 (%)	3.0	3.0	3.0	×v
	Sets the PID loop error thresh	hold SP - PV (absolute value) to trigger intelligent o		solute value) to trigger intelligent output [OD]	1			
C045	Frequency arrival setting for acceleration (2)		0.0 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	×v	
C046	Frequency arrival setting for deceleration (2)		0.0 to 99.99, 100.0 to 400.0 (Hz)	0.00	0.00	0.00	×v	
C052	Maximum PID feedback (PV) data		0.0 to 100.0 (%)	0.00	0.00	0.00	×v	
C053	Minimum PID feedback (PV) data		0.0 to 100.0 (%)	100.0	100.0	100.0	×v	
C055	Over-torque (forward-driving) level setting			0. to 180. (%)	100.	100.	100.	×v
	Threshold for intelligent output	ıt termin	al [OTQ], quadrant I				
C056	Over-torque (reverse regenerating) level setting		0. to 180. (%)	100.	100.	100.	×v	
	Threshold for intelligent output terminal [OTQ], quadrant II							
C057	Over-torque (reverse driving)	Over-torque (reverse driving) level setting 0. to 180. (%)				100.	100.	×v
	Threshold for intelligent output	ıt termin	al [OTQ], quadrant III				
C058	Over-torque (forward regenerating) level0. to 180. (%)setting			100.	100.	100.	×v	
	Threshold for intelligent output terminal [OTQ], quadrant IV							
C061	Electronic thermal warning le	vel settin	ıg	0. to 100. (%)	80.	80.	80.	×v
	Sets the threshold for intelligent output [THM]							
C062	Alarm code output	OFF	00	Disable	00	00	00	×v
	Allows binary alarm codes to	3BIT	01	Enable – 3-bit code	1			
	be output to intelligent terminals 4BIT		02	Enable – 4-bit code				
C063	Zero speed detection level			0.00 to 99.99 / 100.0 (Hz)	0.00	0.00	0.00	×v
C064				0. to 200.0 (°C)	120	120	120	×v
	Alarm temperature threshold for heatsink in inv							×v

3-61

Serial Communications

The following table configures the communications port of the SJ7002 inverter. You can have up to thirty-two devices on the serial communications network. The inverters are slaves and the computer or digital operator is the master. Thus, all inverters on the serial connection must use the same baud rate, data length, parity, and stop bits. However, each device on the serial network must have a unique node address. See <u>"Serial Communications" on page B–1</u> for more information.

Func.	Name/	Кеура	d			Defaults	i	Run Mode
Func. Code	Description	SRW	OPE	Range and Settings	xFE2 (EU)	xFU2 (USA)	xFF2 (Jpn)	Edit Lo Hi
C071	Communication speed	TEST	50	Test	04	04	04	× 🗸
	selection	2400bps	03	2400 (bps)				
		4800bps	04	4800 (bps)				
		9600bps	05	9600 (bps)				
		19200bps	06	19200 (bps)				
C072	Node allocation			1. to 32. (node)	1.	1.	1.	× 🗸
	Set the address of the inverter	on the networl	k					
C073	Communication data length	7BIT	07	7-bit data	07	07	07	× 🗸
	selection	8BIT	08	8-bit data				
C074	Communication parity	NO	00	No parity	00	00	00	× 🗸
	selection	EVN	01	Even parity				
		ODD	02	Odd parity				
C075	Communication stop bit	1BIT	01	1 Stop bit	1	1	1	× 🗸
	selection	2BIT	02	2 Stop bits				
C076	Action upon communication	TRP	00	Trip	02	02	02	× 🗸
	error selection	DSTP	01	Trip after deceleration and stop				
		NEG	50	No action (ignore errors)				
		FRS	03	Free-run stop				
		DTP	04	Decelerate and stop				
C077	Communication timeout befor	e trip		0.00 to 99.99 (seconds)	0.00	0.00	0.00	× 🗸
C078	Communication wait time			0.0 to 1000 (milliseconds)	0.	0.	0.	× 🗸
	Time the inverter waits after re	eceiving a mes	sage bef	ore it transmits				
C079	Communication protocol	ASCII	00	ASCII	00	00	00	× 🗸
	select	Modbus	01	ModBus RTU				

"C" Group: Intelligent Terminal Functions

Call 1(800)985-6929 for Sales

Analog Signal Calibration Settings

-62

The functions in the following table configure the signals for the analog output terminals. Note that these settings do not change the current/voltage or sink/source characteristics – only the zero and span (scaling) of the signals.

ລວວວວວ ງ	
	<u> </u>

NOTE: See additional settings for analog calibration: Parameter B080 [AM] Terminal Analog Meter Adjustment (gain), parameter B081 [FM] Terminal Analog Meter Adjustment (gain).

				Run		
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C081	[O] input span calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Factory-calibrated			~~
C082	[OI] input span calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Factory-calibrated			~~
C083	[O2] input span calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Factory-calibrated			~~
C085	Thermistor input tuning (gain)	0.0 to 999.9., 1000	105.0	105.0	105.0	~~
C121	[O] input zero calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Factory-calibrated			~~
C122	[OI] input zero calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Factory-calibrated			~~
C123	[O2] input zero calibration	0. to 9999., 1000 to 6553 (10000 to 65530)	Fact	ory-calib	rated	~~

Configuring Drive

NOTE: Settings C081, C082, C083, C121, C122, C123 are factory-calibrated for each inverter. Do not change these settings unless absolutely necessary. Note that if you restore factory defaults for all parameters, these settings will not change.

Miscellaneous Functions

The following table contains miscellaneous functions not in other function groups.

	Name/ Description	Keypad					Run	
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C091	Debug mode enable	MDØ	00	No display	00	00	00	xx
		MD1	01	Display				
C101	Up/Down memory mode selection	NO-STR	00	Clear last frequency (return to default frequency F001)	00	00	00	× 🗸
	Controls speed setpoint for the inverter after power cycle	STR	01	Keep last frequency adjusted by UP/DWN				

C102/C103: Reset Mode / Restart Mode – The reset mode selection, set via parameter C102, determines how the inverter responds to the [RS] intelligent input signal or keypad Stop/Reset key in a trip condition. The options allow you to cancel the trip on either the OFF-to-ON or ON-to-OFF transition of [RS], and if desired, stop the inverter if it is in Run Mode. A trip event causes the inverter output to the motor to turn OFF immediately. If in Run Mode when the trip

3 - 63

occurred, the inverter and motor will enter free-run stop (coasting) operation. In some applications, the motor and load will still be coasting when the inverter returns to normal Run Mode operation. For that situation, you can configure the inverter output (C103=00) to resume operation from 0 Hz and accelerate normally. Or, you can configure the inverter (C103=01) to resume operation from the current speed of the motor (*frequency matching*)—often used in applications such as HVAC.

Func.	Name/	Key	pad			Defaults		Run Mode Edit Lo Hi
Code	Description	SRW	OPE	Range and Settings	xFE2 (EU)	xFU2 (USA)	xFF2 (Jpn)	
C102	Reset mode selection	ON	00	Cancel trip state, stop inverter output, reset CPU; clear position counter at ON transition	00	00	00	~~
	Determines response to Reset input [RST]	OFF	01	Cancel trip state, stop inverter output, reset CPU; clear position counter at OFF transi- tion				
		TRP	02	Cancel trip state and clear position counter; no effect if a trip does not exist				
		EXT	03	Cancel trip state but does not clear position counter; no effect if a trip does not exist				
C103	Restart mode after reset	ZST	00	Restart at 0 Hz	00	00	00	× •
		fST	01	Resume operation after frequency matching				
		FIX	02	Restart with active matching frequency				
C105	FM gain adjustment			50. to 200. (%)	100.	100.	100.	× 🗸
C106	AM gain adjustment			50. to 200. (%)	100.	100.	100.	× 🗸
C107	AMI gain adjustment			50. to 200. (%)	100.	100.	100.	~~
C109	AM bias adjustment			0. to 100. (%)	0.	0.	0.	~~
C110	AMI bias adjustment			0. to 100. (%)	20.	20.	20.	~~
C111	Overload setting (2)			0.00 x rated current to 1.80 x rated current (A)	Rate	ed curren inverter	t for	× 🗸

Output Terminal Signal Functions

	Name/ Description	Keypad			Defaults			Run
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C130	Terminal [11] ON-delay time	—	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C131	Terminal [11] OFF-delay time	—	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C132	Terminal [12] ON-delay time	_	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C133	Terminal [12] OFF-delay time	_	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C134	Terminal [13] ON-delay time	_		0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C135	Terminal [13] OFF-delay time	_	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C136	Terminal [14] ON-delay time	_	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C137	Terminal [14] OFF-delay time	_	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸
C138	Terminal [15] ON-delay time			0.0 to 100.0 (seconds)	0.0	0.0	0.0	× 🗸

Call 1(800)985-6929 for Sales

"C" Group: Intelligent Terminal Functions

		Key	pad			Run		
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
C139	Terminal [15] OFF-delay time	—	—	0.0 to 100.0 (seconds)	0.0	0.0	0.0	×v
C140	Relay output ON-delay time	—		0.0 to 100.0 (seconds)	0.0	0.0	0.0	×v
C141	Relay output OFF-delay time	—	_	0.0 to 100.0 (seconds)	0.0	0.0	0.0	×v
C142	Logic output 1 function A	—		All programmable output functions	00 (ou	tput freq	uency)	×v
C143	Logic output 1 function B	—		available (except LOG1 to LOG6)				×v
C144	Logic output 1 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)				×v
C145	Logic output 2 function A	—		All programmable output functions	00 (output frequency)		uency)	×v
C146	Logic output 2 function B	—	_	available (except LOG1 to LOG6)				×v
C147	Logic output 2 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)			XV	
C148	Logic output 3 function A	—	_	All programmable output functions	00 (output frequency)		uency)	×v
C149	Logic output 3 function B	—	_	available (except LOG1 to LOG6)				×v
C150	Logic output 3 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)				×v
C151	Logic output 4 function A	—		All programmable output functions	00 (ou	tput freq	uency)	×v
C152	Logic output 4 function B	—	_	available (except LOG1 to LOG6)				×v
C153	Logic output 4 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)				×v
C154	Logic output 5 function A	—	_	All programmable output functions	00 (ou	tput freq	uency)	×v
C155	Logic output 5 function B	—	_	available (except LOG1 to LOG6)				×v
C156	Logic output 5 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)				×v
C157	Logic output 6 function A	_		All programmable output functions	00 (ou	tput freq	uency)	×v
C158	Logic output 6 function B	—	_	available (except LOG1 to LOG6)				×v
C159	Logic output 6 operator	AND	00	AND	00	00	00	×v
		OR	01	OR				×v
		XOR	02	XOR (exclusive OR)				×v

Input Signal Terminal Functions

				Defaults		Run	
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi	
C160	Terminal [1] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	× 🗸	
C161	Terminal [2] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C162	Terminal [3] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C163	Terminal [4] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C164	Terminal [5] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C165	Terminal [6] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C166	Terminal [7] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C167	Terminal [8] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C168	Terminal [FW] input response time	0. to 200. (x 2 ms)	0.0	0.0	0.0	×v	
C169	Multistage speed/position determination time	0. to 200. (x 10 ms)	0.0	0.0	0.0	× 🗸	

"H" Group: Motor Constants Functions


Call 1(800)985-6929 for Sales

"H" Group: Motor Constants Functions

Introduction

The "H" Group parameters configure the inverter for the motor characteristics. You must manually set H003 and H004 values to match the motor. Most of the remaining parameters are related to vector control, and are in use only when function A044 is set for one of the vector control modes as shown in the diagram. The procedure in "Auto-tuning of Motor Constants" on page 4-71 automatically sets all the parameters related to vector control. If you configure the inverter to use vector control, we highly recommend letting the autotuning procedure derive the values for you. If you want to reset the parameters to the factory default settings, use the procedure in "Restoring Factory Default Settings" on page 6-16.

Inverter Torque Control Algorithms

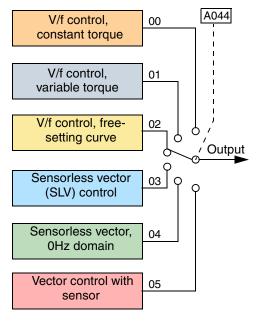

Г	333333	
Λ		
	\equiv	

NOTE: The auto-tuning procedure and related warning messages are in <u>"Auto-tuning of Motor</u> <u>Constants" on page 4–71</u>. Please read these before trying to auto-tune the motor parameters.

	Name/ Description	Key	pad			Run		
Func. Code		SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
H001	Auto-tuning Setting	NOR	00	Auto-tuning OFF	00	00	00	××
	NRT	01	Auto-tune (measure motor resistance and inductance, without rotating)					
	AUT	50	Auto-tune (rotate motor)					
H002	H002 Motor data selection, 1st motor	NOR	00	Standard motor data	00	00	00	xx
		AUT	01	Auto-tuning data				
		ON- AUT	02	Adaptive tuning data				
H202	Motor data selection, 2nd	NOR	00	Standard motor data	00	00	00	xx
	motor	AUT	01	Auto-tuning data				
		ON- AUT	02	Adaptive tuning data	1			
H003	Motor capacity, 1st motor		•	0.20 to 400. (kW)	F	actory se	et	××
H203	Motor capacity, 2nd motor		0.20 to 400 (kW)	Factory set			××	
H004	Motor poles setting, 1st moto	r		2, 4, 6, 8, 10 (poles)	4	4	4	xx
H204	Motor poles setting, 2nd motor	or		2, 4, 6, 8, 10 (poles)	4	4	4	××

3-

-66

hitachiacdrive.com

sales@hitachiacdrive

SJ7002 Inverter

6		
- 51		

		Keypad			Defaults			Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
H005	Motor speed constant, 1st mot	or		0.001 to 9.999, 10.00 to 80.00 (10.000 to	1.590	1.590	1.590	~~
	Motor proportional gain const	ant, fact	ory set	80.000)				
H205	Motor speed constant, 2nd motor		0.001 to 9.999, 10.00 to 80.00 (10.000 to	1.590	1.590	1.590	~~	
	Motor proportional gain constant, factory set		80.000)					
H006	Aotor stabilization constant, 1st motor		r	0. to 255. (factory set)	100.	100.	100.	~~
H206	Motor stabilization constant, 2nd motor		0. to 255. (factory set)	100.	100.	100.	~~	
H306	Motor stabilization constant, 3	rd moto	or	0. to 255. (factory set)	100.	100.	100.	~~
H020	Motor constant R1, 1st motor			0.001 to 9.999, 10.00 to 65.53 (Ohms)	Accor	ding to in	nverter	××
H220	Motor constant R1, 2nd motor			0.001 to 9.999, 10.00 to 65.53 (Ohms)		rating		xx
H021	Motor constant R2, 1st motor			0.001 to 9.999, 10.00 to 65.53 (Ohms)		1		
H221	Motor constant R2, 2nd motor			0.001 to 9.999, 10.00 to 65.53 (Ohms)	-			××
H022	Motor constant L, 1st motor			0.01 to 99.99, 100.0 - 655.3 (mH)	Accor	ding to in	nverter	××
H222	Motor constant L, 2nd motor			0.01 to 99.99, 100.0 - 655.3 (mH)	rating			××
H023	Motor constant I ₀ , 1st motor			0.01 to 99.99, 100.0 - 655.3 (A)				xx
H223	Motor constant I ₀ , 2nd motor			0.01 to 99.99, 100.0 - 655.3 (A)				××
H024	Motor Constant J, 1st motor			0.001 to 9.999, 10.00 to 99.99, 100.0 to 999.9, 1000 to 9999. (ratio, unit-less)	Accor	ding to in rating	nverter	xx
H224	Motor constant J, 2nd motor			0.001 to 9.999, 10.00 to 99.99, 100.0 to 999.9, 1000 to 9999. (ratio, unit-less)	-			××
H030	Auto-tuned motor constant R1	, 1st mo	otor	0.001 to 9.999, 10.00 to 65.53 (Ohms)	According to inverter			××
H230	Auto-tuned motor constant R1	, 2nd m	otor	0.001 to 9.999, 10.00 to 65.53 (Ohms)		rating		××
H031	Auto-tuned motor constant R2	, 1st mo	otor	0.001 to 9.999, 10.00 to 65.53 (Ohms)	Accor	ding to in	nverter	××
H231	Auto-tuned motor constant R2	, 2nd m	otor	0.001 to 9.999, 10.00 to 65.53 (Ohms)		rating		××
H032	Auto-tuned motor constant L,	1st mot	or	0.01 to 99.99, 100.0 to 655.3 (mH)	Accor	ding to in	nverter	××
H232	Auto-tuned motor constant L,	2nd mo	tor	0.01 to 99.99, 100.0 to 655.3 (mH)	rating			××
H033	Auto-tuned motor constant I ₀ ,	1st mot	or	0.01 to 99.99, 100.0 to 655.3 (mH)	Accor	ding to in	nverter	xx
H233	Auto-tuned motor constant I ₀ ,	2nd mc	otor	0.01 to 99.99, 100.0 to 655.3 (mH)	1	rating		xx
H034	Auto-tuned motor constant J,	l st moto	or	0.001 to 9.999, 10.00 to 99.99, 100.0 to 999.9, 1000 to 9999. (ratio, unit-less)	Accor	ding to in rating	nverter	××
H234	Auto constant J, 2nd motor			0.001 to 9.999, 10.00 to 99.99, 100.0 to 999.9, 1000 to 9999. (ratio, unit-less)				××
H050	PI proportional gain for 1st me	otor		0.0 to 999.9, 1000.	100.0	100.0	100.0	~~
H250	PI proportional gain for 2nd m	otor		0.0 to 999.9, 1000.	100.0	100.0	100.0	~~
H051	PI integral gain for 1st motor			0.0 to 999.9, 1000.	100.0	100.0	100.0	~~
H251	PI integral gain for 2nd motor			0.0 to 999.9, 1000.	100.0	100.0	100.0	~~
H052	P proportional gain setting for	1st mot	or	0.01 to 10.00	1.00	1.00	1.00	~~
H252	P proportional gain setting for	2nd mc	otor	0.01 to 10.00	1.00	1.00	1.00	~~
H060	0Hz SLV limit for 1st motor			0.0 to 100.0	100.	100.	100.	~~

"H" Group: Motor Constants Functions

	Keypad				Run			
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
H260	0Hz SLV limit for 2nd motor			0.0 to 100.0	100.	100.	100.	~
H061	0Hz SLV starting boost current for 1st motor		0. to 50. (%)	100.	100.	100.	~~	
H261	0Hz SLV starting boost current for 2nd motor		0. to 50. (%)	100.	100.	100.	~~	
H070	Terminal selection PI proportional gain setting		0.0 to 999.9, 1000	100.0	100.0	100.0	~~	
H071	Terminal selection PI integral gain setting		0.00 to 999.9, 1000.	100.0	100.0	100.0	~~	
H072	Terminal selection P proportional gain setting		0.00 to 10.00	1.00	1.00	1.00	~~	
H073	Gain switching time			0. to 999. (milliseconds)	100.	100.	100.	~~

"P" Group: Expansion Card Functions

The two (optional) expansion cards for the SJ700 have associated configuration data. The following table defines the functions and their value ranges. Please refer to the expansion card manual for more details.

		Key	pad			Defaults	Run	
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
P001	Operation mode on expan-	TRP	00	Trip (stop motor)	00	00	00	× 🗸
	sion card 1 error	RUN	01	Continuous operation				
P002	Operation mode on expan-	TRP	00	Trip (stop motor)	00	00	00	×v
	sion card 2 error	RUN	01	Continuous operation				
P011	Encoder pulse-per-revolution	(PPR) se	tting	128 to 65000 (pulses per revolution)	1024	1024	1024	××
P012	Control pulse setting	ASR	00	Automatic Speed Regulation (ASR) mode	00	00	00	××
		APR	01	Automatic Position Regulation (APR) mode				××
		APR2	50	Absolute Position Control				××
		HAPR	03	High-resolution Absolute Position Control				xx
P013	Pulse input mode setting	MDØ	00	Quadrature mode	00	00	00	xx
		MD1	01	Count and direction				
		MD2 <i>D2</i> Separate forward and reverse pulse trains						
P014	Home search stop position set	ting		0. to 4095. (pulses)	0.	0.	0.	× •
P015	5 Home search speed setting		Start frequency to maximum frequency (up to 120.0) (Hz)	5.00	5.00	5.00	× •	
P016	Home search direction	FW	00	Forward	00	00	00	××
	setting	RV	01	Reverse				××
P017	Home search completion rang	e setting		0. to 9999., 1000 (10,000) (pulses)	5	5	5	×v
P018	Home search completion dela	y time se	tting	0.00 to 9.99 (seconds)	0.00	0.00	0.00	× 🗸
P019	Electronic gear set position	FB	00	Position feedback side	00	00	00	×v
	selection	REF	01	Position command side				× •
P020	Electronic gear ratio numerate	or setting		0. to 9999.	1.	1.	1.	× •
P021	Electronic gear ratio denomin	ator setti	ng	1 to 9999	1.	1.	1.	×v
P022	Feed-forward gain setting			0.00 to 99.99, 100.0 to 655.3	0.00	0.00	0.00	×v
P023	Position loop gain setting			0.00 to 99.99, 100.0	0.50	0.50	0.50	×v
P024	Position bias setting			-204 (-2048) / -999. to 2048	0.	0.	0.	×v
P025	Temperature compensation thermistor enable	OFF	00	No compensation		00	00	× •
	Allows for motor-mounted thermistor to calibrate output to motor temperature	ON	01	With compensation				
P026	Over-speed error detection lev	el setting	g	0.0 to 150.0 (%)	135.0	135.0	135.0	× 🗸
P027	Speed deviation error detection	n level se	etting	0.00 to 99.99, 100.0 to 120.0 (Hz)	7.50	7.50	7.50	×v
P028	Motor gear ratio numerator se	tting		0. to 9999.	1.	1.	1.	×v

Call 1(800)985-6929 for Sales

"P" Group: Expansion Card Functions

Func. Name/ Code Description		Keypad				Defaults	;	Run
		SRW	OPE	Range and Settings	FEF2FUF2FF2FE2FU2F2(EU)(USA)(Jpn)		F2	Mod Edi Lo H
P029	Motor gear ratio denominator	setting		1 to 9999	1.	1.	1.	×v
P031	Accel/decel time input selec-	REM	00	Inverter	00	00	00	××
	tion	0P1	01	Expansion card 1				
		0P2	02	Expansion card 2				
P032	Positioning command input	REM	00	Inverter	00	00	00	×
	selection	0P1	01	Expansion card 1				
		0P2	20	Expansion card 2				
P033	Torque command input	0	00	[O] terminal	00	00	00	××
	selection	OI	01	[OI] terminal				
		02	50	[O2] terminal				
		REM	03	Inverter keypad (P034)				
P034	Torque command setting			0. to 180. (%)	0.	0.	0.	× >
P035	Torque command polarity	NOR	00	Indicated by signal polarity at [O2] terminal	00	00	00	×
	select	DIR	01	Depends on motor direction				
P036	Torque bias mode	NO	00	Disable	00	00	00	×
		DIR	01	Inverter keypad (P037)				
		NOR	50	[O2] terminal input				
P037	Torque bias value			0. to 180. (%)	0.	0.	0.	×>
P038	Torque bias polarity	NOR	00	Indicated by polarity	00	00	00	×
		DIR	01	Depends on motor direction				
P039	Forward speed limit for torque	e-control	mode	0.00 to maximum frequency (Hz)	0.00	0.00	0.00	×,
P040	Reverse speed limit for torque	-control	mode	0.00 to maximum frequency (Hz)	0.00	0.00	0.00	x
P044	DeviceNet comm watchdog ti	mer		0.00 to 99.99 (seconds)	1.00	1.00	1.00	xx
P045	Inverter action on DeviceNet	TRP	00	Trip	01	01	01	x>
	comm error	FTP	01	Decelerate and trip	1			
		NO	50	Hold last speed				
		FRS	03	Free run stop				
		DEC	04	Decelerate and stop				
P046	DeviceNet polled I/O: Output number	instance	1	20, 21, 100	21	21	21	×
P047	DeviceNet polled I/O: Input in	nstance n	umber	70, 71, 101	71	71	71	××
P048	Inverter action on DeviceNet	TRP	00	Trip	01	01	01	×
	idle mode	FTP	01	Decelerate and trip	1			
		NO	02	Hold last speed	1			
		FRS	03	Free run stop	1			
		DEC	04	Decelerate and stop	1			
P049	DeviceNet motor poles setting for RPM	poles	poles	00 to 38 (even numbers only)	0	0	0	×

Call 1(800)985-6929 for Sales

sales@hitachiacdrive

SJ7002 Inverter

3-71

		Keypad				Defaults	5	Run
Func. Code	Name/ Description	SRW	OPE	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
P055	Pulse train frequency scale			1.0 to 50.0 (kHz)	25.0	25.0	25.0	× 🗸
P056	Pulse train frequency filter tin	ne consta	nt	0.01 to 2.00 (seconds)	0.10	0.10	0.10	× 🗸
P057	Pulse train frequency bias			-100. to 100. (%)	0.	0.	0.	× 🗸
P058	Pulse train frequency limit			0. to 100. (%)	100.	100.	100.	× 🗸
P060 to P067	Multi-stage position setting 0 to Multi-stage position setting	g 7		Reverse side to forward side (upper four digits including sign "-")	0	0	0	~~
P068	Zero-return mode selection	LOW	00	Low speed	00	00	00	~~
		Hi1	01	High speed				
		Hi2	02	High speed 2				
P069	Zero return direction	FW	00	Forward	00	00	00	~~
	selection	RW	01	Reverse				
P070	Low speed zero return frequen	ncy	•	0.00 to 10.00 (Hz)	0.00	0.00	0.00	~~
P071	P071 High speed zero return frequency			0.00 to 99.99 / 100.0 to maximum frequency setting, 1st motor (Hz)	0.00	0.00	0.00	~~
P072	Forward position range			0 to 268435455 (when P012 = 02), 0 to 1073741823 (when P013 = 03) (upper four digits)	268435455		~~	
P073	Reverse position range			-268435455 to 0 (when P012 = 02), 1073741823 to 0 (when P013 = 03) (upper four digits)	-268435455		55	~~
P074	Teaching selection	X00	00	X00	00	00	00	~~
		X01	01	X01				
		X02	02	X02				
		X03	03	X03				
		X04	04	X04				
		X05	05	X05				
		X06	06	X06				
		X07	07	X07				
P100 to P131	Easy sequence user parameter U(31)	rs U(00)	to	0. to 9999., 1000 to 6553 (10000 to 65535)	0.	0.	0.	~~



NOTE: Parameters P044 to P049 are available only in inverters with manufacturing code x8K xxxxx xxxxx or later. The manufacturing code is printed on the product specifications labels, located on the front and side of the inverter housing.

"P" Group: Expansion Card Functions

Call 1(800)985-6929 for Sales


Absolute Position Control Mode To use the absolute position control mode, set A044 V/F characteristic curve setting (1st motor) equal to "02" (V2) and set P012 Control Pulse Setting equal to "02" APR – Automatic Position Control Mode.

- If P012 = 03 (high-resolution absolute position control, the inverter quadruples the number of pulses used for positioning. In this case multiply the multistage position settings and position ranges by four.
- Position settings can be sequenced in up to eight stages in combination with control pulse settings. You can select zero-return mode from one low-speed and two high-speed modes. (The home search function cannot be used during a zero-return.)
- The teaching function allows you to set (store) position settings while actually running the machine (motor is turning).
- If intelligent terminal [SPD] Speed/position Control Select (option code 73) is assigned, you can switch between speed control and position control.
- Only the four high-order digits of data are displayed when the data (position setting) to be displayed consists of a large number of digits.

In Absolute Position Control Mode, the inverter runs the motor until the machine reaches the target position according to the following settings, and then set the machine into the position servo-lock state (until the Stop Command occurs):

- 1. Position setting
- 2. Speed setting (output frequency)
- 3. Acceleration and deceleration time

In absolute position control mode, the frequency and accel/decel settings selected at absolute position control are applied. If the position setting value is small, the inverter may decelerate the motor for positioning before its speed reached the set speed setting. In absolute position control mode, the direction of the operations command (forward or reverse) is ignored. The operation command simply functions as a signal to run or stop the motor. Motor direction is determined by the algebraic sign of the difference between the current position and the target position.

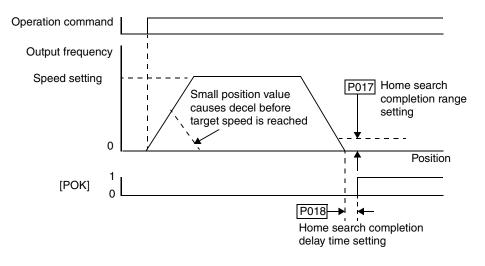

If zero return operation as described below is not performed, the motor position detected at powerup is assumed to be at the origin (position data = 0). When the operation commend is turned ON with zero specified as the position setting, positioning is completed without running the motor.

Set C102 Reset Mode Selection = 03 so that the inverter only resets a trip condition (does not turn OFF the motor output). Otherwise, the current position counter is cleared when the inverter reset terminal turns ON. Be sure to set C102 = 03 if you intend to use the value of the current position counter for operation after recovering the inverter from a trip by turning ON the reset terminal (reset key).

3–73

If intelligent terminal [PCLR] is assigned, when it is ON the current position counter is cleared and the position deviation counter is also cleared.

When the inverter is in Absolute Position Control Mode, some functions are necessarily disabled:


- Intelligent terminal [ATR] is ignored (because torque control is disabled)
- Intelligent terminal [STAT] is ignored (because pulse train position control is disabled)
- Home search function is disabled

Teaching Function

The teaching function allows you to make the inverter run and stop the motor as desired and store current position data to a position command memory location that you select. Assign the [ORT] Orientation function (option code 45) to an intelligent input. The [ORT] terminal functions as the teaching input terminal when P012 Control Pulse Setting is set to 02 (Absolute Position Control) or 03 (High-resolution Absolute Position Control).

The teaching procedure is as follows:

- 1. Select the teaching position memory location by setting P074.
- 2. Move the work piece or machine to the desired location. Enter an operation command while the [ORT] terminal is in the ON state. The speed and accel/decel settings selected at the operation command input are applied.

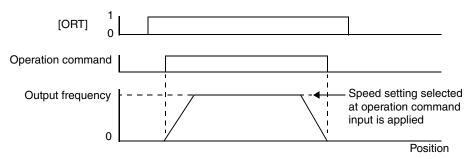

Teaching operation can be performed when power is input to the power supply terminals [R0] and [T0] of the inverter control circuit. The current position counter also operates when an external device moves the work piece. Therefore, the teaching operation can also be performed when the inverter does not operate (move) the machine.



NOTE: When teaching position data to an inverter that is not operating the machine, be sure to either disconnect input power terminals ([R], [S], and [T]) or disconnect the motor output terminals ([U], [V], and [W]). Otherwise, personal injury or damage to equipment may result.

- 3. Press the STR key on the digital operator when the target position is reached.
- **4.** The current position data is stored to the memory area selected by parameter P074 teaching selection. (P074 value itself is not stored. After power OFF or reset, 00 is stored.)

"U" Group: User-selectable Menu Functions

Call 1(800)985-6929 for Sales

-74

"U" Group: User-selectable Menu Functions

The user-selectable menu functions allow you to configure (select) any twelve of the other functions in the inverter and place them together in a convenient list. This feature provides quick access for the most-used functions needed for your application. Each U Group function can serve as a pointer to any of the other parameters. You do *not* have to use the Store key to retain each association; just scroll to the desired standard parameter for each U Group function and leave it. The setting can point to a monitor-only parameter (such as D001), or point to editable parameters (such as A001). In the case of pointing to an editable functions, you use the Up/Down keys to change the value and the Store key to accept the change into memory—the same procedure as a normal parameter edit.

				Defaults	1	Run
Func. Code	Name/ Description	Range and Settings	FEF2 FE2 (EU)	FUF2 FU2 (USA)	FF2 F2 (Jpn)	Mode Edit Lo Hi
U001	User function 1		no	no	no	× 🗸
U002	User function 2		no	no	no	×v
U003	User function 3		no	no	no	×v
U004	User function 4		no	no	no	×v
U005	User function 5		no	no	no	×v
U006	User function 6	"no" (disabled), or any of the	no	no	no	×v
U007	User function 7	functions D001 to P049	no	no	no	× 🗸
U008	User function 8		no	no	no	× 🗸
U009	User function 9		no	no	no	× 🗸
U010	User function 10		no	no	no	× 🗸
U011	User function 11		no	no	no	× 🗸
U012	User function 12		no	no	no	× 🗸



TIP: Function B037 selects which parameter groups are displayed. If you want to limit the displayed parameters to *only* the U Group functions, set B037=02.

3 - 75

Programming Error Codes

The SJ7002 inverter operator keypad displays a special code (begins with the $\frac{1}{2}$ character) to indicate a programming error. Programming errors exist when one parameter conflicts with the meaningful range permitted by related parameter(s). Note that particular real-time frequency (speed) input levels can cause a conflict in some situations. After a conflict exists, the error code will appear on the display, or you can view it later with D090 in Monitor Mode. Also, the PGM LED on the display will flash ON/OFF when programming. These indications are automatically cleared when the parameter is corrected to the allowed range.

Programming Error				Boundary defined by				
Code	Code	Description	<,>	Code	Description			
8001 8501	A8061 / A261	Frequency upper limit setting; 1st, 2nd motor	>	A004 / A204 /	Maximum frequency; 1st, 2nd, 3rd motor			
8005 8505	A062 / A262	Frequency lower limit setting; 1st, 2nd motor	>	A304				
8004 8204 8304	A003/A203/ A303	Base frequency setting; 1st, 2nd, 3rd motor (*1)	>					
8005 8205 8305	F001, A020/A220/ A320	Output frequency setting, Multi-speed freq. setting; 1st, 2nd, 3rd motor (*2)	>					
8006 8206 8306	A021 to A035	Multi-speed freq. settings	>					
8009	P015	Home search speed setting	>					
8015 8515	A062 / A262	Frequency lower limit setting; 1st, 2nd motor	>	A061 / A261	Frequency upper limit setting; 1st, 2nd motor			
8015 8215	F001, A020 / A220	Output frequency setting, Multi-speed freq. setting; 1st, 2nd motor	>					
8016 8516	A021 to A035	Multi-speed freq. settings	>					
8019	A061 / A261	Frequency upper limit setting; 1st, 2nd motor	<	P015	Home search speed setting			
8051 8551	-	setting, 1st, 2nd motor	<	A062 / A262	Frequency lower limit setting; 1st, 2nd motor			
8055 8555	F001, A020 / A220	Output frequency setting, Multi-speed freq. setting; 1st, 2nd motor (*2)	<		1st, 2nd motor			
80318531	A061 / A261	Frequency upper limit setting; 1st, 2nd motor	<	B082	Start frequency adjustment			
8035 8535	A062 / A262	Frequency lower limit setting; 1st, 2nd motor	<					
8035 8235 8335	F001, A020/A220/ A320	Output frequency setting, Multi-speed freq. setting; 1st, 2nd, 3rd motor	<	1				
8036	A021 to A035	Multi-speed freq. settings	<	1				
8031	A038	Jog frequency setting	<					

3–76 (800)985-6929 for Sales

Programming Error Codes

Programming Error Param		eter out of bounds	Boundary defined by			
Code	Code	Description	<,>	Code	Description	
8085 8285 8385	F001, A020/A220/ A320	Output frequency setting, Multi-speed freq. setting; 1st, 2nd, 3rd motor	>f-x, <f+x< td=""><td>$A063 \pm A064$ $A065 \pm A066$ $A067 \pm A068$</td><td>Jump (center) frequency ± jump (hysteresis) frequency width setting</td></f+x<>	$A063 \pm A064$ $A065 \pm A066$ $A067 \pm A068$	Jump (center) frequency ± jump (hysteresis) frequency width setting	
8086	A021 to A035	Multi-speed freq. settings	>f-x, <f+x< td=""><td></td><td>(See note after table)</td></f+x<>		(See note after table)	

Programming Error	Param	eter out of bounds		Bound	lary defined by
Code	Code	Description	<,>	Code	Description
8081 8581	A061 / A261	Frequency upper limit setting; 1st, 2nd motor	V	B112	Free-setting V/f frequency (7)
8085 8585	A062 / A262	Frequency lower limit setting; 1st, 2nd motor	>		
8095 8295	F001, A020 / A220	Output frequency setting, Multi-speed freq. setting; 1st, 2nd motor	~		
8096	A021 to A035	Multi-speed freq. settings	>		
8110	B100, B102, B104, B106, B108, B110	Free V/f frequency	>		
	B102, B104, B106, B108, B110	Free V/f frequency	>	B100	Free-setting V/f frequency (1)
	B100	Free V/f frequency	<	B102	Free-setting V/f frequency (2)
	B104, B106, B108, B110	Free V/f frequency	~		
	B100, B102	Free V/f frequency	<	B104	Free-setting V/f frequency (3)
	B106, B108, B110	Free V/f frequency	>		
	B100, B102, B104	Free V/f frequency	۸	B106	Free-setting V/f frequency (4)
	B108, B110	Free V/f frequency	>		
	B100, B102, B104, B106	Free V/f frequency	<	B108	Free-setting V/f frequency (5)
	B110	Free V/f frequency	>		
	B100, B102, B104, B106, B108	Free V/f frequency	<	B110	Free-setting V/f frequency (6)
8150	B017, B019	Free-setting electronic thermal frequency	<	B015	Free-setting, electronic thermal frequency (1)
	B015	Free-setting electronic thermal frequency	>	B017	Free-setting, electronic thermal frequency (2)
	B019	Free-setting electronic thermal frequency	<		
	B015, B017	Free-setting electronic thermal frequency	>	B019	Free-setting, electronic thermal frequency (3)

hitachiacdrive.com

SJ7002 Inverter

3 - 77

Note 1:	The base frequency is written when you store the parameter. If the new base
	frequency value is outside the permissible range, a motor burnout may result.
	Therefore, if the warning occurs, change the base frequency to an appropriate value.
Note 2:	These parameters are checked even when the digital operator (option code 02) is not
	specified for the frequency source setting (A001).

Note 3: Set frequency (speed) values are not permitted to be inside the jump frequency ranges, if defined. When a frequency reference value from a real-time source (such as keypad potentiometer or analog input) are inside a jump frequency range, the actual speed is automatically forced to equal the lowest point of the jump range.



Operations and Monitoring



In This Chapter	page
- Introduction	<u>2</u>
— Optional Controlled Decel and Alarm at Power Loss	<u>4</u>
- Connecting to PLCs and Other Devices	<u>7</u>
- Using Intelligent Input Terminals	<u>13</u>
- Using Intelligent Output Terminals	<u>43</u>
— Analog Input Operation	<u>63</u>
— Analog Output Operation	<u>66</u>
- Setting Motor Constants for Vector Control	<u>69</u>
— <u>PID Loop Operation</u>	<u>75</u>
— Configuring the Inverter for Multiple Motors	

Introduction

Call 1(800)985-6929 for Sales

Introduction

The previous material in Chapter 3 gave a reference listing of all the programmable functions of the inverter. We suggest that you first scan through the listing of inverter functions to gain a general familiarity. This chapter will build on that knowledge in the following ways:

- 1. Related functions Some parameters interact with or depend on the settings in other functions. This chapter lists "required settings" for a programmable function to serve as a cross-reference and an aid in showing how functions interact.
- 2. Intelligent terminals Some functions rely on an input signal from control logic terminals or generate output signals in other cases.
- 3. Electrical interfaces This chapter shows how to make connections between the inverter and other electrical devices.
- 4. Auto-tuning The SJ7002 inverter has the ability to run a calibration procedure in which it takes measurements of the motor's electrical characteristics. This chapter shows how to run the auto-tuning procedure to help the inverter run the motor more smoothly and efficiently.
- 5. PID Loop Operation The SJ7002 has a built-in PID loop that calculates the optimal inverter output frequency to control an external process. This chapter shows the parameters and input/output terminals associated with PID loop operation.
- 6. Multiple motors A single SJ7002 inverter may be used with two or more motors in some types of applications. This chapter shows the electrical connections and inverter parameters involved in multiple-motor applications.

The topics in this chapter can help you decide the features that are important to your application, and how to use them. The basic installation covered in Chapter 2 concluded with the powerup test and running the motor. Now, this chapter starts from that point and shows how to make the inverter part of a larger control or automation system.

Before continuing, please read the following Caution messages.

Cautions for

Operating Procedures

> CAUTION: The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.

CAUTION: The operation of the inverter can be easily changed from low speed to high speed. Be sure check the capability and limitations of the motor and machine before operating the inverter. Otherwise, it may cause injury to personnel.

CAUTION: If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.





hitachiacdrive.com

Before continuing, please read the following Warning messages.

SJ7002 Inverter

Warnings for Operating Procedures



electric shock.

the danger of electric shock.









WARNING: If the Retry Mode is selected, the motor may suddenly restart after a trip stop. Be sure to stop the inverter before approaching the machine (be sure to design the machine so that safety for personnel is secure even if it restarts.) Otherwise, it may cause injury to personnel.

WARNING: Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of

WARNING: Be sure not to operate electrical equipment with wet hands. Otherwise, there is

WARNING: While the inverter is energized, be sure not to touch the inverter terminals even

when the motor is stopped. Otherwise, there is the danger of electric shock.

WARNING: If the power supply is cut OFF for a short period of time, the inverter may restart operation after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel.



WARNING: The Stop Key is effective only when the Stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel.

WARNING: During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel.



WARNING: Be sure not to touch the inside of the energized inverter or to put any conductive object into it. Otherwise, there is a danger of electric shock and/or fire.



WARNING: If power is turned ON when the Run command is already active, the motor will automatically start and injury may result. Before turning ON the power, confirm that the RUN command is not present.



WARNING: When the Stop key function is disabled, pressing the Stop key does not stop the inverter, nor will it reset a trip alarm.

WARNING: Be sure to provide a separate, hard-wired emergency stop switch when the application warrants it.


Optional Controlled Decel and Alarm at Power Loss

Call 1(800)985-6929 for Sales


Optional Controlled Decel and Alarm at Power Loss

With the default SJ7002 inverter configuration, a sudden power loss will cause the inverter to shut down immediately. If running at the time, the motor and load will coast to a stop. And without power, the inverter's alarm output will not activate. This default performance may be fine for applications with loads such as fans and pumps. However, some loads may require controlled decelerations upon power loss, or you may want an alarm signal upon power loss. This section describes how to harness regenerative energy so that the motor/load actually powers the inverter long enough to control a final deceleration and power the alarm output.

The diagram below shows the default configuration. Chapter 2 covered wiring the power source to the inverter input and the inverter output to the motor. By default, the inverter's internal control circuit gets its power from two phases (R and T) from the input. The user-accessible 2-wire jumper (R–R0 and T–T0) connects input power to the control circuit.

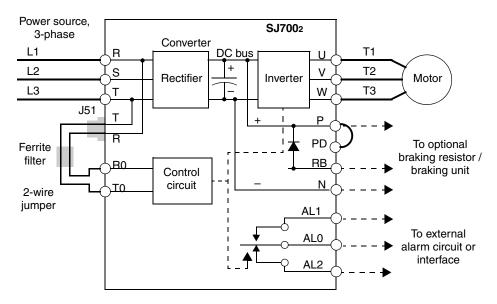

To provide power to the control circuit after input power loss, you must change the control circuit wiring as shown below (steps provided on following page).

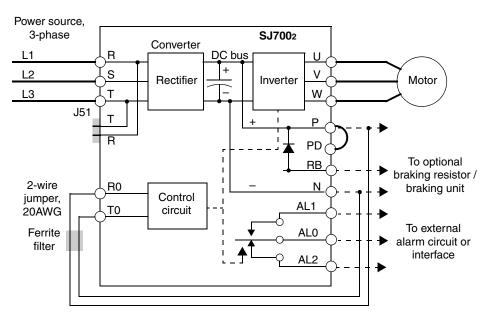

4–4

Follow the steps to implement the wiring change shown in the previous diagram.

- 1. Remove the 2-wire jumper J51 (terminals [R0] and [T0] to connector J51).
- 2. Procure several inches of multi-strand 20 AWG (0.5mm²) or slightly heavier wire.
- **3.** Connect a wire to terminal [R0] that is long enough to connect to terminal [P] (do not connect to [P] yet).
- **4.** Connect a wire to terminal [T0] that is long enough to connect to terminal [N] (do not connect to [N] yet).
- **5.** Remove the ferrite filter from the original jumper wire and then slide it onto the new wires connecting to terminals [R0] and [T0]. (Be sure to save the original jumper in a safe place.)
- 6. Connect the wire from [R0] to [P], and connect the wire from [T0] to [N] as shown.

More information on power loss related alarm functions, see <u>"Instantaneous Power Failure /</u> <u>Under-voltage Signal" on page 4–48</u>.

The following table lists the functions related to the controlled deceleration at power loss feature. After making the wiring change, use function B050 to enable the feature. Use B051 to determine the point at which a decaying DC bus voltage will trigger the controlled deceleration. Use parameter B054 to specify an initial step-wise deceleration at power loss, and B053 to specify the duration of the linear deceleration. Note that this feature also affects the output signals that indicate instantaneous power fail and under-voltage conditions (see <u>"Instantaneous Power Failure / Under-voltage Signal" on page 4–48</u>).


Func. Code	Name	Description	Range
B050	Controlled deceleration and stop on power loss	Allows inverter control using regen- erative energy to decelerate after loss of input power (requires jumper change)	Two option codes: 00Disable 01Enable
B051	DC bus voltage trigger level during power loss	Sets trigger for controlled decelera- tion and stop on power loss function	0.0 to 1000.V
B052	Over-voltage threshold during power loss	Sets over-voltage threshold for controlled deceleration function	0.0 to 1000.V
B053	Deceleration time setting during power loss	Deceleration time inverter uses only at power loss	0.01 to 99.99 sec. / 100.0 to 999.9 sec. / 1000 to 3600 sec.
B054	Initial output frequency decrease during power loss	Sets the initial decrease in output frequency upon power loss	0.00 to 10.00 Hz

Optional Controlled Decel and Alarm at Power Loss

Call 1(800)985-6929 for Sales

4–6

The timing diagram below shows a power loss scenario and the related parameter settings. During the controlled deceleration the inverter itself acts as a load to decelerate the motor. With either a high-inertia load or a short deceleration time (or both), it is possible that the inverter impedance will not be low enough to continue linear deceleration and avoid an over-voltage condition on the DC bus. Use parameter B052 to specify a threshold for the over-voltage. In this case, the inverter pauses deceleration (runs at constant speed). When the DC bus decays again below the threshold, linear deceleration resumes. The pause/resume process will repeat as necessary until the DC bus energy is depleted (under-voltage condition occurs).

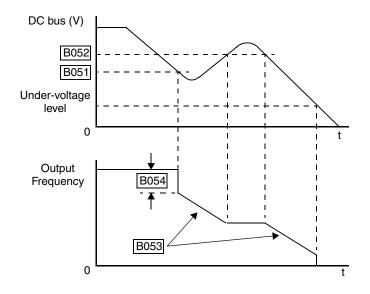



NOTE: (1) Be sure to set the *over-voltage threshold* greater than the *DC bus voltage trigger level* (B052 > B051) for proper operation.

(2) Once the power loss deceleration function starts, it will complete and stop the motor even if input power is restored. In that case, it automatically enables the Run mode again.

Output

circuit

Input

circuit

Inverter

Common

24VDC

Input

circuits

4-7

Connecting to PLCs and Other Devices

Hitachi inverters (drives) are useful in many types of applications. During installation, the inverter keypad (or other programming device) will facilitate the initial configuration. After installation, the inverter will generally receive its control commands through the control logic terminals or serial interface from another controlling device. In a simple application such as single-conveyor speed control, a Run/Stop switch and potentiometer will give the operator all the required control. In a sophisticated application, you may have a *programmable logic controller* (PLC) as the system controller with several connections to the inverter.

It is not possible to cover all the possible types of application in this manual. It will be necessary for you to know the electrical characteristics of the devices you want to connect to the inverter. Then, this section and the following sections on I/O terminal functions can help you quickly and safely connect those devices to the inverter.



CAUTION: It is possible to damage the inverter or other devices if your application exceeds the maximum current or voltage characteristics of a connection point.

Other device

Input

circuit

Output

circuit

PLC

Signal

Return

Signal

Return

Jumper

P24

РIC

CM1

4

6

7

8

The connections between the inverter and other devices rely on the electrical input/output characteristics at both ends of each connection, shown in the diagram to the right. The inverter can accept either sourcing or sinking type inputs from an external device (such as a PLC). A terminal jumper configures the input type, connecting the input circuit *common* to the supply (+) or (-). Detailed wiring examples are in "Using Intelligent Input Terminals" on page 4-13. This chapter shows the inverter's internal electrical component(s) at each I/O terminal and how to interface them with external circuits.

In order to avoid equipment damage and get your application running smoothly, we recommend drawing a schematic of each connection between the inverter and the other device. Include the internal components of each device in the schematic, so that it makes a complete circuit loop.

After making the schematic, then:

- 1. Verify that the current and voltage for each connection is within the operating limits of each device.
- 2. Make sure that the logic sense (active high or active low) of any ON/OFF connection is correct.
- 3. Verify inputs are configured correctly (sink/source) to interface to interface to any external devices (PLCs, etc.).
- **4.** Check the zero and span (curve end points) for analog connections, and be sure the scale factor from input to output is correct.
- **5.** Understand what will happen at the system level if any particular device suddenly loses power, or powers up after other devices.




Connecting to PLCs and Other Devices

Call 1(800)985-6929 for Sales

Example Wiring Diagram


4–8

The schematic diagram below provides a general example of logic connector wiring, in addition to basic power and motor wiring covered in Chapter 2. The goal of this chapter is to help you determine the proper connections for the various terminals shown below for your specific application needs.

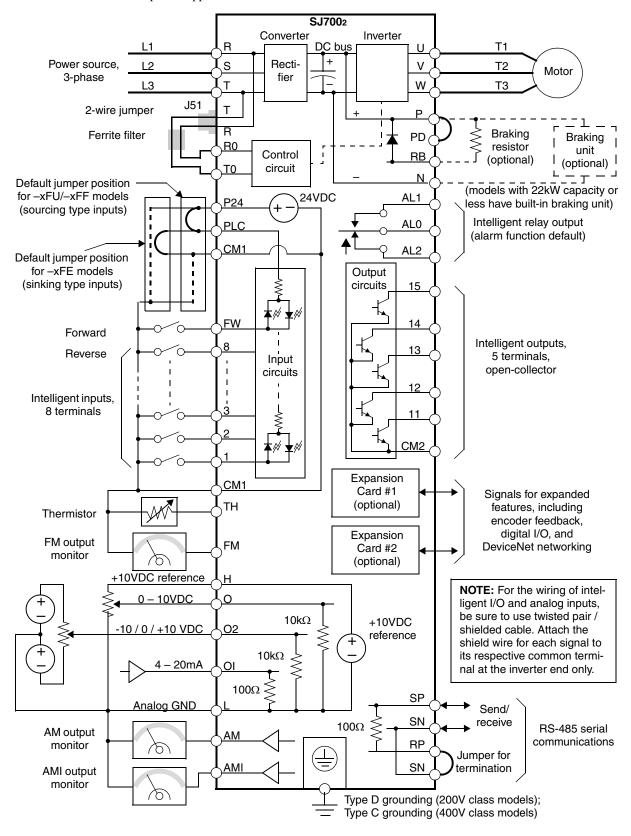

4–9

Specifications of The control logic connector board is removable for wiring convenience as shown below (first, remove two retaining screws). The small connector to the left is for serial communications.

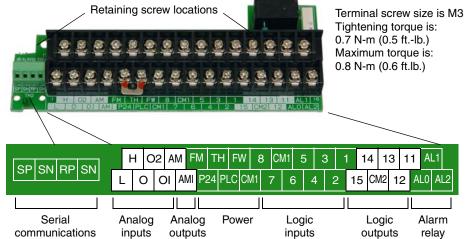


Specifications for the logic connection terminals are in the following table:

Terminal Name	Description	Ratings and Notes			
[P24]	+24V power for inputs	24VDC supply, 100 mA max.			
[CM1]	+24V common	Common for 24V supply, [FW], [TH], inputs [1] to [8], and [FM]. (Note: Do not ground)			
[PLC]	Common for logic inputs	Common for input terminals [1] to [8], jumper to CM1 for sinking, jumper to P24 for sourcing			
[CM2]	Common for logic outputs	Common for output terminals [11] to [15]			
[1], [2], [3], [4], [5], [6], [7], [8]	Intelligent (programmable) discrete logic inputs	27VDC max. (use [P24] or an external supply referenced to terminal [CM1]), $4.7k\Omega$ input impedance			
[FW]	Forward/stop command	27VDC max. (use [P24] or an external supply referenced to terminal [CM1]), $4.7k\Omega$ input impedance			
[11], [12], [13], [14], [15]	Intelligent (programmable) discrete logic outputs	Open collector type, 50mA max. ON state current, 27 VDC maximum OFF state voltage			
[TH]	Thermistor input	Reference to [CM1], min. thermistor power 100mW			
[FM]	PWM output	0 to 10VDC, 1.2 mA max., 50% duty cycle			
[AM]	Voltage analog output	0 to 10VDC, 2 mA max.			
[AMI]	Current analog output	4-20 mA, nominal load impedance 250Ω			
[L]	Common for analog inputs	Sum of [OI], [O], and [H] currents (return)			
[OI]	Analog input, current	4 to 19.6 mA range, 20 mA nominal, 100Ω input impedance			
[0]	Analog input, voltage	0 to 9.6 VDC range, 10VDC nominal, 12VDC max., input impedance 10 k Ω			
[O2]	Analog input, voltage 2	-9.6 to 9.6 VDC range, ± 10 VDC nominal, ± 12 VDC max., input impedance 10 k Ω			
[H]	+10V analog reference	10VDC nominal, 10 mA max.			
[AL0]	Relay common contact	Contacts AL0–AL1, maximum loads:			
[AL1]	Relay contact, normally closed	250VAC, 2A; 30VDC, 8A resistive load 250VAC, 0.2A; 30VDC, 0.6A inductive load Contacts AL0–AL2, maximum loads:			
[AL2]	Relay contact, normally open	250VAC, 1A; 30VDC 1A max. resistive load 250VAC, 0.2A; 30VDC, 0.2A max. inductive load Min. loads: 100 VAC, 10mA; 5VDC, 100mA			

Connecting to PLCs and Other Devices

Be sure to keep the control logic wiring separated from the power terminal wiring. In the case of model –3150Hxx, the drawing below shows how route control circuit wiring.

- 1. Separate the control circuit wiring into two bundles to make use of available space.
- **2.** Route the wiring from the control terminal block to the wiring plate. Continue routing past the PCB attachment plate to the wiring exit area.
- 3. Secure the control wiring to the PCB attachment plate with cable ties.

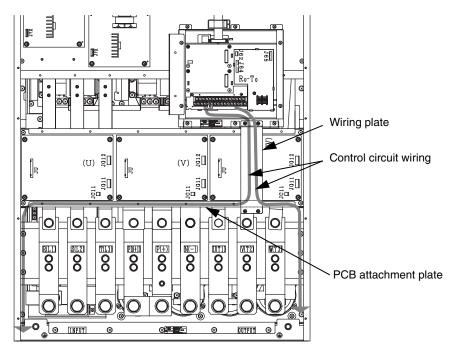

4–10

4-11

		Intelligent INPUTS	Intelligent INPUTS				
Symbol	Code	Name	Page	Symbol	Code	Name	Page
RV	01	Reverse Run/Stop	<u>4–15</u>	TRQ2	42	Torque limit select, bit 2 (MSB)	<u>4–30</u>
CF1	02	Multi-speed select, Bit 0 (LSB)	<u>4–15</u>	PPI	43	P / PI mode selection	<u>4–26</u>
CF2	03	Multi-speed select, Bit 1	<u>4–15</u>	BOK	44	Brake confirmation signal	<u>4–32</u>
CF3	04	Multi-speed select, Bit 2	<u>4–15</u>	ORT	45	Orientation (home search)	<u>4–34</u>
CF4	05	Multi-speed select, Bit 3 (LSB)	<u>4–15</u>	LAC	46	LAC: LAD cancel	<u>4–34</u>
JG	06	Jogging	<u>4–18</u>	PCLR	47	Position deviation reset	<u>4–34</u>
DB	07	External signal for DC injection	<u>4–19</u>	STAT	48	Pulse train position cmd enable	<u>4–34</u>
		braking		ADD	50	ADD frequency enable	<u>4–34</u>
SET	08	Set (select) second motor data	<u>4–19</u>	F-TM	51	Force terminal mode	<u>4–35</u>
2CH	09	2-stage accel and decel	<u>4–20</u>	ATR	52	Torque control enable	<u>4–35</u>
FRS	11	Free-run stop	<u>4–20</u>	KHC	53	Clear cumulative power value	<u>4–36</u>
EXT	12	External trip	<u>4–21</u>	SON	54	Speed servo ON	<u>4–37</u>
USP	13	Unattended start protection	<u>4–21</u>	FOC	55	Current forcing	<u>4–37</u>
CS	14	Commercial power source enable	4-22	MI1	56	General-purpose input 1	<u>4–38</u>
SFT	15	Software lock	<u>4–23</u>	MI2	57	General-purpose input 2	<u>4–38</u>
AT	16	Analog input voltage/current sel.	<u>4–24</u>	MI3	58	General-purpose input 3	<u>4–38</u>
SET3	17	Set (select) 3rd motor data	<u>4–19</u>	MI4	59	General-purpose input 4	<u>4–38</u>
RS	18	Reset inverter	<u>4–24</u>	MI5	60	General-purpose input 5	<u>4–38</u>
STA	20	Start (3-wire interface)	<u>4–25</u>	MI6	61	General-purpose input 6	<u>4–38</u>
STP	21	Stop (3-wire interface)	<u>4–25</u>	MI7	62	General-purpose input 7	<u>4–38</u>
F/R	22	FW, RV (3-wire interface)	<u>4–25</u>	MI8	63	General-purpose input 8	<u>4–38</u>
PID	23	PID Disable	<u>4–26</u>	AHD	65	Analog holding command	<u>4–38</u>
PIDC	24	PID Clear	<u>4–26</u>	CP1	66	Multi-stage position select 1	<u>4–39</u>
CAS	26	Control gain setting	<u>4–26</u>	CP2	67	Multi-stage position select 2	<u>4–39</u>
UP	27	Remote control Up func.	<u>4–28</u>	CP3	68	Multi-stage position select 3	<u>4–39</u>
DWN	28	Remote control Down func.	<u>4–28</u>	ORL	69	Zero-return limit function	<u>4–40</u>
UDC	29	Remote control data clearing	<u>4–28</u>	ORG	70	Zero-return trigger function	<u>4–40</u>
OPE	31	Operator control	<u>4–28</u>	FOT	71	Forward drive stop	<u>4–41</u>
SF1-7	32–38	Multi-speed bits 1 to 7	<u>4–15</u>	ROT	72	Reverse drive stop	<u>4–41</u>
OLR	39	Overload restriction	<u>4–29</u>	SPD	73	Speed/position control select	<u>4–41</u>
TL	40	Torque limit enable	<u>4–30</u>	PCNT	74	Pulse counter input	<u>4–42</u>
TRQ1	41	Torque limit select, bit 1 (LSB)	<u>4–30</u>	PCC	75	Pulse counter clear	<u>4–42</u>

Input Terminal	Use the following table to locate pages for intelligent input material in this chapter.
Listing	

Connecting to PLCs and Other Devices

Call 1(800)985-6929 for Sales

4-12

		Intelligent OUTPUTS	Intelligent OUTPUTS				
Symbol	Code	Name	Page	Symbol	Code	Name	Page
RUN	00	Run signal	<u>4–44</u>	FBV	31	PID feedback second stage output	<u>4–56</u>
FA1	01	Freq. arrival type 1 –	<u>4–44</u>	NDc	32	Network detection signal	<u>4–57</u>
		constant speed		LOG1	33	Logic output 1	<u>4–58</u>
FA2	02	Freq. arrival type 2 –	<u>4–44</u>	LOG2	34	Logic output 2	<u>4–58</u>
		over-frequency		LOG3	35	Logic output 3	<u>4–58</u>
OL	03	Overload advance notice signal	<u>4–46</u>	LOG4	36	Logic output 4	<u>4–58</u>
OD	04	Output deviation for PID control	<u>4–46</u>	LOG5	37	Logic output 5	<u>4–58</u>
AL	05	Alarm signal	<u>4–47</u>	LOG6	38	Logic output 6	<u>4–58</u>
FA3	06	Freq. arrival type 3 – at freq.	<u>4–44</u>	WAC	39	Capacitor life warning	<u>4–58</u>
OTQ	07	Over-torque signal	<u>4–48</u>	WAF	40	Low cooling fan speed	<u>4–59</u>
IP	08	Instantaneous power failure signal	<u>4–48</u>	FR	41	Starting contact signal	<u>4–59</u>
UV	09	Under-voltage signal	<u>4–48</u>	OHF	42	Heatsink overheat warning	<u>4–59</u>
TRQ	10	In torque limit signal	<u>4–51</u>	LOC	43	Low output current signal	<u>4–60</u>
RNT	11	Run time over	<u>4–51</u>	M01	44	General output 1	<u>4–60</u>
ONT	12	Power-ON time over	<u>4–51</u>	MO2	45	General output 2	<u>4–60</u>
THM	13	Thermal alarm signal	<u>4–52</u>	MO3	46	General output 3	<u>4–60</u>
BRK	19	Brake release signal	<u>4–54</u>	MO4	47	General output 4	<u>4–60</u>
BER	20	Brake error signal	<u>4–54</u>	MO5	48	General output 5	<u>4–60</u>
ZS	21	Zero speed detect	<u>4–54</u>	MO6	49	General output 6	<u>4–60</u>
DSE	22	Speed deviation maximum	<u>4–54</u>	IRDY	50	Inverter ready signal	<u>4–61</u>
POK	23	Positioning completion	4-54	FWR	51	Forward rotation signal	<u>4–61</u>
FA4	24	Freq. arrival type 4 –	<u>4–44</u>	RVR	52	Reverse rotation signal	<u>4–61</u>
		over-frequency (2)		MJA	53	Major failure	<u>4–61</u>
FA5	25	Freq. arrival type 5 –	<u>4–44</u>	WCO	54	[O] terminal window comparator	<u>4–62</u>
		at frequency (2)		WCOI	55	[OI] terminal window comparator	<u>4–62</u>
OL2	26	Overload advance notice signal (2)	<u>4–46</u>	WCO2	56	[O2] terminal window comparator	<u>4–62</u>
Odc	27	Analog [O] disconnect detect	<u>4–55</u>	1			
OIDc	28	Analog [OI] disconnect detect	<u>4–55</u>	1			
O2Dc	29	Analog [O2] disconnect detect	<u>4–55</u>	1			


Output Terminal Use the following table to locate pages for intelligent output material in this chapter. Listing

Using Intelligent Input Terminals

Intelligent terminals [1], [2], [3], [4], [5], [6], [7], and [8] are identical, programmable inputs for general use. The input circuits can use the inverter's internal (isolated) +24V field supply (P24) to power the inputs. The input circuits connect internally to [PLC] as a common point. To use the internal supply to power the inputs, use the jumper as shown. Remove the jumper to use an external supply, or to interface to a PLC system (or other) that has solid state outputs. If you use an external supply or PLC system, its power return must connect to the [PLC] terminal on the inverter to complete the input circuit.

Input Wiring Examples

The following four input configurations are available to interface the inverter inputs to switches or the outputs of another system, such as a PLC.

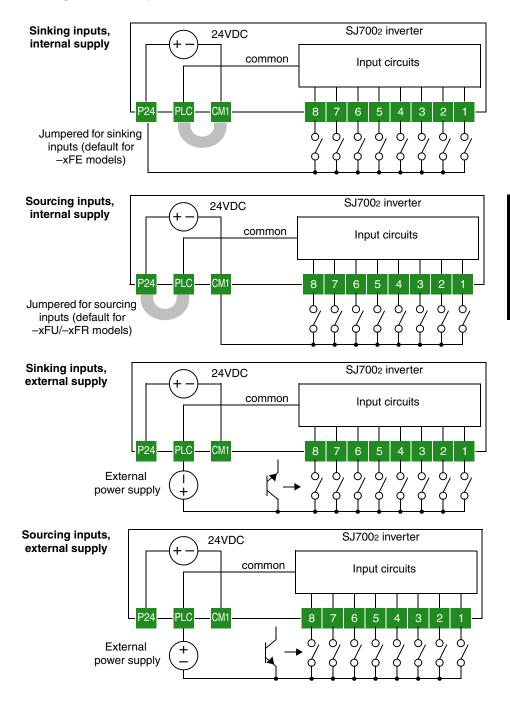


Using Intelligent Input Terminals

Call 1(800)985-6929 for Sales

Wiring Diagram Conventions

4–14

The input wiring diagrams in this chapter are examples only. Default and non-default input terminal assignments are noted throughout; your particular assignments may be different. The wiring diagrams show the -xFU/-xFR model default [P24]–[PLC] jumper position (U.S./Jpn versions), as shown below on the left. The common (return) for inputs is [CM1] in this case. The diagram on the right shows the default jumper position and example input wiring for -xFE models (Europe version). For this case, the common (return) for inputs is [P24]. Be sure the jumper position and return terminal used match your application wiring needs.

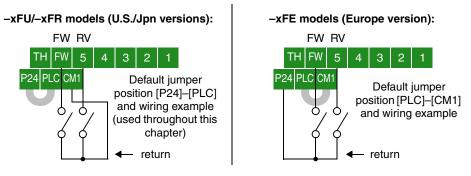

4–15

Forward Run/ Stop and Reverse Run/Stop Commands

When you input the Run command via the dedicated terminal [FW], the inverter executes the Forward Run command (high) or Stop command (low). When you input the Run command via the programmable terminal [RV], the inverter executes the Reverse Run command (high) or Stop command (low). Note the following:

Opt. Code	[FW]*		
and Symbol	01=[RV]		
Valid for Inputs	[1] to [8]		
Required Settings	A002=01		
Default terminal	[FW]		
* [FW] is a dedicated terminal			

When the Forward Run and Reverse Run commands are active at the same time, the inverter enters the Stop Mode.

- When a terminal associated with either [FW] or [RV] function is configured for *normally closed*, the motor starts rotation when that terminal is disconnected or otherwise has no input voltage.
- The parameter F004, Keypad Run Key Routing, determines whether the single Run key issues a Run FWD command or Run REV command. However, it has no effect on the [FW] and [RV] input terminal operation.



WARNING: If the power is turned ON and the Run command is already active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the external Run command is not active.

Multi-Speed Select, Binary Encoded

Opt. Code

and

Symbol

Valid for

Inputs

Required

Settings

Default

terminals

Other

terminals

only

02 = [CF1]

03 = [CF2]

04 = [CF3]

05 = [CF4]

[1] to [8]

F001, A020

to A035,

A019=00

[7] = [CF1],

[8]=[CF2]*

Requires

config.

The inverter can store up to 16 different fixed target frequencies (speeds) in parameters A020 to A035. Binary inputs select the speed through four of the intelligent terminals configured as binary-encoded inputs CF1 to CF4 per the table. These can be any of the eight inputs, and in any order. You can use fewer inputs if you need eight or fewer speeds.

Symbol	Function Name			
CF1	Binary speed select, Bit 0 (LSB)			
CF2	Binary speed select, Bit 1			
CF3	Binary speed select, Bit 2			
CF4	Binary speed select, Bit 3 (MSB)			

Multi-	Input Function				Multi-	Input Function			
speed	CF4	CF3	CF2	CF1	speed	CF4	CF3	CF2	CF1
Speed 0	0	0	0	0	Speed 8	1	0	0	0
Speed 1	0	0	0	1	Speed 9	1	0	0	1
Speed 2	0	0	1	0	Speed 10	1	0	1	0
Speed 3	0	0	1	1	Speed 11	1	0	1	1
Speed 4	0	1	0	0	Speed 12	1	1	0	0
Speed 5	0	1	0	1	Speed 13	1	1	0	1
Speed 6	0	1	1	0	Speed 14	1	1	1	0
Speed 7	0	1	1	1	Speed 15	1	1	1	1



* default for -FE2 models


NOTE: When choosing a subset of speeds to use, always start at the top of the table, and with the least-significant bit: CF1, CF2, etc.

Using Intelligent Input Terminals

Call 1(800)985-6929 for Sales

-16

The example with eight speeds in the figure below shows how input switches configured for CF1 – CF3 functions can change the motor speed in real time.

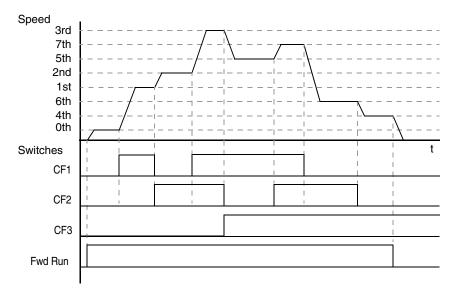

Multi-speed Override Feature - The multi-speed function can selectively override the external analog speed reference input. When the Frequency Source Setting parameter A001=01, the control terminal inputs determine the output frequency. At the same time, the inverter can use multi-speed select for output frequency if one or more intelligent inputs are configured as a CF type (CF1 to CF4). When all CF input(s) are OFF, the control terminal input determines the output frequency normally. When one or more CF input(s) are ON, then the corresponding multi-speed setting (see the table above) overrides and becomes the output frequency.

When programming the multi-speed settings, be sure to press the Store key each time and then set the next multi-speed setting. Note that when the Store key is not pressed, no data will be set.

When a multi-speed setting more than 50Hz(60Hz) is to be set, it is necessary to program the maximum frequency A004 high enough to allow that speed.

While using the multi-speed capability, you can monitor the output frequency with monitor function D001 during each segment of a multi-speed operation.

There are two ways to program the speeds into the registers A020 to A035:

- 1. Standard keypad programming:
 - a. Select each parameter A020 to A035.
 - **b.** Press the FUND key to view the parameter value.
 - **c.** Use the \bigwedge and \bigvee keys to edit the value.
 - **d.** Use the (STF) key to save the data to memory.
- 2. Programming using the CF switches:
 - a. Turn the Run command OFF (Stop Mode).
 - **b.** Turn inputs ON to select desired Multi-speed. Display the value of F001 on the digital operator.
 - **c.** Set the desired output frequency by pressing the A and $\forall keys$.
 - **d.** Press the (stp) key once to store the set frequency. When this occurs, F001 indicates the output frequency of the selected Multi-speed.
 - e. Press the Fund key once to confirm that the indication is the same as the set frequency.
 - **f.** Repeat operations in 2. a) to 2. e) to set the frequency of other Multi-speeds. It can be set also by parameters A020 to A035 in the first procedure 1. a) to 1. d).

sales@hitachiacdrive.com

hitachiacdrive.com

sales@hitachiacdriv

verter

4-17

			SJ7002 Inv
uses up to select from all-switche the first spe switches to level speed normally a switches an input takes speed). The	vel method of speed control seven intelligent inputs to up to eight speeds. Since the ss-OFF combination selects eed, you only need N–1 o select N speeds. With Bit- l control, only one input is ctive at a time. If multiple re ON, the lower numbered precedence (determines the e table and figure below he input combinations work.	Speed 7th 6th 5th 4th 3rd 2nd 1st 0th Inputs SF1	
Symbol	Function Name	SF2	
SF1	Bit-level Speed Select 1	SF3 SF4	
SF2	Bit-level Speed Select 2	SF5	
SF3	Bit-level Speed Select 3	0.0	

SF7 Fwd Run

SF6

Multi- speed	Input Function								
	SF7	SF6	SF5	SF4	SF3	SF2	SF1		
Speed 0	0	0	0	0	0	0	0		
Speed 1	—	_		_	_	_	1		
Speed 2	—	_		_	_	1	0		
Speed 3	—				1	0	0		
Speed 4	—	_		1	0	0	0		
Speed 5	—	_	1	0	0	0	0		
Speed 6	—	1	0	0	0	0	0		
Speed 7	1	0	0	0	0	0	0		

Multi-Speed Select, Bit-level

	32 = [SF1]
	33 = [SF2]
Opt. Code	34 = [SF3]
and Symbol	35 = [SF4]
	35 = [SF5]
	36 = [SF6]
	37 = [SF7]
Valid for Inputs	[1] to [8]
Required	F001, A020
Settings	to A035, A019=01
Default	Requires
terminals	config.

am	e
ele	ct 1
ele	ect 2
ele	ect 3
ele	ct 4
ele	ect 5 F
ele	ect 6
ele	ect 7

hitachiacdrive.com


Using Intelligent Input Terminals

Jogging
Command

Opt. Code	06
Symbol	[JG]
Valid for Inputs	[1] to [8]
Required Settings	A002= 01, A038 >B082, A038 > 0, A039=00 to 05
Default terminal	[3]

The Jog input [JG] is used to command the motor to rotate slowly in small increments for manual operation. The speed is limited to 10 Hz. The frequency for the jogging operation is set by parameter A038. Jogging does not use an acceleration ramp. Therefore setting the jogging frequency A038 too high will cause inverter tripping.


A jog command may arrive while the motor is running. You can program the inverter to either ignore or respond to a jog command in this case by using function A039. The type of deceleration used to end a motor jog

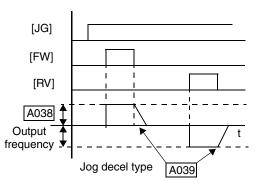

is also selectable by programming function A039. Six jog mode options are defined below:

Jogging During Motor Operation		Jog Deceleration Method
Disabled, A039=	Enabled, A039=	Jog Deceler attoll Method
00	03	Free-run stop (coasting)
01	04	Deceleration (normal level) and stop
02	05	Use DC braking and stop

In the left example diagram below, the Jog command is ignored. In the right example diagram, a jog command interrupts a Run mode operation. However, if the Jog command turns ON before the [FW] or [RV] terminal turns ON, the inverter output turns OFF.

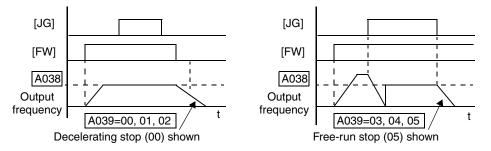


Note the following:

- Jogging is not performed when the value of A038 jogging frequency is smaller than the start frequency B082 or the value is 0 Hz.
- Be sure to turn ON [FW] or [RV] after the [JG] input turns ON for a jog operation.
- When setting A039 to 02 or 05, you must also set the DC braking parameters.

sales@hitachiacdrive

SJ7002 Inverter

4-19

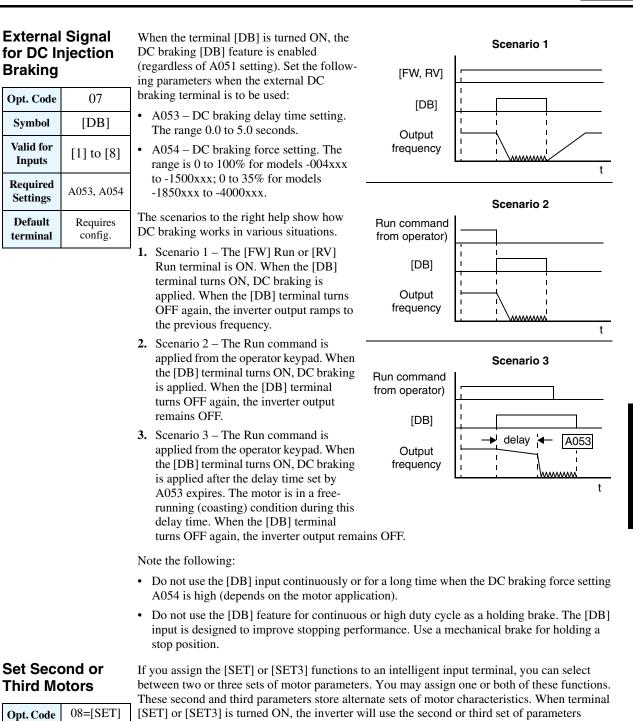

Opt. Code and Symbol Valid for Inputs Required Settings	08=[SET]
	17=[SET3]
	[1] to [8]
	(none)
Default terminal	Requires config.

accordingly, generating the frequency output to the motor. When changing the state of the [SET] or [SET3] input terminal, the change will not take effect until the inverter is stopped.

When you turn ON the [SET] or [SET3] input, the inverter operates per the second or third set of parameters, respectively. When the terminal is turned OFF, the output function returns to the original settings (first set of motor parameters). Refer to "Configuring the Inverter for Multiple Motors" on page 4-76 for details.


Note the following:

- If the terminal state is changed while the inverter is running, the inverter continues using the current set of parameters until the inverter is stopped.
- If both SET and SET3 are ON at the same time, SET prevails and the 2nd motor parameters are in effect.

Two-stage Acceleration and Deceleration

Opt. Code	09
Symbol	[2CH]
Valid for Inputs	[1] to [8]
Required Settings	A092, A093, A094=0
Default terminal	[5]

When terminal [2CH] is turned ON, the inverter changes the rate of acceleration and deceleration from the initial settings (F002 and F003) to use the *second* set of acceleration/deceleration values (A092 and A093). When the terminal is turned OFF, the inverter returns to the original acceleration and deceleration time (F002 acceleration time 1 and F003 deceleration time 1). Use A092 (acceleration time 2) and A093 (deceleration time 2) to set the second stage acceleration and deceleration times.

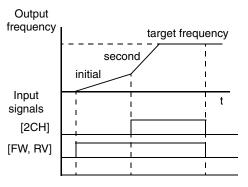

In the graph shown above, the [2CH] signal becomes active during acceleration. This causes the inverter to switch from using acceleration 1 (F002) to acceleration 2 (A092).

Note the following:

• Function A094 selects the method for second stage acceleration. It must be set = 00 to select the input terminal method in order for the [2CH] terminal assignment to operate.


Free-run Stop

Opt. Code	11	
Symbol	[FRS]	
Valid for Inputs	[1] to [8]	
Required Settings	B003, B088, C011 to C018	
Default terminal	[4]	

When the terminal [FRS] is turned ON, the inverter turns OFF the output and the motor enters the free-run state (coasting). If terminal [FRS] is turned OFF, the output resumes sending power to the motor if the Run command is still active. The free-run stop feature works with other parameters to provide flexibility in stopping and starting motor rotation.

In the diagram below, parameter B088 selects whether the inverter resumes operation from 0 Hz (left graph) or the current motor rotation speed (right graph) when the [FRS] terminal turns OFF. The application determines the best setting.

Parameter B003 specifies a delay time before resuming operation from a free-run stop. To disable this feature, use a zero delay time.

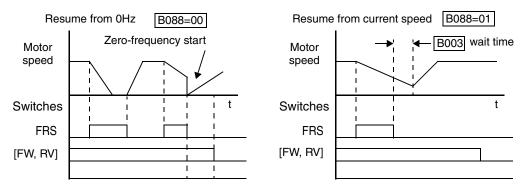

In the diagram above, [FRS] signal is active high. If you want the [FRS] terminal to be active low (normally closed logic), change the setting (C011 to C018) that corresponds to the input [1] to [8] that is assigned the [FRS] function (C001 to C008).


4-

External Trip

Opt. Code	12	
Symbol	[EXT] [1] to [8]	
Valid for Inputs		
Required Settings	(none)	
Default terminal	Requires config.	

When the terminal [EXT] transitions OFF-to-ON, the inverter enters the trip state, indicates error code E12, and stops the output. This is a general purpose interrupt type feature, and the meaning of the error depends on what you connect to the [EXT] terminal. Even if [EXT] is turned OFF, the inverter remains in the trip state. You must reset the inverter or cycle power to clear the error, returning the inverter to the Stop Mode.

In the graph below, the [EXT] input turns ON during normal Run Mode operation. The inverter lets the motor free-run to a stop, and the alarm output turns ON immediately. When the operator initiates a Reset command, the alarm and error are cleared. When the Reset is turned OFF, the motor begins rotation since the Run command is already active.

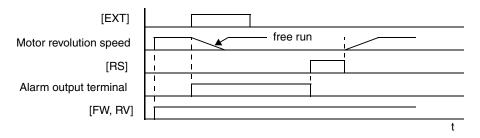

If the USP (Unattended Start Protection) feature is in use, the inverter will not automatically restart after cancelling the EXT trip event. In that case, it must receive either another Run command (OFF-to-ON transition), a keypad Reset command, or an [RS] intelligent terminal input signal.


Unattended Start Protection

Opt. Code	13	
Symbol	[USP]	
Valid for Inputs	ired (none)	
Required Settings		
Default terminal [6]*		
* Default for -FU2 models only; others require input configuration		

If the Run command is already present when power is turned ON, the inverter starts running immediately after powerup. The Unattended Start Protection (USP) function prevents that automatic startup. If the [USP] input is active, the inverter *will not* run without outside intervention. In this case, there are two ways to reset an alarm and resume running:

- 1. Turn the Run command OFF, or
- 2. Perform a reset operation by the terminal [RS] input or the keypad Stop/reset key

The three examples below show how the USP function works in the scenarios described at the bottom of the diagram. The error code E13 indicates the USP trip state and corresponds to the *Alarm* signal in the diagram.

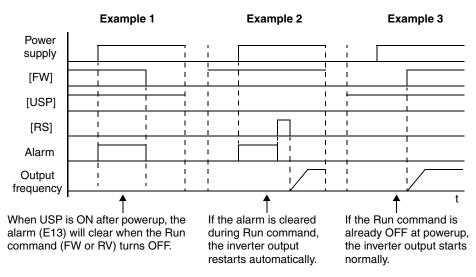

Note the following;

- Note that when a USP error occurs and it is canceled by a reset from the [RS] terminal input or keypad, the inverter restarts immediately.
- Even when the trip state is canceled by turning the terminal [RS] ON and OFF after an under- voltage trip E09 occurs, the USP function will be performed.

Call 1(800)985-6929 for Sales

• When the Run command is active immediately after the power is turned ON, a USP error will occur. When this function is used, wait for at least three (3) seconds after powerup before applying a Run command.

Commercial Power Source Enable


Opt. Code	14	
Symbol	[CS]	
Valid for Inputs	[1] to [8]	
Required Settings	B003, B007	
Default terminal	Requires config.	

The commercial power source switching function is useful in systems with excessive starting torque requirements. This feature permits the motor to be started "across the line," sometimes called a *bypass* configuration. After the motor is running, the inverter takes over to control the speed. This feature can eliminate the need to oversize the inverter, reducing cost. However, additional hardware such as magnetic contactors will be required to realize this function. For example, a system may require 55KW to start, but only 15KW to run at constant speed. Therefore, a 15KW rated inverter would be sufficient when using the commercial power source switching.


The [CS] Commercial Power Source Enable input signal operation is as follows:

- OFF-to-ON transition signals the inverter that the motor is already running at powerup (via bypass), thus suppressing the inverter's motor output in Run Mode.
- ON-to-OFF transition signals the inverter to apply a time delay (B003), frequency match its output to existing motor speed, and resume normal Run Mode operation

The following block diagram shows an inverter system with *bypass* capability. When starting the motor directly across the line, relay contacts Mg2 are closed, and Mg1 and Mg3 are open. This is the bypass configuration, since the inverter is isolated from the power source and motor. Then Mg1 contacts close about 0.5 to 1 second after that, supplying power to the inverter.

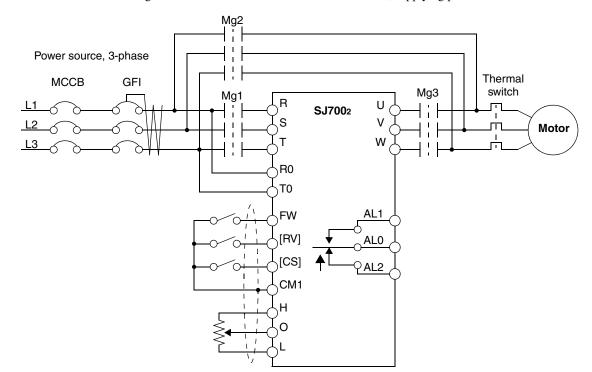

Switching to inverter control occurs after the motor is running at full speed. First, Mg2 relay contacts open. Then about 0.5 to 1 seconds later, relay Mg3 contacts close, connecting the inverter to the motor. The following timing diagram shows the event sequence:

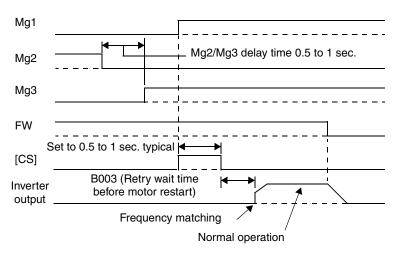

In the previous timing diagram, when the motor has been started across the line, Mg2 is switched OFF and Mg3 is switched ON. With the Forward command to the inverter already ON, the [CS] terminal is switched ON and relay Mg1 contacts close. The inverter will then read the motor RPM (frequency matching). When the [CS] terminal is switched OFF, the inverter applies the *Retry wait time before motor restart* parameter (B003).

Once the delay time has elapsed the inverter will then start and match the frequency (if greater than the threshold set by B007). If an over-current trip occurs during frequency matching, extend the retry wait time B003. If the ground fault interrupter breaker (GFI) trips on a ground fault, the bypass circuit will not operate the motor. When an inverter backup is required, take the supply from the bypass circuit GFI. Use control relays for [FW], [RV], and [CS].

Software Lock

Opt. Code	15	
Symbol	[SFT]	
Valid for Inputs	[1] to [8]	
Required Settings	B031 (excluded from lock)	
Default terminal	Requires config.	

When the terminal [SFT] is ON, the data of all the parameters and functions (except the output frequency, depending on the setting of B031) is locked (prohibited from editing). The keypad and remote programming devices will be prevented from changing parameters. To edit parameters again, turn OFF the [SFT] terminal input. Use parameter B031 to select whether the output frequency is excluded from the lock state or is locked as well. Note the following:

- When the [SFT] terminal is turned ON, only the output frequency can be changed.
- Software lock can include the output frequency by setting B031.
- Software lock by the operator is also possible without the [SFT] terminal being used (B031).

Analog Input Current/Voltage Select

Opt. Code	16	
Symbol	[AT]	
Valid for Inputs	[1] to [8]	
Required Settings	A001 = 01 A005 = 00 / 01 A006 = 00 / 01 / 02	
Default terminal	[2]	

The [AT] terminal operates in conjunction with parameter setting A005 to determine the analog input terminals that are enabled for current or voltage input. Setting A006 determines whether the signal will be bipolar, allowing for a reverse direction range. Note that current input signal cannot be bipolar and cannot reverse direction (must use [FW] and [RV] command with current input operation). The basic operation of the [AT] intelligent input is as follows:

• [AT] = ON and A005 = 00 – [AT] will enable terminals [OI]–[L] for current input, 4 to 20mA


- [AT] = ON and A005 = 01 [AT] will enable terminals [O2]-[L] for voltage input
- [AT] = OFF Terminals [O]–[L] are enabled for voltage input (A005 may be equal to 00 or 01) in this case

Be sure to set the frequency source setting A001=01 to select the analog input terminals. Please refer to <u>"Analog Input Operation" on page 4–63</u> for more information on bipolar input configuration, and the operating characteristics of analog inputs.

Reset Inverter

Opt. Code	18	
Symbol	[RS]	
Valid for Inputs	[1] to [8]	
Required Settings	B003, B007, C102, C103	
Default terminal	[1]	

The [RS] terminal causes the inverter to turn OFF the motor output and execute a powerup reset. If the inverter is in Trip Mode, the reset cancels the Trip state. When the signal [RS] is turned ON and OFF, the inverter executes the reset operation. The minimum pulse width for [RS] must be 12 ms or greater. The alarm output will be cleared within 30 ms after the onset of the Reset command. Note the following:

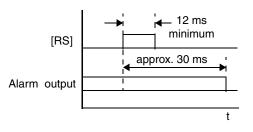

- When the control terminal [RS] input is already ON at powerup for more than 4 seconds, the remote operator display is "R-ERROR COMM<2>" (the display of the digital operator is - -). However, the inverter has no error. To clear the digital operator error, turn OFF the terminal [RS] input and press one of the operator keys.
- The active edge (leading or trailing) of the [RS] signal is determined by the setting of C102.
- A terminal configured with the [RS] function can only be configured as a normally open contact. The terminal cannot be used in the normally closed contact state.
- When input power is turned ON, the inverter performs the same reset operation as it does when a pulse on the [RS] terminal occurs.



NOTE: For inverter models –1850Hxx to –4000Hxx: After an external reset input [RS] occurs, the internal cooling fan turn ON after stopping once.

WARNING: After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active. Be sure to set the alarm reset after verifying that the Run command is OFF to prevent injury to personnel.

hitachiacdrive.com

sales@hitachiacdriv

SJ7002 Inverter

4-


Thermistor Thermal Protection

Opt. Code		
Symbol	[TH]	
Valid for Inputs	[TH only]	
Required Settings	B098, B099, and C085	
Default terminal	[TH]	

Motors that are equipped with a thermistor can be protected from overheating. Input terminal [TH] is dedicated to sense thermistor resistance. The input can be set up (via B098 and B099) to accept a wide variety of NTC or PTC type thermistors. Use this function to protect the motor from overheating.

When a thermistor is connected between terminals [TH] and [CM1], the inverter checks for over-temperature and will cause a trip (E35) and turn OFF the output to the motor. Be sure the thermistor is connected to terminals [TH] and [CM1]. If the resistance is above or below (depending on whether NTC or PTC) the threshold the inverter will trip. When the motor cools down enough, the thermistor resistance will change enough to permit you to clear the error. Press the STOP/Reset key to clear the error.

An open circuit in the thermistor causes a trip, and the inverter turns OFF the motor output.

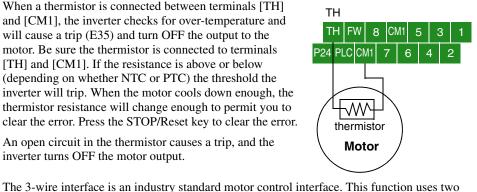

Three-wire Interface Operation

Opt. Code and

Symbol

Valid for

Inputs

Required

Settings

Default

terminal

20=[STA]

21=[STP]

[1] to [8]

A002=01

Requires

config.

22=F/R

direction.


	Symbol	Function Name	Description
	STA	Start Motor	Start motor rotation on momentary contact (uses acceleration profile)
]	STP	Stop Motor	Stop motor rotation on momentary open (OFF is active state), (uses deceleration profile)
l	F/R	Forward/Reverse	ON = Reverse; OFF = Forward

inputs for momentary contact start/stop control, and a third for selecting forward or reverse

To implement the 3-wire interface, assign 20 [STA] (Start), 21 [STP] (Stop), and 22 [F/R] (Forward/Reverse) to three of the intelligent input terminals. Use momentary contacts for Start and Stop. Use a selector switch, such as SPST for the Forward/Reverse input. Be sure to set the operation command selection A002=01 for input terminal control of motor. Note the following:

- If you have a motor control interface that needs logic-level control (rather than momentary pulse control), use the [FW] and [RV] inputs instead.
- The STP logic is inverted. Normally the switch will be closed, so you open the switch to stop. In this way, a broken wire causes the motor to stop automatically (safe design).
- When you configure the inverter for 3-wire interface control, the dedicated [FW] terminal is automatically disabled. The [RV] intelligent terminal assignment is also disabled.

The diagram below shows the use of 3-wire control. STA (Start Motor) is an edge-sensitive input; an OFF-to-ON transition gives the Start command. The control of direction is levelsensitive, and the direction may be changed at any time. STP (Stop Motor) is also a levelsensitive input.

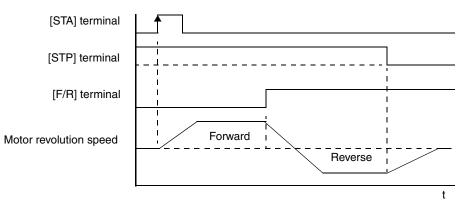

PID	Disa	able
and	PID	Clear

Opt. Code and Symbol	23=[PID]
	24=[PIDC]
Valid for Inputs	[1] to [8]
Required Settings	A071
Default terminal	Requires config.

The PID loop function is useful for controlling motor speed to achieve constant flow, pressure, temperature, etc. in many process applications.

PID Disable – This function temporarily suspends PID loop execution via an intelligent input terminal. It overrides the parameter A071 (PID Enable) to stop PID execution and return to normal motor frequency output characteristics. the use of PID Disable on an intelligent input terminal is optional. Of course, any use of the PID loop control requires setting PID Enable function A071=01.

PID Clear – This function forces the PID loop integrator sum = 0. So, when you turn ON an intelligent input configured as [PIDC], the integrator sum is reset to zero. This is useful when switching from manual control to PID loop control and the motor is stopped.

Note the following:

- The use of [PID] and [PIDC] terminals are optional. Use A071=01 if you want PID loop control enabled all the time.
- Do not enable/disable PID control while the motor is running (inverter is in Run Mode).
- Do not turn ON the [PIDC] input while the motor is running (inverter is in Run Mode).

CAUTION: Be careful not to turn PID Clear ON and reset the integrator sum when the inverter is in Run Mode (output to motor is ON). Otherwise, this could cause the motor to decelerate rapidly, resulting in a trip.

Internal Speed Loop Gain Settings

Opt. Code	26=[CAS]	
and Symbol	43=[PPI]	
Valid for Inputs	[1] to [8]	
Required Settings	A044 / A244 / A344 = 03, 04, or 05	
Default terminal	Requires config.	

When sensorless vector control, 0Hz sensorless vector control, or vector control with sensor is selected for the control method, the Control Gain Switching function selects between two sets of gains in the internal speed loop. These gains are used in proportional and integral compensation. When Control Gain Switching is not selected for an intelligent input terminal, the default gains in effect correspond to the OFF state of [CAS].

Use [PPI] P/PI Control Switching to select between proportional and proportional-integral control.

Symbol	Function Name	Input State	Description
CAS	CAS Control Gain Switching		Gains in parameters H070, H071, and H072 are selected
		OFF	Gains in parameters H050, H051, H052; or, H250, H251, H252 (2nd motor) are selected
PPI	P / PI Control Switching	ON	Selects Proportional control (P)
		OFF	Selects Proportional-Integral control (PI)

The table below lists the functions and parameter settings related to internal speed loop gains.

Function Code	Parameter	Setting Range	Description
	Control method selection	03	SLV (does not use A344)
A044 / A244 / A344		04	0-Hz Domain SLV (does not use A344)
		05	V2 (does not use A244 or A344)
C001 - C008	Intelligent input selection	43	PPI : P/I switching
H005 / H205	Speed response	0.001 to 65.53	No dimension


sales@hitachiacdrive

SJ7002 Inverter

4 - 27

Function Code	Parameter	Setting Range	Description
H050 / H250	PI proportional gain	0.0 to 999.9/1000	% gain
H051 / H251	PI integral gain	0.0 to 999.9/1000	% gain
H052 / H252	P proportional gain	0.01 to 10.00	No dimension
H070	PI proportional gain for switching	0.0 to 999.9/1000	% gain
H071	PI integral gain for switching	0.0 to 999.9/1000	% gain
H072	P proportional gain for switching	0.0 to 10.0	No dimension
H073	Gain switching time	0. to 999.	Millisceonds

The speed control mode is normally proportionalintegral compensation (PI), which attempts to keep the deviation between the actual speed and speed command equal to zero. You can also select proportional (P) control function, which can be used for *droop* control (i.e. several inverters driving one load). *Droop* is the speed difference resulting from P control versus PI control at 100% output torque as shown in the graph. Set the P/PI switching function (option 43) to one of the intelligent input terminals [1] to [8]. When the P/PI input terminal is ON, the control mode becomes proportional control (P). When the P/PI input terminal is OFF, the control mode becomes proportional-integral control.

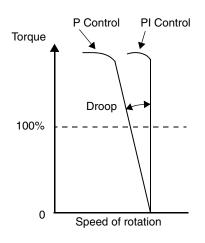

The proportional gain Kpp value determines the droop. Set the desired value using parameter

H052. The relationship between the Kpp value and the droop is shown below:

$$Droop = \frac{10}{(Kpp Set Value)}(\%)$$

The relationship between the droop and the rated rotation speed is shown below:

 $Droop = \frac{Speed \ error \ at \ rated \ torque}{Synchronous \ speed \ base \ frequency}$

Remote Control Up and Down **Functions**

Op

Default

terminal


Requires

config.

The [UP] [DWN] terminal functions can adjust the output frequency for remote control while the motor is running. The acceleration time and deceleration time used with this function is the same as for normal operation ACC1 and DEC1 (2ACC1,2DEC1). The input terminals operate as follows:

Opt. Code	27=[UP]			
and	28=[DWN]	Symbol	Function Name	Description
Symbol	29=[UDC]	UP	Remote Control UP Function	Accelerates (increases output frequency) motor
Valid for	[1] to [8]			from current frequency
Inputs		DWN	Remote Control DOWN	Decelerates (decreases output frequency) motor
Required	A001 = 02; C101 = 01		Function	from current frequency
Settings	(enables	UDC	Remote Control Data Clear	Clears the Up/down frequency memory
	memory)	. .		

In the graph below, the [UP] and [DWN] terminals activate while the Run command remains ON. The output frequency responds to the [UP] and [DWN] commands.

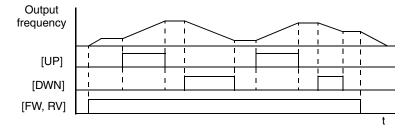

It is possible for the inverter to retain the frequency set from the [UP] and [DWN] terminals through a power loss. Parameter C101 enables/disables the memory. If disabled, the inverter retains the last frequency before an UP/DWN adjustment. Use the [UDC] terminal to clear the memory and return to the original set output frequency.

This function permits a digital operator interface to override the Run command source setting

(A002) when it is configured for a source other than the operator interface. When the [OPE] terminal is ON, the operator interface Run command over-rides commands from input terminals (such as [FW], [RV]). The inverter will use the standard output frequency settings to operate the motor. When the [OPE] terminal is OFF, the Run command operates normally, as configured by A002.

When changing the [OPE] state during Run Mode (inverter is driving the motor), the inverter will stop the motor before the new [OPE] state takes effect. If the [OPE] input turns ON and the digital operator gives a Run command while the inverter is already running, the inverter stops the motor. Then the digital operator can control the motor.

Force Operation from Digital Operator

Opt. Code	31
Symbol	[OPE]
Valid for Inputs	[1] to [8]
Required Settings	A001, A002 (set not equal to 02)
Default terminal	Requires config.

Δ.

Overload
Restriction

Opt. Code	39	
Symbol	[OLR]	
Valid for Inputs	[1] to [8]	
Required Settings	B021 – B023 (Set 1), B024 – B026 (Set 2)	
Default terminal	Requires config.	

The inverter constantly monitors the motor current during acceleration, deceleration, and constant speed. If the inverter reaches the overload restriction level, it adjusts the output frequency automatically to limit the amount of overload. This function prevents an over-current trip by inertia during rapid acceleration or large changes in load at constant speed. It also attempts to prevent an over-voltage trip on deceleration due to regeneration. It accomplishes this by temporarily suspending deceleration and/or increasing the frequency in order to dissipate regenerative energy. Once the DC bus voltage falls sufficiently, deceleration will resume.

OLR Parameter Selection – Two sets of overload restriction parameter settings and values are available as outlined in the table below.

Symbol	Function Name	Input State	Description
OLR	Overload Restriction Selection	ON	Selects Overload Restriction Set 2, B024, B025, B026 settings in effect
		OFF	Selects Overload Restriction Set 1, B021, B022, B023 settings in effect

Use the B021—B026 group of settings to configure the two set of parameters as needed. By assigning the Overload Restriction function [OLR] to an intelligent terminal, you can select the set of restriction parameters that is in effect.

Function	Function Code		Data or Range	Description
	Set 1	Set 2	Data of Kange	Description
Overload Restriction	B021	B024	00	Disable
Operation Mode			01	Enabled during accel and constant speed
			02	Enabled during constant speed
			03	Enabled during accel, constant speed, and decel
Overload Restriction Setting	B022	B025	Rated current * 0.5 to rated current * 2	Current value at which the restriction begins
Deceleration Rate at Overload Restriction	B023	B026	0.1 to 30 seconds	Deceleration time when overload restriction operates


Note the following:

- If the overload restriction constant (B023 or B026) is set too short, an over-voltage trip during deceleration will occur due to regenerative energy from the motor.
- When an overload restriction occurs during acceleration, the motor will take longer to reach the target frequency, or may not reach it. The inverter will make the following adjustments: a) Increase the acceleration time
 - b) Raise torque boost
 - c) Raise overload restriction level

<u>all 1</u>(800)985-6929 for Sales

-30

The figure below shows the operation during an overload restriction event. The overload restriction level is set by B022 and B025. The overload restriction constant is the time to decelerate to 0Hz from maximum frequency. When this function operates, the acceleration time will be longer than the normal acceleration time.

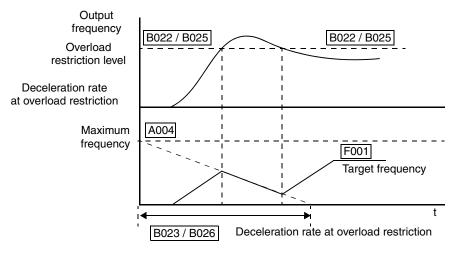

NOTE: The Overload Advance Notice function for intelligent outputs is related to Overload Restriction operation, discussed in <u>"Overload Advance Notice Signal" on page 4–46</u>.

Torque Limit

Opt. Code and Symbol	40=[TL]	
	41=[TRQ1]	
	42=[TRQ2]	
Valid for Inputs	[1] to [8]	
Required Settings	B040, B041, B042, B043, B044	
Default	Requires	
terminal	config.	

The Torque Limit function limits the motor output torque for sensorless vector control, sensorless vector control 0Hz domain, or vector control with feedback. Three intelligent inputs control the Torque Limit function:

Symbol	Function Name	Description
TL Torque limit enable		Enables torque limit function when ON
TRQ1 Torque limit select 1, Bit 1 (LSB)		Binary encoded bit for quadrant select
TRQ2	Torque limit select 2, Bit 2 (MSB)	Binary encoded bit for quadrant select

In the torque limit function, the following operational modes are available (selected by B040):

- 1. Four-quadrant individual setting mode This mode sets torque limit in 4 zones, forward driving and regenerating, reverse driving and regenerating. Limits for each quadrant are set with B041 B044 individually.
- Terminal selection mode By use of torque limit select intelligent input terminals 1 and 2, this mode changes and uses torque limits 1 – 4 set in B041 – B044. Selected torque limit range is valid in all four quadrants. Inputs TRQ1 and TRQ2 apply only to terminal selection mode.
- 3. Analog input mode This mode sets torque limit value by the voltage applied to terminal [O2] (referenced to [L] for ground. An input of 0 10V corresponds to the torque limit value of 0 to 200%. The selected torque limit value is valid in all four quadrants (whether forward or reverse move, driving or regenerating).

	ligent outs	Torque limit parameter	
TRQ2 TRQ1		parameter	
OFF	OFF	B041	
OFF	ON	B042	
ON	OFF	B043	
ON	ON	B044	

4. Expansion Cards 1 and 2 – This function is valid when using the expansion card (SJ-DG). Please refer to the SJ-DG instruction manual.

4-31

When the torque limit enable function [TL] is assigned to an intelligent input terminal, torque limiting occurs only when [TL] is ON. Both the 4-quadrant mode and terminal switching mode of torque limiting use input [TL] for enable/disable. When the [TL] input is OFF, the inverter always uses the default torque control limit of 200% maximum. That torque limit value corresponds to 200% of the maximum inverter output current. Therefore, the output torque also depends on the particular motor in use. When the over-torque output [OTQ] is assigned in the intelligent output selection, it turns ON when the inverter is performing torque limiting. When using the torque limit function at low speed, also use the overload restriction feature.


Code	Function	Data or Range	Description
A044 / A244	Control method selection	00 01 02 03 04 05	V/f Constant torque V/f Variable torque V/f Free-setting torque *1 Sensorless vector *1 Sensorless vector, 0 Hz domain *1 Vector control with sensor *2
B040	Torque limit selection	00 01 02 03 04	4-quadrant individual setting Terminal selection Analog [O2] input Expansion card 1 Expansion card 2
B041	Torque limit 1	0 to 200%	Forward-driving in 4-quadrant mode
B042	Torque limit 2	0 to 200%	Reverse-regenerating in 4-quadrant mode
B043	Torque limit 3	0 to 200%	Reverse-driving in 4-quadrant mode
B044	Torque limit 4	0 to 200%	Forward-regenerating in 4-quadrant mode
C001 to C008	Intelligent input terminal [1] to [8] function	40 41 42	Torque limit enable Torque limit selection, bit 1 (LSB) Torque limit selection, bit 2 (MSB)
C021 to C025	Intelligent output terminal [11] to [15] function	10	In torque limit

Note 1: Unavailable for A344

Note 2: Unavailable for A244 and A344

The 4-quadrant operation mode for torque limiting (B040=00) is illustrated in the figure to the right. The instantaneous torque depends on inverter activity (acceleration, constant speed, or deceleration), as well as the load. These factors determine the operating quadrant at any particular time. The parameters in B041, B042, B043 and B044 determine the amount of torque limiting that the inverter applies.

The terminal selection mode (B040=01) uses two intelligent inputs [TRQ1] and [TRQ2] for the binary-encoded selection of one of the four torque limit parameters B041, B042, B043 and B044.

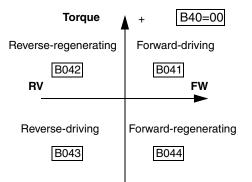


Operations and Monitoring

External Brake Control Function

Opt. Code	44
Symbol	[BOK]
Valid for Inputs	[1] to [8]
Required Settings	B120=01; Set B121 to B127
Default terminal	Requires config.

The External Brake Control function enables the inverter to control external electromechanical brake systems with a particular safety characteristic. For example, elevator control systems maintain the brake on the load until the drive motor has reached a *releasing* frequency (point at which the external mechanical brake is released). This ensures that the load does not have an opportunity to begin coasting before the inverter begins driving the motor. The External Brake Control function can be enabled by setting parameter B120=01.

The diagram below shows the signals that are important to the External Brake Control function.

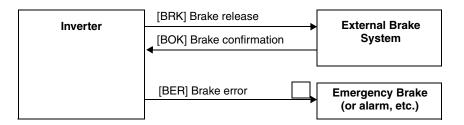

- Brake confirmation [BOK] turns ON to indicate that an external brake system has released (is not engaged). If external brake control is enabled (B120=01), then the [BOK] signal must work properly to avoid an inverter trip event.
- If [BOK] is not assigned to an intelligent input, then setting B124 is ignored.

The steps below describe the timing diagram of events on the following page.

- 1. When the Run command turns ON, the inverter begins to operate and accelerate to releasing frequency (B125).
- 2. After the output frequency arrives at the set releasing frequency (B125), the inverter waits for the brake release confirmation, set by B121. The inverter outputs the braking release signal [BRK]. However, if the output current of the inverter is less than the releasing current set by B126, the inverter does not turn ON the brake release output [BRK]. The lack of the proper current level indicates a fault (such as open wire to motor). In this case, the inverter trips and outputs the braking error signal [BER]. This signal is useful to engage an emergency brake to ensure the load does not move, if the primary braking system has failed.
- **3.** While the brake release output [BRK] is ON, the inverter drives the motor but does not accelerate immediately. The inverter waits for confirmation from the external brake. When the external brake system properly releases, it signals the inverter by using the Brake OK input terminal [BOK]. If [BOK] is not assigned to an intelligent input, B124 is ignored.
- **4.** When the brake operates properly and signals with the [BOK] input, the inverter waits for the required time for acceleration (B122), and then begins to accelerate to the set target frequency. If [BOK] is not assigned to an intelligent input, acceleration begins after the delay time set by B122 after [BRK] signal occurs.
- 5. When the Run command turns OFF, the procedure outlined above happens in reverse. The idea is to engage the brake before the motor comes completely to a stop. The inverter decelerates to the releasing frequency (B125) and turns the brake release output [BRK] OFF to engage the brake.
- 6. The inverter does not decelerate further during just the waiting time for brake confirmation (B121). If the brake confirmation signal does not turn OFF within the waiting time for brake confirmation, the inverter causes a trip alarm and outputs the brake error signal [BER] (useful for engaging an emergency brake system).
- 7. Normally, the brake confirmation signal [BOK] turns OFF, and the inverter waits the required waiting time. Then the inverter begins to decelerate again and brings motor and load to a complete stop (see timing diagram on next page).

sales@hitachiacdrive


SJ7002 Inverter

4 - 33

Code	Function	Data or Range	Description
B120	Brake control enable	00=Disable 01=Enable	Enables external brake control function within the inverter
B121	Brake waiting time for release	0.00 to 5.00 sec.	Sets the time delay after arrival at release frequency (B125) before the inverter outputs brake release signal [BRK]
B122	Brake wait time for acceleration	0.00 to 5.00 sec.	Sets time delay after brake confirmation signal [BOK] is received until the inverter begins to accel- erate to the set frequency
B123	Brake wait time for stopping	0.00 to 5.00 sec.	Sets the time delay after brake confirmation signal [BOK] turns OFF (after [BRK] turns OFF) until decelerating the inverter to 0 Hz
B124	Brake wait time for confirmation	0.00 to 5.00 sec.	Sets the wait time for [BOK] signal after turn ON/ OFF of [BRK] signal. If [BOK] is not received during the specified time, the inverter will trip with an external brake error [BER].
B125	Break release frequency setting	0.00 to 99.99 Hz / 100.0 to 400.0 Hz	Sets the frequency at which the inverter outputs the brake release signal [BRK] after delay set by B121
B126	Brake release current setting	0% to 200% of rated current	Sets the minimum inverter current level above which the brake release signal [BRK] will be permitted
B127	Braking frequency	0 to 400 Hz (0 to 120 Hz for model -4000)	Sets the frequency at which the inverter outputs the braking signal

The following table lists the parameters related to the External Brake Control function.

The diagram below shows the event sequence described in the steps on the previous page.

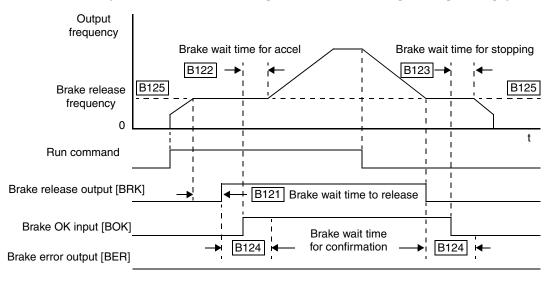


Expansion Card Input Signals

	45=[ORT]	
Opt. Code and Symbol	46=[LAC]	
	47=[PCLR]	
	48=[STAT]	
Valid for Inputs	[1] to [8]	
Required Settings	B120=01; Set B121 to B126	T
Wiring terminals	on SJ-FB Expansion Card	T in

Other inputs listed below require the expansion card SJ-FB Encoder Feedback. Please see the SJ-FB manual for more information.


Symbol	Function Name	Description
ORT	Orientation	Orientation (home search sequence)
LAC	LAD Cancel	Cancels the linear acceleration/deceleration position control in the feedback card
PCLR	Position deviation clear	Forces the position error to zero
STAT	Pulse train input enable	Starts the pulse train control of motor frequency

The diagram below shows how the Input/Output connections for the SJ–FB feedback board. The inverter's internal connections and parameter configuration make these signals available on ntelligent input and output terminals.

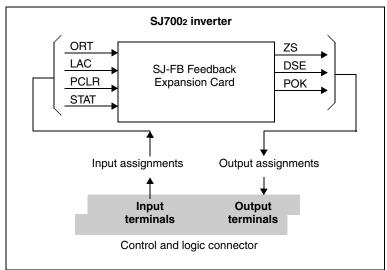

The information on outputs related to the SJ-FB expansion card is in <u>"Expansion Card Output</u>. <u>Signals" on page 4–54</u>.

The inverter can add or subtract an offset value to the output frequency setting which is specified by A001 (will work with any of the five possible sources). The ADD Frequency is a value you can store in parameter A145. The ADD Frequency is summed with or subtracted from the output frequency setting only when the [ADD] terminal is ON. Function A146 selects whether to add or subtract. By configuring an intelligent input as the [ADD] terminal, your application can selectively apply the fixed value in A145 to offset (positively or negatively) the inverter output frequency in real time.

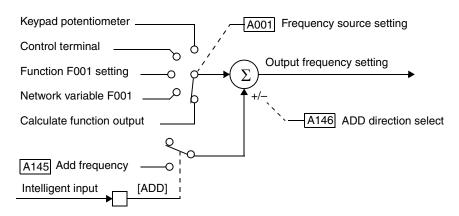

ADD Frequency Enable

Opt. Code	50
Symbol	[ADD]
Valid for Inputs	[1] to [8]
Required Settings	A145, A146
Default terminal	Requires config.

4–35

Force Terminal Mode

Opt. Code	51
Symbol	[F–TM]
Valid for Inputs	[1] to [8]
Required Settings	A001, A002
Default terminal	Requires config.

The purpose of this intelligent input is to allow a device to force the inverter to allow control of the following two parameters via the control terminals:

A001 - Frequency source setting (01 = control terminals [FW] and [RV])

A002 - Run command source setting (01 = control terminals [O] or [OI])

Some applications will require one or both settings above to use a source other than the terminals. You may prefer to normally use the inverter's keypad and potentiometer, or to use the ModBus network for control, for example. However, an external device can turn ON the [F-TM] input to force the inverter to (temporarily) allow control (frequency source and Run command) via control terminals. When the [F-TM] input is OFF, then the inverter uses the regular sources specified by A001 and A002 again.

When changing the [F-TM] state during Run Mode (inverter is driving the motor), the inverter vill stop the motor before the new [F-TM] state takes effect.

Torque Control Enable

The torque control enable function is available in the *vector control with encoder feedback* mode (A044 = 05). You can use the inverter not only in speed control or pulse train position control but also with the torque control function. Suitable applications include material winding machines.

Opt. Code	52	
Symbol	[ATR]	
Valid for Inputs	[1] to [8]	
Required Settings	A044 = 05, P033, P034, P035, P039, P040, P036, P037, P038	
Monitor Settings	D009, D010, D012	
Default terminal	Requires config.	


The torque command input is enabled when the [ATR] intelligent input (assigned with option code 52) is ON. You can select one of four torque command input methods (digital operator and three analog input terminals) by the torque command input selection.

Code	Function	Data or Range	Description
P033	Torque command input	00	[O] terminal
	selection	01	[OI] terminal
		02	[O2] terminal
		03	Inverter keypad (P034)
P034	Torque command setting	0. to 200. (%)	Torque setting for the input from the digital operator $(P033 = 03)$
P035	Torque command polarity select	00	Indicated by signal polarity at [O2] terminal
		01	Depends on motor direction
P039	Forward speed limit for torque-control mode	0.00 to maximum frequency (Hz)	_
P040	Reverse speed limit for torque-control mode	0.00 to maximum frequency (Hz)	—
P036	Torque bias mode	00	Disable
		01	Inverter keypad (P037)
		02	[O2] terminal input
P037	Torque bias value	-200. to 200. (%)	
P038	Torque bias polarity	00	Indicated by polarity
		01	Depends on motor direction

<u>Call 1(800)985-6929</u> for Sales

-36

The following block diagram shows the torque control operation. If the measured speed exceeds the speed limit, the motor speed is controlled in proportional control mode.

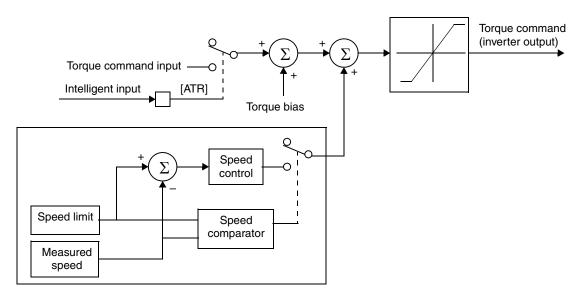

Clear Cumulative Power Value

Opt. Code	53
Symbol	[KHC]
Valid for Inputs	[1] to [8]
Required Settings	B078, B079
Monitor Settings	D015
Default terminal	Requires config.

When D015 cumulative power monitoring function is selected, the inverter displays the cumulative value of electric power input to the inverter. You can also convert the value to other engineering units by setting the related parameter gain (B079 cumulative input power display gain setting). The gain can be set within the range of 1 to 1000 (resolution = 1).

There are two ways to clear the cumulative power data:

- Set B078 = 01 and press the STR key on the digital operator.
- Configure an intelligent input for the [KHC] function (option code = 53). Turn ON the input to clear the cumulative power data.

When B079 cumulative input power display gain setting = 1000, cumulative power data up to 999000 kW/h can be displayed.

4_37


Speed Servo ON			
Opt. Code 54			
Symbol	[SON]		
Valid for Inputs	[1] to [8]	i i	
Required Settings	A044	1 t	
Default terminal	Requires config.	1	

The servo-ON function allows you to set the inverter in a speed-servo-lock state with an ntelligent input during operation. This function is available when A044=05 vector control with sensor for the characteristic V/f curve.

To use the servo-ON function, assign option code 54 to an intelligent input. After making the input assignment, the inverter will accept an operation command only when the [SON] terminal is ON.

If the [SON] terminal is turned OFF during inverter operation, the inverter output enters FRS mode (free-run stop). If the [SON] is turned ON again, the inverter restarts the motor according to function B088, Restart Mode After FRS.

The inverter does not allow [SON] terminal assignment and [FOC] (forcing function) assignment at the same time. If both are assigned, the [FOC] has priority (operates normally) and the [SON] function is not available.

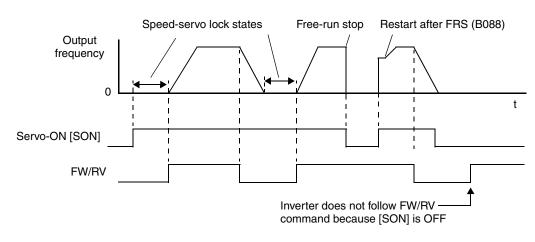

Current Forcing


Opt. Code	55
Symbol	[FOC]
Valid for Inputs	[1] to [8]
Required Settings	A044, A244
Default terminal	Requires config.

The current forcing function applies an excitation current to pre-build magnetic flux in the motor. The forcing function is available when one of the following vector control modes is configured for use at the inverter output:

- A044 = 03 sensorless vector control
- A044 = 04 0Hz-range sensorless vector control
- A044 = 05 vector control with sensor

To use current forcing, assign option code 55 to an intelligent input terminal. After making the input assignment, the inverter will accept an operation command only when the [FOC] terminal is ON.

If the [FOC] terminal is turned OFF during inverter operation, the inverter output enters FRS mode (free-run stop). If the [FOC] is turned ON again, the inverter restarts the motor according to function B088, Restart Mode After FRS.

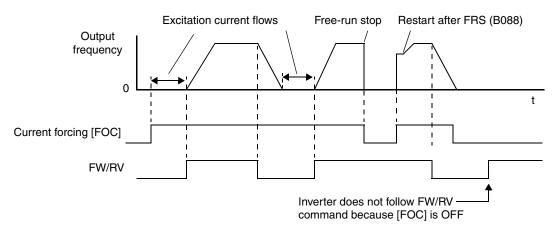

<u>Call_1(800)985-6929</u> for Sales

-38

General Purpose	Refer to the Easy Sequence Instruction Manual for information on how to configure and use the
Inputs 1–8	general purpose inputs MI1 to MI8.

	56=[MI1]
	57=[MI2]
	58=[MI3]
Opt. Code and	59=[MI4]
Symbol	60=[MI5]
	61=[MI6]
	62=[MI7]
	63=[MI8]
Valid for Inputs	[1] to [8]
Required Settings	See Easy Sequence
Default terminal	Requires config.


Analog Holding Command

Opt. Code	65	
Symbol	[AHD]	
Valid for Inputs	[1] to [8]	
Required Settings	C101	
Default terminal	Requires config.	

The analog holding function causes the inverter to sample and hold the analog command (external analog input). The hold operation begins when the intelligent input [AHD] (assign option code 65) turns ON. While [AHD] terminal is ON, the Up/Down function uses the held input level as the reference speed (frequency) value. Set parameter C101 (Up/Down memory Mode Selection) = 01 to store the last frequency adjusted by UP/DWN in memory.

If the inverter power is cycled (OFF and ON) or the [RS] reset terminal receives a reset (ON and OFF) while [AHD] is ON (holding analog value), the data held at the moment of power OFF or Reset ON will be used.

The wave form below shows a typical sequence for use of the Analog Holding Command.

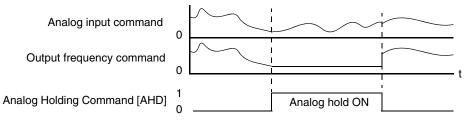



NOTE: Frequent use of the Analog Hold function may damage the corresponding flash memory register in the inverter.

4 - 39

Multi-stage Position Select 1, 2, and 3

		Г
Opt. Code	66=[CP1]	
and	67=[CP2]	
Symbol	68=[CP3]	
Valid for Inputs	[1] to [8]	
Required Settings	P060 to P067, C169	-
Default terminal	Requires config.	


ł

Three Multi-stage Position Select inputs are binary-encoded to select one of eight settings, P060 to P067. Input [CP1] is the LSB; [CP3] is the MSB. If no position select inputs are assigned, P060 becomes the default position setting.

Function	Multi-Position	Input Function		
Code	Wulti-i Osition	[CF3]	[CF2]	[CF1]
P060	Position setting 0	0	0	0
P061	Position setting 1	0	0	1
P062	Position setting 2	0	1	0
P063	Position setting 3	0	1	1
P064	Position setting 4	1	0	0
P065	Position setting 5	1	0	1
P066	Position setting 6	1	1	0
P067	Position setting 7	1	1	1

The three multi-stage position select inputs [CF1, [CF2], and [CF3] are binary-encoded. When more than one input changes state to select a position, it is possible that skewing of input transitions would briefly select undesired intermediate positions. To avoid this problem, a determination time feature is available. Parameter C169 sets a delay time that applies uniformly to all three inputs. It operates according to the following process:

- The determination timer is initialized upon an input transition. The transition is not yet transferred to the output.
- The timer is initialized again if an input transitions before the timer expires.
- When the timer expires, the state of all three position select inputs is transferred to the output (to generate a new position selection, P060 to P067).

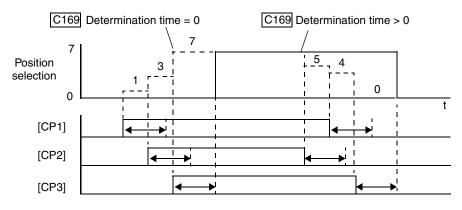

Note that excessively long determination time settings will reduce the overall performance of the position select inputs.

Zero-Return Functions

 Opt. Code and Symbol
 69=[ORL] 70=[ORG]
 (a

 Valid for Inputs
 [1] to [8]
 [


 Required Settings
 P068, P069, P070, P071
 [

 Default terminal
 Requires config.
 [

A *zero-return* operation (also called a *home-return*) occurs when the motor moves the load to a particular starting position. Using parameter P068, you may select one of three possible types of zero-return operations. Parameter P069 selects the search direction. The *zero pulse input* (also called *zone input*) signals the arrival at the zero position.

0= ORG				
	Code	Function	Data	Description
[1] to [8]	P068	Zero-return mode selection	00	Low speed
P068, P069,			01	High speed 1
P070, P071			02	High speed 2
Requires	P069	Zero return direction selection	00	Forward
config.			01	Reverse

It is generally a requirement (or good practice) to perform a zero-return operation after every powerup of the inverter. It is possible that the previous power OFF occurred when the load was not at zero position. Or, it may be that an external force moved the load during the power OFF period. If you do not perform a zero-return operation after power ON, then the inverter uses the current position at powerup as the zero position.

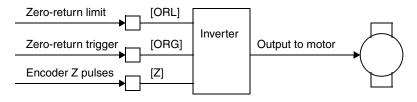


The three available zero-return modes differ in the overall search speed, final approach direction to the origin, and the limit switch input transition (or encoder pulse, if used) causing the final stop. Choose the zero-return mode that best fits your application.


Low-speed Zero Return:

- 1. Motor accelerates for the specified acceleration time to the low zero-return speed
- 2. Motor runs at the low zero-return speed
- **3.** Inverter stops motor and sets position value to zero when [ORL] signal turns ON

High-speed 1 Zero Return:

- 1. Motor accelerates for specified acceleration time to high zero-return speed
- 2. Motor runs at high zero-return speed
- 3. Motor starts deceleration when [ORL] signal turns ON
- 4. Motor runs in reverse direction at low-speed zero-return speed
- 5. Inverter stops motor and sets position value to zero when [ORL] signal turns OFF

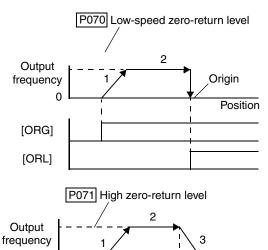

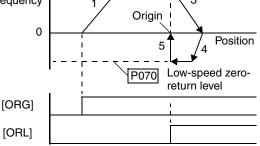

sales@hitachiacdrive.com


sales@hitachiacdrive

SJ7002 Inverter



High-speed 2 Zero Return:

- 1. Motor accelerates for specified acceleration time to high zero-return speed
- 2. Motor runs at high zero-return speed
- 3. Motor starts deceleration when [ORL] signal turns ON
- **4.** Motor runs in reverse direction at low-speed zero-return speed
- 5. Motor starts deceleration to stop when [ORL] signal turns OFF
- 6. Motor accelerates in forward direction to low-speed zero return level

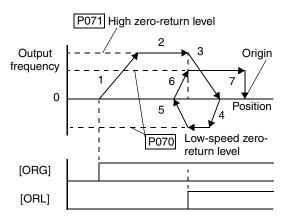


7. Inverter stops motor and sets position value to zero when next [Z] signal pulse occurs

Forward/Reverse Drive Stop

Opt. Code	71=[FOT]	
and Symbol	72=[ROT]	
Valid for Inputs	[1] to [8]	
Required Settings	none	
Default terminal	Requires config.	

The forward/reverse drive stop function prevents the motor from moving a load outside a desired position range. The end of travel in each direction must cause the appropriate input signal, [FOT] or [ROT], to turn ON. Typically a limit switch or proximity switch is used to generate these signals.

If the [FOT] turns ON during forward rotation (or [ROT] turns ON during reverse rotation), the inverter limits the motor torque to 10% in the current direction of travel.

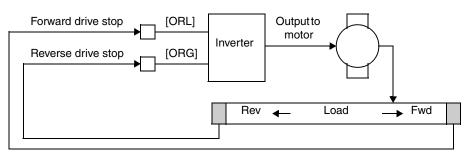


Speed/Position Control Select

Opt. Code	73
Symbol	[SPD]
Valid for Inputs	[1] to [8]
Required Settings	A044=05, P012
Default terminal	Requires config.

Turn ON the [SPD] terminal input to perform speed control while in absolute position control mode. The direction of rotation depends on the operation command (FWD or REV). When switching from speed control to position control, be sure to verify the sign of the value set in the operation command.

While the [SPD] terminal is OFF, the current position count remains at zero. If the [SPD] terminal is turned OFF during motor operation, the control mode switches to position control and pulse counting begins, starting from zero. If the target position value is also zero, the inverter stops the motor at the current position. Otherwise, rotation continues until motor rotation arrives at the target position.

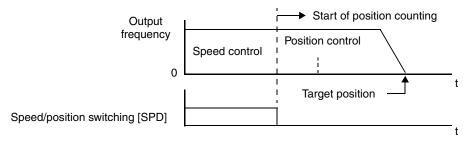

hitachiacdrive.com

Using Intelligent Input Terminals


Pulse Counter Signals

Opt. Code	74=[PCNT]
and Symbol	75=[PCC]
Valid for Inputs	[1] to [8]
Monitor Settings	D028
Default terminal	Requires config.

The intelligent pulse counter input [PCNT] allows you to input a pulse train up to 100 Hz via an intelligent input terminal. (For high-speed applications, use the encoder input expansion card instead.) Monitor the cumulative count with D028, pulse counter function. The value of the cumulative count cannot be stored in a separate register or parameter. The counter value is cleared to zero when inverter power is turn ON or the inverter is reset. You may also use the [PCC] Pulse Counter Clear input to clear the cumulative count.

The frequency resolution of the input pulse can be calculated by the formula shown below (assuming a pulse signal input with 50% duty cycle). Do not input higher frequencies than the calculated value.


Frequency resolution (Hz) = 250 / input terminal response setting (C160 to C168) + 1) Example: When the input terminal response time = 1, the frequency resolution = 125 Hz

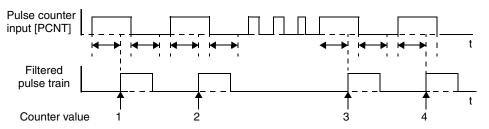

4 - 43

Using Intelligent Output Terminals


The intelligent output terminals are programmable in a similar way to the intelligent input terminals. The inverter has several output functions that you can assign individually to five physical logic outputs. Along with these solid-state outputs, the alarm relay output has type Form C (normally open and normally closed) contacts. The relay is assigned the alarm function by default, but you can assign it to any of the functions that the open-collector outputs can use.

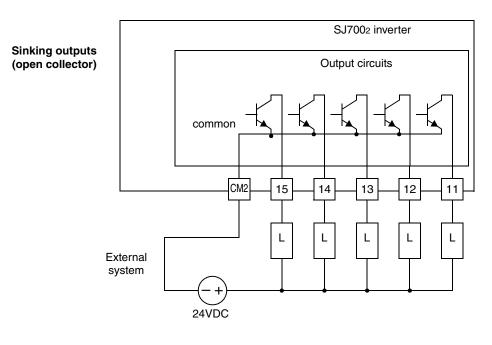



TIP: The open-collector transistor outputs can handle up to 50mA each. We highly recommend that you use an external power source as shown. It must be capable of providing at least 250mA to drive the outputs at full load.

If you need output current greater than 50mA, use the inverter output to drive a small relay. Be sure to use a diode across the coil of the relay as shown (reversebiased) in order to suppress the turn-off spike, or use a solid-state relay.

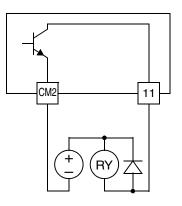


<u>Call 1(800)985-6929</u> for Sales

Run Signal

Opt. Code	00	
Symbol	[RUN]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	(none)	
Default terminal	[12]	

When the [RUN] signal is selected as an intelligent output terminal, the inverter outputs a signal on that terminal when it is in Run Mode. The output logic is active low, and is the open collector type (switch to common).

The timing diagram to the right shows the Run Signal operation in detail. The inverter outputs the [RUN] signal whenever the inverter output exceeds the start frequency specified by parameter B082. The start frequency is the initial inverter output frequency when it turns ON.

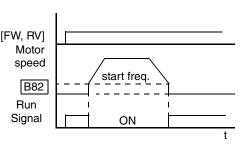

NOTE: If you use an intelligent output to drive an external relay, be sure to connect a diode across the relay coil. This will prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

Frequency Arrival Signals

Opt. Code

and

terminals

01=[FA1]

02=[FA2]

06=[FA3]

config.

The Frequency Arrival group of outputs help coordinate external systems with the current velocity profile of the inverter. As the name implies, output [FA1] turns ON when the output frequency arrives at the standard set frequency (parameter F001). Outputs [FA2] through [FA5] provide variations on this function for increased flexibility, relying on two programmable accel/ decel thresholds. For example, you can have an output turn ON at one frequency during acceleration, and have it turn OFF at a different frequency during deceleration. All transitions have hysteresis to avoid output chatter if the output frequency is near one of the thresholds.

Symbol	24=[FA4]		1	
	25=[FA5]	Symbol	Function Name	Description
Valid for Outputs	[11 to [15], [ALx]	FA1	Frequency arrival type 1 – constant speed	ON when output to motor is at the standard set frequency F001
Required Settings	F001 for FA1 C042 and	FA2	Frequency arrival type 2 – over-frequency	ON when output to motor is at or above the FA threshold 1 (C042) during accel
	C043 for FA2 and FA3 C045 and	FA3	Frequency arrival type 3 – at frequency	ON when output to motor is at the FA threshold 1 (C042) during accel, or at C043 during decel
	C046 for FA4 and FA5	FA4	Frequency arrival type 4 – over-frequency (2)	ON when output to motor is at or above the FA threshold 2 (C045) during accel
Default terminal	[11]=[FA1]	FA5	Frequency arrival type 5 – at frequency (2)	ON when output to motor is at the FA threshold 2 (C045) during accel, or at C046 during decel
Other	Requires	L	1	

Note the following:


- For most applications you will need to use only one or two of the frequency arrival type outputs (see example). However, it is possible to assign all five output terminals to output functions [FA1] through [FA5].
- For each frequency arrival threshold, the output anticipates the threshold (turns ON early) by an amount equal to 1% of the maximum frequency set for the inverter.
- The output turns OFF as the output frequency moves away from the threshold, delayed by an amount equal to 2% of the max. frequency.


Frequency arrival output [FA1] uses the standard output frequency (parameter F001) as the threshold for switching. In the figure to the right, the inverter accelerates to the set output frequency, which serves as the threshold for [FA1]. Parameters F_{on} and F_{off} illustrate the hysteresis that prevents output chatter near the threshold value.

- F_{on} is 1% of the max. output frequency
- F_{off} is 2% of the max. output frequency


The hysteresis effect causes the output to turn ON slightly *early* as the speed approaches the threshold. Then the turn-OFF point is slightly *delayed*. The 1% and 2% values also apply to the remaining Frequency arrival outputs, discussed below.

Frequency Arrival outputs [FA2] and [FA4] work the same way; they just use two separate threshold pairs as shown in the figure. These provide for separate acceleration and deceleration thresholds to provide more flexibility than for [FA1]. [FA2] uses C042 and C045 for ON and OFF thresholds, respectively. [FA4] uses C043 and C046 for ON and OFF thresholds, respectively. Having different accel and decel thresholds provides an asymmetrical output function. However, you can use equal ON and OFF thresholds, if desired.

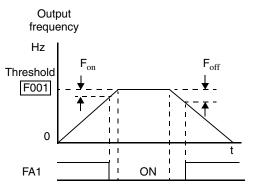

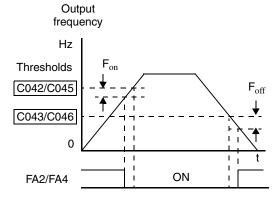


Frequency Arrival outputs [FA3] and [FA5] use the same threshold parameters as [FA2] and [FA4] above, but operate in a slightly different way. Refer to the diagram below. After the frequency arrives at the first threshold during acceleration and turns ON [FA3] or [FA5], they turn OFF again as the output frequency accelerates further. The second thresholds work similarly during deceleration. In this way, we have separate ON/OFF pulses for acceleration and deceleration.

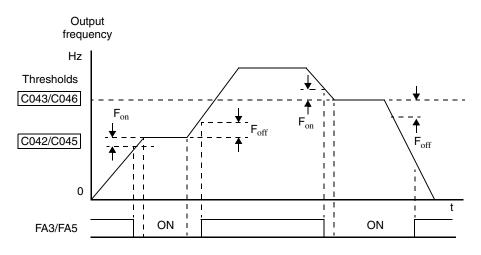

Overload Advance Notice Signal

Opt. Code and	03=[OL] 26=[OL2]	
Symbol		
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	C041, C111	
Default terminal	Requires config.	

When the output current exceeds a preset value, the [OL] or [OL2] terminal signal turns ON. Parameter C041 sets the overload threshold for [OL]; parameter C111 sets it for [OL2]. The overload detection circuit operates during powered motor operation and during regenerative braking. The output circuits use open-collector transistors, and are active low.

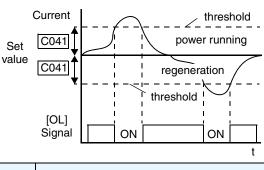

11	Symbol	Function Name	Description
es	OL	Overload advance notice signal (1)	ON when output current is more than the set threshold for the overload signal (C041)
	OL2	Overload advance notice signal (2)	ON when output current is more than the set threshold for the overload signal (C111)

Note the following:


- The default threshold value is 100%. To change the level from the default, set C041 or C111(overload level).
- The accuracy of this function is the same as the function of the output current monitor on the [FM] terminal (see <u>"Analog Output Operation" on page 4–66</u>).

NOTE: If you use an intelligent output to drive an external relay, be sure to connect a diode across the relay coil. This will prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

Output Deviation for PID Control

Opt. Code	04
Symbol	[OD]
Valid for Outputs	[11 to [15], [ALx]
Required Settings	C044
Default terminal	Requires config.

The PID loop error is defined as the magnitude (absolute value) of the difference between the Setpoint (target value) and the Process Variable (actual value). When the error magnitude exceeds the preset value for C044, the [OD] terminal signal turns ON. The default deviation value is set to 3%. To change this value, change parameter C044 (deviation level). Refer to <u>"PID Loop Operation" on page 4–75</u>.

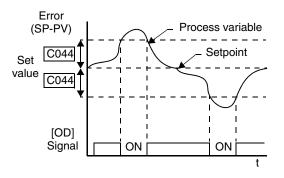




NOTE: If you use an intelligent output to drive an external relay, be sure to connect a diode across the relay coil. This will prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.

Alarm Signal

Opt. Code	05	
Symbol	[AL]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	C026, C036	
Default terminals	Relay [AL0], [AL1], [AL2]	

The inverter Alarm Signal is active when a fault has occurred and it is in the Trip Mode (refer to the diagram at right). When the fault is cleared the Alarm Signal becomes inactive.


We must make a distinction between the Alarm *Signal* AL and the alarm relay *contacts* [AL0], [AL1] and [AL2]. The signal AL is a logic function, which you can assign to the open collector output terminals [11] to [15], or the relay outputs. The most common (and default) use of the relay is for AL, thus the labeling of its termi-

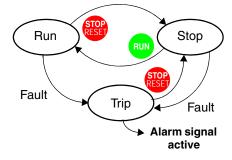

nals. Use an open collector output (terminals [11] to [15]) for a low-current logic signal interface or to energize a small relay (50 mA maximum). Use the relay output to interface to higher voltage and current devices (10 mA minimum). Note the following:

- When the alarm output is set to normally closed, a time delay of less than 2 seconds occurs until the contact is closed when the power is turned ON.
- Terminals [11] [15] are open collector outputs, so the electrical specifications of [AL] are different from the contact output terminals [AL0], [AL1], [AL2].
- When the inverter power supply is turned OFF, the alarm signal output is valid as long as the external control circuit has power.
- This signal output has the delay time (300ms nominal) from the fault alarm output.
- The relay contact specifications are in <u>"Specifications of Control and Logic Connections" on page 4–9</u>. The contact diagrams for different conditions are on the next page.

The alarm output terminals operate as shown below (left) by default. The contact logic can be inverted as shown (below right) by using the parameter setting C036. The relay contacts normally open (N.O.) and normally closed (N.O.) convention uses "normal" to mean the inverter has power and is in Run or Stop Mode. The relay contacts switch to the opposite position when it is in Trip Mode or when input power is OFF.

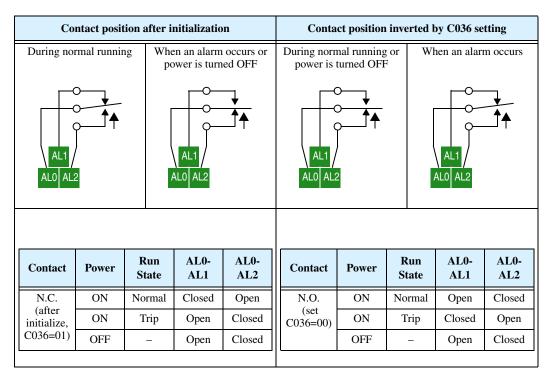

0 to 200%

07

Using Intelligent Output Terminals

C058

C021 to C025

Over-torque Signal		The Over-torque function [OTQ] turns ON when the estimated value of output torque of motor increases more than the arbitrary level set for the output (see table below). Recall that the torque limit function, covered in <u>"Torque Limit" on page 4–30</u> , actually limits the torque						
Opt. Code	07	during certain opera	ating conditions. Instead, the over-torque output featur	e only monitors the				
Symbol	[OTQ]	torque, turning ON output [OTQ] if the torque is above programmable thresholds you set. The [OTQ] function is valid only for sensorless vector control, 0-Hz domain sensorless vector						
Valid for Outputs	[11 to [15], [ALx]	control, or vector control with sensor. Do not use the [OTQ] output except for these inverter operational modes.						
Required	C055, C056, C057, C058	Code	Function/Description	Data or Range				
Settings	A044 = 03 or 04 or 05	C055	Over-torque, forward-driving level setting	0 to 200%				
Default		C056	Over-torque, reverse-regenerating, level setting	0 to 200%				
terminals	[14]	C057	Over-torque, reverse-driving, level setting	0 to 200%				

The assignment of the Over-torque function to an output terminal [OTQ] is detailed in the table at the left.

Over-torque, forward-regenerating, level setting

Intelligent output terminal [11] to [15] function

Instantaneous Power Failure / Under-voltage Signal

Opt. Code	08=[IP]	
and Symbol	09=[UV]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	B001, B002, B003, B004, B005, B007	
Default terminals	Requires config.	

An instantaneous power failure (complete loss) or under-voltage condition (partial loss) of inverter input voltage can occur without warning. SJ7002 Series inverters can be configured to respond to these conditions in different ways. You can select whether the inverter trips or retries (restart attempt) when an instantaneous power failure or under-voltage condition occurs. You can select the retry function with parameter B001.

Symbol	Function Name	Description
IP	Instantaneous Power Failure	ON when the inverter detects a loss of input power
UV	Under-voltage condition	ON when the inverter input power is less than the specified input range

When enabled, the Retry Function operates in the following ways:

Under-voltage conditions – When an instantaneous power failure or under-voltage condition occurs, the inverter will attempt to restart up to 16 times. A trip condition will occur on the 17th attempt, which must be cleared with the Stop/Reset key. When connecting control power supply terminals [Ro]–[To] to the DC bus [P]–[N], an under-voltage may be detected at power-off and cause a trip. If this is undesirable, set B004 to 00 or 02.

Over-current/voltage conditions – When retry function is selected and an over-current or an over-voltage condition occurs, a restart is attempted 3 times. A trip will occur on the 4th failed restart attempt. Use parameter B004 to select the trip and alarm response to instantaneous power failure and under-voltage conditions.

If an over-voltage or over-current trip occurs during the deceleration and an instantaneous power failure error (E16) is displayed the inverter goes into free-run stop. In this case make the deceleration time longer.

4-49

Code	Function	Data or Range	Description
B001	Selection of automatic restart	00	Alarm output after trip, automatic restart disabled
	mode	01	Restart at 0 Hz
		02	Retry with frequency matching to present motor speed
		03	Retry with frequency matching followed by deceleration to stop— then trip alarm
B002	Allowable under- voltage power failure time	0.3 to 1.0 sec.	The amount of time a power input under-voltage can occur without tripping the power failure alarm. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected. If it exists less than this time retry will be attempted.
B003	Retry wait time before motor restart	0.3 to 100 sec.	Time delay after a trip condition goes away before the inverter restarts the motor
B004	Instantaneous	00	Disable
	power failure / voltage trip alarm	01	Enable
	enable	02	Disable during stop and ramp to stop
B005	Number of restarts on power failure /	00	Restart up to 16 times on instantaneous power failure or under-voltage
	under-voltage trip events	01	Always restart on instantaneous power failure or an under-voltage condition
B007	Restart frequency threshold	0.00 to 400.0 Hz; model -4000HFx2	When frequency of the motor is less than this value, the inverter will restart


Use the parameters listed in the table below to define Instantaneous Power Failure and Under-voltage Signal operation.

In the following examples, t_0 = instantaneous power failure time, t_1 = allowable under-voltage / power failure time (B002), and t_2 = retry wait time (B003).


at 0 Hz

is 0.00 to 120.0 Hz

Example 1: Power failure within allowed limits; resume

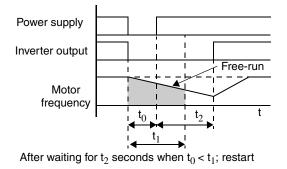


Example 2: Power failure longer than limits; trip

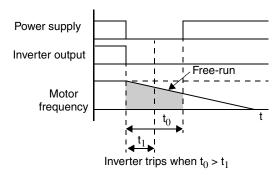


<u>all 1</u>(800)985-6929 for Sales

Examples 3 and 4 relate to configuring the inverter to retry upon power failure. Frequency matching is possible if the inverter frequency is greater than the B007 value. In this case, the inverter reads the motor RPM and direction. If this speed is higher than the matching setting (B007), the inverter waits until they are equal and then engages the output to drive the motor (example 3). If the actual motor speed is less than the restart frequency setting, the inverter waits for t_2 (value in B003) and restarts from 0 Hz (example 4). The display shows "0000" during an actual frequency matching event.

Example 3: Motor resumes via frequency-matching

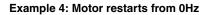

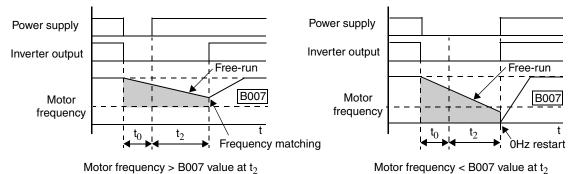

The Instantaneous Power Failure and Alarm output responses during various power loss conditions are shown in the diagram below. Use B004 to enable/disable the alarm output when instantaneous power failure or under-voltage occurs. The alarm output will continue while the control power of the inverter is present, even if the motor is stopped. Examples 5 to 7 correspond to normal wiring of the inverter's control circuit. Examples 8 to 10 correspond to the wiring of the inverter's control circuit for controlled deceleration after power loss (see "Optional Controlled Decel and Alarm at Power Loss" on page 4–4).

Instantaneous power failure operation with standard R0–T0 connections

Instantaneous power failure operation with R0–T0 connected to P–N

Example 5	Inverter : Stop		Inverter : Run	Example 8	Inverter : Stop		Inverter : Run
Power	1 0	Power 1	1	Power 0 -	-	Power 0	1
Run command	1	Run command $\begin{array}{c} 1 \\ 0 \\ - \end{array}$	<u>1</u>	Run command 1 0 -		Run command 1	1
Output		Output	<u>1</u>	Output		Output	<u>``</u>
Alarm	1 0	Alarm 1 0	<u>_</u>	Alarm 1 0 -		Alarm 1	
Inst. Power Fail	0	Inst. Power Fail 1 0		Inst. Power Fail 1 0 -		Inst. Power Fail 1 0	
Example 6	Inverter : Stop		Inverter : Run	Example 9	Inverter : Stop		Inverter : Run
Power		Power 0	1	Power 0 -		Power 0	<u>ا ا ا</u>
Run command	1 0	Run command $\begin{bmatrix} 1 \\ 0 \end{bmatrix}$	<u>1</u>	Run command $\begin{bmatrix} 1 \\ 0 \end{bmatrix}$		Run command $\begin{bmatrix} 1 \\ 0 \end{bmatrix}$	1
Output		Output	<u>1</u>	Output		Output	<u>``</u>
Alarm	0	Alarm 1 0		Alarm 1 0 -		Alarm 1 0	
Inst. Power Fail	1 0	Inst. Power Fail 1 0		Inst. Power Fail 1 0 -	(under-voltage)	Inst. Power Fail 1 0	
Example 7	Inverter : Stop		Inverter : Run	Example 10	Inverter : Stop		Inverter : Run
Power	1 0	Power 0		Power 0 -		Power 0	<u>المالية</u>
Run command	1	Run command 0	<u>1</u>	Run command $\begin{bmatrix} 1 \\ 0 \end{bmatrix}$		Run command $\begin{bmatrix} 1 \\ 0 \end{bmatrix}$	1
Output		Output		Output		Output	<u>``</u>
Alarm	1	Alarm 1 0		Alarm 1 0 -		Alarm 1 0 —	
Inst. Power Fail	1 0	Inst. Power Fail 1 0		Inst. Power Fail 1 0 -		Inst. Power Fail 1 0	

Torque Limit Signal

Opt. Code	10	
Symbol	[TRQ]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	B040 if B040=00 then set B041, B042, B043, B044	
Default terminals	Requires config.	

The Torque Limit output [TRQ] works in conjunction with the torque limit function covered in the intelligent input section. The torque limit function limits the motor torque according to the criteria selected by parameter B040. When torque limiting occurs, the [TRQ] output turns ON, then turns OFF automatically when the output torque falls below the specified limits. Note that the Torque Limit input [TL] must be ON in order to enable torque limiting and its related output, [TRQ]. See <u>"Torque Limit" on page 4–30</u> in the intelligent input section.

Run Time / Power-On Time Over Signals

SJ7002 Series inverters accumulate the total hours in Run Mode (run time) and the total hours of power-ON time. You can set thresholds for these accumulating timers. Once the threshold is exceeded, an output terminal will turn ON. One use of this is for preventative maintenance. A signal light or audible alert could signal the need for servicing, calibration, etc.

Opt. Code	11=[RNT]				
and Symbol	12=[ONT]	Symbol	Function Name	Description	
Valid for Outputs	L L 1/		Run Time Over	ON when the accumulated time spent in Run Mode exceeds the limit (B034)	
Required Settings	B034	ONT	Power-ON Time Over	ON when the accumulated power-ON time exceeds the limit (B034)	
Default terminals	Requires config.	The two outputs [RNT] and [ONT] share the same time threshold parameter, B034. Typically, you will use either the [RNT] or the [ONT] output only—not both at once. These outputs are useful for the notification that a preventative maintenance interval has expired.			

Signal					
Opt. Code	10	i			
Symbol	[THM]	(-			
Valid for Outputs	[11 to [15], [ALx]	e t			
Required Settings	C061				
Default terminals	Requires config.				


Thermal Warning

The purpose of the electronic thermal setting is to protect the motor from overloading, overheating and being damaged. The setting is based on the rated motor current. The inverter calculates the thermal rise (heating) of the motor using the current output to the motor squared, integrated over the time spent at those levels. This feature allows the motor to draw excessive current for relatively short periods of time, allowing time for cooling.


The Thermal Warning output [THM] turns ON to provide a warning before the inverter trips for electronic thermal protection. You can set a unique thermal protection level for each of the three motor profiles, as shown in the table below.

Function Code	Function/Description	Data or Range	
B012/B212 /B312	Electronic thermal setting (calculated within the inverter from current output)	Range is 0.2 * rated current to 1.2 * rated current	
B013/B213 Electronic thermal characteristic (use		00	Reduced torque
/B313	the setting that matches your load)	01	Constant torque
		02	Free-setting

- The electronic thermal overload function uses the output current and time to calculate thermal heating of the motor. Use parameter C061 to set the threshold from 0 to 100% of trip level for turning ON the intelligent output [THM] at that level.
- The thermistor input of the inverter is a separate function from the electronic thermal function. It has its own threshold to cause a trip alarm at a particular thermistor resistance.

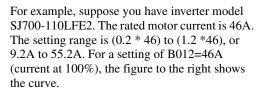


The electronic thermal characteristic adjusts the way the inverter calculates thermal heating, based on the type of torque control the inverter uses.

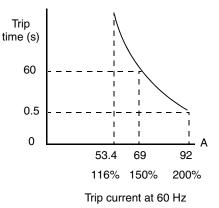




CAUTION: When the motor runs at lower speeds, the cooling effect of the motor's internal fan decreases.

Reduced Torque Characteristic – The example below shows the effect of the reduced torque characteristic curve (for example motor and current rating). At 20Hz, the output current is reduced by a factor of 0.8 for given trip times.

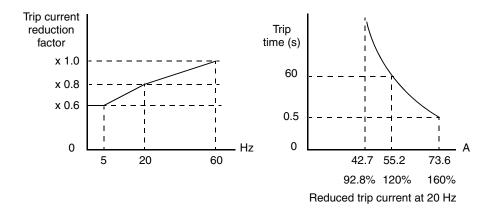

-53


Constant Torque Characteristic – Selecting the constant torque characteristic for the example motor gives the curves below. At 2.5 Hz, the output current is reduced by a factor of 0.9 for given trip times.

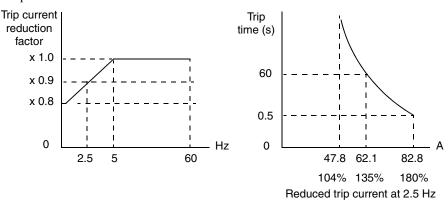


Free Thermal Characteristic - It is possible to set the electronic thermal characteristic using a free-form curve defined by three data points, according to the table below.

Function Code	Name	Description	Range
B015 / B017 / B019	Free-setting electronic thermal frequency 1, 2, 3	Data point coordinates for Hz axis (horizontal) in the free-form curve	0 to 400Hz
B016 / B018 / B020	Free setting electronic thermal current 1, 2, 3	Data point coordinates for Ampere axis (vertical) in the free-form curve	0.0 = (disable) 0.1 to 1000.

The left graph below shows the region for possible free-setting curves. The right graph below shows an example curve defined by three data points specified by B015 - B020.

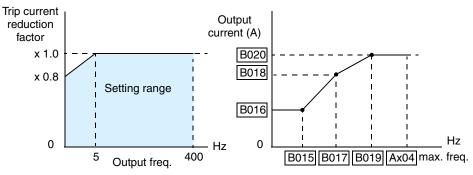

Suppose the electronic thermal setting (B012) is set to 44 Amperes. The graph below shows the effect of the free setting torque characteristic curve. For example, at (B017) Hz, the output current level to cause overheating in a fixed time period is reduced to (B018) A. Points (x), (y), and (z) show the adjusted trip current levels in those conditions for given trip times.

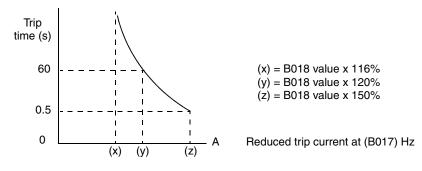

Call 1(800)985-6929 for Sales

hitachiacdrive.com


sales@hitachiacdrive.com

Brake Control Signals

-54

Opt. Code	19=[BRK]
and Symbol	20=[BER]
Valid for Outputs	[11 to [15], [ALx]
Required Settings	B120, B121, B122, B123, B124, B125, B126
Default terminals	Requires config.

The Brake Control function enables the inverter to control external braking systems with a particular safety characteristic. The brake release logic convention is such that an open circuit fault (such as loose wire) causes the external brake to engage. A complete discussion of the operation of brake control is in <u>"External Brake Control Function" on page 4–32</u>. The diagram below shows the signals that are important to the External Brake Control function.

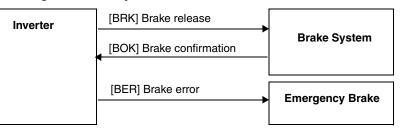

Symbol	Function Name	Input State	Description
BRK	Brake Release	ON	when the inverter signals the external brake system to release (open) its brake
		OFF	when the inverter is not driving the motor, and needs the external brake engaged
BER	Brake Error	ON	when the output current is less than the set releasing current
		OFF	when the brake function is not in use, or when the output current to the motor is correct and it is safe to release the brake

Operations and Monitoring

Expansion Card Output Signals

Other outputs listed below require expansion card SJ-FB Encoder Feedback board. Please see the SJ-FB manual for more information.

Opt. Code and		21=[ZS] 22=[DSE]	Opt. Code	Symbol	Function Name	Description
Symbol	Symbol	23=[POK]	21	ZS	Zero Speed Detect signal	Signal indicates the encoder pulses of the
Valid for Outputs Required Settings		[11 to [15], [ALx]				motor have stopped
	•		22	DSE	Speed Deviation Excessive	Velocity error exceeds the error threshold
	C061				defined by parameter P026	
	Settings		23	POK	Positioning Completion	Indicates the load position is at the target
	Default erminals	Requires config.				·

4-55

Analog Disconnect Detection


Opt. Code	27=[Odc]	
and Symbol	28=[OIdc]	
	29=[O2dc]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	B070, B071, B072	
Default terminal	Requires config.	

The analog disconnect detection is useful when the inverter receives a speed reference from an external device. Upon input signal loss at either the [O], [OI], or [O2] terminal, the inverter normally just decelerates the motor to a stop. However, the inverter can use the intelligent output terminals [ODc], [OIdc], or [O2dc] to signal other machinery that a signal loss has occurred.

Each analog disconnect output has independent thresholds, set by B070, B071, and B072. When the input is below the set threshold value, the inverter substitutes the threshold value for the input. Related parameters are given in the following tables.

Opt. Code	Symbol	Function Name	
27	Odc	Analog [O] disconnect detect	
28	OIdc	Analog [OI] disconnect detect	
29	O2dc	Analog [O2] disconnect detect	

Code	Function	Data or Range	Description
B070	[O] input disconnect threshold	0 to 100%	If [O] value < B070, turn ON [Odc]; substitute B070 value for [O] input
		no (255)	Ignore B070 setting
B071	[OI] input disconnect threshold	0 to 100%	If [OI] value < B071, turn ON [Odc]; substitute B071 value for [OI] input
		no (255)	Ignore B071 setting
B072	[O2] input disconnect threshold	0 to 100%	If [O2] value < B072, turn ON [Odc]; substitute B072 value for [O2] input
		no (255)	Ignore B072 setting

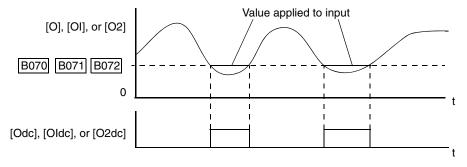

The inverter can also detect when an analog input value is within a range (or *window*) of values. See <u>"Window Comparator Signals" on page 4–62</u>.

Using Intelligent Output Terminals

PID Feedback Second Stage Output

Opt. Code	31		
Symbol	[FBV]		
Valid for Outputs	[11 to [15], [ALx]		
Required Settings	C052, C053		
Monitor Settings	D004		
Default terminals	Requires config.		

The inverter has a built-in PID loop feature for two-stage control, useful for certain applications such as building ventilation or heating and cooling (HVAC). In an ideal control environment, a single PID loop controller (stage) would be adequate. However, in certain conditions, the maximum output energy from the first stage is not enough to maintain the Process Variable (PV) at or near the Setpoint (SP). And, the output of the first stage is in saturation. A simple solution is to add a second stage, which puts an additional and constant amount of energy into the system under control. When sized properly, the boost from the second stage brings the PV toward the desired range, allowing the first stage PID control to return to its linear range of operation.


The two-stage method of control has some advantages for particular applications.

- The second stage is only ON in adverse conditions, so there is an energy savings during normal conditions.
- Since the second stage is simple ON/OFF control, it is less expensive to add than just duplicating the first stage.
- At powerup, the boost provided by the second stage helps the process variable reach the desired setpoint sooner than it would if the first stage acted alone.
- Even though the second stage is simple ON/OFF control, when it is an inverter you can still adjust the output frequency to vary the boost it provides.

Refer to the example diagram below. Its two stages of control are defined as follows:

- Stage 1 Inverter #1 operating in PID loop mode, with motor driving a fan
- Stage 2 Inverter #2 operating as an ON/OFF controller, with motor driving a fan

Stage #1 provides the ventilation needs in a building most of the time. On some days, there is a change in the building's air volume because large warehouse doors are open. In that situation, Stage #1 alone cannot maintain the desired air flow (PV sags under SP). Inverter #1 senses the low PV and its PID Second Stage Output at [FBV] terminal turns ON. This gives a Run FWD command to Inverter #2 to provide the additional air flow.

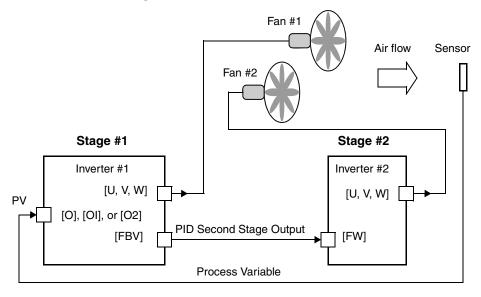

Г	<u>ລລລລລ</u> າ	
	\equiv	
L		


NOTE: The [FBV] is designed for implementing two-stage control. The PV high limit and PV low limit parameters, C052 and C053, do not function as process alarm thresholds. Terminal [FBV] does not provide a PID alarm function.

4–57

To use the PID Second Stage Output feature, you will need to choose upper and lower limits for the PV, via C053 and C052 respectively. As the timing diagram below shows, these are the thresholds Stage #1 inverter uses to turn ON or OFF Stage #2 inverter via the [FBV] output. The vertical axis units are percent (%) for the PID setpoint, and for the upper and lower limits. The output frequency, in Hz, is superimposed onto the same diagram.

When system control begins, the following events occur (in sequence in the timing diagram):


- 1. Stage #1 inverter turns ON via the [FW] Run command.
- **2.** Stage #1 inverter turns ON the [FBV] output, because the PV is below the PV low limit C053. So, Stage #2 is assisting in loop error correction from the beginning.
- **3.** The PV rises and eventually exceeds the PV high limit C052. Stage #1 inverter then turns OFF the [FBV] output to Stage #2, since the boost is no longer needed.
- **4.** When the PV begins decreasing, only Stage #1 is operating, and it is in the linear control range. This region is where a properly configured system will operate most often.
- 5. The PV continues to decrease until it crosses under the PV low limit (apparent external process disturbance). Stage #1 inverter turns ON the [FBV] output, and Stage #2 inverter is assisting again.
- **6.** After the PV rises above the PV low limit, the [FW] Run command to Stage #1 inverter turns OFF (as in a system shutdown).
- 7. Stage #1 inverter enters Stop Mode and automatically turns OFF the [FBV] output, which causes Stage #2 inverter to also stop.

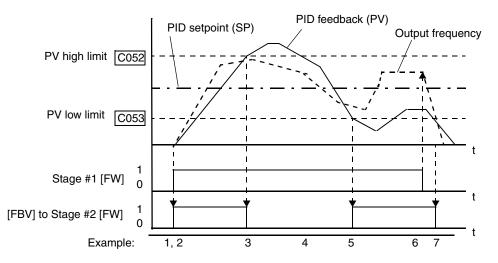

Network Detection Signal

Opt. Code	32		
Symbol	[Ndc]		
Valid for Outputs	[11 to [15], [ALx]		
Required Settings	C076, C077		
Default terminals	Requires config.		

The intelligent output [Ndc] Network Detection Signal indicates the status of ModBus-RTU communications (not ASCII protocol). The [Ndc] terminal turns ON when the external device on the ModBus stops transmitting for a time that exceeds parameter C077, Communication Time-out Before Trip. If a time-out occurs, the output [Ndc] remains ON until ModBus-RTU communication resumes. Use parameter C076 Action Upon Communication Error Selection to select the desired inverter response to a time-out event.

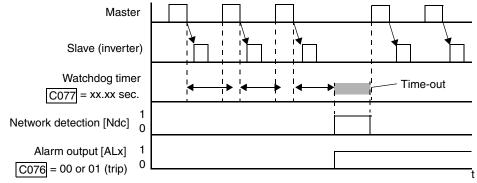

Function

Logic Output 1

Logic Output 2

Logic Output 3

Logic Output 4

Logic Output 5

Logical Operator

C144

C147

C150

C153

C156

Using Intelligent Output Terminals

Option

Code

33

34

35

36

37

Call 1(800)985-6929 for Sales

Logic Output Signals

The Logic Output Function uses the inverter's built-in logic feature. You can select any two of the other intelligent output options for use as internal inputs to the logic function. You may also select from three logical operators AND, OR, or XOR (exclusive OR), to be applied to the two inputs. A total of six outputs are available, shown in the following tables.

A Input

C142

C145

C148

C151

C154

B Input

C143

C146

C149


C152

C155

	33=[LOG1]	inputs. A
	34=[LOG2]	
Opt. Code	35=[LOG3]	Symbol
and Symbol	36=[LOG4]	
	37=[LOG5]	LOG1
	38=[LOG6]	LOG2
Valid for	[11 to [15],	LOG3
Outputs	[ALx]	LOG4
Required	C142 to	LOG5
Settings	C159	LOG6
Default terminal	Requires config.	The exam
	-	C142 age

LOG6 38 C159 C157 C158 Logic Output 6 The example below shows a configuration for [LOG1] Logic Output 1. Parameters C142 and C143 contain option codes for two outputs we select to be used as inputs to the logic operation. Parameter C144 contains the select code for the logic operation. 00=AND, 01=OR, and

02=OR. C142 Intelligent outputs used as internal

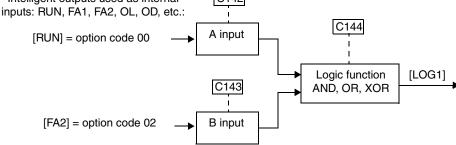

Input States		[LOGx] Output State			
A Input	B Input	AND (00) OR (01 XOR (
0	0	0	0	0	
0	1	0	1	1	
1	0	0	1	1	
1	1	1	1	0	

Capacitor Life Warning

Opt. Code	39
Symbol	[WAC]
Valid for Outputs	[11 to [15], [ALx]
Monitor Settings	D022
Default terminals	Requires config.

The inverter calculates the capacitor life remaining based on the internal temperature of the inverter and the cumulative power-ON time. The [WAC] Capacitor Life Warning output turns ON to indicate that the capacitors have reached end-of-life. If this event occurs, Hitachi recommends that you replace the main circuit board and logic circuit board. You may also use monitor parameter D022 at the digital operator to monitor the status of capacitor life.

Low Cooling Fan

Speed

SJ7002 Inverter

4 - 59

•		t
Opt. Code	40	ł
Symbol	[WAF]	I
Valid for Outputs	[11 to [15], [ALx]	υ
Required Settings	B092	
Monitor Settings	D022	
Default terminals	Requires config.	

The inverter monitors the heat sink cooling fan speed to help prevent overheating. If the speed of the fan(s) decreases to 75% or less of full speed, output [WAF] Low Cooling Fan Speed turns ON. Note that if you set parameter B092 Cooling Fan Control = 01 (Fan ON only during RUN), the inverter will not output the [WAF] signal when the cooling fan is stopped.

If the [WAF] signal turns ON during operation, first check the cooling fan inlet for clogging by dust and debris. If the air circulation path is clear, the fans may need replacement. You may also use monitor parameter D022 at the digital operator to monitor the status of fan speed.

Starting Contact Signal

Opt. Code	41		
Symbol	[FR]		
Valid for Outputs	[11 to [15], [ALx]		
Required Settings	none		
Default terminals	Requires config.		

The inverter generates [FR] Starting Contact Signal to correspond with Run (FW or RV) input commands. The source of the Run command does not matter (so the A002 setting is ignored). If both FW and RV inputs are ON, the inverter stops motor operation and turns OFF the [FR] output. The [FR] signal is useful for external devices that need a traditional starting contact signal to coordinate operation with the inverter.

Forward command			
Reverse command	 	1 	
Starting Contact Signal [FR]			

Heatsink Overheat Warning

Opt. Code	42
Symbol	[OHF]
Valid for Outputs	[11 to [15], [ALx]
Required Settings	C064
Default terminals	Requires config.

The inverter monitors its heatsink temperature to detect overheating. You can use parameter C064, Heatsink Overheat Warning Level, to set the over-temperature threshold for the heatsink in degrees C. The inverter will turn ON intelligent output [OHF] Heatsink Overheat Warning if the heatsink temperature exceeds the value in parameter C064.

Using Intelligent Output Terminals


Low Output Current Signal

	•
Opt. Code	43
Symbol	[LOC]
Valid for Outputs	[11 to [15], [ALx]
Required Settings	C038, C039
Default terminals	Requires config.

The inverter monitors the output current to the motor according to parameter C038, Low Current Indication Output Mode Select. Use parameter C039, Low Current Indication Detection Level, to set the low-current threshold. The Low Output Current Signal [LOC] will turn ON if the output current is less than the C038 threshold and motor operation corresponds to the selected monitoring mode.

Code	Function	Data or Range	Description
C038	Low current indication output mode select	00	Output during acceleration/deceleration and constant speed operation
		01	Output only during constant speed *1
C039	Low current indication detection level	0.0 to 2.0 x rated inverter current	Low current threshold, used for intelligent output [LOC]

Note 1: Note that when parameter A001 Frequency Source Setting = 01 (control terminal), it is possible that the inverter may not recognize a constant speed due to sampling. In this case, change C038 = 00 to include accel./decel., or increase the analog input filter A016 setting.

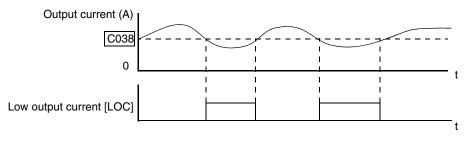

General Output Signals

	44=[MO1]
	45=[MO2]
Opt. Code and	46=[MO3]
and Symbol Valid for Outputs Required Settings	47=[MO4]
	48=[MO5]
	49=[MO6]
	[11 to [15], [ALx]
	See Easy Sequence
Default terminal	Requires config.

Refer to the Easy Sequence Instruction Manual for information on how to configure and use the general purpose outputs MO1 to MO6.

sales@hitachiacdrive

SJ7002 Inverter

4–61

Inverter Ready Signal


Opt. Code	50
Symbol	[IRDY]
Valid for Outputs	[11 to [15], [ALx]
Required Settings	none
Default terminals	Requires config.

The inverter turns ON the Inverter Ready Signal [IRDY] output when it is ready to receive an operation command such as Run Forward, Run Reverse, or Jog. Otherwise, [IRDY] will be OFF and the inverter cannot accept operation commands. If [IRDY] is OFF, then check the input power supply voltage at the [R], [S], and [T] terminals to be sure the voltage is within the input specification range. The [IRDY] output is OFF when the input power is provided only to the control power supply,

Forward/Reverse Rotation Signals

Opt. Code and Symbol	51=[FWR] 52=[RVR]
Valid for Ouputs	[11 to [15], [ALx]
Required Settings	none
Default terminal	Requires config.

The Forward Rotation Signal [FWR] is ON only when the inverter is driving the motor in the *foward* direction. Similarly, the Reverse Rotation Signal [RVR] is ON only when the inverter is driving the motor in the *reverse* direction. Both signals are OFF when the motor is stopped.

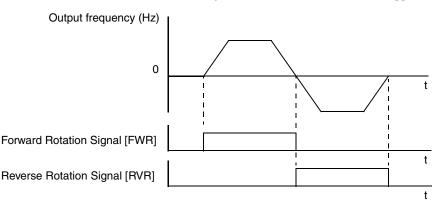

Major Failure Signal

The Major Failure Signal [MJA] indicates that a particular type of error event has occurred, resulting in an inverter trip. In addition to causing the normal trip alarm, the following error events also will turn ON the [MJA] output, when assigned to an intelligent output terminal.

Opt. Code	53	
Symbol	[MJA]	
Valid for Outputs	[11 to [15], [ALx]	
Required Settings	none	
Default terminals	Requires config.	

Error Code	Name	
E 10	CT (current transformer) error	
ε!!	CPU error	
E 14	Ground fault	
620	Inverter thermal trip with low fan speed	
E23	Gate array error	
825	Main circuit error	

Using Intelligent Output Terminals

Window Comparator Signals

Δ. -62


> The window comparator function outputs turn ON when You can also monitor each analog input by comparing it to a threshold value. This feature allows the inverter to detect disconnected signal wiring, loss of power at a signal transmitter, etc. When the input is below the set threshold value, the inverter substitutes the threshold value for the input. The related parameters are given in the following tables.

Opt. Code and Symbol	54=[WCO]
	55=[WCOI]
	56=[WCO2]
Valid for Ouputs	[11 to [15], [ALx]
Required Settings	none
Default terminal	Requires config.

Opt. Code	Symbol	Function Name	
54	WCO	[O] terminal window comparator	
55	WCOI	[OI] terminal window comparator	
54	WCO2	[O2] terminal window comparator	

Code	Function	Range	Description
B060	[O] input maximum limit level of window comparator	0. to 100. (%)	Lower limit = $B061 + B062 \ge 2$
B061	[O] input minimum limit level of window comparator	0. to 100. (%)	Lower limit = $B060 - B062 \times 2$
B062	[O] input hysteresis width of window comparator	0. to 10. (%)	Lower limit = $B061 - B062 \times 2$
B063	[OI] input maximum limit level of window comparator	0. to 100. (%)	Lower limit = $B064 + B066 \ge 2$
B064	[OI] input minimum limit level of window comparator	0. to 100. (%)	Lower limit = $B063 - B066 \ge 2$
B065	[OI] input hysteresis width of window comparator	0. to 10. (%)	Lower limit = $B063 - B064 \ge 2$
B066	[O2] input maximum limit level of window comparator	-100. to 100. (%)	Lower limit = B067 + B068 x 2
B067	[O2] input minimum limit level of window comparator	-100. to 100. (%)	Lower limit = B066 – B068 x 2
B068	[O2] input hysteresis width of window comparator	0. to 10. (%)	Lower limit = B066 – B067 x 2


The following signal diagram shows the window comparator output generated from input signals and comparator settings listed along the Y axis.

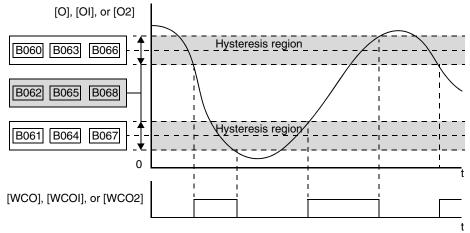


Analog Input Operation

Input Terminal Signals SJ7002 inverters provide for an external analog input to command the inverter frequency output value. The analog input terminal group includes the [L], [OI], [O], [O2], and [H] terminals on the control connector, which provide for Voltage [O] and [O2] or Current [OI] input. All analog input signals must use the analog ground [L].

If you use either the voltage or current analog input, you must select one of them using the logic input terminal function [AT] analog type. If terminal [AT] is OFF, the voltage input [O] can command the inverter output frequency. If terminal [AT] is ON, the current input [OI] can command

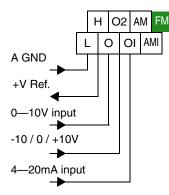

the inverter output frequency. The [AT] terminal function is covered in <u>"Analog Input Current/</u> <u>Voltage Select" on page 4–24</u>. Remember that you must also set A001 = 01 to select analog input as the frequency source.

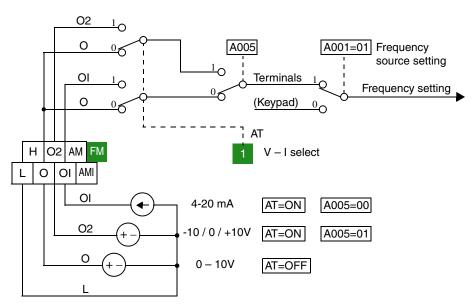

Input Filter

Parameter A016 adjusts an analog input sampling filter that evenly affects all analog inputs shown above. The parameter range is from 1 to 30. Before increasing the filter setting, we recommend trying to find the cause of input analog noise. Check for the following:

- · Look for nearby high-current wiring-avoid any parallel runs to the analog signal wires
- Check the impedance between the chassis grounds of the inverter and the analog signal source equipment—a good connection will have a low impedance
- · Check the analog signal ground impedance from the inverter to the analog signal source
- Avoid ground loops... measure the current (or voltage drop) on the chassis ground and signal ground connections; the ideal value is zero

After taking steps to minimize the analog signal noise sources, increase the filter time constant (A016) until the motor output frequency (when commanded by analog inputs) becomes stable.

Analog Input Operation

<u>Call 1</u>(800)985-6929 for Sales

-64

The following tables show the available analog input settings. Parameters A006, A005, and input terminal [AT] determine the External Frequency Command input terminals that are available and how they function. The Trim Frequency input [O2]—[L] is available (when check marked) for some settings. Other settings make the reverse direction (in addition to forward) available for bipolar input settings (when check marked). A bipolar input responds to positive input voltages with a forward motor rotation, and to negative input voltages with reverse motor rotation.

A006	A005	[AT]	External Frequency Command Input	Trim Frequency Command Input	Reverse avail. (bipolar input)
00	00	OFF	[O]	×	×
OR 03		ON	[OI]	×	×
	01	OFF	[O]	×	×
		ON	[O2]	×	~
01	00	OFF	[O]	[O2]	×
	Example 1	ON	[OI]	[O2]	×
	01	OFF	[O]	[O2]	×
		ON	[O2]	×	~
02	00	OFF	[O]	[O2]	~
	Example 2	ON	[OI]	[O2]	~
	01	OFF	[O]	[O2]	~
		ON	[O2	×	~
_	02	OFF	[O]	[O2]	×
		ON	Keypad pot.	[O2]	×
	03	OFF	[OI]	[O2]	×
		ON	Keypad pot.	[O2]	×
	04	OFF	[O2]	×	~
		ON	Keypad pot.	[O2]	×

The table below applies when the [AT] input function is not assigned to *any* intelligent input terminal. The A005 setting, normally used in conjunction with an [AT] input, is ignored.


A006	A005	[AT]	External Frequency Command Input	Trim Frequency Command Input	Reverse avail. (bipolar input)
00	—		[O2]	×	~
01	_	(not assigned	Summation of [O] and [OI]	[O2]	×
02		to any input terminal)	Summation of [O] and [OI]	[O2]	~
03	—		Summation of [O] and [OI]	×	×



CAUTION: Whenever the [AT] input function is *not* assigned to any input terminal and reverse rotation is not desired or is unsafe, be sure to set A006 = 01. This setting makes the [O2] input unipolar only.


4–65

The examples below show how the use of the [AT] input during operation enables/disables the Trim Frequency Command input [O2]—[L]. The [O2]—[L] input may be used alone, or as an offset control for the primary analog input.

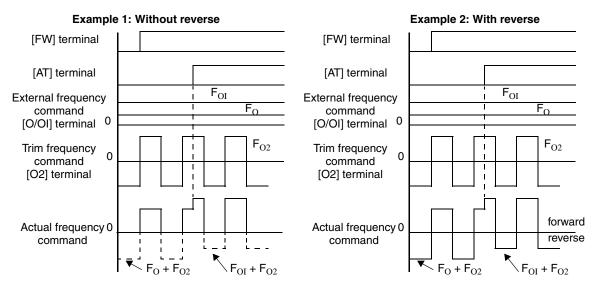

Wiring Examples


Using an external potentiometer is a common way to control the inverter output frequency (and a good way to learn how to use the analog inputs). The potentiometer uses the built-in 10V reference [H] and the analog ground [L] for excitation, and the voltage input [O] for the signal. By default, the [AT] terminal selects the voltage input when it is OFF. Take care to use the proper resistance for the potentiometer, which is 1 to $2k\Omega$, 2 Watts.

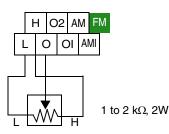

Voltage Input – The 0–10V voltage input circuit uses terminals [L] and [O]. Attach the signal cable's shield wire to terminal [L] on the inverter only. DO NOT ground the shield at its other end. Maintain the voltage within specifications (do not apply negative voltage). Normally a full-span input level (10V) will give the maximum motor frequency. You can use parameter A014 to select a lower voltage for full output frequency (such as using a 5V input signal).

Bipolar Voltage Input – The -10/0/+10V voltage input circuit uses terminals [L] and [O2]. Attach the cable's shield wire to terminal [L] on the inverter only. Maintain the voltage within specifications. Only apply a negative voltage if this input is configured for bipolar use.

Current Input – The current input circuit uses terminals [OI] and [L]. The current comes from a *sourcing* type transmitter; a *sinking* type will not work! This means the current must flow into terminal [OI], and terminal [L] is the return back to the transmitter. The input impedance from [OI] to [L] is 250 Ohms. Attach the cable's shield wire to terminal [L] on the inverter only.

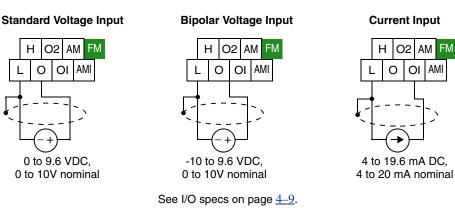

sales@hitachiacdrive.com

Analog Output Operation

<u>Call 1(800)985-6929</u> for Sales


Analog Output Operation

In the system design for inverter applications it is sometimes useful to monitor inverter operation from a remote location. In some cases, this requires only a panel-mounted analog meter (moving-coil type). In other cases, a controller device such as a PLC may monitor and command the inverter frequency and other functions. The inverter can transmit the (real-time) output frequency, current, torque, or other parameters to the controller to confirm actual operation. The monitor output terminal [FM] serves these purposes.

[FM] Terminal

66

The inverter provides an analog/digital output on terminal [FM] (frequency monitor). It uses terminal [CM1] as digital GND reference. While many applications use this terminal to monitor the output frequency, you can configure terminal [FM] to transmit one of several parameters. Most use *pulse-width modulation* (PWM) to represent the value, while one parameter uses *frequency modulation* (FM) to represent the value. Do not confuse the notation for terminal [FM] (with brackets) with FM signal type.

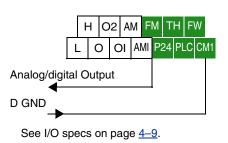

The following table lists the configurations for terminal [FM]. Use function C027 to configure.


Func.	Code	Description	Waveform	Full Scale Value
	00	Output frequency	PWM	0 – Max. frequency (Hz)
	01	Output current	PWM	0-200%
	02	Output torque *1	PWM	0-200%
C027	03	Output frequency	FM	0 – Max. frequency (Hz)
C027	04	Output voltage	PWM	0 - 100%
	05	Input electric power	PWM	0-200%
	06	Thermal load ratio	PWM	0 - 100%
	07	LAD frequency	PWM	0 – Max. frequency (Hz)


Note 1: Display substitutes only during sensorless vector control, 0Hz domain sensorless vector control, and vector control

PWM Signal Type

The *pulse-width modulated* signal at terminal [FM] is primarily designed for driving a movingcoil meter. The pulse-width modulated signal is automatically averaged by the inertia of the moving-coil mechanism—converting the PWM signal to an analog representation. Be sure to use a 10V full-scale DC voltmeter.

The signal characteristics of terminal [FM] in PWM signal configuration is shown below

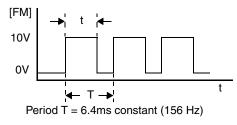

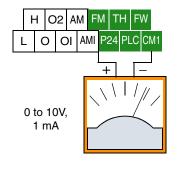

[FM] output value = $\frac{t}{T}$

B081 = [FM] terminal 8-bit gain setting

C27=00, 01, 02, 04, 05, 06, 07

Selects FM type output

4-67


To calibrate the meter reading, generate a full-scale output (always ON) at terminal [FM]. Then use parameter B081(gain setting from 0 to 255) to adjust the corresponding full-scale reading of the meter. For example, when the inverter output frequency is 60 Hz, change the value of B081 so that the meter reads 60 Hz.

TIP: When using the analog meter for monitoring, adjust the meter so it has a zero reading when the [FM] output is zero. Then use scale factor B081 to adjust the [FM] output so the maximum frequency in the inverter corresponds to a full-scale reading on the meter.




NOTE: The indicator accuracy after adjustment is about $\pm 5\%$. Depending on the motor, the accuracy may exceed this value.

PWM Smoothing Circuit – Note that standard analog output signals are available on terminals [AM] and [AMI], covered in the next section. However, you may also wish to smooth the PWM signal at the [FM] terminal and convert it to an analog signal. The [FM] terminal will then generate a relatively stable DC analog voltage that represents the output value. To do this, use the circuit shown to the right. Note the output impedance of the circuit is at least $82k\Omega$, so the monitoring device needs an input impedance of $1M\Omega$ or greater. Otherwise, the impedance of the smoothing circuit will cause a nonlinearity in the reading.

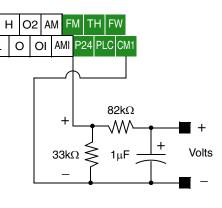

FM Signal Type

The *frequency-modulated* output at terminal [FM] varies its frequency with the inverter output frequency (when C027=03). The signal at [FM] uses the parameter A004 *Maximum frequency setting*. For example, if A004 = 60 Hz, then the maximum signal value at [FM] will be at 60 Hz. This frequency is digitally controlled for accuracy, and does not use the B081 gain setting when C027=03 (frequency modulation).

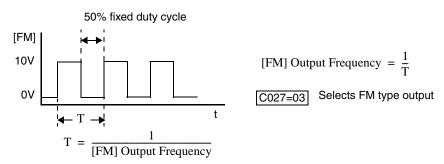

<u>Call 1(800)985-6929</u> for Sales


[AM] and [AMI] Terminals

-68

The [AM] and [AMI] terminals provide signals to monitor various inverter parameters such as output frequency, output current, and torque. The terminals provide these analog signal types:

- [AM] terminal: 0–10V analog output signal
- [AMI] terminal: 4–20mA analog output signal

These signals both use the [L] terminal for signal return. Eight different inverter parameters may be monitored independently at either the [AM] or [AMI] terminal, as listed in the table below. Use C028 to configure terminal [AM], and C029 to configure terminal [AMI].

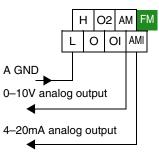

See I/O specs on page <u>4–9</u>.

Func.	Terminal	Code	Description	Full Scale Value
		00	Output frequency	0 – Max. frequency (Hz)
		01	Output current	0-200%
		02	Output torque *1	0-200%
C028 / C029	[AM] / [AMI]	04	Output voltage	0 - 100%
	[]	05	Input electric power	0-200%
		06	Thermal load ratio	0-100%
		07	LAD frequency	0 – Max. frequency (Hz)

Note 1: Display of torque is possible only during sensorless vector control, 0Hz domain sensorless vector control, and vector control with feedback

The analog signals may need some adjustment for gain or offset to compensate for variances in the system. For example, the signals may drive a panel meter and require a full-scale gain adjustment. The table below lists the function codes and their descriptions. The [AM] and [AMI] terminals have separate gain and offset adjustments. Note the default values.

F	unc.	Terminal	Description	Range	Default
В	3080	[AM]	Gain adjustment	0 - 255	180
C	2086	[AM]	Offset Adjustment	0.0 - 10.0V	0.0V
C	2087	[AMI]	Gain adjustment	0 – 255	80
C	2088	[AMI]	Offset Adjustment	0.0 - 20.0mA	0.0mA

Setting Motor Constants for Vector Control

Introduction

These advanced torque control algorithms improve performance, particularly at low speeds:

- Sensorless Vector Control improved torque control at output frequencies down to 0.5 Hz. Use A044=03 (1st motor) or A244=03 (2nd motor) to select sensorless vector control.
- Sensorless Vector Control, 0Hz Domain improved torque control at output frequencies from 0 to 2.5 Hz. Use A044=04 (1st motor) or A244=04 (2nd motor) to select sensorless vector control, 0Hz domain.
- Vector Control with Feedback improved torque control at all speeds, while providing the most accurate speed regulation of all torque control algorithms. Use A044=05 to select vector control with feedback.

These three control algorithms require the inverter's motor constants to accurately match the characteristics of the particular motor connected to your inverter. Simply using the inverter's default parameters with the vector control modes may not produce satisfactory results. The auto-tuning procedure described later in this section is recommended for most applications needing vector control. It determines and records the characteristics of the attached motor. However, it is possible to enter the motor constants directly if the motor manufacturer has provided that data.

After performing an initial auto-tuning procedure for your motor, you have an additional option: adaptive tuning. The adaptive tuning parameters use the auto-tuning procedure's results as starting values. Then, each time the motor runs normally in your application, the inverter tunes the parameters again to match the motor. This compensates for temperature changes, etc., further optimizing the values.

The following table lists the parameters associated with motor constant settings. Function H002 selects the set of motor constants that you want the inverter to use in normal use. Standard constants (select with H002=00) include H020 to H024. Auto-tuned constants (select with H002=01) include H030 to H034. Remember that you have to do the auto-tuning procedure in this section before using either auto-tuned constants or the adaptive mode (H002=02).

Func.	Name	Data	Notes
		00	V/f constant torque
		01	V/f variable torque
A044 / A244 /	V/f characteristic curve selection,	02	V/f free-setting curve
A2447 A344	1st / 2nd / 3rd motors	03	Sensorless vector control (SLV)
		04	Sensorless vector control, 0Hz domain
		05	Vector control with encoder feedback
H002	Motor data selection, 1st motor	00	Standard motor parameters
		01	Auto-tuning parameters
		02	Adaptive tuning parameters
H003	Motor capacity, 1st motor	0.2 - 75, 0.2 - 160	kW, up to -550xxx models kW, -750xxx to -1500xxx models
H004	Motor poles setting, 1st motor	2/4/6/8	Units: poles
H020	Motor constant R1, 1st motor	0.000-65.53	Units: ohms
H021	Motor constant R2, 1st motor	0.000-65.53	Units: ohms
H022	Motor constant L, 1st motor	0.00-655.3	Units: mH
H023	Motor constant Io, 1st motor	0.00-655.3	Units: A
H024	Motor constant J, 1st motor	0.001–99999	Units: kgm ²
H030	Auto-tuned constant R1, 1st motor	0.000-65.53	Units: ohms

Func.	Name	Data	Notes
H031	Auto-tuned constant R2, 1st motor	0.000-65.53	Units: ohms
H032	Auto-tuned constant L, 1st motor	0.00-655.3	Units: mH
H033	Auto-tuned constant Io, 1st motor	0.00-655.3	Units: A
H034	Auto-tuned constant J, 1st motor	0.001–99999	Units: kgm ²

The inverter has three separate motor constant sets named 1st, 2nd, and 3rd. The 1st motor constant set is the default, while the SET and SET2 intelligent inputs select the 2nd and 3rd constant sets, respectively. The torque control methods are valid to use only if a particular motor constant set includes parameters for the selected control method. The following table lists the vector control methods and shows the ones that are valid for each motor constant set.:

Vector Control Method	1st motor	2nd motor	3rd motor
V/f constant torque	~	~	~
V/f variable torque	~	~	~
V/f free-setting curve	~	~	×
Sensorless vector control (SLV)	~	~	×
Sensorless vector control, 0Hz domain	~	~	×
Vector control with encoder feedback	~	×	×

The motor data selection is available only to the 1st motor constant set, selected by function H004. By default, the 2nd and 3rd motor constants sets only store standard motor parameters. The table below shows this arrangement.

Motor data selection	1st motor	2nd motor	3rd motor
Standard motor parameters	~	~	~
Auto-tuning parameters	~	×	×
Adaptive tuning parameters	~	×	×

When motor constant values are available from the motor manufacturer, you can enter them directly. The available motor constant parameters (storage locations) depend on the motor constant set (1st, 2nd, or 3rd) according to the following table.

Motor data selection	1st motor	2nd motor	3rd motor
Standard motor parameters	H020 to H024	H220 to H224	—
Auto-tuning parameters	H030 to H034	—	_
Adaptive tuning parameters	H030 to H034		

4

Auto-tuning of Motor Constants

The SJ7002 inverter features auto-tuning, which detects and records the motor characteristic parameters to use in all vector control modes. Auto-tuning determines the resistance and inductance of motor windings. Therefore, the motor must be connected to the inverter for this procedure. Note that the auto-tuning feature is not associated with PID loop operation, which is common on some control devices. The auto-tuning procedure must be conducted while the inverter is stopped (not in Run mode), so it can use special output pulses to detect motor characteristics.

When using the inverter in sensorless vector control, sensorless vector control - 0Hz domain, or vector control with encoder feedback, the motor circuit constants are important. If they are unknown, then you must first conduct the auto-tuning procedure. The inverter will determine the constants and write new values for the related "H" Group settings. The auto-tuning procedure requires that the inverter be configured to operate the 1st motor (do not set the inverter to use 2nd and 3rd motor data during an auto-tuning procedure).

Func.	Name	Range	Notes
	Auto-tuning setting	00	Disabled
H001		01	Enabled, without motor rotation
		02	Enabled, with motor rotation
	Motor data selection, 1st motor	00	Standard motor parameters
H002		01	Auto-tuning parameters
		02	Adaptive tuning parameters
H003	Motor capacity, 1st motor	0.2 - 75, 0.2 - 160	kW, up to -550xxx models kW, -750xxx to -1500xxx models
H004	Motor poles setting, 1st motor	2/4/6/8	Units: poles
H030	Auto-tuned motor constant R1, 1st motor	—	Units: ohms
H031	Auto-tuned motor constant R2, 1st motor	_	Units: ohms
H032	Auto-tuned motor constant L, 1st motor	—	Units: mH
H033	Auto-tuned motor constant Io, 1st motor	_	Units: A
H034	Auto-tuned motor constant J, 1st motor	_	Units: kgm ²
A003	Base frequency setting	30 to maximum freq.	Units: Hz
A051	DC braking enable	00	Disabled (Disable during auto- tuning)
		01	Enabled
	AVR voltage select	200/215/220/230/240	Valid for 200V class inverters
A082		380/400/415/440/ 460/480	Valid for 400V class inverters

Please read the following Warning before running the auto-tuning procedure on the next page.



WARNING: You may need to disconnect the load from the motor before performing autotuning. The inverter runs the motor forward and backward for several seconds without regard to load movement limits. Setting Motor Constants for Vector Control

Preparation for Auto-tuning Procedure – Be sure to study the preparation items and verify the related inverter configuration before going further in this procedure.

- **1.** Adjust the motor base frequency (A003) and the motor voltage selection (A082) to match the specifications of the motor used in the auto-tuning procedure.
- 2. Verify that the motor is not more than one frame size smaller than the rated size for he inverter. Otherwise, the motor characteristic measurements may be inaccurate.
- **3.** Be sure that no outside force will drive the motor during auto-tuning.
- **4.** If DC braking is enabled (A051=01), the motor constants will not be accurately set. Therefore, disable DC braking (A051=00) before starting the auto-tuning procedure.
- 5. When auto-tuning with motor rotation (H001=02), take care to verify the following points:
 - **a.** The motor will rotate up to 80% of the base frequency; make sure that this will not cause any problem.
 - **b.** Do not attempt to either run or stop the motor during the auto-tuning procedure unless it is an emergency. If this occurs, initialize the inverter's parameters to the factory default settings (see <u>"Restoring Factory Default Settings" on page 6–16</u>). Then reprogram the parameters unique to your application, and initiate the auto-tuning procedure again.
 - c. Release any mechanical brake that would interfere with the motor rotating freely.
 - **d.** Disconnect any mechanical load from the motor. The torque during auto-tuning is not enough to move some loads.
 - **e.** If the motor is part of a mechanism with limited travel (such as lead screw or elevator), select H001=01 so that the auto-tuning will not cause motor rotation.
- 6. Note that even when you select H001=01 for no rotation, sometimes the motor will rotate.
- 7. When using a motor that is one frame size smaller than the inverter rating, enable the overload restriction function. Then set the overload restriction level to 1.5 times the rated output current of the motor.

After the preparations above are complete, perform the auto-tuning procedure by following the steps below.

- **1.** Set H001=01 (auto-tuning *without* motor rotation) or H001=02 (auto-tuning *with* motor rotation).
- **2.** Turn the Run command ON. The inverter will then automatically sequence through the following actions:
 - **a.** First AC excitation (motor does not rotate)
 - **b.** Second AC excitation (motor does not rotate)
 - c. First DC excitation (motor does not rotate)
 - **d.** V/F running—this step occurs only if H001=02 (motor accelerates up to 80% of the base frequency)
 - e. SLV running—this step occurs only if H001=02 (motor accelerates up to x% of the base frequency), where "x" varies with time T during this step:
 x=40% when T < 50s
 x=20% when 50s < T < 100s
 x=10% when T => 100s
 - **f.** Second DC excitation
 - g. Displays the pass/fail result of the auto-tuning (see next page)



NOTE: During the AC and DC motor excitation steps above, you may notice that the motor makes a slight humming sound. This sound is normal.

Auto-tuning

Procedure

Call 1(800)985-6929 for Sales hitachia

sales@hitachiacdrive.com

hitachiacdrive.com


SJ7002 Inverter

4–73

If the auto-tuning procedure is successful, the inverter updates the motor characteristic parameters and indicates *normal termination* of the procedure as shown. Pressing any key on the keypad will clear the result from the display.

- **Trip during auto-tuning** A trip event will cause the autotuning sequence to quit. The display will show the error code for the trip rather than the abnormal termination indication. After eliminating the cause of the trip, then conduct the autotuning procedure again.
- **Power loss or stop during auto-tuning** If the auto-tuning procedure is interrupted by power loss, the Stop key, or by turning OFF the Run command the auto-tuning constants



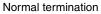



Abnormal termination

turning OFF the Run command, the auto-tuning constants may or may not be stored in the inverter. It will be necessary to restore the inverter's factory default settings (see <u>"Restoring Factory Default Settings" on page 6–16</u>). After initializing the inverter, then perform the auto-tuning procedure again.

• Free V/F setting – The auto-tuning procedure will have an abnormal termination if the control mode of the inverter is set for free V/F setting.

Adaptive Autotuning of Motor Constants

The adaptive auto-tuning feature refines the motor constants by checking the motor characteristic while it in the normal running temperature range.

Preparation for Adaptive Auto-tuning – Be sure to study the preparation items and verify the related inverter configuration before going further in this procedure.

- 1. It is necessary to first perform the auto-tuning procedure in the section above, since adaptive auto-tuning requires accurate initial constant values.
- **2.** Adaptive auto-tuning is valid only for the 1st motor data (do not use 2nd or 3rd motor data settings).
- **3.** The adaptive auto-tuning sequence actually begins as the motor decelerates to a stop from a Run command you initiate. However, the sequence still continues for five (5) more seconds. Giving another Run command during this 5-second time period will halt the adaptive auto-tuning. It will resume the next time the motor runs and decelerates to a stop.
- **4.** If DC braking is enabled, then the adaptive auto-tuning sequence executes after DC braking brings the motor to a stop.
- **5.** Note that when intelligent terminal [SON] Speed Servo ON or [FOC] Current Forcing is assigned, the online auto-tuning function is not available.

After reading and following the preparation steps above, then configure the inverter for adaptive auto-tuning by following these steps:

- 1. Set H002=02 for adaptive auto-tuning procedure
- 2. Set H001=00 to disable the (manual) auto-tuning procedure
- **3.** Turn the Run command ON.
- **4.** Run the motor for an appropriate time until it reaches its normal operating temperature range. Remember that the purpose of adaptive auto-tuning is optimize the inverter for typical running conditions.
- **5.** Stop the motor (or turn the Run command OFF), which initiates an adaptive auto-tuning. Wait at least five (5) seconds before issuing any other command to the inverter.

With the above configuration, the inverter automatically runs the adaptive auto-tuning sequence each time the motor runs and decelerates to a stop. This continuously adapts the SLV control algorithm to slight changes in the motor constants during operation.

NOTE: It is not necessary to wait 5 seconds after each time the motor runs before running again. When the motor stops for less than 5 seconds before running again, the inverter stops the adaptive tuning sequence and keeps the current motor constant values in memory. The inverter will attempt the adaptive auto-tuning at the next run/stop event of the motor.

hitachiacdrive.com

Setting Motor Constants for Vector Control

Manual Setting of **Motor Constants**

-74

With vector control, the inverter uses the output current, output voltage, and motor constants to estimate the motor torque and speed. It is possible to achieve a high starting torque and accurate speed control at low frequency

- Sensorless Vector Control improved torque control at output frequencies down to 0.5 Hz. Use A044=03 (1st motor) or A244=03 (2nd motor) to select sensorless vector control.
- Sensorless Vector Control, 0Hz Domain improved torque control at output frequencies from 0 to 2.5 Hz. Use A044=04 (1st motor) or A244=04 (2nd motor). For this vector control method, we recommend using a motor that is one frame size smaller than the inverter size.
- Sensorless Vector Control with Feedback improved torque control at all speeds, while providing the most accurate speed regulation

If you do use any vector control methods, it is important that the motor constants stored in the inverter match the motor. We recommend first using the auto-tuning procedure in the previous section. If satisfactory performance through auto-tuning cannot be fully obtained, please adjust the motor constants for the observed symptoms according to the table below.

CAUTION: If the inverter capacity is more than twice the capacity of the motor in use, the inverter may not achieve its full performance specifications.

Operation Status	Symptom	Adjustment	Parameter
Powered running	When the speed deviation is negative	Slowly increase the motor constant R2 in relation to auto-tuning data, within 1 to 1.2 times preset R2	H021 / H221
	When the speed deviation is positive	Slowly decrease the motor constant R2 in relation to auto-tuning data, within 0.8 to 1 times preset R2	H021 / H221
Regeneration (status with a decel- erating torque)	When low frequency (a few Hz) torque is insufficient	Slowly increase the motor speed constant R1 in relation to auto- tuning data within 1 to 1.2 times R1	H020 / H220
		Slowly increase the motor constant IO in relation to auto-tuning data, within 1 to 1.2 times preset IO	H023 / H223
During acceleration	A sudden jerk at start of rotation	Increase motor constant J slowly within 1 to 1.2 times the preset constant	H024 / H224
During deceleration	Unstable motor rotation	Decrease the speed response	H05, H205
		Set motor constant J smaller than the preset constant	H024, H224
During torque limiting	Insufficient torque during torque limit at low speed	Set the overload restriction level lower than the torque limit level	B021, B041 to B044
At low-frequency operation	Irregular rotation	Set motor constant J larger than the preset constant	H024, H244

When using a motor one frame size smaller than the inverter rating, the torque limit value (B041 to B044) is from the following formula and the value of the actual motor torque limit is calculated by the formula. Do not set a value in B041 to B044 that results in an actual torque greater than 200% or you risk motor failure.

For example, suppose you have a 0.75kW inverter and a 0.4kW motor. The torque limit setting value that is for T=200% is set (entered) as 106%, shown by the following formula:


Torque limit setting = $\frac{\text{Actual torque limit } \times \text{Motor capacity}}{\text{Inverter capacity}} = \frac{200\% \times 0.4\text{kW}}{0.75\text{kW}} = 106\%$

4–75


PID Loop Operation

In standard operation, the inverter uses a reference source selected by parameter A001 for the output frequency, which may be a fixed value (F001), a variable set by the front panel potentiometer, or value from an analog input (voltage or current). To enable PID operation, set A071 = 01. This causes the inverter to *calculate* the target frequency, or setpoint. An optional intelligent input assignment (code 23), PID Disable, will temporarily disable PID operation when active.

A calculated target frequency can have a lot of advantages. It lets the inverter adjust the motor speed to optimize some other process variable of interest, potentially saving energy as well. Refer to the figure below. The motor acts upon the external process. To control that external process, the inverter must monitor the process variable. This requires wiring a sensor to either the analog input terminal [O] (voltage) or terminal [OI] (current).

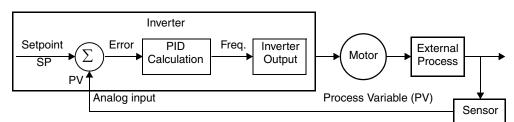

When enabled, the PID loop calculates the ideal output frequency to minimize the loop error. This means we no longer command the inverter to run at a particular frequency, but we specify the ideal value for the process variable. That ideal value is called the *setpoint*, and is specified in the units of the external process variable. For a pump application it may be gallons/minute, or it could be air velocity or temperature for an HVAC unit. Parameter A075 is a scale factor that relates the external process variable units to motor frequency. The figure below is a more detailed diagram of the PID function.

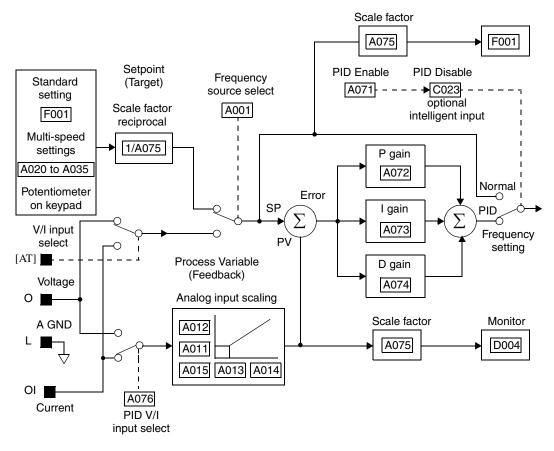

Configuring the Inverter for Multiple Motors

Configuring the Inverter for Multiple Motors


Simultaneous For sor Connections or mor inverte

Call 1(800)985-6929 for Sales

For some applications, you may need to connect two or more motors (wired in parallel) to a single inverter's output. For example, this is common in conveyor applications where two separate conveyors need to have approximately the same speed. The use of two motors may be less expensive than making the mechanical link for one motor to drive multiple conveyors.

Some of the requirements when using multiple motors with one drive are:

position reference between its axes.

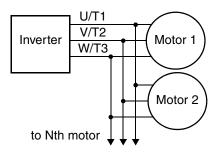

- Use only V/F (variable-frequency) control; do not use SLV (sensorless vector control).
- The inverter output must be rated to handle the sum of the currents from the motors.
- You must use separate thermal protection switches or devices to protect each motor. Locate the device for each motor inside the motor housing or as close to it as possible.
- The wiring for the motors must be permanently connected in parallel (do not remove one motor from the circuit during operation).

NOTE: The motor speeds are identical only in theory. That is because slight differences in their loads will cause one motor to slip a little more than another, even if the motors are identical. Therefore, do not use this technique for multi-axis machinery that must maintain a fixed

Inverter Configuration for Multiple Motor Types

Some equipment manufacturers may have a single type of machine that has to support three different motor types—and only one motor will be connected at a time. For example, an OEM may sell basically the same machine to the US market and the European market. Some reasons why the OEM needs two motor profiles are:

- The inverter power input voltage is different for these markets.
- The required motor type is also different for each destination.

In other cases, the inverter needs two profiles because the machine characteristics vary according to these situations:


- Sometimes the motor load is very light and can move fast. Other times the motor load is heavy and must move slower. Using two profiles allows the motor speed, acceleration and deceleration to be optimal for the load and avoid inverter trip (fault) events.
- Sometimes the slower version of the machine does not have special braking options, but a higher performance version does have braking features.

Having multiple motor profiles lets you store several "personalities" for motors in one inverter's memory. The inverter allows the final selection between the three motor types to be made in the field through the use of intelligent input terminal functions [SET] and [SET3]. This provides an extra level of flexibility needed in particular situations. See the following page.

4-77

Parameters for the second motor and third motors have function codes of the form x2xx and x3xx respectively. They appear immediately after the first motor's parameter in the menu listing order. The following table lists the parameters that have the second/third parameter registers for programming.

	Parameter Codes			
Function Name	1st motor	2nd motor	3rd motor	
Acceleration time setting (Acceleration 1)	F002	F202	F302	
Deceleration time setting (Deceleration 1)	F003	F203	F303	
Base frequency setting	A003	A203	A303	
Maximum frequency setting	A004	A204	A304	
Multi-speed frequency setting	A020	A220	A320	
Torque boost method selection	A041	A241	_	
Manual torque boost value	A042	A242	A342	
Manual torque boost frequency adjustment	A043	A243	A343	
V/F characteristic curve selection	A044	A244	A344	
Automatic torque boost voltage gain	A046	A246	_	
Automatic torque boost slip gain	A047	A247	_	
Frequency upper limit setting	A061	A261		
Frequency lower limit setting	A062	A262	_	
Second acceleration time setting (Accelera- tion 2)	A092	A292	A392	
Second deceleration time setting (Decelera- tion 2)	A093	A293	A393	
Select method to use 2nd acceleration/deceler- ation	A094	A294		
Acc1 to Acc2 frequency transition point	A095	A295		
Dec1 to Dec2 frequency transition point	A096	A296		
Level of electronic thermal setting	B012	B212	B312	
Select electronic thermal characteristic	B013	B213	B313	
Select motor constant	H002	H202		
Motor capacity setting	H003	H203	_	
Motor poles setting	H004	H204	_	
Motor constant Kp setting (Standard, Auto tuning)	H005	H205	_	
Motor stabilization constant	H006	H206	_	
Motor constant R1 setting (Standard, Auto tuning)	H020/H030	H220/H230		
Motor constant R2 setting (Standard, Auto tuning)	H021/H031	H221/H231	—	
Motor constant L setting (Standard, Auto tuning)	H022/H032	H222/H232		
Motor constant Io setting (Standard, Auto tuning)	H023/H033	H223/H233		

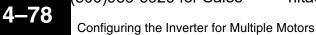

Function Name	Parameter Codes			
Function Name	1st motor	2nd motor	3rd motor	
Motor constant J setting (Standard, Auto tuning)	H024/H034	H224/H234		
PI proportional gain	H050	H250	—	
P proportional gain setting	H052	H252	—	
0Hz SLV limit for 1st motor	H060	H260	—	

Inverter System Accessories




In This Chapter	page
- Introduction	<u>2</u>
— Component Descriptions	<u>3</u>
— <u>Dynamic Braking</u>	<u>6</u>

2 (800)985-6929 for Sales

Introduction

5

A motor speed control system will obviously include a motor and inverter, as well as fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a fully developed system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure below shows a system with several possible optional components, and the table gives part number information.

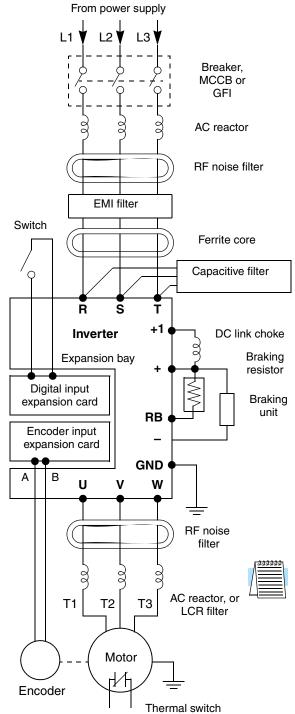

	Part N	See	
Name	Europe, Japan	USA	page
AC reactor, input side	ALI–xxx	HRL-x	<u>5–3</u>
RF noise filter, input side	ZCL-x	ZCL-x	<u>5–4</u>
EMI filter (EMC Class A)	NF-CEHx	NF-CEHxx	<u>5–4</u>
EMI filter (EMC Class B)	NF–CEHx, with FC–Hx	NF–CEHxx, with FC–Hx	<u>5–4</u>
Capacitive filter	CFI-x	CFI–x	<u>5–4</u>
DC link choke	_	HDC–xxx	<u>5–4</u>
Braking resistor	JRB–xxx–x, SRB–xxx–x	JRB–xxx, SRB–xxx	—
Braking resistor, NEMA-rated	DCL-x-xx	HRB1-x, HRB2-x HRB3-x	—
Resistance braking unit	BRD–xxx	BRD–xxx	—
RF noise filter, output side	ZCL–xxx	ZCL–xxx	<u>5–4</u>
AC reactor, output side	ALI–xxx	HRL–xxx	<u>5–3</u>
LCR filter	—	HRL-xxxC	<u>5–3</u>
Encoder feed-back expansion	SJ-FB		<u>5–5</u>
Digital input expansion card	SJ-DG		<u>5–5</u>

NOTE: The Hitachi part number series for accessories includes different sizes of each part type, specified by the –x suffix. Hitachi product literature can help match size and rating of your inverter to the proper accessory size.

Each inverter accessory comes with its own printed instruction manual. Please refer to those manuals for complete installation details. This chapter gives only an overview of these optional system devices. For more information on Hitachi inverter system accessories, please contact your Hitachi sales office or distributor.

3

Component Descriptions

AC Reactors, Input Side

This is useful in suppressing harmonics induced on the power supply lines, or when the main power voltage imbalance exceeds 3% (and power source capacity is more than 500 kVA), or to smooth out line fluctuations. It also improves the power factor.

In the following cases for a general-purpose inverter, a large peak current flows on the main power supply side, and is able to destroy the inverter module:

- If the unbalanced factor of the power supply is 3% or higher
- If the power supply capacity is at least 10 times greater than the inverter capacity (the power supply capacity is 500 kVA or more)
- · If abrupt power supply changes are expected

Examples of these situations include:

- **1.** Several inverters are connected in parallel, sharing the same power bus
- 2. A thyristor converter and an inverter are connected in parallel, sharing the same power bus
- 3. An installed phase-advance (power factor correction) capacitor opens and closes

Where these conditions exist or when the connected equipment must be highly reliable, install an AC reactor between the power supply and the inverter. Also, where the effects of an indirect lightning strike is possible, install a lightning conductor.

Example calculation:

 $V_{RS} = 205V, V_{ST} = 203V, V_{TR} = 197V,$ where V_{RS} is R-S line voltage, V_{ST} is S-T line voltage, V_{TR} is T-R line voltage

Unbalance factor of voltage = $\frac{\text{Max. line voltage (min.)} - \text{Mean line voltage}}{\text{Meanline voltage}} \times 100$

$$= \frac{V_{RS} - (V_{RS} + V_{ST} + V_{TR})/3}{(V_{RS} + V_{ST} + V_{TR})/3} \times 100 = \frac{205 - 202}{202} \times 100 = 1.5\%$$

Please refer to the documentation that comes with the AC reactor for installation instructions.

AC Reactor or LCR Filter, Output Side

This reactor reduces the vibrations in the motor caused by the inverter's switching waveforms, by smoothing the waveforms to approximate commercial power quality. It is also useful to reduce the reflected voltage wave phenomenon when wiring from the inverter to the motor is more than 10m in length. Please refer to the documentation that comes with the AC reactor for installation instructions.

Component Descriptions

Zero-phase Reactor (RF Noise Filter)

5

Electrical noise interference may occur on nearby equipment such as a radio receiver. The zero-phase reactor helps reduce radiated noise from the inverter wiring. It can be used on the input or output side of the inverter. The example zero-phase reactor shown to the right comes with a mounting bracket. The wiring must go through the opening to reduce the RF component of the electrical noise. Loop the wires three times (four turns) to attain the full RF filtering effect. For larger wire sizes, place multiple zero-phase reactors (up to four) side-by-side for a greater filtering effect.



EMI Filter

The EMI filter reduces the conducted noise on the power supply wiring generated by the inverter. Connect the EMI filter to the inverter primary (input side). The NF–CEH–x series filter is required for compliance to the EMC Class A directive (Europe) and C-TICK (Australia). See <u>"CE–EMC Installation Guidelines" on page D–2</u>.



WARNING: The EMI filter has high internal leakage current from power wiring to the chassis. Therefore, connect the chassis ground of the EMI filter before making the power connections to avoid danger of shock or injury.





Ferrite Core	To meet EMC Class B limit an optional ferrite core (FC–Hx) must be inserted between the NF–CEHx filter (above) and the inverter.
RF Noise Filter (Capacitive)	This capacitive filter reduces radiated noise from the main power wires in the inverter input side. This filter is not for achieving CE compliance and is applicable only to the input side only of the inverter. It comes in two versions—for 200V class inverters or 400V class inverters. Please refer to the documentation that comes with the radio noise filter for installation instructions.
DC Link Choke	The DC choke (reactor) suppresses harmonics generated by the inverter. It attenuates the high-frequency components on the inverter's internal DC bus (link). However, note that it does not protect the diode rectifiers in the inverter input circuit.

hitachiacdrive.com

sales@hitachiacdrive.com

SJ7002 Inverter


5

Expansion Cards


The SJ–FB Encoder Feedback Board installs in the inverter's expansion bay, which can accept up to two expansion cards. The encoder card accepts two-channel incremental encoder signals. Position feedback is essential for certain torque-control algorithms, and is useful for improving low-speed performance. The card can also generate linear acceleration/deceleration ramps for velocity control.

All wiring associated with this card connects to its PWB connectors as shown. Some related signals may be assigned to the intelligent I/O terminals, as described in Chapter 4. For more information, refer to the SJ–FB manual.

The SJ–DG Digital Input Card installs in the inverter's expansion bay. This card accepts up to eight digital input signals, in addition to the intelligent inputs on the inverter's control terminal connector. All wiring associated with card connects to its PWB connectors as shown.

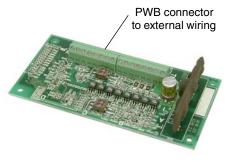

SJ-FB Encoder Feedback Card

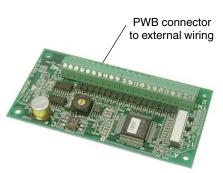

SJ–DG Digital Input Card

The SJ–DN DeviceNet Interface Card (not shown) installs in the inverter's expansion bay. It connects directly to a DeviceNet network. Inverter parameters P044 to P049 configure the card. Only one DeviceNet card may be installed in an inverter. For more information, please refer to the DeviceNet Expansion Card Instruction Manual.

Call 1(800)985-6929 for Sales

Dynamic Braking

Introduction

The purpose of dynamic braking is to improve the ability of the inverter to stop (decelerate) the motor and load. This becomes necessary when an application has some or all of the following characteristics:

- · High load inertia compared to the available motor torque
- · The application requires frequent or sudden changes in speed
- System losses are not great enough to slow the motor as needed

When the inverter reduces its output frequency to decelerate the load, the motor can temporarily become a generator. This occurs when the motor rotation frequency is higher than the inverter output frequency. This condition can cause the inverter DC bus voltage to rise, resulting in an over-voltage trip. In many applications, the over-voltage condition serves as a warning signal that we have exceeded the deceleration capabilities of the system. SJ7002 inverters rated 15hp (11kW) and below have a built-in braking unit that sends the regenerative energy from the motor during deceleration to the optional braking resistor(s). External braking units may also be used if higher braking torques and/or duty cycles are required. The dynamic braking resistor serves as a load, developing heat to stop the motor just as brakes on an automobile develop heat during braking.


The braking resistor is the main component of a braking resistor assembly, which includes an integral thermal fuse and thermally activated alarm relay for safety. However, be careful to avoid overheating its resistor. The thermal fuse and thermal relay are safeguards for extreme conditions, but the inverter can maintain braking usage in a safe zone.



Braking Resistor

Dynamic Braking Usage Ratio

The inverter controls braking via a duty cycle method (percent of the time braking is ON versus total time). Parameter B090 sets the dynamic braking usage ratio. In the graph to the right, the example shows three uses of dynamic braking in a 100-second period. The inverter calculates the average percentage usage in that time (duty cycle %). The percentage of usage is proportional to the heat dissipated. If the duty cycle is greater than the B090 parameter setting, the inverter enters the Trip Mode and turns OFF the frequency output.

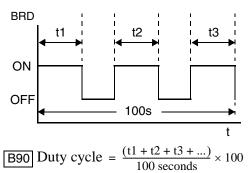

Please note the following (for SJ700-055xFU2 to SJ700-220xFU2).

- When B090 is set for 0%, dynamic braking is not performed.
- When the duty cycle value exceeds the limit set by B090, the inverter will trip (ending the dynamic braking).
- The cable from the external resistor to the inverter must not exceed 5 m (16 ft.) length.
- The wires from the DB resistor to the inverter must not be bundled together with control or signal wires.

NOTE: Inverters rated 40hp (30kW) and above (SJ700–300xFU2 and larger models) do not include an internal braking unit. Parameters B090, B095, and B096 do not apply to these models.

Call 1(800)985-6929 for Sales

hitachiacdrive.com

sales@hitachiacdrive.com

5-7

Dynamic Braking Selection Tables

The SJ7002 Series 200V and 400V class inverter models in the 1/2 to 30 HP range have internal braking units. Additional stopping torque is available by adding external resistors. The required braking torque depends on your particular application. Other tables in this section will help you choose the proper resistor.

1/2 to	o 30 HP (0.4 to 22	kW)		thout 11 Resistor	Using C External	ptional Resistor	Performa Minimum F		Minimum Resistance
Voltage Class	Model Number	Motor HP	Braking Unit	Braking Torque @ 60Hz, %	External Resistance, Ohms	Braking Torque @60Hz, %	Minimum Resistance, Ohms	Max. Braking Duty Cycle, %	@ 100% Braking Duty Cycle, Ohms
	SJ700-004LFUF2	0.5	Built-in	20	48	150	48	10	150
	SJ700-007LFUF2	1	Built-in	20	48	150	48	10	150
	SJ700-015LFUF2	2	Built-in	20	32	150	32	10	110
	SJ700-022LFUF2	3	Built-in	20	32	150	32	10	110
	SJ700-037LFUF2	5	Built-in	20	32	110	32	10	110
200V	SJ700-055LFUF2	7.5	Built-in	20	16	140	16	10	50
	SJ700-075LFUF2	10	Built-in	20	10	150	10	10	50
	SJ700-110LFUF2	15	Built-in	10	10	110	10	10	50
	SJ700-150LFUF2	20	Built-in	10	7.5	110	7.5	10	35
	SJ700-185LFU2	25	Built-in	10	7.5	90	7.5	10	35
	SJ700-220LFU2	30	Built-in	10	5	110	5	10	35
	SJ700-007HFUF2 SJ700-007HFEF2	1	Built-in	20	100	150	70	10	300
	SJ700-015HFUF2 SJ700-015HFEF2	2	Built-in	20	100	150	70	10	300
	SJ700-022HFUF2 SJ700-022HFEF2	3	Built-in	20	70	150	70	10	300
	SJ700-040HFUF2 SJ700-040HFEF2	5	Built-in	20	70	150	70	10	200
400V	SJ700-055HFUF2 SJ700-055HFEF2	7.5	Built-in	20	70	130	70	10	200
	SJ700–075HFUF2 SJ700–075HFEF2	10	Built-in	20	70	150	35	10	150
	SJ700-110HFUF2 SJ700-110HFEF2	15	Built-in	10	50	130	35	10	150
	SJ700–150HFUF2 SJ700–150HFEF2	20	Built-in	10	35	140	24	10	100
	SJ700-185HFU2/E	25	Built-in	10	35	140	24	10	100
	SJ700-220HFU2/E	30	Built-in	10	35	110	20	10	100



NOTE: For inverters larger than 30 HP (22kW), an external braking unit will be required. Contact your distributor or Hitachi for assistance.



Troubleshooting and Maintenance

In This Chapter	page
— <u>Troubleshooting</u>	<u>2</u>
— Monitoring Trip Events, History, & Conditions	
- Restoring Factory Default Settings	
— Maintenance and Inspection	<u>17</u>
— Warranty	<u>29</u>

Troubleshooting

Troubleshooting

Safety Messages

6-





Please read the following safety messages before troubleshooting or performing maintenance on the inverter and motor system.

WARNING: Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.

WARNING: Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel.

WARNING: Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C. board). Otherwise, there is danger of fire due to wire breakage and/or injury to personnel.

General Precautions and Notes

- Always keep the unit clean so that dust or other foreign matter does not enter the inverter.
- Take special care to avoid breaking wires or making connection mistakes.
- Firmly connect terminals and connectors.
- Keep electronic equipment away from moisture and oil. Dust, steel filings and other foreign matter can damage the inverter, causing unexpected accidents, so take special care.

Inspection Items This chapter provides instructions or checklists for these inspection items:

- Daily inspection
- Periodic inspection (approximately once a year)
- Insulation resistance test

6–3

Troubleshooting	The table below lists typical symptoms and the corresponding solution(s).
Tips	

Symptom/condition		Probable Cause	Solution	
		 Is the frequency command source A001 parameter setting correct? Is the Run command source A002 parameter setting correct? 	 Make sure the parameter setting A001 is correct. Make sure the parameter setting A002 is correct. 	
	The motor will not run.	• Is power being supplied to terminals [R], [S], and [T] ([L1], [L2], and [L3])? If so, the POWER lamp should be ON.	 Check terminals [R], [S], and [T] ([L1], [L2], and [L3]), then [U], [V], and [W] ([T1], [T2], and [T3]). Turn ON the power supply or check fuses. 	
		 Is there an error code <i>E</i> displayed? 	• Press the FUNC. key and determine the error type. Eliminate the error cause, then clear the error (Reset).	
The motor		 Are the signals to the intelligent input terminals correct? Is the Run Command active? Is the [FW] terminal (or [RV]) connected to P24 (via switch, etc.) 	 Verify the terminal functions for C001 - C008 are correct. Turn ON Run command enable. Supply 24V to [FW] or [RV] termi- nal, if configured. 	
		 Has the frequency setting for F001 been set greater than zero? Are the control circuit terminals [H], [O], and [L] connected to the potenti- ometer? 	 Set the parameter for F001 to a safe, non-zero value. If the potentiometer is the frequency setting source, verify voltage at [O] > 0V. 	
		• Is the RS (reset) function or FRS (free- run stop) function ON?	• Turn OFF the command(s).	
	Inverter outputs U, V, W are supplying voltage.	• Is the motor load too heavy?	• Reduce load or test the motor independently of the load.	
The direction of the motor is reversed.		 Are the connections of output terminals [U/T1], [V/T2], and [W/T3] correct? Is the phase sequence of the motor forward or reverse with respect to [U/T1],[V/T2], and [W/T3]? 	• Make connections according to the phase sequence of the motor. In general: FWD = U-V-W, and REV=U-W-V.	
		 Are the control terminals [FW] and [RV] wired correctly? Is parameter F004 properly set? 	 Use terminal [FW] for forward, and [RV] for reverse. Set motor direction in F004. 	

Troubleshooting


6–4

Symptom/condition		Probable Cause	Solution		
The motor speed will not reach the target frequency (desired speed).		• If using the analog input, is there current or voltage at [O] or [OI]?	Check the wiring.Check the potentiometer or signal generating device.		
		Is the load too heavy?	 Reduce the load. Heavy loads activate the overload restriction feature (reduces output as needed). 		
		• Is the inverter internally limiting the output frequency?	 Check max frequency setting (A004) Check frequency upper limit setting (A061) 		
			 If using analog inputs, check their settings (A101– A104) or (A111–A114), or (A011–A014) 		
The rotation is unstable.		 Is the load fluctuation too great? Is the supply voltage unstable? Is the problem occurring at a particular frequency?	 Increase the motor capacity (both inverter and motor). Fix power supply problem. Change the output frequency slightly, or use the jump frequency setting to skip the problem 		
The RPM of the motor does not match the inverter output frequency setting.		 Is the maximum frequency setting A004 correct? Does the monitor function D001 display the expected output frequency? 	 frequency. Verify the V/F settings match motor specifications. Make sure all scaling (such as A011 to A014) is properly set. 		
A parameter will not change after	True for certain parameters	• Is the inverter in Run Mode? Some parameters cannot be edited during Run Mode.	• Put inverter in Stop Mode (press the Stop/reset key). Then edit the parameter.		
an edit (reverts to old setting).	True for all parameters	• If you're using the [SFT] intelligent input (software lock function)—is the [SFT] input ON?	• Change the state of the SFT input, and check the B031 parameter (SFT mode).		

Monitoring Trip Events, History, & Conditions

Fault Detection and Clearing

The microprocessor in the inverter detects a variety of fault conditions and captures the event, recording it in a history table. The inverter output turns OFF, or "trips" similar to the way a circuit breaker trips due to an over-current condition. Most faults occur when the motor is running (refer to the diagram to the right). However, the inverter could have an internal fault and trip in Stop Mode. In either case, you can clear the fault by pressing the Stop/Reset key. Additionally, you can clear the

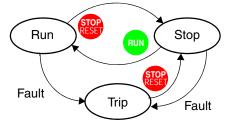

inverter's cumulative trip history by performing the procedure <u>"Restoring Factory Default</u> <u>Settings" on page 6–16</u> (setting B_84=00 will clear the trip history but leave inverter settings intact).

Error Status Codes

The conditions at the time of an error provide important clues to help you understand the cause. The SJ7002 inverter displays a "status at trip point" digit to the right of the decimal point for some error codes. For example, $\mathcal{ED7.2}$ means Error 7 occurred and the inverter status was condition # "2" when the error occurred.

Status Codes	Inverter Status	Status Codes	Inverter Status
0	Reset	5	Run Command active with 0 Hz speed reference
/	Stop	8	Starting
2	Deceleration	7	DC braking
3	Constant speed	8	Overload restriction
4	Acceleration	9	SON or FOC operation in progress

Monitoring Trip Events, History, & Conditions

Error Codes

6–6

An error code will appear on the display automatically when a fault causes the inverter to trip. The following table lists the cause associated with the error.

OPE/SRW Display	Name	Description		Troubleshooting and Corrective Action
EO 1 OC.Drive	Over-current protection	If the motor is constrained or suddenly accelerated or decelerated, a high current will flow in the inverter and the inverter may fail. To avoid this problem, the inverter shuts off its output	During constant speed operation	 Check whether the load has fluctuated sharply. Check for the short circuit of output connections (check the output cables). Check for a ground fault (check the output cables and motor).
<i>E02</i> 0C.Decel	Over-current protection	and displays the error code shown on the left when it detects a current higher	During deceleration	 Check whether the inverter has deceler- ated the motor quickly increase the decel- eration time).
<i>E03</i> OC.Accel	Over-current protection	than a specified level. This protective function uses a DC current detector (CT) to detect over-current. When a current as high as about 220% of the inverter's rated output current is detected, the protective circuit operates	During acceleration	 Check whether the inverter has accelerated the motor quickly (increase the acceleration time). Check whether the motor has been locked (check the motor and wiring). Check whether the torque boost current has been set too high (reduce the boost current).
<i>E04</i> Over.C	Over-current protection	and the inverter trips.	Other conditions	 Check whether the DC braking force is too high (reduce the braking force). Check whether the current detector (CT) is normal (replace or repair the CT).
EOS. - OL.BRD	Overload protection (*1) (*4)	This protective function mo inverter output current, and inverter output and displays shown on the left when the electronic thermal protectio detects a motor overload. If occurs, the inverter will trip the setting of the electronic function.	shuts off the the error code internal n circuit the error according to	 Check whether the motor load is too high. (reduce the load factor). Check whether the thermal level is appropriate (adjust the level appropriately). Note: The electronic thermal protection is easily triggered when the output frequency is 5 Hz or less. If the moment of inertia of the load is large, this protective function may operate when the inverter accelerates the motor and the acceleration may be disabled. If this problem occurs, increase the torque boost current or adjust other settings as needed.
<i>E06</i> OL.BRD	Braking resistor overload protection	When the BRD operation ra setting of B090, this protect shuts off the inverter output the error code shown on the	ive function and displays	 Check whether the inverter has decreased the motor quickly (increase the deceleration time). Check whether the operation cycle is too short (prolong the operation cycle) Check whether the set BRD operation rate is too low (adjust the setting to an appropriate level). Note: Confirm the maximum allowable capacity of the resistor.

sales@hitachiacdrive

SJ7002 Inverter

6–7

OPE/SRW Display	Name	Description	Troubleshooting and Corrective Action
<i>E01</i> Over.V	Over-voltage protection	If the DC voltage across the P and N terminals rises too high, an inverter failure may result. To avoid this problem, this protective function shuts off the inverter output and displays the error code shown on the left when the DC voltage across the P and N terminals exceeds a specified level because of an increase in the energy regenerated by the motor or the input voltage (during operation). The inverter will trip if the DC voltage across the P and N terminals exceeds about 400 VDC (in case of the 200 V class models) or about 800 VDC (in case of the 400 V class models).	 Check whether the inverter has decreased the motor quickly (increase the deceleration time). Check for a ground fault (check the output cables and motor). Check whether the motor has been rotated by the action of the load (reduce the regenerative energy).
<i>E08</i> EEPROM	EEPROM error (*2) (*3)	When an internal-EEPROM is caused by external noise or an abnormal temperature rise, the inverter shuts off its output and displays the error code shown on the left. Note: An EEPROM error may result in a CPU error.	 Check for the noise sources located near the inverter (remove noise sources). Check whether the cooling efficiency has deteriorated (check the heat sink for clogging and clean it). Check the cooling fan (replace if needed).
E09 Under.V	Under-voltage	If the inverter input voltage drops, the control circuit of the inverter cannot function normally. Therefore, the inverter shuts off its output when the input voltage falls below a specified level. The inverter will trip if the DC voltage across the P and N terminals exceeds about 175 VDC (in case of the 200 V class models) or about 345 VDC (in case of the 400 V class models).	 Check whether the power supply voltage has dropped (check the power supply). Check whether the power supply capacity is sufficient (check the power supply). Check whether the thyristor has been damaged (check the thyristor).
<i>Е 10</i> ст	CT error	If an error occurs in the internal current detector (CT), the inverter will shut off its output and display the error code shown on the left. The inverter will trip when the CT outputs about 0.6 V or more at power-on.	Check whether the inverter has failed (repair the inverter).

- **Note 1:** The inverter will not accept any reset command within about 90 seconds after tripping (i.e., after the protective function operates). Be sure to turn OFF the input power supply after waiting two minutes for cooling.
- **Note 2:** The inverter will not accept any reset command after an EEPROM error occurs with error code displayed. Turn off the inverter power once. If error code E08 is displayed when the inverter power is turned on subsequently, the internal memory device may have failed or parameters may have not been stored correctly. In such cases, initialize the inverter, and then reset the parameters.
- **Note 3:** The inverter will not accept reset commands input via the RS terminal or entered by the STOP/RESET key. Therefore, turn off the inverter power.
- **Note 4:** Be sure to reduce the inverter's output current and the motor load before restarting after overload protection (E05). If the continuous reset/restart operations for error E05 could cause damage to the inverter.



NOTE: If an EEPROM error E08 occurs, be sure to confirm the parameter data values are still correct.

Monitoring Trip Events, History, & Conditions

OPE/SRW Display	Name	Description	Troubleshooting and Corrective Action
<u>Е I I</u> СРО	CPU error (*5)	If the internal CPU malfunctions or an error occurs in it, the inverter will shut OFF its output and display the error code shown on the left. Note: Reading abnormal data from the EEPROM may result in a CPU error.	 Check for the noise sources located near the inverter (remove noise sources). Check whether the inverter has failed (repair the inverter).
E 12 EXTERNAL	External trip	If an error occurs in the external equip- ment or device connected to the inverter, the inverter will latch the error signal and shut off its output. (This protective function is active when the external trip function is enabled.)	• If the inverter's external trip function is enabled, check whether an error has occurred in external equipment (clear the error in the external equipment).
<i>E 13.</i> - USP	USP error	A USP error is indicated when the inverter power is turned on with an input operation signal remaining in the inverter. (This protective function is active when the USP function is enabled.)	• If the USP function has been enabled, check whether the inverter power has been turned on with an input operation signal remaining in the inverter (reset the operation command, and then turn ON the inverter power).
E 14 GND.Flt	Ground fault protection (*5)	When the inverter power is turned ON, this protective function detects the ground fault between the inverter output circuit and the motor to protect the inverter. (This function does not operate when a residual voltage remains in the motor.)	 Check for the ground fault (check the output cables and motor). Check the inverter itself for abnormality (remove the output cables from the inverter, and then check the inverter). Check the main circuit for abnormality (use testing methods described in this chapter and repair the inverter).
<i>E 15</i> OV.SRC	Input over- voltage protection	This protective function determines an error if the input voltage is kept above the specification level for 100 seconds while the inverter is stopped. The inverter will trip if the DC voltage of the main circuit is kept above about 390 VDC (in case of the 200 V class models) or about 780 VDC (in case of the 400 V class models).	• Check whether the input voltage is high while the inverter is stopped (lower the input voltage, suppress the power voltage fluctuation, or connect an AC reactor between the power supply and the inverter input.)
<i>E 16</i> Inst.P-F	Instantaneous power failure protection	If an instantaneous power failure lasts 15 ms or more, the inverter will shut off its output. When the power failure duration is long, the inverter assumes a normal power-OFF. If a restart mode has been selected and an operation command remains in the inverter, the inverter will restart after the power is recovered.	 Check whether the power supply voltage has dropped (recover the power supply). Check the MCB and magnetic contactors for poor contacts (replace the MCB and the magnetic contactor).
<i>E20</i> OH.stFAN	Temperature error due to low cooling- fan speed	The inverter will display the error code shown on the left if the lowering of cooling fan speed is detected at the occur- rence of the temperature error described below.	 Check whether the cooling efficiency has been lowered (replace the cooling fan). Check the heat sink for clogging (clean the heat sink).
<i>E2 </i> OH.fin	Temperature error	If the main circuit temperature rises because of a high ambient temperature or for other reasons, the inverter will shut OFF its output.	 Check whether the inverter is installed vertically (check the installation.) Check whether the ambient temperature is high (lower the ambient temperature).

Note 5: The inverter will not accept reset commands input via the [RS] terminal or entered by the STOP/RESET key. Therefore, turn off the inverter power.

sales@hitachiacdrive.com

SJ7002 Inverter

OPE/SRW Display	Name	Description	Troubleshooting and Corrective Action
<i>E23</i> GA.COM	Gate array communica- tion error	If an error occurs in the communication between the internal CPU and gate array, the inverter will trip.	 Check for the noise sources located near the inverter (remove noise sources). Check whether the communication cable has been disconnected (check the connec- tors).
E24 PH.fail	Phase loss input protec- tion	When the phase loss input protection has been enabled (B006 = 01), the inverter will trip to avoid damage if an phase loss input is detected. The inverter trips when the phase loss input continues for about 1 second or more.	 Check for the phase loss power input. (check the power supply input wiring). Check the MCB and magnetic contactors for poor contacts (replace the MCB and magnetic contactors).
E25 Main.Cir	Main circuit error (*6)	The inverter will trip if the gate array cannot confirm the ON/OFF state of IGBT because of a malfunction due to noise, short or damage to the main circuit element.	 Check for the noise sources located near the inverter (remove noise sources.) Check the main circuit element for damage. Check the output circuit for a short circuit (check the IGBT). Check the inverter for abnormality (repair the inverter).
E30. - IGBT	IGBT error (*7)	If instantaneous over-current occurs, the main circuit element temperature is abnormal, or the main circuit element drive power drops, the inverter will turn OFF its output to protect the main circuit element. (After tripping because of this protective function, the inverter cannot retry the operation.)	 Check the output circuit for a short circuit (check the output cables). Check for the ground fault (check the output cables and motor). Check the main circuit element for damage (check the IGBT). Check the heat sink for clogging (clean the heat sink).
<i>ЕЗ</i> 5 ТН	Thermistor error	The inverter monitors the resistance of the thermistor (in the motor) connected to the inverter's [TH] terminal, and will turn OFF the inverter output if the motor temperature rises.	 Check whether the motor temperature is high (check the motor temperature). Check whether the internal thermistor of the motor has been damaged (check the thermistor). Check whether noise has been mixed in the thermistor signal (separate the thermistor wiring from other wirings).
<i>E36</i> BRAKE	Braking error	When "01" has been specified for B120 Brake Control Enable, the inverter will trip if it cannot receive the braking confir- mation signal within B124 Brake Wait Time for Confirmation after the output of the brake release signal.	 Check whether the brake has been turned on and off or not (check the brake). Check whether the wait time (B124) is too short (increase the wait time B124). Check whether the braking confirmation signal has been input (check the wiring).
<i>E31</i> EMR	Emergency stop (*8)	If the EMR signal (on three terminals) is turned ON when the slide switch (SW1) on the logic board is set to ON, the inverter hardware will turn OFF the inverter output and display the error code shown on the left. The malfunction is due to incoming noise when EMR terminal is not ON.	 Check whether an error has occurred in the external equipment since the emergency stop function was enabled. (recover the external equipment from the error.) Check for the noise sources located near the inverter (remove noise sources).
<i>ЕЗВ</i> 0L-LонSP	Low-speed overload protection	If overload occurs during the motor operation at a very low speed at 0.2 Hz or less, the electronic thermal protection circuit in the inverter will detect the overload and shut off the inverter output (2nd electronic thermal control). Note: A high frequency may be recorded as the error history data.	Check whether the motor load is too high (reduce the load factor).

OPE/SRW Display	Name	Description	Troubleshooting and Corrective Action
E41 NET.ERR	ModBus communica- tion error	If time-out occurs because of line discon- nection during the communication in ModBus-RTU mode, the inverter will display the error code shown on the left. (The inverter will trip according to the setting of C076.)	 Check whether the communication speed setting is correct. Check whether the wiring distance is appropriate (check the connections).
ЕБО Ео ЕБЭ ОР1-0 ОР1-9	Option 1 error	The inverter detects errors in the option board mounted in the optional slot 1. For details, refer to the instruction manual for the mounted option board.	 Check whether the option board is mounted correctly (check the board mounting). Check whether the option board is used correctly (refer to the instruction manual for the option board SJ-FB, SJ-DG, or SJ-DN).

Note 6: The inverter will not accept reset commands input via the RS terminal or entered by the STOP/RESET key. Therefore, turn off the inverter power.

- **Note 7:** The inverter applied for 004 to 110L/H will not accept reset commands input via the RS terminal or entered by the STOP/RESET key. Therefore, turn off the inverter power.
- **Note 8:** The inverter will not accept the reset command entered from the digital operator. Therefore, reset the inverter by turning on the RS terminal.

<u>[]]]]]]</u>	


NOTE: If an EEPROM error (E08) occurs, be sure to confirm the parameter data values are still correct.

6–11

Expansion Card Error Codes

The inverter monitors the operation of the expansion cards (optional) that may be installed in the expansion bay.

On the inverter's digital operator, error codes in the E60 range refer to the upper card position. Error codes in the E70 range refer to the lower card position. For the remote operator display, error codes are in the OP1 or OP2 ranges, respectively. If an error occurs, the inverter trips (displays the corresponding error code and turns OFF the motor output).

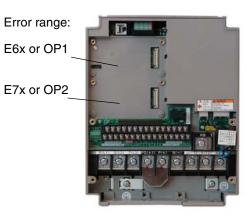

Encoder Input Card – Use the following table to diagnose errors caused by an encoder input expansion card. Each error

will cause the inverter to trip, turning OFF its output and displaying an error code.

E	Encoder Input Expansion Card Errors								
Error Code: OPE / SRW	Name	Probable Cause(s)							
E60 E70	Encoder disconnect	Encoder wiring to the expansion card is disconnected							
0P1-0 0P2-0		The encoder is faulty							
		The encoder type is not correct (no line driver output, etc.)							
E61- E71-	Excessive speed	The motor speed increased to the maximum frequency $(A004)$ times the							
OP1-1 OP2-1		maximum frequency (A004) times the over-speed error detection level (P026)							
-573 - 573	Positioning error	While in position control mode the							
0P1-2 0P2-2		position error (command minus actual) reached 1,000,000 pulses or more							
E63 E73	Position control	While in absolute position control mode,							
0P1-3 0P2-3	range trip	the actual position exceeded the forward (P072) or reverse (P073) position range value							
E69 E79	SJ-FB connection	The SJ-FB expansion card is not mounted							
0P1-9 0P2-9	error	properly or the card is faulty							

If an encoder expansion card does not operate normally, use the following table to check the DIP switch settings on the card.

DIP Switch	Switch Number	Setting			
SWENC	1	ON setting enables encoder disconnect function for loss of A or B channel			
SWENC	2	ON setting enables encoder disconnect function for loss of Z channel			
1 SWR		ON setting connects the 150Ω termination resistor across terminals [SAP] and [SAN]			
SWK	2	ON setting connects the 150Ω termination resistor across terminals [SBP] and [SBP]			

Troubleshooting and Maintenance Monitoring Trip Events, History, & Conditions

Digital Input Card - Use the following table to diagnose errors caused by a digital input expansion card. Each error will cause the inverter to trip, turning OFF its output and displaying an error code.

Digital Input Expansion Card Errors								
Error Code: OPE / SRW	Name	Probable Cause(s)						
E60 E70	Digital input expansion card error	A communications time-out between the inverter and the digital input card has						
0P1-0 0P2-0	expansion card error	occurred						

The input mode is determined by a combination of DIP switch and rotary switch settings. If the expansion card does not operate normally, use the following table to check the DIP switch and rotary switch settings. The check marks indicate input modes specified by switch settings. For more details, refer to the expansion card instruction manual.

DIP Switch		Rotary Switch Frequency Setting, Hz			Accel / Decel Time, Seconds			Torque limit Setting	Position Setting		
1	2	Code	0.01	0.1	1	Rate	0.01	0.1	1	1%	1 pulse
		0									
		1									
	OFF: PAC	2									
	(batch input	3									
	mode)	4								~	
		5									
		6									~
	ON: DIV	0	~				~			~	~
OFF: BIN (binary input)/		1						~			
ON: BCD		2							~		
(binary coded decimal input)		3		~			~				
1 /		4						~			
		5							~		
	(divided input mode	6			~		~				
		7						~			
		8							~		
		9				~	~				
		А				1		~			
		В							~		

6-


-12

6-13

DeviceNet Expansion Card – Use the following table to diagnose errors caused by a DeviceNet expansion card. Each error will cause the inverter to trip (according to parameter settings P045 and P048), turning OFF its output and displaying an error code.

DeviceNet Expansion Card Errors									
Error Code: OPE / SRW	Name	Probable Cause(s)							
E60 E70	DeviceNet Communication Error	The communication speed may be incorrect							
0P1-0 0P2-0		The network wiring length may not be appropriate							
		A connector is loose (or wire not connected)							
E61- E71-	Duplicate MAC ID	Two or more devices on the							
0P1-1 0P2-1		network have the same MAC ID							
E62 E72	External trip	Check the Force Fault/Trip bit.							
0P1-2 0P2-2		Attribute 17 in the Instance 1 of Class 19 may be set to 1. If so, clear the bit to 0.							
E89 E79	Inverter communication	The expansion card may not be properly connected to the inverter							
0P1-9 0P2-9	error								

If the expansion card does not operate normally, use the following diagrams to check the DIP switch settings. For more details, refer to the expansion card instruction manual.

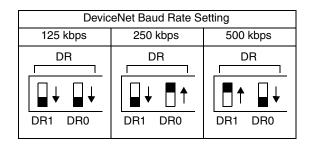

DeviceNet MAC ID Setting				
DIP switch example	Description of switch setting			
MAC ID NA32 NA16 NA8 NA4 NA2 NA1	$1 \cdot 2^5 + 0 \cdot 2^4 + 1 \cdot 2^3 + 0 \cdot 2^2 + 0 \cdot 2^1 + 1 \cdot 2^0$ = 29h (hex) = 41 (decimal)			

Troubleshooting and Maintenance

Call 1(800)985-6929 for Sales hitachiacdrive.com

sales@hitachiacdrive.com

Monitoring Trip Events, History, & Conditions

Easy Sequence Error Codes

6-14

Call 1(800)985-6929 for Sales


Use the following table to diagnose errors related to Easy Sequence programming. The error code will appear when the related program runs.

DeviceNet Expansion Card Errors					
Error Code: OPE / SRW	Name	Probable Cause(s)			
E43	Invalid instruction	A program contains an invalid instruction			
PRG.CMD		The [PRG] terminal was turn ON but a program was not loaded			
E44	Nesting count error	Subroutines with FOR and NEXT instructions are nested more than eight			
PRG.NST		levels			
E 45	Execution error 1	A FOR (or another) instruction to begin nesting is not found at the jump destina- tion of a GO TO instruction, and the NEXT (or another) instruction to end nesting precedes the beginning of nesting			
PRG.ERR1		An arithmetic operation resulted in overflow or underflow, or a divide-by-zero was attempted			
		 A CHG PARAM or MON PARAM instruction attempts to: Reference an undefined parameter Set a value outside the range for a parameter Update a parameter that cannot be changed during inverter operation 			
ESO ESO	User trip event	A TRIP instruction was executed in a			
PRG-0 PRG-9		program			

Trip History and Inverter Status

We recommend that you first find the cause of the fault before attempting clearing it. When a fault occurs, the inverter stores important performance data at the moment of the fault. To access the data, use the monitor functions (Dxxx) and select D081 for details about the present fault (E_n). The previous five faults are stored in D081 to D086, with D (E_{n-1} to E_{n-5}). Each error shifts D081–D085 to D082–D086, and writes the new error to D081.

The following Monitor Menu map shows how to access the error codes. When fault(s) exist, you can review their details by first selecting the proper function: D081 is most recent, and D086 is the oldest.

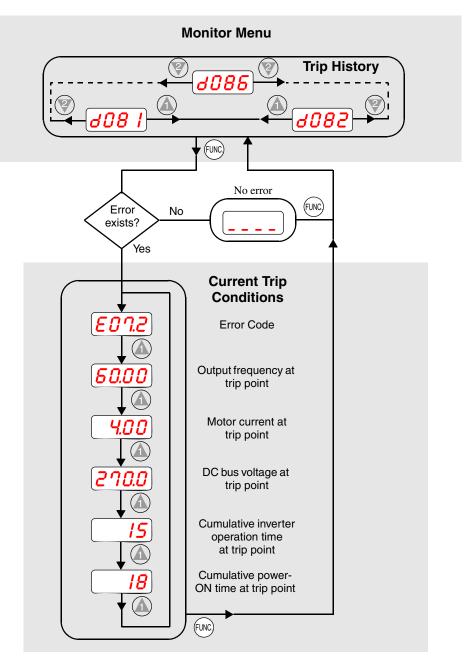

sales@hitachiacdrive.com

Restoring Factory Default Settings

Call 1(800)985-6929 for Sales

6-16

Restoring Factory Default Settings

You can restore all inverter parameters to the original factory (default) settings for the intended country of use. After initializing the inverter, use the powerup test in Chapter 2 to get the motor running again. To initialize the inverter, follow the steps below.

No.	Action	Display	Func./Parameter
1	Use the \overline{FUNC} , (\widehat{M}) , and (\widehat{V}) keys to navigate to the "B" Group.	"B" Group selected	
2	Press the FUNC key.	600 I	First "B" parameter selected
3	Press and hold the key until ->	6 104	Country code for initializa- tion selected
4	Press the FUNC key.	50	00 = Japan, 01 = Europe, 02 = U.S.
5	Confirm the country code is correct. the power input voltage range and from To change the country code, press	equency match th	e country code setting.
6	Press the FUNC key.	6085	Country code for initializa- tion selected
7	Press the 💓 key.	6084	Initialization function selected
8	Press the FUNC key.	00	00 = initialization disabled, clear trip history only
9	Press the 🛦 key.		01 = enable initialization
10	Press the STR key.	6084	Initialization now enabled to restore all defaults
11	Press and hold the and very and keys together, and immediately press and hold the FUNC key. Do not release these keys yet.	<u>6084</u>	First part of special key sequence, the "B" in the display begins flashing
12	Holding the keys above, press and hold the (STOP) key for 3 sec.	6084	Entire "B084" display will begin flashing
13	When the <i>b084</i> display begins flashing, release the effective key.	O EU or OUSR	Default parameter country code shown during initializa- tion process (left-most charac- ter displays alternating pattern)
14	Release the (A), (2), and (FUNC) keys together.	d001	Final part of key sequence, function code for output frequency monitor shown after initialization is complete

Maintenance and Inspection

Monthly and Yearly Inspection Chart

Iten	n Inspected	Check for	Inspe Cy		Inspection Method	Criteria
			Month	Year		
General	Ambient environment	Extreme temperatures & humidity	~		Thermometer, hygrometer	Ambient temperature between -10 to 50°C, non-condensing
	Major devices	Abnormal vibration, noise	~		Visual and aural	Stable environment for electronic controls
	Power supply voltage	Voltage tolerance	~		Digital volt meter, measure between inverter terminals [L1], [L2], [L3]	200V class: 200 to 240V 50/60 Hz 400V class: 380 to 460V 50/60 Hz
Main circuits	Ground Insulation	Adequate resistance		~	Megger test	500VDC, reading of 5M ohms or greater, see next section for test details
	Mounting	No loose screws		~	Torque wrench	M3: 0.5 – 0.6 Nm M4: 0.98 – 1.3 Nm M5: 1.5 – 2.0 Nm
	Components	Overheating		~	Thermal trip events	No trip events
	Housing	Dirt, dust		~	Visual	Vacuum dust and dirt
	Terminal block	Secure connections		~	Visual	No abnormalities
	Smoothing capacitor	Leaking, swelling	~		Visual	No abnormalities
	Relay(s)	Chattering		~	Aural	Single click when switching ON or OFF
	Resistors	Cracks or discoloring		~	Visual	Use Ohm meter to check braking resistors
Cooling system	Cooling fan	Noise	~		Power down, manually rotate	Rotation must be smooth
	Heat sink	Dust	~		Visual	Vacuum to clean
Control circuit	General	No odor, discoloring, corrosion		~	Visual	No abnormalities
	Capacitor	No leaks or deformation	~		Visual	Undistorted appearance
Display	LEDs	Legibility	~		Visual	All LED segments work

Maintenance and Inspection

6 - 18

Iter	Item Inspected Check for Inspection		Inspection Method	Criteria			
			Month	Year			
Motor	General	Vibration	~		Visual, touch	Ordinary range	
		Unusual odor	~		Look for signs of overheating	Normal appearance	
	Insulation resistance	Isolation boundary fault		~	Disconnect motor from inverter, do megger test on motor	500V class megger test must pass	


Note 1: The life of a capacitor is affected by the ambient temperature. See <u>"Capacitor Life</u> <u>Curve" on page 6–20</u>.

Note 2: The inverter must be cleaned periodically. If dust accumulates on the fan and heat sink, it can cause overheating of the inverter.

Megger Test The *megger* is a piece of test equipment that uses a high voltage to determine if an insulation degradation has occurred. For inverters, it is important that the power terminals be isolated from the Earth GND terminal via the proper amount of insulation.

The circuit diagram below shows the inverter wiring for performing the megger test. Just follow the steps to perform the test:

- 1. Remove power from the inverter and wait at least 10 minutes before proceeding.
- 2. Open the front housing panel to access the power wiring.
- **3.** Remove all wires to terminals [R, S, T, PD, P, N, RB, U, V, and W]. Most importantly, the input power and motor wires will be disconnected from the inverter.
- **4.** Remove the jumper at connector J61. It is located on the main circuit board beside the power terminals.
- 5. Use a bare wire and short terminals [R, S, T, PD, P, N, RB, U, V, and W] together as shown in the diagram.
- 6. Connect the megger to the inverter Earth GND and to the shorted power terminals as shown. Then perform the megger test at 500 VDC and verify $5M\Omega$ or greater resistance.

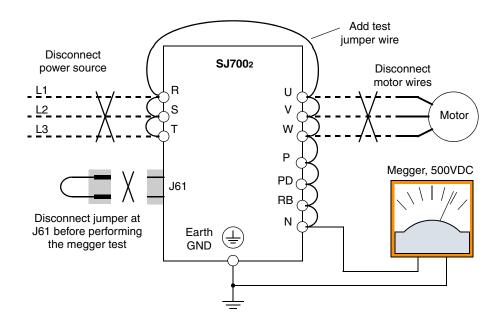

- 7. After completing the test, disconnect the megger from the inverter.
- 8. Reconnect the jumper at connector J61 as before.
- 9. Reconnect the original wires to terminals [R, S, T, PD, P, N, RB, U, V, and W].



CAUTION: Do not connect the megger to any control circuit terminals such as intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter.



CAUTION: Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground.

Maintenance and Inspection

Spare parts


6

We recommend that you stock spare parts to reduce down time, including parts listed below:


Part description Symbol		Quantit	у	Notes	
	Symbol	Used	Spare	Notes	
Cooling fan	FAN	1, 2, 3 (depends on model)	1 or 2	Fan unit at top of housing in all models	
Auxiliary cooling fan	FAN	0 or 1 (depends on model)	0 or 1	-150Lxx, -185Lxx, and -220Lxx models	
Capacitor bank	CB	1	1	All models	

Capacitor Life Curve

The DC bus inside the inverter uses a large capacitor as shown in the diagram below. The capacitor handles high voltage and current as it smooths the power for use by the inverter. So, any degradation of the capacitor will affect the performance of the inverter. The capacitor bank in SJ7002 series inverters is replaceable. This section will show you how to replace it in the field.

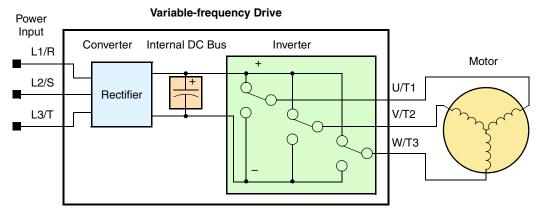

Capacitor life is reduced in higher ambient temperatures, as the graph below demonstrates. Be sure to keep the ambient temperature at acceptable levels, and perform maintenance inspections on the fan, heat sink, and other components. If the inverter is installed on a cabinet, the ambient temperature is the temperature inside the cabinet.

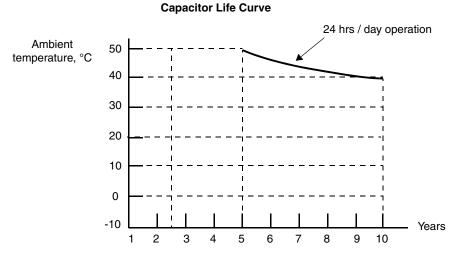

Capacitor Replacement The DC section of the inverter main circuit uses high-capacity aluminum electrolytic capacitors as smoothing filter components. Since chemical reactions occur inside the capacitors, the service life of these parts depends mainly on the ambient temperature and operating conditions, Capacitors used in a standard operating environment must be replaced after about 10 years. However, each capacitor must me immediately replaced if it fails a visual inspection or if periodic inspections shows the capacity to be 80% or less of the component rating.




WARNING: The screws that retain the capacitor bank assembly are part of the electrical circuit of the high-voltage internal DC bus. Be sure that all power has been disconnected from the inverter, and that you have waited at least 10 minutes before accessing the terminals or screws. Be sure the charge lamp is extinguished. Otherwise, there is the danger of electrocution to personnel.



CAUTION: Do not operate the inverter unless you have replaced the two screws that connect the capacitor bank assembly to the internal DC bus. Otherwise, damage to the inverter may occur.

For inverters above 11kW output with molded plastic housings...

- 1. Loosen the two screws that secure the *lower* front panel. Remove the panel from the inverter.
- 2. Turn OFF power to the inverter and confirm that the Charge Indicator LED is OFF.
- 3. Remove the wiring entry/exit plate from the inverter.
- 4. Remove the screws that connect the capacitor unit to the main circuit terminal block.
- 5. Remove the screws that secure the capacitor mounting plate to the inverter casing.
- 6. Pull down the capacitor mounting plate.
- 7. Remove the capacitor unit from the capacitor mounting plate.

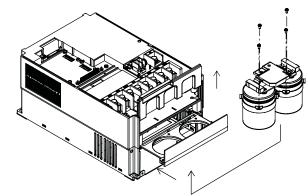

To install the new capacitor unit:

- 1. Place the capacitor unit on the mounting plate.
- 2. Slide the capacitor mounting plate into the guides in the inverter housing. Push the capacitor unit until the metal plate is flush with the housing.
- **3.** Connect the capacitor unit to the main circuit terminal block by using the two (2) terminal screws.
- 4. Secure the capacitor mounting plate to the inverter housing by using the screws.
- 5. Replace the wire/entry plate.
- 6. Replace the lower front panel cover and secure it with screws.


Maintenance and Inspection

Call 1(800)985-6929 for Sales

For inverters with sheet metal housings...

- **1.** Loosen the two screws that secure the *lower* front panel. Remove the panel from the inverter.
- 2. Turn OFF power to the inverter and confirm that the Charge Indicator LED is OFF.
- 3. Remove the lower screws from terminal block terminals [P] and [N].
- 4. Remove the screws that secure the capacitor mounting plate.
- 5. Pull down the capacitor mounting plate.
- **6.** Remove the bus bar and resistors. Then remove the capacitor unit from the capacitor mounting plate.

Lower screws, terminals [P] and [N]

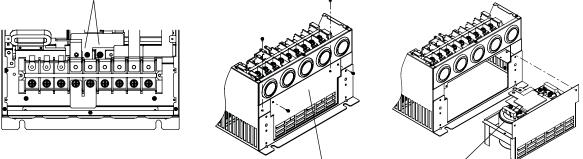

Capacitor mounting plate

Capacitor unit


To install the new capacitor unit:

- **1.** Place the capacitor unit on the mounting plate and secure the unit with screws.
- 2. Mount the bus bar and resistors in the original positions and secure them with screws.
- 3. Slide the capacitor mounting plate into the inverter housing.
- 4. Secure the capacitor mounting plate to the inverter housing by using the screws.
- 5. Install the lower screws in the terminal block terminals [P] and [N].
- 6. Mount the terminal block cover.

For inverters 11kW output and below with molded plastic housings...

The inverters in this category do not have separate capacitor units. It is necessary to replace the main circuit board, accessible by following the steps below.

- 1. Loosen the two screws that secure the *lower* front panel. Remove the panel from the inverter.
- 2. Turn OFF power to the inverter and confirm that the Charge Indicator LED is OFF.
- **3.** Loosen the two screws that secure the *upper* front panel. Remove the panel from the inverter.
- **4.** Press the tabs inward on each side of the cooling fan unit and lift the unit away from the top of the inverter housing.
- 5. Disconnect the fan unit wiring on the circuit board at the top of the inverter.
- 6. Disconnect the ribbon cable that connects the control board and main board.
- 7. Remove the wiring entry/exit plate and the jumper between terminal [P] and [PD] on the main board.
- **8.** Remove the two (2) screws in the plastic housing, and remove the top half of the housing. Be careful not to damage the plastic tabs at the top corners of the housing.

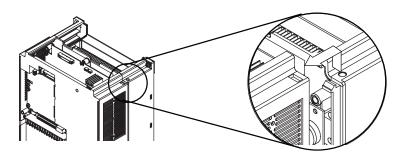


Fan Assembly Replacement

The SJ7002 Series inverters have field-replaceable fan units. The service life of the cooling fan bearings is approximately 100,000 hours. However, actual results vary with the inverter operating environment. Inverters running continuously usually need fan unit replacement at 10-year intervals. In addition, fan unit replacement is required immediately if the fan has abnormal sound or vibration. The fan replacement procedure depends according to the model (housing type).

For inverters with molded plastic housings...

- 1. Loosen the two screws that secure the *lower* front panel. Remove the panel from the inverter.
- **2.** Turn OFF power to the inverter and confirm that the Charge Indicator LED is OFF.
- **3.** Loosen the two screws that secure the *upper* front panel. Remove the panel from the inverter.
- **4.** Press the tabs inward on each side of the cooling fan unit and lift the unit away from the top of the inverter housing.
- **5.** Disconnect the fan unit wiring on the circuit board at the top of the inverter.
- **6.** Remove the defective fan(s) from the cooling fan mounting plate.

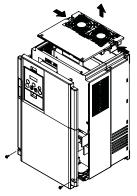

Maintenance and Inspection


<u>Call 1(800)985-6929</u> for Sales

To install the new fan(s):

- **1.** Slide the fan(s) into the mounting locations in the mounting plate. To ensure the correct airflow, be sure that the label on each fan faces toward the vent openings (top of inverter).
- **2.** Connect the fan wiring to terminals J21 or J22 (depending on the inverter model) on the main circuit board.
- **3.** Put the mounting plate in position on the top of the inverter. Press downward on the fan units until the retention tabs click into place.
- **4.** Replace the upper and lower front panel covers on the inverter, using two (2) screws for each panel.


For inverters with sheet metal housings...

- 1. Loosen the screws that secure the *lower* front panel. Remove the panel from the inverter.
- 2. Turn OFF power to the inverter and confirm that the Charge Indicator LED is OFF.
- **3.** Loosen the two screws that secure the *upper* front panel. Remove the panel from the inverter.
- 4. Remove the screws that secure the fan unit to the top of the inverter.
- 5. Lift the cooling fan unit away from the top of the inverter housing.
- 6. Remove the defective fan(s) from the cooling fan mounting plate.

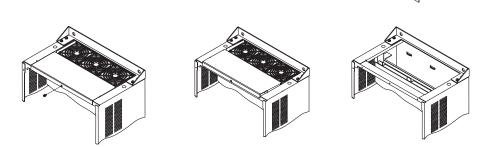


To install the new fan(s):

- 1. Slide the fan(s) into the mounting locations in the mounting plate. To ensure the correct airflow, be sure that the label on each fan faces toward the vent openings (top of inverter).
- Connect the fan wiring to terminals J21, J22, or J23 (depending on the inverter model) on the main circuit board.
- **3.** Put the mounting plate in position on the top of the inverter housing and secure it with screws.

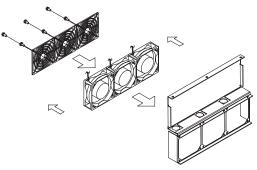

4. Replace the upper and lower front panel covers on the inverter and secure them with screws.

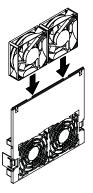

sales@hitachiacdrive.com

SJ7002 Inverter

General Inverter Electrical Measurements

The following table specifies how to measure key system electrical parameters. The diagrams on the next page show inverter-motor systems and the location of measurement points for these parameters.

Parameter	Circuit location of measurement	Measuring instrument	Notes	Reference Value
Supply voltage E ₁	E_R – across L1 and L2 E_S – across L2 and L3 E_T – across L3 and L1	Moving-coil type voltmeter or recti- fier type voltmeter	Fundamental wave effective value	Commercial supply voltage (200V class) 200-240V, 50/60 Hz 400V class 380- 460V, 50/60 Hz
Supply current I ₁	$I_r - L1, I_s - L2, I_t - L3$	Moving-coil type ammeter	Total effective value	
Supply power W ₁	W_{11} – across L1 and L2 W_{12} – across L2 and L3	Electronic type wattmeter	Total effective value	_
Supply power factor Pf ₁	$Pf_1 = \frac{W_1}{\sqrt{3} \times E_1}$			
Output voltage E ₀	E_{U} – across U and V E_{V} – across V and W E_{W} – across W and U	Rectifier type voltmeter	Total effective value	_
Output current I _o	$\begin{split} & I_U - U \\ & I_V - V \\ & I_W - W \end{split}$	Moving-coil type ammeter	Total effective value	—
Output power W _o	W_{01} – across U and V W_{02} – across V and W	Electronic type wattmeter	Total effective value	
Output power factor Pf _o	Calculate the output power fa current I, and output power W $Pf_0 = \frac{1}{\sqrt{3}}$	_		

Note 1: Use a meter indicating a fundamental wave effective value for voltage, and meters indicating total effective values for current and power.

Note 2: The inverter output has a distorted waveform, and harmonic frequencies may cause erroneous readings. However, the measuring instruments and methods listed above provide reasonably accurate results.

Note 3: A general-purpose digital volt meter (DVM) is not usually suitable to measure a distorted waveform (not pure sinusoid).


Maintenance and Inspection

Call 1(800)985-6929 for Sales

-26


The figure below shows measurement locations for voltage, current, and power measurements listed in the table on the previous page. The voltage to be measured is the fundamental wave effective voltage. The power to be measured is the total effective power.

Three-phase measurement diagram

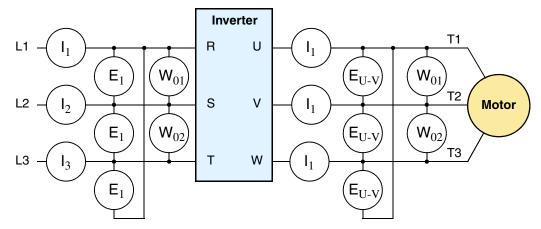

Inverter Output Voltage Measurement Techniques

Taking voltage measurements around drives equipment requires the right equipment and a safe approach. You are working with high voltages and high-frequency switching waveforms that are not pure sinusoids. Digital voltmeters will not usually produce reliable readings for these waveforms. And, it is usually risky to connect high voltage signals to oscilloscopes. The inverter output semiconductors have some leakage, and no-load measurements produce misleading results. So, we highly recommend using the following circuits to measure voltage for performing the equipment inspections.

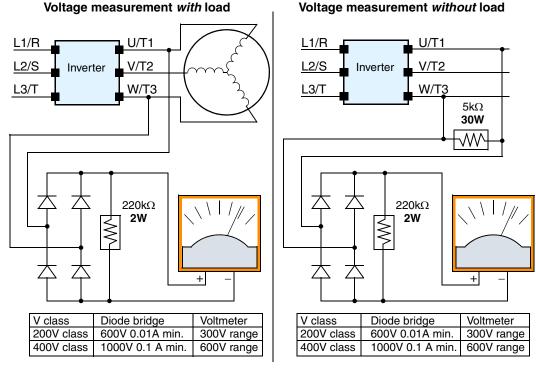




HIGH VOLTAGE: Be careful not to touch wiring or connector terminals when working with the inverters and taking measurements. Be sure to place the measurement circuitry above in an insulated housing before using them.

IGBT Test Method The following procedure will check the power module, including inverter transistors (IGBTs), IPM, diodes, and thyrister until replacement of inverter (1,000,000 start/stop cycles):

- 1. Disconnect input power to terminals [R, S, and T] and motor terminals [U, V, and W].
- 2. Disconnect any wires from terminals [P] and [RB] for regenerative braking.
- **3.** Use a Digital Volt Meter (DVM) and set it for 1 ohm resistance range. You can check the status of the charging state of terminals [R, S, T, U, V, W, RB, P, and N] of the inverter and the probe of the DVM by measuring the charging state.

Almost infinite ohms = "non-conducting," and 0 to 10 ohms = "conducting."

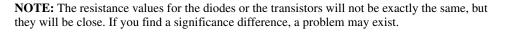

NOTE: Before measuring the voltage between [P] and [N] with the DC current range, confirm that the smoothing capacitor is discharged fully, then execute the tests.

	Circuit Ty	20	DVM	Probe	Measured Value
	Circuit Ty	pe	+	-	wieasureu value
PD P RB		D1	R	PD	Non-conducting
			PD	R	Conducting
D1 D2 D3 TR1 TR2 TR3		D2	S	PD	Non-conducting
╏╵╽╹╏╏╹╎╏╏╊┑╻╊┑╶╏			PD	S	Conducting
┆		D3	Т	PD	Non-conducting
	Converter		PD	Т	Conducting
s	Conventer	D4	R	Ν	Conducting
			Ν	R	Non-conducting
		D5	S	Ν	Conducting
			Ν	S	Non-conducting
		D6	Т	Ν	Conducting
D4 D5 D6 TR7 TR4 TR5 TR6			Ν	Т	Non-conducting
N		TR1	U	Р	Non-conducting
N			Р	U	Conducting
		TR2	V	Р	Non-conducting
			Р	V	Conducting
		TR3	W	Р	Non-conducting
	Inverter		Р	W	Conducting
	mvener	TR4	U	Ν	Conducting
			Ν	U	Non-conducting
		TR5	V	N	Conduct
			Ν	V	Non-conducting
		1			

TR6

W


Ν

Ν

W

Conducting

Non-conducting

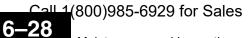

Maintenance and Inspection

Circuit Type		DVM Probe		Measured Value	
		+	-	wieasureu value	
	TR7	RB	Р	Non-conducting	
Dynamic Braking		Р	RB	Conducting	
(0.4 kW - 11 kW)		RB	N	Non-conducting	
		Ν	RB	Non-conducting	

6-29

Warranty

Warranty Terms

The warranty period under normal installation and handling conditions shall be two (2) years from the date of manufacture ("DATE" on product nameplate), or one (1) year from the date of installation, whichever occurs first. The warranty shall cover the repair or replacement, at Hitachi's sole discretion, of ONLY the inverter that was installed.

- 1. Service in the following cases, even within the warranty period, shall be charged to the purchaser:
 - **a.** Malfunction or damage caused by mis-operation or modification or improper repair
 - b. Malfunction or damage caused by a drop after purchase and transportation
 - **c.** Malfunction or damage caused by fire, earthquake, flood, lightning, abnormal input voltage, contamination, or other natural disasters
- 2. When service is required for the product at your work site, all expenses associated with field repair shall be charged to the purchaser.
- **3.** Always keep this manual handy; please do not lose it. Please contact your Hitachi distributor to purchase replacement or additional manuals.



Glossary and Bibliography



In This Appendix	page
— <u>Glossary</u>	<u>2</u>
— Bibliography	6

Call 1(800)985-6929 for Sales hitachiacdrive.com

Glossary

Ambient Temperature	The air temperature in the chamber containing a powered electronic unit. A unit's heat sinks rely on a lower ambient temperature in order to dissipate heat away from sensitive electronics.
Arrival Frequency	The arrival frequency refers to the set output frequency of the inverter for the constant speed setting. The arrival frequency feature turns ON an output when the inverter reaches the set constant speed. The inverter has various arrival frequencies and pulsed or latched logic options.
Auto-tuning	The ability of a controller to execute a procedure that interacts with a load to determine the proper coefficients to use in the control algorithm. Auto-tuning is a common feature of process controllers with PID loops. Hitachi inverters feature auto-tuning to determine motor parameters for optimal commutation. Auto-tuning is available as a special command from a digital operator panel. See also <i>digital operator panel</i> .
Base Frequency	The power input frequency for which an AC induction motor is designed to operate. Most motors will specify a 50 to 60 Hz value. The Hitachi inverters have a programmable base frequency, so you must ensure that parameter matches the attached motor. The term <i>base frequency</i> helps differentiate it from the carrier frequency. See also <i>carrier frequency</i> and <i>frequency setting</i> .
Braking Resistor	An energy-absorbing resistor that dissipates energy from a decelerating load. Load inertia causes the motor to act as a generator during deceleration. See also <i>four-quadrant operation</i> and <i>dynamic braking</i> .
Break-away Torque	The torque a motor must produce to overcome the static friction of a load in order to start the load moving.
Carrier Frequency	The frequency of the constant, periodic, switching waveform that the inverter modulates to generate the AC output to the motor. See also <i>PWM</i> .
CE	A regulatory agency for governing the performance of electronic products in Europe. Drive installations designed to have CE approval must have particular filter(s) installed in the application.
Choke	An inductor that is tuned to react at radio frequencies is called a "choke," since it attenuates (chokes) frequencies above a particular threshold. Tuning is often accomplished by using a movable magnetic core. In variable-frequency drive systems, a choke positioned around high-current wiring can help attenuate harmful harmonics and protect equipment. See also <i>harmonics</i> .
DC Braking	The inverter DC braking feature stops the AC commutation to the motor, and sends a DC current through the motor windings in order to stop the motor. Also called "DC injection braking," it has little effect at high speed, and is used as the motor is nearing a stop.
DC Link	The portion of the variable frequency drive between the input rectifiers and the output stages. It delivers smoothed DC power to the control and output stages of the drive.
Deadband	In a control system, the range of input change for which there is no perceptible change in the output. In PID loops, the error term may have a deadband associated with it. Deadband may or may not be desirable; it depends on the needs of the application.
Digital Operator Panel	For Hitachi inverters, "digital operator panel" (DOP) refers first to the operator keypad on the front panel of the inverter. It also includes hand-held remote keypads, which connect to the inverter via a cable. Finally, the DOP Professional is a PC-based software simulation of the keypad devices.

A-2

Diode	A semiconductor device that has a voltage-current characteristic that allows current to flow only in one direction, with negligible leakage current in the reverse direction. See also <i>rectifier</i> .	
Duty Cycle	1. The percent of time a square wave of fixed frequency is ON (high) versus OFF (low). 2. The ratio of operating time of a motor, braking resistor, etc. to its resting time. This parameter usually is specified in association with the allowable thermal rise for the device.	
Dynamic Braking	The inverter dynamic braking feature shunts the motor-generated EMF energy into a special braking resistor. The added dissipation (braking torque) is effective at higher speeds, having a reduced effect as the motor nears a stop.	
Error	In process control, the error is the difference between the desired value or setpoint (SP) and the actual value of a the process variable (PV). See also <i>process variable</i> and <i>PID Loop</i> .	
EMI	Electromagnetic Interference - In motor/drive systems, the switching of high currents and voltages creates the possibility of generating radiated electrical noise that may interfere with the operation of nearby sensitive electrical instruments or devices. Certain aspects of an installation, such as long motor lead wire lengths, tend to increase the chance of EMI. Hitachi provides accessory filter components you can install to decrease the level of EMI.	
Four-quadrant operation	Referring to a graph of torque versus speed, a four-quadrant drive can turn the motor either forward or reverse, as well as decelerate in either direction (see also <i>reverse torque</i>). A load that has a relatively high inertia and must move in both directions and change directions rapidly requires four-quadrant capability from its drive.	
Free-run Stop	A method of stopping a motor, caused when the inverter simply turns OFF its motor output connections. This may allow the motor and load to coast to a stop, or a mechanical brake may intervene and shorten the deceleration time.	
Frequency Setting	While frequency has a broad meaning in electronics, it typically refers to motor speed for variable-frequency drives (inverters). This is because the output frequency of the inverter is variable, and is proportional to the attained motor speed. For example, a motor with a base frequency of 60 Hz can be speed controlled with an inverter output varying form 0 to 60 Hz. See also <i>base frequency, carrier frequency</i> , and <i>slip</i> .	
Harmonics	A <i>harmonic</i> is a whole number multiple of a base of fundamental frequency. The square waves used in inverters produce high-frequency harmonics, even though the main goal is to produce lower-frequency sine waves. These harmonics can be harmful to electronics (including motor windings) and cause radiated energy that interferes with nearby electronic devices. Chokes, line reactors, and filters are sometimes used to suppress the transmission of harmonics in an electrical system. See also <i>choke</i> .	
Horsepower	A unit of physical measure to quantify the amount of work done per unit of time. You can directly convert between horsepower and Watts as measurements of power.	
IGBT	Insulated Gate Bipolar Transistor (IGBT) - A semiconductor transistor capable of conduct- ing very large currents when in saturation and capable of withstanding very high voltages when it is OFF. This high-power bipolar transistor is the type used in Hitachi inverters.	
Inertia	The natural resistance of an object to being accelerated or decelerated by an external force. See also <i>momentum</i> .	
Intelligent Terminal	A configurable input or output logic function on the Hitachi inverters. Each terminal may be assigned one of several functions.	
Inverter	A device that electronically changes DC to AC current through a alternating process of switch- ing the input to the output, inverted and non-inverted. A variable speed drive such as the Hitachi SJ7002 is also called an inverter, since it contains three inverter circuits to generate 3-phase output to the motor.	

A–3

<	L	
	×	
3	D	
à	D	
4	5	
2	₽	
	1	

A-4

Isolation Transformer	A transformer with 1:1 voltage ratio that provides electrical isolation between its primary and secondary windings. These are typically used on the power input side of the device to be protected. An isolation transformer can protect equipment from a ground fault or other malfunction of nearby equipment, as well as attenuate harmful harmonics and transients on the input power.	
Jogging Operation	Usually done manually, a jog command from an operator's panel requests the motor/drive system to run indefinitely in a particular direction, until the machine operator ends the jog operation.	
Jump Frequency	A jump frequency is a point on the inverter output frequency range that you want the inverter to skip around. This feature may be used to avoid a resonant frequency, and you can program up to three jump frequencies in the inverter.	
Line Reactor	A three-phase inductor generally installed in the AC input circuit of an inverter to minimize harmonics and to limit short-circuit current.	
Momentum	The physical property of a body in motion that causes it to continue to remain in motion. In the case of motors, the rotor and attached load are rotating and possess angular momentum.	
Multi-speed Operation	The ability of a motor drive to store preset discrete speed levels for the motor, and control motor speed according to the currently selected speed preset. The Hitachi inverters have 16 preset speeds.	
Motor Load	In motor terminology, motor load consists of the inertia of the physical mass that is moved by the motor and the related friction from guiding mechanisms. See also <i>inertia</i> .	
NEC	The National Electric Code is a regulatory document that governs electrical power and device wiring and installation in the United States.	
NEMA	The National Electric Manufacturer's Association. NEMA Codes are a published series of device ratings standards. Industry uses these to evaluate or compare the performance of devices made by various manufacturers to a known standard.	
Open-collector Outputs	A common logic-type discrete output that uses an NPN transistor that acts as a switch to a power supply common, usually ground. The transistor's <i>collector</i> is <i>open</i> for external connection (not connected internally). Thus, the output <i>sinks</i> external load current to ground.	
Orientation	When using the expansion card SJ-FB with encoder feedback, the orientation feature is available. Also called <i>home search</i> in motion terminology, you can specify a search direction and a stop position. Typically the orientation procedure is necessary after each inverter powerup.	
Power Factor	A ratio that expresses a phase difference (timing offset) between current and voltage supplied by a power source to a load. A perfect power factor = 1.0 (no phase offset). Power factors less than one cause some energy loss in power transmission wiring (source to load).	
PID Loop	Proportional-Integral-Derivative – a mathematical model used for process control. A process controller maintains a process variable (PV) at a setpoint (SP) by using its PID algorithm to compensate for dynamic conditions and varies its output to drive the PV toward the desired value. See also <i>error</i> .	
Process Variable	A physical property of a process that is of interest because it affects the quality of the primary task accomplished by the process. For an industrial oven, temperature is the process variable. See also <i>PID Loop</i> and <i>error</i> .	
PWM	Pulse-width modulation: A type of AC adjustable frequency drive that accomplishes frequency and voltage control at the output section (inverter) of the drive. The drive output voltage waveform is at a constant amplitude, and by "chopping" the waveform (pulse-width-modulat- ing), the average voltage is controlled. The chopping frequency is sometimes called the <i>carrier frequency</i> .	

Reactance	The impedance of inductors and capacitors has two components. The resistive part is constant, while the reactive part changes with applied frequency. These devices have a complex imped- ance (complex number), where the resistance is the real part and the reactance is the imaginary part.		
Rectifier	An electronic device made of one or more diodes that converts AC power into DC power. Rectifiers are usually used in combination with capacitors to filter (smooth) the rectified waveform to closely approximate a pure DC voltage source.		
Regenerative Braking	A particular method of generating reverse torque to a motor, an inverter will switch internally to allow the motor to become a generator and will either store the energy internally, deliver the braking energy back to the main power input, or dissipate it with a resistor.		
Regulation	The quality of control applied to maintain a parameter of interest at a desired value. Usually expressed as a percent (+/-) from the nominal, motor regulation usually refers to its shaft speed.		
Reverse Torque	The torque applied in the direction opposite to motor shaft rotation. As such, reverse torque is a decelerating force on the motor and its external load.		
Rotor	The windings of a motor that rotate, being physically coupled to the motor shaft. See also <i>stator</i> .		
Saturation Voltage	For a transistor semiconductor device, it is in saturation when an increase in input current no longer results in an increase in the output current. The saturation voltage is the voltage drop across the device. The ideal saturation voltage is zero.		
Sensorless Vector Control	A technique used in variable-frequency drives to rotate the force vector in the motor without the use of a shaft position sensor (angular). Benefits include an increase in torque at the lowest speed and the cost savings from the lack of a shaft position sensor.		
Setpoint (SP)	The setpoint is the desired value of a process variable of interest. See also <i>Process Variable</i> (<i>PV</i>) and <i>PID Loop</i> .		
Single-phase Power	An AC power source consisting of Hot and Neutral wires. An Earth Ground connection usually accompanies them. In theory, the voltage potential on Neutral stays at or near Earth Ground, while Hot varies sinusoidally above and below Neutral. This power source is named Single Phase to differentiate it from three-phase power sources. Some Hitachi inverters can accept single phase input power, but they all output three-phase power to the motor. See also <i>three-phase</i> .		
Slip	The difference between the theoretical (synchronous) speed of a motor at no load (determined by its inverter output waveforms) and the actual speed. Some slip is essential in order to develop torque to the load, but too much will cause excessive heat in the motor windings and/or cause the motor to stall.		
Squirrel Cage	A "nick-name" for the appearance of the rotor frame assembly for an AC induction motor.		
Stator	The windings in a motor that are stationary and coupled to the power input of the motor. See also <i>rotor</i> .		
Start Frequency	The output frequency that the inverter first produces as the frequency command setting increases from zero. The start frequency is programmable, and is important to set properly for the load, etc.		
Tachometer	1. A signal generator usually attached to the motor shaft for the purpose of providing feedback to the speed controlling device of the motor. 2. A speed-monitoring test meter that may optically sense shaft rotation speed and display it on a readout.		

A–5

Bibliography

Thermal Switch	An electromechanical safety device that opens to stop current flow when the temperature at the device reaches a specific temperature threshold. Thermal switches are sometimes installed in the motor in order to protect the windings from heat damage. The inverter can use thermal switch signals to trip (shut down) if the motor overheats. See also <i>trip</i> .		
Thermistor	A type of temperature sensor that changes its resistance according to its temperature. The sensing range of thermistors and their ruggedness make them ideal for motor overheating detection. Hitachi inverters have built-in thermistor input circuits, which can detect an overheated motor and shut OFF (trip) the inverter output.		
Three-phase Power	An AC power source with three Hot connections that have phase offsets of 120 degrees is a 3- phase power source. Usually, Neutral and Earth Ground wires accompany the three Hot connections. Loads may be configured in a delta or Y configuration. A Y-connected load such as an AC induction motor will be a balanced load; the currents in all the Hot connections are the same. Therefore, the Neutral connection is theoretically zero. This is why inverters that generate 3-phase power for motors do not generally have a Neutral connection to the motor. However, the Earth Ground connection is important for safety reasons, and is provided.		
Torque	A measure of rotational force. The units of measurement are the product of the distance (radius from shaft center axis) and force (weight) applied at that distance. Units are usually given as pound-feet, ounce-inches, or Newton-meters.		
Transistor	A solid state, three-terminal device that provides amplification of signals and can be used for switching and control. While transistors have a linear operating range, inverters use them as high-powered switches. Recent developments in power semiconductors have produced transistors capable of handling high voltages and currents, all with high reliability. The saturation voltage has been decreasing, resulting in less heat dissipation. Hitachi inverters use state-of-the-art semiconductors to provide high performance and reliability in a compact package. See also <i>IGBT</i> and <i>saturation voltage</i> .		
Trip	An event that causes the inverter to stop operation is called a "trip" event (as in <i>tripping</i> a circuit breaker). The inverter keeps a history log of trip events. They also require an action to clear.		
Watt Loss	A measure of the internal power loss of a component, the difference between the power it consumes and what its output delivers. An inverter's watt loss is the input power minus the power delivered to the motor. The watt loss is typically highest when an inverter is delivering its maximum output. Therefore, watt loss is usually specified for a particular output level. Inverter watt loss specifications are important when designing enclosures.		

Bibliography

Title	Author and Publisher
Variable Speed Drive Fundamentals, 2nd Ed.	Phipps, Clarence A. The Fairmont Press, Inc. / Prentice-Hall, Inc. 1997 ISBN 0-13-636390-3
Electronic Variable Speed Drives	Brumbach, Michael E. Delmar Publishers 1997 ISBN 0-8273-6937-9
Hitachi Inverter Technical Guide Book	Published by Hitachi, Ltd. Japan 1995 Publication SIG-E002

A-6


Serial Communications

Introduction

Call 1(800)985-6929 for Sales

Introduction

SJ7002 inverters have a built-in RS485 serial communications interface. This serial communications function provides a way of controlling from 1 to 32 inverters on a common serial network. SJ7002, SJ300, and L300P inverters all have the same communications prototol. In a typical application, a host computer or controller is the master and each of the inverter(s) is a slave, as shown in the figure below.

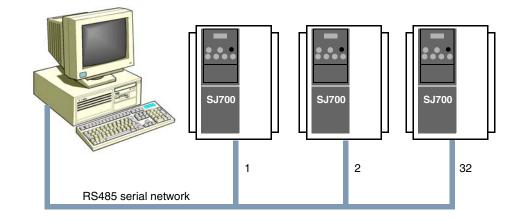


The specifications for SJ7002 Series RS485 serial communications are in the following table:


Item	ASCII Mode	ModBus RTU mode	User-selectable
Transmission speed	2400 / 4800 / 9600 / 19200 bps		~
Communication modes	Half duplex (one device transmits	at a time)	×
Synchronization	Start/stop transmission	Asychronous transmission	×
Character code	ASCII code	Binary code	×
LSB placement	Transmits LSB first		×
Electrical interface	RS485 differential transceiver		×
Data bits	7 or 8 bits	8 bits	~
Parity	None / even / odd		~
Stop bits	1 or 2 bits		~
Start convention	One-way start only by command from host device on network		×
Wait time for response	10 to 1,000 ms	0 to 1,000 ms	~
Connection format	Station address numbers from 1 to 32 maximum		~
Error check	Overrun, framing, BCC, vertical parity, and longitudinal parity errors	Overrun, framing, CRC-16, and longitudinal parity errors	×

B-2

Serial Connection The serial connector is to the left of the control logic connector as shown below: Diagrams

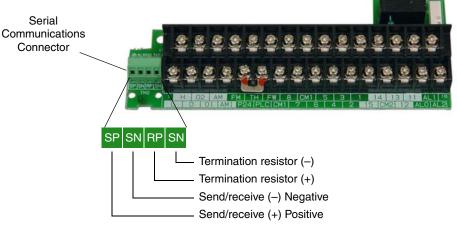

Each device requires just two connections in parallel for data transmission and reception. Additionally, the device at each physical end of the wiring requires a termination resistor. The SJ7002 has built-in termination resistors that become part of the circuit when you add a jumper as shown. The termination resistor helps to suppress electrical reflections.

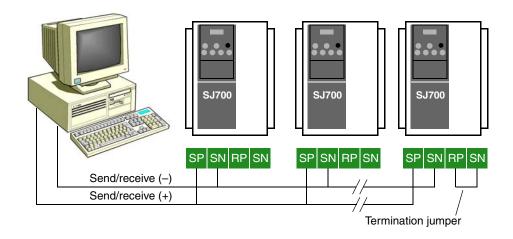



TIP: Each slave device on the serial network must have a unique node address, set by parameter C072. If this is a new application, we recommend connecting one new device at a time and checking the communications after each addition.

Introduction

Serial Network
Parameter
Settings
-

Several parameter settings are necessary to configure serial communications, listed below.

Function Code	Item	Value	Description
		02	Loop-back test
		03	2400 bps
C071	Baud rate	04	4800 bps
		05	9600 bps
		06	19200 bps
C072	Node address	1 to 32, FF	1 to 32 – Node or station address (unique to each inverter or device) FF – Automatic broadcast (to all nodes on transmit, allowed only on certain commands (refer to each command description in this appendix)
C073	Data bits	07	7 bits
013		08	8 bits
		00	none
C074	Parity	01	Even parity
		02	Odd parity
C075	Stop bits	01	1 bit
		02	2 bits
C078	Wait time	0 to 1000	0 to 1000 ms time that the inverter waits to respond to network master
C079	Communication	00	ASCII
	protocol select	01	ModBus RTU

For inverters on the same network, some settings must match from inverter to inverter. These include: Baud rate, data bits, parity, and stop bits. However, the node address on each inverter must be unique, used only once on the network.

Communication Test Mode

Use the communication test mode to check the RS485 serial port hardware on the inverter. Use the following procedure:

- 1. Disconnect the wiring from the TM2 serial port terminal block on the inverter.
- **2.** Set parameter C071 = 02 (loopback test)
- 3. Turn the inverter power OFF and then ON again to initiate the communication test.
- 4. Check the pass/fail results according to the keypad display.



- **5.** Press the STOP/RESET key on the digital operator keypad (or the Reset button on the copy unit) to switch to the normal setting display.
- 6. Set parameter C071 to the desired setting for normal operation.


sales@hitachiacdrive.com

SJ7002 Inverter

ASCII Mode Communications

Introduction to Command List

The network master sends a frame to initiate communications with a slave, as shown in the figure to the right. After the set waiting time (per parameter C078, the inverter responds.

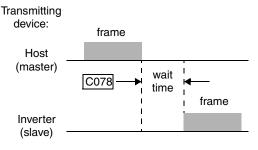

The following table lists the commands (single-character codes) sent to a particular device on the network. Some commands may be broadcast to all devices on the network.

Command Code	Description	Broadcast to all devices
00	Forward / Reverse / Stop command	~
01	Setting of frequency in standard profile	~
02	Setting of intelligent terminal state	~
03	Read all monitor data (block read)	
04	Read inverter status	
05	Read trip history	
06	Read a single parameter value	
07	Write a single parameter value	~
08	Set inverter parameters to default values	~
09	Verifies that the requested setting can be written to EEPROM.	_
0A	Writes a parameter value to EEPROM	~
0B	Requests the recalculation of internal constant	~



NOTE: Use of command 08 – set inverter parameters to default values first requires setting the initialization mode parameter B084 to 01 (initializes parameters only) or 02 (initializes parameters and clears the trip history).

Command – 00

The 00 command controls the Forward, Reverse, and Stop mode of the inverter. You must set parameter A002=03 in order for serial communications control of the inverter to apply.

The frame format of command 00 follows the timing diagram and specification table.

STX	Node	Command	Data	BCC	[CR]

<u>Call 1(800)985-6929</u> for Sales

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32, and FF (broadcast to all nodes)
Command	Transmission command	2 bytes	00
Data	Transmission data	1 byte	00 = Stop command 01 = Forward command 02 = Reverse command
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The example below shows a transmission to the inverter at address Node 1 to rotate the motor in the forward direction.

(STX) 01 00 1 (BCC) [CR]	to ASCII	02 30 31	30 30 31 33 30 0D

Command – 01 The 01 command sets the output frequency for the standard profile. You must set parameter A002=03 in order for serial communications control of the inverter to apply.

The frame format of command 01 follows the timing diagram and specification table.

STX No	e Command	Data	BCC	[CR]
--------	-----------	------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32, and FF (broadcast to all nodes)
Command	Transmission command	2 bytes	01
Data	Transmission data	6 bytes	ASCII code for ten times the frequency (accommodates two decimal places)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The example below shows a transmission to the inverter at address Node 1 to set the output frequency for 5 Hz. We use a value of 500 in ASCII to represent 5.00 Hz.

to ASCII

(STX) | 01 | 01 | 000500 | (BCC) | [CR]

_▶ 02 | 30 31 | 30 31 | 30 30 30 35 30 30 | 30 35 | 0D

When using the data as the feedback (process variable) for PID control, set the most significant byte to ASCII "1." The following example transmits the data "5%."

(STX) | 01 | 01 | 000500 | (BCC) | [CR]

to ASCII 02 | 30 31 | 30 31 | 31 30 30 35 30 30 | 30 35 | 0D

-6

Commands – 02 and 12

The 02 command sets the logic state (ON or OFF) of the intelligent input terminals.

The frame format of command 02 follows the timing diagram and specification table.

STX	Node	Command	Data	BCC	[CR]

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32, and FF (broadcast to all)
Command	Transmission command	2 bytes	02 or 12
Data	Transmission data	16 bytes	(see tables below)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The 16-byte data string is specified in the following tables:

Data (Hex)	02 Command Description	Data (Hex)	02 CommandDescription
0000000000000001	[FW] Forward command	00000010000000	[SF1] Multi-speed bit-level
000000000000002	[RV] Reverse command	00000020000000	[SF2] Multi-speed bit-level
000000000000004	[CF1] Multi-speed 1	00000040000000	[SF3] Multi-speed bit-level
000000000000008	[CF2] Multi-speed 2	00000080000000	[SF4] Multi-speed bit-level
000000000000010	[CF3] Multi-speed 3	000000100000000	[SF5] Multi-speed bit-level
000000000000020	[CF4] Multi-speed 4	000000200000000	[SF6] Multi-speed bit-level
000000000000040	[JG] Jog operation	000000400000000	[SF7] Multi-speed bit-level
000000000000080	[DB] Dynamic braking	000000800000000	[OLR] Overload restriction setting
000000000000100	[SET] set 2nd motor	000001000000000	[TL] Torque limit
0000000000000200	[2CH] 2-stage adjustable speed	000002000000000	[TRQ1] Torque limit select 1
000000000000400	_	000004000000000	[TRQ2] Torque limit select 2
000000000000800	[FRS] Free-run stop	000008000000000	[PPI P/PI] inverter mode select
000000000001000	[EXP] External trip	000010000000000	[BOK] Brake confirmation
000000000002000	[USP] Unattended start protection	000020000000000	[ORT] Orientation (home) command
000000000004000	[CS] Commercial power change	000040000000000	[LAC] Linear Accel/decel Cancel
000000000008000	[SFT] Software lock	000080000000000	[PCLR] Position error clear
000000000010000	[AT] analog input voltage/current	000100000000000	[STAT] Pulse train input enable
000000000020000	[SET3] Set 3rd motor	0002000000000000	
000000000040000	[RS] Reset	0004000000000000	[ADD] Trigger for frequency addition
000000000080000	_	0008000000000000	[F-TM] Forcible terminal operation
000000000100000	[STA] 3-wire Start	0010000000000000	[ATR] Permission of torque command
000000000200000	[STP] 3-wire Hold	0020000000000000	[KHC] Cumulative power clearance
000000000400000	[F/R] 3-wire FWD/REV	0040000000000000	[SON] Servo ON
000000000800000	[PID] PID enable	0080000000000000	[FOC] Forcing
000000001000000	[PIDC] PID integrator reset	0100000000000000	[MI1] General-purpose input 1
000000002000000	—	0200000000000000	[MI2] General-purpose input 2

B-7

ASCII Mode Communications

Data (Hex)	02 Command Description	Data (Hex)	02 CommandDescription
000000004000000	[CAS] control gain switching function	0400000000000000	[MI3] General-purpose input 3
000000008000000	[UP] remote control increment speed	0800000000000000	[MI4] General-purpose input 4
000000010000000	[DWN] remote control decrement speed	100000000000000000000000000000000000000	[MI5] General-purpose input 5
000000020000000	[UDC] remote control clear up/down	2000000000000000	[MI6] General-purpose input 6
000000040000000	[OPE] Forcible operation	4000000000000000	[MI7] General-purpose input 7
000000080000000	—	8000000000000000	[MI8] General-purpose input 8

Data (Hex)	12 Command Description	Data (Hex)	12 CommandDescription
0000000000000001	_	00000010000000	—
0000000000000002	[AHD] Analog command holding	00000020000000	
0000000000000004	[CP1] Multi-stage position select 1	00000040000000	
000000000000008	[CP2] Multi-stage position select 2	00000080000000	
0000000000000010	[CP3] Multi-stage position select 3	000000100000000	
0000000000000020	[ORL] Zero-return limit function	000000200000000	
0000000000000040	[ORG] Zero-return trigger function	000000400000000	
0000000000000080	[FOT] Forward drive stop	000000800000000	
000000000000100	[ROT] Reverse drive stop	000001000000000	
000000000000200	[SPD] Speed / position switching	000002000000000	
000000000000400	[PCNT] Pulse counter	000004000000000	
000000000000800	[PCC] Pulse counter clear	000008000000000	
000000000001000	_	000010000000000	
000000000002000	—	000020000000000	
000000000004000	_	000040000000000	
000000000008000	_	000080000000000	
000000000010000	_	000100000000000	
000000000020000	_	000200000000000	
000000000040000	_	000400000000000	
000000000080000	—	000800000000000	
000000000100000	_	001000000000000	
000000000200000	_	0020000000000000	
000000000400000	_	004000000000000	
000000000800000	—	008000000000000	
000000001000000	—	010000000000000	
000000002000000	_	0200000000000000	
000000004000000	_	0400000000000000	
000000008000000	_	0800000000000000	
000000010000000	—	1000000000000000	—
000000020000000	—	200000000000000	—
000000040000000	—	4000000000000000	—
000000080000000	—	8000000000000000	—

The arrangement of the terminal assignment data permits you to assign all inputs in a single command. The example below shows a transmission to the inverter at address Node 1 to set the Forward command, Multi-speed 1 and Multi-speed 2.

Sum the three data strings:	0x0000000000 + 0x0000000000 + 0x0000000000	00004 00008
(STX) 01 02 0x000000000000000000000000000000	000D (BCC) (CR)	to ASCII

Command – 03 The 03 command reads the monitor data as a single block.

The frame format of command 03 follows the diagram and specification table. The transmit frame has no data field.

Transmit frame format							
STX	Node	Command	BCC	[CR]			

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	03
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The receive frame has a 104-byte data field, containing values for 13 items.

Receive frame format

STX	Node	Data	BCC	[CR]
-----	------	------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Data	Transmission data	104 bytes	(see next table)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

B_9

ASCII Mode Communications

The data in the receive frame contains 8-byte values for 13 items, listed in the table below:

No.	Monitor Item	Units	Multiplier	Data Size	Notes
1	Output frequency	Hz	100	8 bytes	Dec. ASCII code
2	Output current	А	10	8 bytes	Dec. ASCII code
3	Direction of rotation		_	8 bytes	0 = Stop 1 = FWD 2 = REV
4	PID feedback monitor	%	100	8 bytes	Dec. ASCII code
5	Intelligent input monitor	_	—	8 bytes	Dec. ASCII code
6	Intelligent output monitor	_	_	8 bytes	Dec. ASCII code
7	Frequency converting monitor	_	100	8 bytes	Dec. ASCII code
8	Output torque monitor	%	1	8 bytes	Dec. ASCII code
9	Output voltage monitor	V	10	8 bytes	Dec. ASCII code
10	Electric power monitor	kW	10	8 bytes	Dec. ASCII code
11	Reserved		—	8 bytes	= 00000000
12	Run Mode time monitor	hours	1	8 bytes	Dec. ASCII code
13	Power ON time monitor	hours	1	8 bytes	Dec. ASCII code

The eight bytes for intelligent input or intelligent output data have a bit set in the data field for each I/O point that is ON, according to the following table:

Terminal	Monitor Item	Data
[1]	Input 1	00000001
[2]	Input 2	0000002
[3]	Input 3	00000004
[4]	Input 4	0000008
[5]	Input 5	0000010
[6]	Input 6	0000020
[7]	Input 7	00000040
[8]	Input 8	0000080
[FW]	Forward input	00000100
[11]	Output 1	00000001
[12]	Output 2	0000002
[13]	Output 3	00000003
[14]	Output 4	0000008
[15]	Output 5	00000010
[AL]	Alarm relay	00000020

B

sales@hitachiacdrive.co

SJ7002 Inverter

Command – 04

The 04 command reads the status of the inverter. The frame format of command 04 follows the diagrams and specification tables. The transmit frame has no data field.

STX	Node	Command	BCC	[CR]

Transmit frame format

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	04
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The receive frame has an 8-byte data field, containing values for three trip items (plus a reserved field).

Receive frame format

STX Node	Data	BCC	[CR]
----------	------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Data	Transmission data	8 bytes	(see next table)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Trip data is organized as shown. The table below lists the codes and their meanings.

Data field contents

Status A	Status B	Status C	(reserved)

Code	Status A Definition	Status B Definition	Status C Definition
00	Initial status	On stopping	—
01	—	On running	Stop
02	On Stopping	On tripping	Deceleration speed
03	On running		Constant speed
04	On free-run stop	—	Acceleration speed
05	On jog	—	Forward
06	On dynamic braking	—	Reverse
07	On retry	—	Reverse from forward
08	On trip	—	Forward from reverse
09	On under-voltage	—	Forward start
10	—	—	Reverse start

B_11

Call 1(800)985-6929 for Sales hitachiacdrive.com

ASCII Mode Communications

Call 1(800)985-6929 for Sales

Command – 05

The 05 command reads the inverter's trip history. The frame format of command 05 follows the diagrams and specification tables. The transmit frame has no data field.

Transmit frame format

STX	Node	Command	BCC	[CR]
-----	------	---------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	05
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The receive frame has a 440-byte data field. This consists of an 8-byte total accumulated number of trip events, followed by six 72-byte strings for the six most recent trip events as shown below.

Receive frame format

STX Node Data	BCC [CR]
---------------	----------

Data field contents

Total o	ount Tri	o 1 Trip 2	Trip 3	Trip 4	Trip 5	Trip 6
---------	----------	------------	--------	--------	--------	--------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Data	Transmission data	440 bytes	(see next table)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The nine bytes of data for each trip event history is listed below. The data contains the multiplier to adjust the decimal point. Divide the data by that factor to derive the actual value.

No.	Monitor Item	Units	Multiplier	Data Size	Notes
1	Trip factor	—	—	8 bytes	Factor code
2	Inverter Status A	—	—	8 bytes	Same as 04
3	Inverter Status B	—	—	8 bytes	command data
4	Inverter Status C	—	—	8 bytes	
5	Output frequency	Hz	10	8 bytes	Dec. ASCII code
6	Accumulated Run Mode time	hours	1	8 bytes	Dec. ASCII code
7	Output current	А	10	8 bytes	Dec. ASCII code
8	Output voltage	V	10	8 bytes	Dec. ASCII code
9	Power ON time	hours	1	8 bytes	Dec. ASCII code

B

sales@hitachiacdrive.com B-13

SJ7002 Inverter

For Command 05, bytes 2, 3, and 4 of the event history are status codes A, B, and C, respectively. The tables below provide status code descriptions.

Data field contents	

byte 2	byte 3	byte 4	
Status A	Status B	Status C	

Code	Status A Definition	Status C Definition
00	Initial status	On reset
01	—	On stopping
02	On Stopping	On deceleration
03	On running	Constant speed
04	On free-run stop	On acceleration
05	On jog	On 0 Hz running
06	On dynamic braking	On running
07	On retry	On dynamic braking
08	On trip	On overload restriction
09	On under-voltage	

Bit	Status B Definition	Error Code
0	Ground fault	E14
1	IGBT error, U phase	E30
2	Under-voltage error	E09
3	Over-voltage protection	E07
4	Thermal trip	E21
5	IGBT error, V phase	E30
6	IGBT error, W phase	E30
7	Gate array error	E23

ASCII Mode Communications

Call 1(800)985-6929 for Sales

Command – 06

The 06 command reads a single parameter value from the inverter, which is specified by the data field this read command.

Transmit frame format

|--|

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	06
Data	Parameter specified to be read	4 bytes	(see tables below)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The receive frame includes an ACK (acknowledge) character, followed by an 8-byte data field.

Receive frame format

STX Node ACK Data BCC [CR]

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
ACK	Control code (ACKnowledge)	1 byte	ACK (0x06)
Data	Parameter value	8 bytes	Value of parameter times ten, returned as ASCII char. code, except for H003 and H203 (see table below)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Use the codes in the table below to return parameters for H003 and H203 (motor capacity selection).

Code Data	00	01	02	03	04	05	06	07	08	09	10
Japan or U.S.A. mode (B85 = 00 or 02)	0.2 kW		0.4		0.75		1.5	2.2		3.7	—
EU mode (B85=01)	0.2 kW	0.37		0.55	0.75	1.1	1.5	2.2	3.0		4.0
Code Data	11	12	13	14	15	16	17	18	19	20	21
Japan or U.S.A. mode (B85 = 00 or 02)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
EU mode (B85=01)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
Code Data	22	23	24	25	26	27	28	29	30	31	32
Japan or U.S.A. mode (B85 = 00 or 02)	90 kW	110	132	150	160	185	200	220	250	280	300
EU mode (B85=01)	90 kW	110	132	150	160	185	200	220	250	280	300
Code Data	33	34	35	36	_					_	—
Japan or U.S.A. mode (B85 = 00 or 02)	315 kW	340	355	400							—
EU mode (B85=01)	315 kW	340	355	400		_	_	_	_		

B

14

Command – 07 The 07 command sets a parameter value equal to the value specified in the transmission. The frame format of command 07 follows the diagram and specification table.

Frame format

STX	Node	Command	Parameter	Data	BCC	[CR]

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	e Node (station) address of inverter		01 to 32, and FF (broadcast to all nodes)
Command	Transmission command	2 bytes	07
Parameter	Function code of parameter	4 bytes	F002, A001, B001, C001, H003, P001
Data	ta Transmission data		Value of parameter times ten as ASCII char. code, except for H003 and H203 (see table below)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Note that the parameter F001, the output frequency, can be set more directly with host command 01 instead of with this command. Use the codes in the following table for setting parameters associated with H003 and H203.

Code Data	00	01	02	03	04	05	06	07	08	09	10
Japan or U.S.A. mode (B85 = 00 or 02)	0.2 kW	—	0.4	—	0.75	_	1.5	2.2	_	3.7	—
EU mode (B85=01)	0.2 kW	0.37		0.55	0.75	1.1	1.5	2.2	3.0	_	4.0
Code Data	11	12	13	14	15	16	17	18	19	20	21
Japan or U.S.A. mode (B85 = 00 or 02)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
EU mode (B85=01)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
Code Data	22	23	24	25	26	27	28	29	30	31	32
Japan or U.S.A. mode (B85 = 00 or 02)	90 kW	110	132	150	160	185	200	220	250	280	300
EU mode (B85=01)	90 kW	110	132	150	160	185	200	220	250	280	300
Code Data	33	34	35	36	—	_	_	_	_	_	—
Japan or U.S.A. mode (B85 = 00 or 02)	315 kW	340	355	400		_	_	_	_	_	—
EU mode (B85=01)	315 kW	340	355	400		_	_	_	—	_	—

sales@hitachiacdrive.com

Call 1(800)985-6929 for Sales

Command – 08

The 08 command initializes the inverter parameters to the factory default values. First, you must set B84 (use command 07) to specify whether you want to clear the trip history at the same time. Also, set B85 to specify the country code for the initialization (use command 07).

The frame format of command 08 follows the diagram and specification table.

Frame ionnat	Frame	format
--------------	-------	--------

STX Node	Command	BCC [CF	R]
----------	---------	---------	------------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32, and FF (broadcast to all nodes)
Command	Transmission command	2 bytes	08
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Command – 09

The 09 command verifies whether or not it is possible to set a particular parameter in the EEPROM. The frame format of command 08 follows the diagram and specification table.

Transmit frame format

STX	Node	Command	BCC	[CR]
-----	------	---------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)		STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	09
BCC			Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The receive frame includes an ACK (acknowledge) character, followed by a 2-byte data field with the result.

Receive frame format

STX	Node	ACK	Data	BCC	[CR]
-----	------	-----	------	-----	------

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
ACK	Control code (ACKnowledge)	1 byte	ACK (0x06)
Data	Parameter value		00 = setting not allowed, 01 = setting is allowed
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

B

16

Command – 0A

The 0A command sets a value in the EEPROM.

The frame format of command 0A follows the diagram and specification table.

Frame format					
STX	Node	Command	BCC	[CR]	

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32, and FF (broadcast to all nodes)
Command	Transmission command	2 bytes	0A
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Command – 0B

The 0B command recalculates the inverter's internal motor constants. Use this function after the base frequency or any Hxxx parameters are changed via the serial link commands.

The frame format of command 0B follows the diagram and specification table.

Frame format					
STX	Node	Command	BCC	[CR]	

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
Command	Transmission command	2 bytes	0B
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Command, and Data
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Communications Reference Information

Call 1(800)985-6929 for Sales

Communications Reference Information

Inverter Affirmative Reply

The standard affirmative reply from the inverter uses the ACK character (acknowledge) in the data field. The frame format of this reply follows the diagram and specification table.

STX	Node	ACK	BCC	[CR]

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
ACK	Control code (ACKnowledge)	1 byte	ACK (0x06)
BCC	Block check sum code	2 bytes	Exclusive OR of Node and ACK
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

Inverter Negative Reply

The standard negative reply from the inverter uses the NAK character (negative acknowledge) in the data field. The frame format of this reply follows the diagram and specification table.

STX	Node	NAK	Error code	BCC	[CR]

Element	Description	Size	Value
STX	Control code (STart of TeXt)	1 byte	STX (0x02)
Node	Node (station) address of inverter	2 bytes	01 to 32
NAK	Control code (Negative ACKnowledge)	1 byte	NAK (0x15)
Error code	Code representing error type	2 bytes	(See next table below)
BCC	Block check sum code	2 bytes	Exclusive OR of Node, Data, and NAK
[CR]	Control code (carriage return)	1 byte	[CR] (0x0D)

The error codes for a NAK (negative acknowledge) are:

Error Code	Error Description	Error Code	Error Description
01H	Parity error	07H	Receive buffer overrun error
02H	Check sum error	08H	Receive time-out error
03H	Framing error	11H	Abnormal command code error
04H	Overrun error	13H	Execution disabled
05H	Protocol error	16H	Abnormal parameter code/value error
06H	ASCII code error	—	—

If a host computer broadcasts a command to all inverter stations, no response will be returned to the host.


B

18


Block Check Code (BCC)

This section shows how the inverter protocol computes defines a BCC—block check code. The BCC is calculated for each frame transmitted and can be used to verify the integrity of data transmission. The example below shows command 01 setting the inverter frequency to 5Hz.



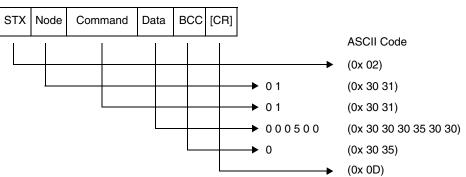

The block check code is computed by using the ASCII codes (shown above) and applying eXclusive OR (XOR) operations. Beginning with the first pair of bytes, the result of their XOR result is then used in an XOR operation with the third byte, and so on. For this example, the BCC calculation is shown below.

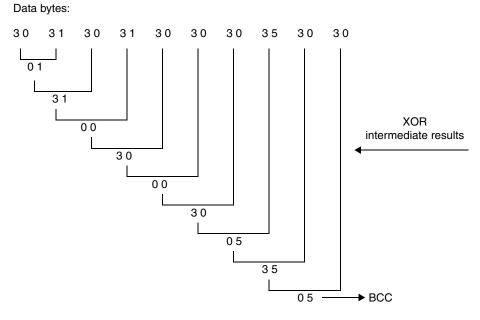

ASCII Code Table The table below shows only the ASCII codes used for function codes and parameter data.

Character	ASCII Code	Character	ASCII Code	Character	ASCII Code
STX	0 2	4	34	С	43
ACK	0 6	5	3 5	D	44
CR	0 D	6	36	Е	4 5
NAK	15	7	37	F	4 6
0	30	8	38	Н	4 8
1	3 1	9	39	Р	5 0
2	32	А	4 1	b	62
3	33	В	4 2	—	

Communications Reference Information

Communication Test Mode

The communication test mode verifies that the inverter can properly send and receive data via the RS485 serial port. Follow the steps below to perform the communication test.

1. Remove the serial cable (if present) connected to the TM2 connector block of the control terminals, as shown below.





NOTE: It is not necessary to connect a loopback jumper. The RS485 port uses a transceiver for communications, which already allows simultaneous transmitting and receiving.

- 2. Use the front panel keypad to navigate to parameter C071, Communication Speed Selection. Change parameter C071=02 and press Store. Value 02 is the Loopback Test option. Now the inverter is ready to conduct the loopback test.
- **3.** Turn the inverter power OFF and then ON again to initiate the communication test. Observe the keypad display and compare to the results shown below.



- **4.** Press the Stop/Rest button on the keypad to return the inverter keypad/ display to normal operation.
- **5.** Change C071 to its original setting (default is C071=04). Otherwise, while C071=02, the inverter will perform the communications loopback test at each powerup.

sales@hitachiacdrive.co


SJ7002 Inverter

B_21

ModBus Mode Communications

Transmission Procedure

The network master sends a frame to initiate communications with a slave, as shown in the figure below.

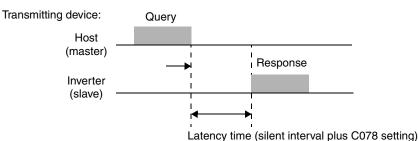

• Query - A frame sent from the external control equipment to the inverter

- Response A frame returned from the inverter to the external control equipment
- Wait time (C077) If the inverter cannot complete the reception of a query from the host (master)within the communication timeout period, the inverter responds to the query and waits to receive the query from the beginning. Subsequently, the inverter returns no response to the master system.

After reception timeout occurs, the inverter operates according to function C076, Action upon communication error selection (see table below). Monitoring of reception timeout begins when the first communication is performed upon inverter powerup or a reset. Reception timeout is monitored only when the inverter communicates with the master system.

Function Code	Name/Description	OPE	Range and Settings	
		00	Trip (E41)	
		01 Trip (E41) after deceleration and s		
C076	Action upon communi- cation error selection	02	No action (ignore errors)	
		03 Free-run stop		
		04	Decelerate and stop	
C077	Communication timeout before trip Limit timer for reception timeout		0.00 to 99.99 (seconds)	
011				
C078	Communication wait time		0.0 to 1000 (milliseconds)	
	Time to wait until the inverter starts sending a response after reception of a query (excluding the silent interval)			

The inverter always sends a response frame after receiving a query frame. The inverter does not initiate any communication with the host (master).

ModBus Mode Communications

Message Configuration: Query

Each frame is formatted as follows:

Frame Format
Header (silent interval)
Slave address
Function code
Data
Error check code
Trailer (silent interval)

Slave address:

- This is a numer from 1 to 32 assigned to each inverter (slave). (Only the inverter having the address given as a slave address in the query can receive the query.)
- When slave address "0" is specified, the query can be addressed to all inverter simultaneously (broadcasting).
- In broadcasting, the host (master) cannot read inverter data nor perform a loopback test.

Data:

- The data contains a function command.
- The data format used in the SJ7002 corresponds to the ModBus data format below.

Name of Data	Description		
Coil	Binary data that can be referenced and changed (1 bit long)		
Holding Register	16-bit data that can be referenced and changed		

Function Code:

Specify a function you want to make the inverter execute. Function codes available to the SJ7002 are listed below.

Function Code	Function	Maximum data size (bytes available per message)	Maximum number of data elements per message
01h	Read Coil Status	4	32 coils (in bits)
03h	Read Holding Register	8	4 registers (in bytes)
05h	Write in Coil	2	1 coil (in bits)
06h	Write in Holding Register	2	1 register (in bytes)
08h	Loopback Test	—	—
0Fh	Write in Coils	4	32 coils (in bits)
10h	Write in Registers	4	4 registers (in bytes)

Error check:

Modbus-RTU uses CRC (Cyclic Redundancy Check) for error checking.

- The CRC code is 16-bit data that is generated for 8-bit blocks of arbitrary length.
- The CRC code is generated by a generator polynomial CRC-16 (X^{16} + X^{15} + X^2 + 1).

Header and trailer (silent interval):

Latency is the time between the reception of a query from the master and transmission of a response from the inverter.

- The header and trailer set the total time the inverter should wait before sending a response after having received a query from the master system.
- Be sure to specify the time corresponding to the transmission of 3.5 characters (24 bits) as the waiting time. If a shorter waiting time (corresponding to the transmission of fewer than 3.5 characters) is specified, the inverter will not respond.
- The actual waiting time is the sum of the silent interval (corresponding to the transmission of 3.5 characters) and the communication wait time (C078).

Time required for communication:

- After the inverter receives a query, the inverter waits for the sum of the silent interval (corresponding to the transmission of 3.5 characters) and the communication wait time (C078) before sending a response.
- After receiving a response from the inverter, the master system must wait for the silent interval (corresponding to the transmission of 3.5 characters) or longer before sending the next query to the inverter.

Normal response:

- If the query specifies the function code (08h) for the loopback test, the inverter returns a response that has the same contents as the query.
- If the query specifies a function code (05h, 06h, 0Fh, or 10h) for writing data to registers or coils, the inverter returns the query without a change as a response.
- If the query specifies a function code (01h or 03h) for reading a register or coil, the inverter returns a response that contains the slave address and function code specified in the query and the data read from the register or coil.

Response when an error occurs:

- When finding any error in a query (except for a transmission error), the inverter returns an exception response without executing anything,
- You can check the error by the function code in the response. The function code of the exception response is the sum of the function code of the query and 80h.
- The content of the error is known from the exception code.

Field Configuration
Slave address
Function code
Exception code
CRC-16

Exception Code	Description			
0 1 h	The specified function is not supported.			
0 2 h	The specified address is not found.			
0 3 h	The format of the specified data is not acceptable.			
2 1 h	The data to be written in a holding register is outside the inverter.			

Message Configuration: Response

ModBus Mode Communications

Exception Code	Description
2 2 h	 The specified functions are not available to the inverter. Function to change the content of a register that cannot be changed while the inverter is in service Function to submit an ENTER command during running (UV) Function to write in a register during tripping (UV) Function to write in a read-only register (or coil)

No response occurs:

In the cases below, the inverter ignores a query and returns no response.

hitachiacdrive.com

- When receiving a broadcasting query
- When detecting a transmission error in reception of a query
- When the slave address set in the query is not equal to the slave address of the inverter
- When a time interval between data elements constituting a message is shorter than 3.5 characters
- When the data length of the query is invalid



NOTE: Provide a timer in the master and make the master retransmit the same query when no response is made within a preset time period after the preceding query was sent.

B

Explanation of Function Codes

Read Coil Status [01h]:

This function reads the status (ON/OFF) of selected coils. An example follows below.

- Read intelligent input terminals [1] to [6] of an inverter having a slave address "8."
- This example assumes the intelligent input terminals have terminal states listed below (coils 13 and 14 are OFF).

Item	Data					
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]	[6]
Coil number	7	8	9	10	11	12
Terminal status	ON	ON	ON	OFF	ON	OFF

Query:

No.	Field Name	Example (hex)
1	Slave address *1	08
2	Function code	01
3	Coil start number (high order)	00
4	Coil start number (low order)	06
5	Number of coils (high order) *2	00
6	Number of coils (low order) *2	06
7	CRC-16 (high order)	5C
8	CRC-16 (low order)	90

Response:

No.	Field Name	Example (hex)
1	Slave address	08
2	Function code	01
3	Data size (in bytes)	01
4	Coil data *4	17
5	CRC-16 (high order)	12
6	CRC-16 (low order)	1A

Note 4: Data is transferred by the specified number of data bytes (data size).

Note 1: Broadcasting is disabled.

- Note 2: The starting coil number is one less than the number of the coil to be read first.
- **Note 3:** When 0 or more than 32 is specified as a number of coils, error code "03h" is returned.
- The data set in the response shows terminal states of coils 7 to 14.
- Data "17h = 00010111b" indicates the following assuming coil 7 is the LSB.

Item	Data							
Coil number	14	13	12	11	10	9	8	7
Coil status	OFF	OFF	OFF	ON	OFF	ON	ON	ON

- When a read coil is outside the defined coils, the final coil data to be transmitted contains "0" as the status of the coil outside the range.
- When the Read Coil Status command cannot be executed normally, see the exception response.

ModBus Mode Communications

Call 1(800)985-6929 for Sales

Read Holding Register [03h]:

This function reads the contents of the specified number of consecutive holding registers (of specified register addresses). An example follows below.

- Reading previous three trip factors from an inverter having a slave address "5"
- This example assumes the previous three trip factors are as follows:

SJ7002 Command	D081 (N)	D082 (N-1
Register number	0012h	0013h
Trib factor (upper digit)	Over-voltage (E07)	Decelerating (02)

Response:

Query:

No.	Field Name	Example (hex)
1	Slave address *1	05
2	Function code	03
3	Register start number (high order)	00
4	Register start number (low order)	11
5	Number of registers (high order) *2	00
6	Number of registers (low order) *2	02
7	CRC-16 (high order)	95
8	CRC-16 (low order)	8A

No.	Field Name	Example (hex)
1	Slave address	05
2	Function code	03
3	Data size (in bytes) *3	04
4	Register start number (high order)	00
5	Register start number (low order)	07
6	Register start number +1 (high order)	00
7	Register start number +1 (low order)	02
8	CRC-16 (high order)	36
9	CRC-16 (low order)	37

Note 1: Broadcasting is disabled.

Note 2: The starting coil number is one less than the number of the coil to be read first.

Note 3: Data is transferred by the specified number of data bytes (data size). In this case, 4 bytes are used to return the content of two holding registers.

The data set in the response is as follows:

Response Buffer	4	5	6	7
Starting register number	+0 (high order)	+0 (low order)	+1 (high order)	+1 (low order)
Register status	00h	07h	00h	02h
Trip data	Over-voltage trip		Decele	erating

When the Read Holding Register command cannot be executed normally, refer to the exception response.

26

Call 1(800)985-6929 for Sales hitachiacdrive.com

Write in Coil [05h]:

This function writes data in a single coil. Coil status changes are as follows:

Data	Coil Status			
Data	OFF to ON	ON to OFF		
Change data (high order)	FFh	00h		
Change date (low order)	00h	00h		

An example follows (note that to command the inverter, set A002=03):

- Sending a RUN command to an inverter having slave address "10"
- This example writes in coil number "1."

Query:

Response:

No.	Field Name	Example (hex)
1	Slave address *1	0A
2	Function code	05
3	Coil start number (high order)	00
4	Coil start number (low order) *2	00
5	Change data (high order)	FF
6	Change data (low order)	00
7	CRC-16 (high order)	8D
8	CRC-16 (low order)	41

No.	Field Name	Example (hex)
1	Slave address	0A
2	Function code	05
4	Coil start number (high order)	00
5	Coil start number (low order)	00
6	Change data (high order)	FF
7	Change data (low order)	00
8	CRC-16 (high order)	8D
9	CRC-16 (low order)	41

Note 1: Broadcasting is disabled.

Note 2: The starting coil number is one less than the number of the coil to be read first.

When the Write in Coil command cannot be executed normally, refer to the exception response.

Write in Holding Register [06h]:

This function writes data in a specified holding register. An example follows below.

- Write "50Hz" as the first Multi-speed 0 (A020) in an inverter having slave address "5."
- This example uses change data "50 (0032h)" to set "50Hz" as the data resolution of the register "1203h" holding the base frequency setting (A003) is 1 Hz.

SJ7002 Command	D081 (N)	D082 (N-1
Register number	0012h	0013h
Trib factor (upper digit)	Over-voltage (E07)	Decelerating (02)

ModBus Mode Communications

Call 1(800)985-6929 for Sales

Query:

No.	Field Name	Example (hex)
1	Slave address *1	05
2	Function code	06
3	Register start number (high order) *2	12
4	Register start number (low order) *2	02
5	Change data (high order)	00
6	Change data (low order)	32
7	CRC-16 (high order)	AD
8	CRC-16 (low order)	23

Response:

No.	Field Name	Example (hex)
1	Slave address	05
2	Function code	06
3	Register start number (high order)	12
4	Register start number (low order)	02
5	Change data (high order)	00
6	Change data (low order)	32
7	CRC-16 (high order)	AD
8	CRC-16 (low order)	23

Note 1: Broadcasting is disabled.

Note 2: The starting coil number is one less than the number of the coil to be read first.

When the Write Holding Register command cannot be executed normally, refer to the exception response.

Loopback Test [08h]:

This function checks a master-slave transmission using any test data. An example follows:

• Send test data to an inverter having slave address "1" and receiving the test data from the inverter (as a loopback test).

Response:

Query:

No.	Field Name	Example (hex)
1	Slave address *1	01
2	Function code	08
3	Test subcode (high order)	00
4	Test subcode (low order)	00
5	Data (high order)	Any
6	Data (low order)	Any
7	CRC-16 (high order)	CRC
8	CRC-16 (low order)	CRC

Example Field Name No. (hex) Slave address 1 01 2 Function code 08 3 Test subcode (high 00 order) 4 Test subcode (low 00 order) 5 Data (high order) Any 6 Data (low order) Any 7 CRC-16 (high order) AD 8 CRC-16 (low order) 23

Note 1: Broadcasting is disabled.

The test subcode is for echo (00h,00h) only and not available to the other commands.

B

-28

Call 1(800)985-6929 for Sales hitachiacdrive.com

Write in Coils [0Fh]:

This function writes data in consecutive coils. An example follows:

- Change the state of intelligent input terminal [1] to [6] of an inverter having a slave address "5."
- This example assumes the intelligent input terminals have terminal states listed below.

Item	Data					
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]	[6]
Coil number	7	8	9	10	11	12
Terminal status	ON	ON	ON	OFF	ON	OFF

Query:

No.	Field Name	Example (hex)
1	Slave address *1	05
2	Function code	0F
3	Coil start number (high order)	00
4	Coil start number (low order)	06
5	Number of coils (high order) *2	00
6	Number of coils (low order) *2	06
7	Byte number *3	02
8	Change data (high order) *3	17
9	Change data (low order)*3	00
10	CRC-16 (high order)	DB
11	CRC-16 (low order)	3E

Response:

No.	Field Name	Example (hex)
1	Slave address	05
2	Function code	0F
3	Coil start number (high order)	00
4	Coil start number (low order)	06
5	Number of coils (high order) *2	00
6	Number of coils (low order) *2	06
7	CRC-16 (high order)	34
8	CRC-16 (low order)	4C

Note 4: Data is transferred by the specified number of data bytes (data size).

- **Note 1:** Broadcasting is disabled.
- **Note 2:** The starting coil number is one less than the number of the coil to be read first.
- Note 3: The change data is a set of highorder data and low-order data. So when the size (in bytes) of data to be changed is an odd number, add "1" to the data size (in bytes) to make it an even number

When the Write in Coils command cannot be executed normally, see the exception response.

-29

B

ModBus Mode Communications

Call 1(800)985-6929 for Sales

Write in Holding Registers [10h]:

This function writes data in consecutive holding registers. An example follows:

- Write "3000 seconds" as the first acceleration time 1 (F002) in an inverter having a slave address "1."
- This example uses change data "300000 (493E0h)" to set "3000 seconds" as the data resolution of the registers "1103h" and "1104h" holding the first acceleration time 1 (F002) is 0.01 second.

Query:

Response:

No.	Field Name	Example (hex)
1	Slave address *1	01
2	Function code	10
3	Start address (high order) *2	11
4	Start address (low order) *2	02
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	Byte number *3	04
8	Change data 1 (high order)	00
9	Change data 1 (low order)	04
10	Change data 2 (high order)	93
11	Change data 2 (low order)	E0
12	CRC-16 (high order)	9E
13	CRC-16 (low order)	9F

No.	Field Name	Example (hex)
1	Slave address *1	01
2	Function code	10
3	Register start number (high order)	11
4	Register start number (low order)	02
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	CRC-16 (high order)	E5
8	CRC-16 (low order)	34

Note 1: Broadcasting is disabled.

Note 2: The starting coil number is one less than the number of the coil to be read first.

When the Write Holding Register command cannot be executed normally, refer to the exception response.

B

-30

Exception Response:

When sending a query (excluding a broadcasting query) to an inverter, the master always requests a response from the inverter. Usually, the inverter returns a response according to the query. However, when finding an error in the query, the inverter returns an exception response. The exception response consists of the fields shown below.

Field Configuration
Slave address
Function code
Exception code
CRC-16

The content of each field is explained below. The function code of the exception response is the sum of the function code of the query and 80h. The exception code indicates the factor of the exception response.

Function Code							
Query Exception Response							
0 1 h	8 1 h						
0 3 h	8 3 h						
0 5 h	8 5 h						
0 6 h	8 6 h						
0 F h	8 F h						
1 0 h	9 0 h						

Exception Code	Description
0 1 h	The specified function is not supported.
0 2 h	The specified address is not found.
0 3 h	The format of the specified data is not acceptable.
2 1 h	The data to be written in a holding register is outside the inverter.
2 2 h	The specified functions are not available to the inverter.Function to change the content of a register that cannot be changed while the inverter is in service
	• Function to submit an ENTER command during running (UV)
	• Function to write in a register during tripping (UV)
	• Function to write in a read-only register (or coil)

ModBus Mode Communications

Call 1(800)985-6929 for Sales

Store New Register Data (ENTER Command)

Neither the command (06h) to write data to a register nor the command (10h) to write data to multiple registers can store the updates they made in the internal memory of the inverter. Turning the inverter power off without storing the updates deletes them and restores the original register settings. If you intend to store register updates in the internal memory of the inverter, issue the Enter command as described below.

If you have updated a control constant, you must recalculate the motor constants. In such cases, use register "0900h" for recalculation as described below.

Submitting an ENTER Command:

• Write any data in all memory (of a holding register at 0900h) by the Write in Holding Register command [06h].

Write Data	Description			
0000	Recalculate the motor constants			
0001	Store the register data			
Other	Recalculate the motor constants and store the register data			

_/	ລລລລລ າ	
	\equiv	

NOTE: The ENTER command takes much time to run. You can check its progress by monitoring the Data Writing signal (of a coil at 001Ah).



NOTE: The service life of the storage element of the inverter is limited (to about 100,000 write operations). Frequent use of the ENTER command may shorten its service life.

ModBus Data Listing

ModBus Coil List The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- **Coil Number** The network register address offset for the coil, in hex and decimal. Actual network address is 30001 + offset. The coil data is a single bit (binary) value.
- Name The functional name of the coil
- R/W The read-only (R) or read-write (R/W) access permitted to the inverter data
- **Description** The meaning of each of the states of the coils

	List of Coil Numbers							
Coil n	umber							
hex	dec.	Name	R/W	Description				
0000h	00000	(Reserved)	_	_				
0001h	00001	Operation command	R/W	0 Stop 1 Run (enabled when A003=03)				
0002h	00002	Rotation direction command	R/W	0 REV 1 FW (enabled when A003=03)				
0003h	00003	External trip (EXT)	R/W	0 No trip event 1 Trip occurred				
0004h	00004	Trip reset (RS)	R/W	0 No reset condition 1 Reset				
0005h	00005	(Reserved)		_				
0006h	00006	(Reserved)		—				
0007h	00007	Intelligent input terminal [1]	R/W	0OFF *1				
0008h	00008	Intelligent input terminal [2]	R/W	1ON				
0009h	00009	Intelligent input terminal 3]	R/W					
000Ah	00010	Intelligent input terminal [4]	R/W					
000Bh	00011	Intelligent input terminal [5]	R/W					
000Ch	00012	Intelligent input terminal [6]	R/W					
000Dh	00013	Intelligent input terminal [7]	R/W					
000Eh	00014	Intelligent input terminal [8]	R/W					
000Fh	00015	Run/Stop status	R	0 Stop (corresponds to D003 monitor) 1 Run				
0010h	00016	FW/REV status	R	0 FW 1 RV				
0011h	00017	Inverter ready	R	0 Not ready 1 Ready				
0012h	00018	(Reserved)	R					
0013h	00019	RUN (running)	R	0OFF				
0014h	00020	FA2 - Frequency Arrival (constant-speed reached)	R	1 ON				
0015h	00021	FA2 - Frequancy Arrival (above set frequency)	R					
0016h	00022	OL - Overload signal	R					
0017h	00023	OD - PID deviation signal	R					

B-33

ModBus Data Listing

	List of Coil Numbers							
Coil n	umber							
hex	dec.	Name	R/W	Description				
0018h	00024	AL - Alarm signal	R	0 OFF				
0019h	00025	FA3 - Frequency arrival signal (set frequency or above)	R	1 ON				
001Ah	00026	OTQ - Over-torque	R					
001Bh	00027	IP - Instantaneous power failure	R					
001Ch	00028	UV - Uundervoltage	R					
001Dh	00029	TRQ - Torque limit	R					
001Eh	00030	RNT - Operation time over	R					
001Fh	00031	ONT - Plug-in time over	R					
0020h	00032	THM - Thermal alarm signal	R					
0021h	00033	(Reserved)	_					
0022h	00034	(Reserved)						
0023h	00035	(Reserved)	_					
0024h	00036	(Reserved)	_	_				
0025h	00037	(Reserved)						
0026h	00038	BRK - Brake release	R	0 OFF				
0027h	00039	BER - Brake error	R	1 ON				
0028h	00040	ZS - 0 Hz detection signal	R					
0029h	00041	DSE - Speed deviation maximum	R					
002Ah	00042	POK - Positioning completed	R					
002Bh	00043	FA4 - Set frequency overreached 2	R					
002Ch	00044	FA5 - Set frequency reached 2	R					
002Dh	00045	OL2 - Overload notice advance signal 2	R					
002Eh	00046	Odc - Analog O disconnection detection	R					
002Fh	00047	OIDc - Analog OI disconnection detection	R					
0030h	00048	O2Dc - Analog O2 disconnection detection	R					
0031h	00049	(Reserved)	_	—				
0032h	00050	FBV - PID feedback comparison	R	0 OFF 1 ON				
0033h	00051	NDc - Communication bus disconnection	R					
0034h	00052	LOG1 - Logical operation result 1	R					

Note 1: ON usually when either the control circuit terminal board or a coil is ON. Among intelligent input terminals, the control circuit terminal board is a high-priority terminal. If the master cannot reset the coil ON status due to a transmission line break, turn ON and OFF the control circuit terminal board to make the coil OFF status.

B

hitachiacdrive.com

SJ7002 Inverter

Note 2: The content of a transmission error is held until the error is reset. (The error can be reset while the inverter is running.)

ModBus Holding Registers The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- **Function Code** The inverter's reference code for the parameter or function (same as inverter keypad display). Long-word values (32) bits are listed in two rows; "H" and "L" indicate the *high* and *low* order words.
- Name The standard functional name of the parameter or function for the inverter
- **R/W** The read-only or read-write access permitted to the data in the inverter
- Description How the parameter or setting works (same as Chapter 3 description)
- **Register** The network register address offset for the value, in hex and decimal. Actual network address is 40001 + offset. Some values have a high-byte and low-byte address.
- Range The numerical range for the network value that is sent and/or received

TIP: The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

• **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

	Holding Registers, "D" Group Monitor Functions								
					Net	work Data	vork Data		
Func. Code	Name	R/W			Danas	Dec			
				hex	dec.	Range	Res.		
_	Inverter status A	R	0 = Initial status; 1 = Waiting for Vdc level; 2 = Stoping; 3 = Running; 4 = Free-run Stop (FRS); 5 = Jogging; 6 = DC Braking; 7 = Freq. is input; 8 = Retrying operation; 9 = Under- voltage (UV)	0003h	00003	0 to 9	_		
—	Inverter status B	R	0 = Stopping; 1 = Running; 2 = Tripping	0004h	00004	0, 1, 2	_		
_	Inverter status C	R	11 0		00005	0 to 10			
	PID feedback	R/W		0006h	00006				
_	(Reserved)		_	0007h to 0010h	00007 to 00016	_	_		



Appendix B

ModBus Data Listing

Func. Co	ode	Name	R/W	Description	Register		D	
					hex	dec.	Range	Res.
D001	Н	Output frequency monitor	R	Real-time display of output	1001h	04097	0 to 40000	0.01 Hz
D001	L		R	frequency to motor, from 0.0 to 400.0 Hz	1002h	04098		
D002	-	Output current monitor	R	Filtered display of output current to motor (100 mS internal filter time constant)	1003h	04099	0 to 9999	0.01 A
D003	-	Rotation direction monitor	R	0 Stop 1 Forward 2 Reverse	1004h	04100	0, 1, 2	_
D004	Н	Process variable (PV), PID	R	Displays the scaled PID process	1005h	04101	0 to 9990	0.1
D004	L	feedback monitor	R	variable (feedback) value (A75 is scale factor)	1006h	04102		
D005	-	Intelligent input terminal status	R	Displays the state of the intelli- gent input terminals	1007h	04103	bit 0 = [1] bit 7= [8] termi- nals	1 bit
D006	-	Intelligent output terminal status	R	Displays the state of the intelli- gent input terminals	1008h	04101	bit0 = [11] bit 4 =[15] terminals	1 bit
D007	Н	Scaled output frequency	R		1009h	04105	0 to 39960	0.01
D007	L	monitor	R	scaled by the constant in B0086. Decimal point indicates range: XX.XX 0.00 to 99.99 XXXX 100.0 to 999.9 XXXX 1000 to 99999 XXXX 10000 to 99990	100Ah	04106		
D008	Н	Actual frequency monitor	R	Displays the actual shaft speed of	100Bh	04107	-40000 to +40000	0.01 Hz
D008	L		R	the motor, converted to frequency	100Ch	04108	+40000	
D009	-	Torque command monitor	R	Displays the level of the torque command when the inverter is set to torque control mode	100Dh	04109	-200 to 200	1 %
D010	_	Torque bias monitor	R	Displays the level of the torque bias, if enabled, when the inverter is in vector control mode with feedback	100Eh	04110	-200 to 200	1 %
_	_	(Reserved)	R	—	100Fh	04111	—	
D012	-	Torque monitor	R	Estimated output torque value, range is -300.0 to +300.0%	1010h	04112	-200 to 200	1 %
D013	-	Output voltage monitor	R	Voltage of output to motor, range is 0.0 to 600.0V	1012h	04113	0 to 6000	0.1 V
D014	-	Power monitor	R	Input power to inverter, range is 0.0 to 999.9	1013h	04114	0 to 9999	0.1 kW
D015	Н	Cumulative power monitor	R	Displays cumulative input power	1014h	04115	0 to 9999999	0.1
D015	L		R	to inverter; B079 selects the multiplier for units. Range is 0.0 to 999.9, 1000 to 9999, or 100 to 999	1014h	04116		

					Network Data				
Func. Co	ode	Name	R/W	Description	Reg	ister		Res.	
					hex	dec.	Range		
D016	Н	Cumulative operation RUN	R	Displays total time the inverter	1015h	04117	0 to 999900	0.1	
D016	L	time monitor	R	has been in RUN mode in hours. Range is 0 to 9999 / 1000 to 9999/ 100 to 999 (10,000 to 99,900) hrs.	1016h	04118			
D017 (high)	Н	Cumulative power-on time monitor	R	Displays total time the inverter has had input power (ON) in hours. Range is: 0 to 9999 / 100.0 to 999.9 / 1000 to 9999 / 100 to 999 hrs.	1017h	04119	0 to 999900	1 hour	
D017 (low)	L		R		1018h	04120			
D018	-	Heat sink temperature monitor	R	Displays the temperature of the inverter's heat sink	1019h	04121	-200 to 2000	0.1 °C	
D019	-	Motor temperature monitor	R	Displays motor internal tempera- ture (requires an NTC thermistor installed in the motor and connected to [TH] and [CM1])	101Ah	04122	-200 to 2000	0.1 °C	
_		(Reserved)		—	101Bh	04123	—		
_		(Reserved)	_	—	101Ch	04124	_		
D022		Component life monitor	R	Displays estimated life status of DC bus capacitors and cooling fans	101Dh	04125	bit 0 capa- citors bit 1fans	1 bit	
_	•	(Reserved)	_	—	101Eh to 1025h	04126 to 04133	—	_	
D025	Н	User monitor 0	R	Displays state of internal EZ	102Eh	04142	-2147483647	1	
D025	L		R	Sequence register User Monitor 0	102Fh	04143	to 2147483647		
D026	Н	User monitor 1	R	Displays state of internal EZ	1030h	04144	-2147483647	1	
D026	L		R	Sequence register User Monitor 2	1031h	04145	to 2147483647		
D027	Н	User monitor 2	R	Displays state of internal EZ	1032h	04146	-2147483647	1	
D027	L		R	Sequence register User Monitor 2	1033h	04147	to 2147483647		
D028	Н	Pulse counter	R/W	Displays accumulated pulse	1034h	04148	0 to	1	
D028	L		R/W	count of [PCNT] intelligent input terminal (option code 74)	1035h	04149	2147483647		
D029	Н	Position setting monitor	R	Displays absolute position	1036h	04150	-2147483647	1	
D029	L		R	command for motor shaft in absolute position control mode	1037h	04151	to 2147483647		
D030	Н	Position feedback monitor	R	Displays absolute position of	1038h	04152	-2147483647	1	
D030	L		R	motor shaft when in absolute position control mode	1039h	04153	to 2147483647		
D080	-	Trip counter	R	Number of trip events	0011h	00017	0 to 65535	1 trip event	

Call 1(800)985-6929 for Sales hitachiacdrive.com

ModBus Data Listing

Holding Registers, "D" Group Monitor Functions Network Data							
Func. Code	Name	R/W	Description	Reg	ister	Range	Res.
				hex	dec.		
D081 —		R	Factor code	0012h	00018	(see codes in	_
		R	Inverter status	0013h	00019	next table)	_
		R	Frequency (high)	0014h	00020	0 to 40000	0.01 Hz
		R	Frequency (low)	0015h	00021		
	This was site a 1	R	Current	0016h	00022		0.1 A
	Trip monitor 1	R	Voltage	0017h	00023	—	1 V
		R	Run time (high)	0018h	00024	—	1 hour
		R	Run time (low)	0019h	00025		
		R	ON time (high)	001Ah	00026	_	1 hour
		R	ON time (low)	001Bh	00027		
D082 —	_	R	Factor code	001Ch	00028	(see codes in next table)	—
		R	Inverter status	001Dh	00029		_
		R	Frequency (high)	001Eh	00030	0 to 40000	0.01 Hz
		R	Frequency (low)	001Fh	00031		
		R	Current	0020h	00032	—	0.1 A
	Trip monitor 2	R	Voltage	0021h	00033	_	1 V
		R	Run time (high)	0022h	00034	—	1 hour
		R	Run time (low)	0023h	00035		
		R	ON time (high)	0024h	00036	_	1 hour
		R	ON time (low)	0025h	00037		
D083 —	Trip monitor 3	R	Factor code	0026h	00038	(see codes in	
		R	Inverter status	0027h	00039	next table)	_
		R	Frequency (high)	0028h	00040	0 to 40000	0.01 Hz
		R	Frequency (low)	0029h	00041		
		R	Current	002Ah	00042	—	0.1 A
		R	Voltage	002Bh	00043	—	1 V
		R	Run time (high)	002Ch	00044	—	1 hour
		R	Run time (low)	002Dh	00045]	
		R	ON time (high)	002Eh	00046	—	1 hour
		R	ON time (low)	002Fh	00047		

B-

Holding Registers, "D" Group Monitor Functions									
						Network Data			
Func. Code		Name	R/W	Description	Register				
			hex		dec.	Range	Res.		
D084		Trip monitor 4	R	Factor code	0030h	00048	(see codes in		
			R	Inverter status	0031h	00049	next table)		
			R	Frequency (high)	0032h	00050	0 to 40000	0.01 Hz	
			R	Frequency (low)	0033h	00051			
			R	Current	0034h	00052		0.1 A	
			R	Voltage	0035h	00053	—	1 V	
			R	Run time (high)	0036h	00054		1 hour	
			R	Run time (low)	0037h	00055			
			R	ON time (high)	0038h	00056	—	1 hour	
			R	ON time (low)	0039h	00057			
D085	—	Trip monitor 5	R	Factor code	003Ah	00058	(see codes in		
			R	Inverter status	003Bh	00059	next table)	_	
			R	Frequency (high)	003Ch	00060	0 to 40000	0.01 Hz	
			R	Frequency (low)	003Dh	00061			
			R	Current	003Eh	00062	—	0.1 A	
			R	Voltage	003Fh	00063	_	1 V	
			R	Run time (high)	0040h	00064	—	1 hour	
			R	Run time (low)	0041h	00065			
			R	ON time (high)	0042h	00066	—	1 hour	
			R	ON time (low)	0043h	00067			
D086		Trip monitor 6	R	Factor code	0044h	00068	(see codes in		
			R	Inverter status	0045h	00069	next table)	_	
			R	Frequency (high)	0046h	00070	0 to 40000	0.01 Hz	
			R	Frequency (low)	0047h	00071			
			R	Current	0048h	00072	—	0.1 A	
			R	Voltage	0049h	00073	—	1 V	
			R	Run time (high)	004Ah	00074	_	1 hour	
			R	Run time (low)	004Bh	00075			
			R	ON time (high)	004Ch	00076	—	1 hour	
			R	ON time (low)	004Dh	00077			
D090		Programming error monitor	R	Displays programming error code	004Eh	00078	Warning code		
_		(Reserved)	—	—	004Fh	00079	_	_	
					to 08FFh	to 02303			

ModBus Data Listing

Holding Registers, "D" Group Monitor Functions									
				Description	Network Data				
Func. Code		Name	R/W		Register		Dense	D	
					hex	dec.	Range	Res.	
	_	Write to EEPROM	W	00 .Motor constant calculation 01 . Set data storage in EEPROM Other Motor constant recalcu- lation and set data storage in EEPROM	0900h	02304	0000, 0001, other		
_		(Reserved)	—	—	0901h to 1000h	02305 to 4096	_	—	
D102	—	DC voltage monitoring		Displays the DC Bus voltage	1026h	04134	0 to 9999	0.1 V	
D103	_	BRD load factor monitor- ing		Displays the running average Dynamic Braking usage ratio (%ED)	1027h	04135	0 to 1000	0.1 %	
D104		Electronic thermal overload monitoring		Displays the motor electronic thermal overload estimated temperature ratio. If the value reaches 100%, the inverter will trip (E05)	1028h	04136	0 to 1000	0.1 %	
_		(Reserved)	—	—	1029h to 102Dh	04137 to 04141	—	—	

- **Note 1:** Assume that the inverter current rating is 1000 (for D002).
- **Note 2:** When the value is 10000 (100.0 seconds), a value in the second decimal place is ignored.

B

-40

sales@hitachiacdrive.cc

SJ7002 Inverter

Т	rip Factor Code, HIGH order	Trip Fact	tor Code, LOW order (inverter statu
Code	Name	Code	Name
0	No trip	0	Reset
1	Over current event while at constant speed	1	Stop
2	Over current event during deceleration	2	Deceleration
3	Over current event during acceleration	3	Constant speed
4	Over current event during other condi- tions	4	Acceleration
5	Overload protection	5	Run Command active with 0 Hz spe reference
6	Braking resistor overload	6	Starting
7	Over voltage protection	7	DC braking
8	EEPROM error	8	Overload restriction
9	Under-voltage error	9	SON or FOC operation in progress
10	CT (current transformer) error		
11	CPU error		
12	External trip		
13	USP		
14	Ground fault		
15	Input over-voltage		
16	Instantaneous power failure		
20	Inverter thermal trip with low fan speed		
21	Inverter thermal trip		
23	Gate array error		
24	Phase failure detection		
25	Main circuit error		
30	IGBT error		
35	Thermistor		
36	Brake error		
37	Emergency stop		
38	Low-speed overload protection		
43	Easy sequence error (invalid instruc- tion)		
44	Easy sequence error (invalid nesting count)		
45	Easy sequence execution error 1		
50 to 59	Easy sequence user trip 0 to 9		
60 to 69	Expansion card #1 error 0 to 9		
70 to 79	Expansion card #2 error 0 to 9		

Call 1(800)985-6929 for Sales hitachiacdrive.com

Call 1(800)985-6929 for Sales

		Holding Re	gisters,	"F" Group Main Profile P	aramete	rs		
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	D	n
					hex	dec.	Range	Res.
F001	Η	Output frequency setting	R/W	Standard default target	0001h	00001	0 to 40000	0.01 Hz
F001	L		R/W	frequency that deter- mines constant motor speed (when A001 = 03)	0002h	00002		
F002	Н	Acceleration (1) time	R/W	Standard default acceler-	1103h	04355	1 to	0.01 sec.
F002	L	setting	R/W	ation	1104h	04356	360000	
F202	Н	Acceleration (1) time	R/W	Standard default acceler-	2103h	08451	1 to	0.01 sec.
F202	L	setting, 2nd motor	R/W	ation, 2nd motor	2104h	08452	360000	
F302	Н	Acceleration (1) time	R/W	Standard default acceler-	3103h	12547	1 to 360000	0.01 sec.
F302	L	setting, 3rd motor	R/W	ation, 3rd motor	3104h	12548		
F003	Η	Deceleration (1) time	R/W	Standard default deceler-	1105h	04357	1 to	0.01 sec.
F003	L	setting	R/W	ation	1106h	04358	360000	
F203	Н	Deceleration (1) time	R/W	Standard default deceler-	2105h	08453	1 to	0.01 sec.
F203	L	setting, 2nd motor	R/W	ation, 2nd motor	2106h	08454	360000	
_		(Reserved)	—	—	2107h to 2202h	08455 to 08706	_	_
F303	Н	Deceleration (1) time	R/W	Standard default deceler-	3105h	12549	1 to	0.01 sec.
F303	L	setting, 3rd motor	R/W	ation, 3rd motor	3106h	12550	360000	
		(Reserved)	—	—	3107h to 3202h	12551 to 12802	—	—
F004		Keypad Run key routing	R/W		1107h	04359		
		(Reserved)		_	1108h to 1200h	04360 to 04608		

B-

-42

						Netv	vork Data	
Func. C	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
A001		Frequency source setting	R/W	00. Keypad potentiometer 01. Control terminal 02. Function F001 setting 03. RS485 serial command 04. Expansion board #1 05. Expansion board #2 06. Pulse train input 07. Easy sequence 10. Caltulate function input	1201h	04609	00 to 07, 10	
A002	-	Run command source setting	R/W	01. Input [FW] or [RV] 02. Run key on keypad 03. RS485 serial command 04. Start/stop, Exp. card #1 05. Start/stop. exp. card #2	1202h	04610	01 to 05	
A003	—	Base frequency setting	R/W	30. to max. frequency (Hz)	1203h	04611	30 to A004 val.	1 Hz
A203	—	Base frequency setting, 2nd motor	R/W	30. to max. frequency (Hz)	2203h	08707	30 to A004 val.	1 Hz
A303		Base frequency setting, 3rd motor	R/W	30. to max. frequency (Hz)	3203h	12803	30 to A004 val.	1 Hz
A004	—	Maximum frequency setting	R/W	30. to 400. (Hz)	1204h	04612	30 to 400	1 Hz
A204	_	Maximum frequency setting, 2nd motor	R/W	30. to 400. (Hz)	2204h	08708	30 to 400	1 Hz
_		(Reserved)		_	2205h to 2215h	08709 to 08725	—	
A304		Maximum frequency setting, 3rd motor	R/W	30. to 400. (Hz)	3204h	12804	30 to 400	1 Hz
		(Reserved)		_	3205h to 3215h	12805 to 12821	_	
A005		[AT] selection	R/W	 00. Select between [O] and [OI] at [AT] 01. Select between [O] and [O2] at [AT] 02. Select between [O] and keypad pot. 03. Select between [OI] and keypad pot. 04. Select between [O2] and keypad pot. 	1205h	04613	00 to 04	-
A006		[O2] selection	R/W	 00. No summing, [O2] and [OI] 01. Sum of [O2] and [OI], neg. sum (reverse speed reference) inhibited 02. Sum of [O2] and [OI], neg. sum (reverse speed reference) allowed 03. Disable [O2] input 	1206h	046	00 to 03	—

Call 1(800)985-6929 for Sales

sales@hitachiacdrive.com

		Holding	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	_	
					hex	dec.	Range	Res.
		(Reserved)	—	—	1207h	04614	—	_
					to 120Ah	to 04618		
A011	Н	[O]–[L] input active range	R/W	The output frequency corre-	120Bh	04619	0 to 40000	0.01 Hz
A011	L	start frequency		sponding to the voltage input range starting point	120Ch	04620		
A012	Н	[O]–[L] input active range	R/W	The output frequency corre-	120Dh	04621	0 to 40000	0.01 Hz
A012	L	end frequency		sponding to the voltage input range ending point	120Eh	04622		
A013	_	[O]–[L] input active range start voltage	R/W	The starting point for the voltage input range	120Fh	04623	0 to A014 value	1 %
A014		[O]–[L] input active range end voltage	R/W	The ending point for the voltage input range	1210h	04624	A013 value to 100	1 %
A015	_	[O]–[L] input start frequency enable	R/W	00Use A011 start value 01Use 0 Hz	1211h	04625	0, 1	
A016		External frequency filter time const.	R/W	n = 1 to 30 (where n = number of samples for average); 31 = 500ms filter	1212h	04626	1 to 30, 31	1
A017		Easy sequence function enable	R/W	00Disable 01Enable	1213h	04627	0, 1	_
_	•	(Reserved)	—	—	1214h	04628	—	
A019		Multi-speed operation selection	R/W	00Binary; up to 16-stage speed using 4 terminals 01Single-bit; up to 8-stage speed using 7 terminals	1215h	04629	0, 1	_
A020	Н	Multi-speed frequency	R/W	Defines the first speed of a	1216h	04630	0 or start	0.01 Hz
A020	L	setting		multi-speed profile	1217h	04631	freq. to max. freq.	
A220	Н	Multi-speed frequency	R/W	Defines the first speed of a	2216h	08726	0 or start	0.01 Hz
A220	L	setting, 2nd motor		multi-speed profile for 2nd motor	2217h	08727	freq. to max. freq.	
		(Reserved)	—	_	2218h to 223Ah	08728 to 08762	_	
A320	Н	Multi-speed frequency	R/W	Defines the first speed of a	3216h	12822	0 or start	0.01 Hz
A320	L	setting, 3rd motor		multi-speed profile for 3rd motor	3217h	12823	freq. to max. freq.	
—		(Reserved)	—	_	3218h to 323Bh	12824 to 12859	_	_
A021	Н	Multi-speed 1 setting	R/W	Defines nth additional speed	1218h	04632	0 or start	0.01 Hz
A021	L	india speed i setting	10 11		1210h	04032	freq. to max. freq.	0.01 112
A022	Н	Multi-speed 2 setting	R/W	Defines nth additional speed	121Ah	04634	0 or start	0.01 Hz
A022	L				121Bh	04635	freq. to max. freq.	
A023	Н	Multi-speed 3 setting	R/W	Defines nth additional speed	121Ch	04636	0 or start	0.01 Hz
A023	L				121Dh	04637	freq. to max. freq.	

B

		Holding	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.	Kange	КС5.
A024	Н	Multi-speed 4 setting	R/W	Defines nth additional speed	121Eh	04638	0 or start	0.01 Hz
A024	L				121Fh	04639	freq. to max. freq.	
A025	Н	Multi-speed 5 setting	R/W	Defines nth additional speed	1220h	04640	0 or start	0.01 Hz
A025	L				1221h	04641	freq. to max. freq.	
A026	Н	Multi-speed 6 setting	R/W	Defines nth additional speed	1222h	04642	0 or start	0.01 Hz
A026	L				1223h	04643	freq. to max. freq.	
A027	Н	Multi-speed 7 setting	R/W	Defines nth additional speed	1224h	04644	0 or start	0.01 Hz
A027	L				1225h	04645	freq. to max. freq.	
A028	Н	Multi-speed 8 setting	R/W	Defines nth additional speed	1226h	04646	0 or start	0.01 Hz
A028	L				1227h	04647	freq. to max. freq.	
A029	Н	Multi-speed 9 setting	R/W	Defines nth additional speed	1228h	04648	0 or start	0.01 Hz
A029	L				1229h	04649	freq. to max. freq.	
A030	Н	Multi-speed 10 setting	R/W	Defines nth additional speed	122Ah	04650	0 or start	0.01 Hz
A030	L				122Bh	04651	freq. to max. freq.	
A031	Н	Multi-speed 11 setting	R/W	Defines nth additional speed	122Ch	04652	0 or start	0.01 Hz
A031	L				122Dh	04653	freq. to max. freq.	
A032	Н	Multi-speed 12 setting	R/W	Defines nth additional speed	122Eh	04654	0 or start	0.01 Hz
A032	L				122Fh	04655	freq. to max. freq.	
A033	Н	Multi-speed 13 setting	R/W	Defines nth additional speed	1230h	04656	0 or start	0.01 Hz
A033	L				1231h	04657	freq. to max. freq.	
A034	Н	Multi-speed 14 setting	R/W	Defines nth additional speed	1232h	04658	0 or start	0.01 Hz
A034	L				1233h	04659	freq. to max. freq.	
A035	Н	Multi-speed 15 setting	R/W	Defines nth additional speed	1234h	04660	0 or start	0.01 Hz
A035	L				1235h	04661	freq. to max. freq.	
	L	(Reserved)	-	—	1236h	04662	—	_
		(Reserved)	—	_	1237h	04663	—	_
A038	_	Jog frequency setting	R/W	Defines limited speed for jog	1238h	04664	0 to 999	0.01 Hz

						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
A039		Jog stop mode	R/W	 00Free-run stop, jogging disabled during motor run 01Controlled deceleration, jogging disabled during motor run 02DC braking to stop, jogging disabled during motor run 03Free-run stop, jogging always enabled 04Controlled deceleration, jogging always enabled 05DC braking to stop, jogging always enabled 	1239h	04665	0 to 5	
		(Reserved)	_	_	123Ah	04666		_
A041	-	Torque boost method selection	R/W	00Manual torque boost 01Automatic torque boost	123Bh	04667	0, 1	
A241	-	Torque boost method selection, 2nd motor	R/W	00Manual torque boost 01Automatic torque boost	223Bh	08763	0, 1	—
A042	-	Manual torque boost value	R/W	Can boost starting torque between 0 and 20% above normal V/f curve	123Ch	04668	0 to 200	0.1 %
A242	-	Manual torque boost value, 2nd motor	R/W	Can boost starting torque between 0 and 20% above normal V/f curve	223Ch	08764	0 to 200	0.1 %
A342	-	Manual torque boost value, 3rd motor	R/W	Can boost starting torque between 0 and 20% above normal V/f curve	323Ch	12860	0 to 200	0.1 %
A043	-	Manual torque boost frequency adjustment	R/W	Sets the frequency of the V/f breakpoint for torque boost	123Dh	04669	0 to 500	0.1 %
A243	-	Manual torque boost frequency adjustment, 2nd motor	R/W	Sets the frequency of the V/f breakpoint for torque boost	223Dh	08765	0 to 500	0.1 %
A343	-	Manual torque boost frequency adjustment, 3rd motor	R/W	Sets the frequency of the V/f breakpoint for torque boost	323Dh	12861	0 to 500	0.1 %
A044		V/F characteristic curve selection	R/W	00V/f constant torque 01V/f variable torque 02V/f free-setting curve 03Sensorless vector SLV 040Hz domain SLV 05Vector control with encoder feedback	123Eh	04670	0 to 5	
A244		V/F characteristic curve selection, 2nd motor	R/W	00V/f constant torque 01V/f variable torque 02V/f free-setting curve 03Sensorless vector SLV 040Hz domain SLV	223Eh	08766	0 to 4	_
_	_	(Reserved)		_	223Fh	08767		_
A344		V/F characteristic curve selection, 3rd motor	R/W	00V/f constant torque 01V/f variable torque	323Eh	12862	0, 1	_

Call 1(800)985-6929 for Sales

		Holding	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	work Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
_		(Reserved)		_	323Fh to 326Ch	12863 to 12908	—	
A045	-	V/f gain setting	R/W	Sets voltage gain of the inverter	123Fh	04671	20 to 200	1 %
A046	—	Automatic torque boost voltage gain	R/W	Voltage compensation gain for automatic torque boost	1240h	04672	0 to 255	1
A246	-	Automatic torque boost voltage gain, 2nd motor	R/W	Voltage compensation gain for automatic torque boost	2240h	08768	0 to 255	1
A047	_	Automatic torque boost slip gain	R/W	Slip compensation gain for automatic torque boost	1241h	04673	0 to 255	1
_		(Reserved)	_	_	1242h to 1244h	04674 to 04676	_	—
A247	—	Automatic torque boost slip gain, 2nd motor		Slip compensation gain for automatic torque boost	2241h	08769	0 to 255	1
_		(Reserved)	—	_	2242h to 224Eh	08770 to 08782	_	—
A051		DC braking enable	R/W	00 . Disable 01 . Enable 02 . Brake at set frequency only	1245h	04677	0, 1, 2	
A052	-	DC braking frequency setting	R/W	Frequency at which DC braking activates during decel.	1246h	04678	0 to 40000	0.01 Hz
A053		DC braking wait time	R/W	The delay after reaching the DC braking frequency, or [DB] signal, before DC braking begins	1247h	04679	0 to 50	0.1 sec.
A054	-	DC braking force during deceleration	R/W	Variable DC braking force	1248h	04680	0 to 80	1 %
A055	-	DC braking time for deceleration	R/W	Sets the duration for DC braking during decel	1249h	04681	0 to 600	0.1 sec.
A056	—	DC braking / edge or level detection for [DB] input	R/W	00 . Edge detection 01 . Level detection	124Ah	04682	0, 1	—
A057	1-	DC braking force for starting	R/W	Variable DC braking force	124Bh	04683	0 to 80	1 %
A058	-	DC braking time for starting	R/W	Sets the duration for DC braking before accel.	124Ch	04684	0 to 600	0.1 sec.
A059		DC braking carrier frequency setting	R/W	0.5 to 15 (kHz) for models up to -550xxx, 0.5 to 10 (kHz) for 750xxx to 1500xxx models	124Dh	04685	5 to 150; 5 to 100	0.1 kHz
		(Reserved)	—	_	124Eh	04686	—	
A061 A061	H L	Frequency upper limit setting	R/W	Sets a limit on output frequency less than the	124Fh 1250h	04687 04688	0, 50 to 40000	0.01 Hz
A001				maximum frequency (A004)	123011	0-000		

Call 1(800)985-6929 for Sales h

		Holding	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		-
					hex	dec.	Range	Res.
A261	Н	Frequency upper limit	R/W	Sets a limit on output	224Fh	08783	0, 50 to	0.01 Hz
A261	L	setting, 2nd motor	R/W	frequency less than the maximum frequency (A004)	2250h	08784	40000	
A062	Н	Frequency lower limit	R/W	Sets a limit on output	1251h	04689	0, 50 to	0.01 Hz
A062	L	setting	R/W	frequency greater than zero	1252h	04690	40000	
A262	Н	Frequency lower limit	R/W	Sets a limit on output	2251h	08785	0, 50 to	0.01 Hz
A262	L	setting, 2nd motor	R/W	frequency greater than zero	2252h	08786	40000	
—	—	(Reserved)	—	—	2253h	08787	—	_
					to 226Eh	to 08814		
A063	Н	Jump (center) frequency	R/W	Up to 3 output frequencies	1253h	04691	0 to 40000	0.01 Hz
A063	L	setting	R/W	can be defined for the output to jump past to avoid motor resonances (center freq.)	1254h	04692		
A064	—	Jump (hysteresis) frequency width setting	R/W	Defines the distance from the center frequency at which the jump occurs	1255h	04693	0 to 1000	0.01 Hz
A065	Н	Jump (center) frequency	R/W	Up to 3 output frequencies	1256h	04694	0 to 40000	0.01 Hz
A065	L	setting	R/W	can be defined for the output to jump past to avoid motor resonances (center freq.)	1257h	04695		
A066		Jump (hysteresis) frequency width setting	R/W	Defines the distance from the center frequency at which the jump occurs	1258h	04696	0 to 1000	0.01 Hz
A067	Н	Jump (center) frequency	R/W	Up to 3 output frequencies	1259h	04697	0 to 40000	0.01 Hz
A067	L	setting	R/W	can be defined for the output to jump past to avoid motor resonances (center freq.)	125Ah	04698		
A068		Jump (hysteresis) frequency width setting	R/W	Defines the distance from the center frequency at which the jump occurs	125Bh	04699	0 to 1000	0.01 Hz
A069	Н	Acceleration stop	R/W	0.00 to 400.0 (Hz)	125Ch	04700	0 to 40000	0.01 Hz
A069	L	frequency setting	R/W		125Dh	04701		
A070	_	Acceleration stop time frequency setting	R/W	0.0 to 60.0 (seconds)	125Eh	04702	0 to 600	0.1 sec.
A071		PID Function Enable	R/W	00PID operation OFF 01PID operation ON 02PID operation ON with inverted output	125Fh	04703	0, 1, 2	
A072	1-	PID proportional gain	R/W	0.2 to 5.0	1260h	0474	2 to 50	0.2
A073	-	PID integral time constant	R/W	0.0 to 999.9, 1000. to 3600. (seconds)	1261h	04705	0 to 36000	0.1 sec.
A074	_	PID derivative gain	R/W	0.0 to 99.99, 100.0 (seconds)	1262h	04706	0 to 10000	0.01 sec.
A075	—	PV scale conversion	R/W	0.01 to 99.99, 100.0 (seconds)	1263h	04707	1 to 9999	0.01

B

Call 1(800)985-6929 for Sales hitachiacdrive.com

Holding Registers, "A" Group Standard Functions

						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	_	_
					hex	dec.	Range	Res.
A076		PV source setting	R/W	00. [OI] (current input) 01. [O] (voltage input) 02. Communication input 03. Pulse train freq. input 10. Calculate function output	1264h	04708	0 to 3, 10	
A077		Reverse PID action	R/W	00.PID input = SP – PV (normal) 01.PID input = –(SP – PV) (reverse)	1265h	04709	0, 1	_
A078	-	PID output limit	R/W	Range is 0.0 to 100.0	1266h	04710	0 to 1000	0.1 sec.
A079		PID feed forward select	R/W	00 . Disable 01 . [O] (voltage input) 02 . [OI] (current input) 03 . [O2] (voltage input)	1267h	04711	0 to 3	_
_		(Reserved)		—	1268h	04712	—	_
A081	_	AVR function select	R/W	00 . AVR enabled 01 . AVR disabled 02 . AVR enabled except during deceleration	1269h	04713	0, 1, 2	
A082	_	AVR voltage select	R/W	200V class inverter settings: 200/215/220/230/240 (V) 400V class inverter settings: 380/400/415/440/460/480 (V)	126Ah	04714	_	
_		(Reserved)		—	126Bh	04715	_	_
_		(Reserved)	_	—	126Ch	04716	—	_
A085		Operation mode selection	R/W	00 . Normal operation 01 . Energy-saver operation 02 . Optimal accel/decel operation	126Dh	04717	0, 1, 2	_
A086	—	Energy saving mode tuning	R/W	0.0 to 100 (seconds)	126Eh	04718	0 to 1000	0.1 %
_	•	(Reserved)	_	—	126Fh to 1273h	04719 to 04723	_	—
A092	Н	Acceleration (2) time	R/W	Duration of 2nd segment of	1274h	04724	1 to	0.01 sec
A092	L	setting	R/W	acceleration	1275h	04725	360000	
A292	Н	Acceleration (2) time	R/W	Duration of 2nd segment of	226Fh	08815	1 to	0.01 sec
A292	L	setting, 2nd motor	R/W	acceleration, 2nd motor	2270h	08816	360000	
A392	Η	Acceleration (2) time	R/W	Duration of 2nd segment of	326Dh	12909	1 to	0.01 sec
A392	L	setting, 3rd motor	R/W	acceleration, 3rd motor	326Eh	12910	360000	
A093	Η	Deceleration (2) time	R/W	Duration of 2nd segment of	1276h	04726	1 to	0.01 sec
A093	L	setting	R/W	deceleration	1277h	04727	360000	
A293	Η	Deceleration (2) time	R/W	Duration of 2nd segment of	2271h	08817	1 to	0.01 sec
A293	L	setting, 2nd motor	R/W	deceleration, 2nd motor	2272h	08818	360000	
A393	Η	Deceleration (2) time	R/W	Duration of 2nd segment of	326Fh	12911	1 to	0.01 sec
A393	L	setting, 3rd motor	R/W	deceleration, 3rd motor	3270h	12912	360000	

		notunig	, Regist	ers, "A" Group Standard Fu	icuolis			
							vork Data	
Func. C	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.	8-	
_		(Reserved)	—	_	3271h to 330Bh	12913 to 13067	—	_
A094		Select method to switch to Acc2/Dec2 profile	R/W	00[2CH] terminal input 01transition frequency 02when motor direction reverses	1278h	04728	0, 1, 2	_
A294	_	Select method to switch to Acc2/Dec2, 2nd motor	R/W	00[2CH] terminal input 01transition frequency 02when motor direction reverses	2273h	08819	0, 1, 2	
A095	Н	Acc1 to Acc2 frequency			1279h	04729	0 to 40000	0.01 Hz
A095	L	transition point	R/W	Accel1 switches to Accel2	127Ah	04730		
A295	Н			Output frequency at which	2274h	08820	0 to 40000	0.01 Hz
A295	L	transition point, 2nd motor	R/W	Accel1 switches to Accel2	2275h	08821		
A096	Н	Dec1 to Dec2 frequency	R/W	Output frequency at which	127Bh	04731	0 to 40000	0.01 Hz
A096	L	transition point	R/W	Decel1 switches to Decel2	127Ch	04732		
A296	Н	Dec1 to Dec2 frequency	R/W	Output frequency at which	2276h	08822	0 to 40000	0.01 Hz
A296	L	transition point, 2nd motor	R/W	Decel1 switches to Decel2	2277h	08823		
		(Reserved)		_	2278h to 230Bh	08824 to 08971	_	_
A097		Acceleration curve selection	R/W	00Linear 01S-curve 02U-shape 03Reverse U-shape 04EL-S curve	127Dh	04733	0 to 4	
A098		Deceleration curve setting	R/W	00Linear 01S-curve 02U-shape 03Reverse U-shape 04EL-S curve	127Eh	04734	0 to 4	
—		(Reserved)	—	—	127Fh	04735		—
_		(Reserved)			1280h	04736		_
A101	Н	[OI]–[L] input active range start frequency	R/W	Output frequency corre- sponding to the current input	1281h	04637	0 to 40000	0.01 Hz
A101	L	start nequency	R/W	range starting point	1282h	04738		
A102	Н	[OI]–[L] input active range	R/W	Output frequency corre-	1283h	04739	0 to 40000	0.01 Hz
A102	L	end frequency	R/W	sponding to the current input range ending point	1284h	04740		
A103	-	[OI]–[L] input active range start current	R/W	Starting point for the current input range	1285h	04741	0 to A104 value	1 %
A104	-	[OI]–[L] input active range end current	R/W	Ending point for the current input range	1286h	04742	A103 value to 100	1 %
A105	-	[OI]–[L] input start frequency enable	R/W	00Use A101 start value 01Use 0Hz	1287h	04743	0, 1	_

B-

		Holding	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	W Description	Register		P	
					hex	dec.	Range	Res.
_		(Reserved)	—	—	1288h to 128Ch	04744 to 0448	—	
A111	Н		R/W	Output frequency corre-	128Dh	04749	-40000 to	0.01 Hz
A111	L	range start frequency	R/W	sponding to the bipolar voltage input range starting point	128Eh	04750	40000	
A112	Н	[O2]–[L] input active	R/W	Output frequency corre-	128Fh	04751	-40000 to	0.01 Hz
A112	L	range end frequency	R/W	sponding to the bipolar voltage input range ending point	1290h	04752	40000	
A113	-	[O2]–[L] input active range start voltage	R/W	Starting point for the bipolar voltage input range	1291h	04753	-100 to A114 value	1 %
A114		[O2]–[L] input active range end voltage	R/W	Ending point for the bipolar voltage input range	1292h	04754	A113 value to 100	1 %
_		(Reserved)	_	—	1293h	04755	—	_
					to 12A4h	to 04772		
A131	_	Acceleration curve constants setting	R/W	Sets the curve deviation from straight-line acceleration in 10 levels (01 to 10)	12A5h	04773	1 to 10	
A132	-	Deceleration curve constants setting	R/W	Sets the curve deviation from straight-line deceleration in 10 levels (01 to 10)	12A6h	04774	1 to 10	
—		(Reserved)	—	_	12A7h to 12AEh	04775 to 04782	_	
A141		A input select for calculate function	R/W	00. Digital operator (A020/ A220/A320) 01. Keypad potentiometer 02. [O] input 03. [OI] input 04. Comm. port 05. Expansion card 1 06. Expansion card 2 07. Pulse train frequency train input	12AFh	04783	0 to 7	_
A142	-	B input select for calculate function	R/W	00. Digital operator (A020/ A220/A320) 01. Keypad potentiometer 02. [O] input 03. [OI] input 04. Comm. port 05. Expansion card 1 06. Expansion card 2 07. Pulse train frequency train input	12B0h	04784	0 to 7	
A143	-	Calculation symbol	R/W	00 . ADD (A input + B input) 01 . SUB (A input – B input) 02 . MUL (A input x B input)	12B1h	04785	0, 1, 2	
_		(Reserved)	_	—	12B2h	04786		

		Holdin	g Regist	ers, "A" Group Standard Fu	nctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	David	Dee
					hex	dec.	Range	Res.
A145	Η	ADD frequency	R/W	0.00 to 99.99,	12B3h	04787	0 to 40000	0.01 Hz
A145	L		R/W	100.0 to 400.0 (Hz)	12B4h	04788		
A146	—	ADD direction select	R/W	00Plus (adds A145 value to output frequency) 01Minus (subtracts A145 value from output freq.)	12B5h	04789	0, 1	_
—		(Reserved)	—	—	12B6h to 12B8h	04790t o 04792	—	_
A150		EL-S curve acceleration ratio 1	R/W	Range is 0. to 50.	12B9h	04793	0 to 50	1 %
A151		EL-S curve acceleration ratio 2	R/W	Range is 0. to 50.	12BAh	04794	0 to 50	1 %
A152	—	EL-S curve acceleration ratio 3	R/W	Range is 0. to 50.	12BBh	04795	0 to 50	1 %
A153	_	EL-S curve acceleration ratio 4	R/W	Range is 0. to 50.	12BCh	04796	0 to 50	1 %
	•	(Reserved)	_	—	12BDh to 1300h	04797 to 04864	_	

		Holdin	g Regis	ters, "B" Group Fine Tuning Fun	ctions			
						Netw	ork Data	
Func. Co	de	Name	R/W	Description	Register		Danga	Res.
					hex	dec.	Range	Kes.
B001		Selection of restart mode	R/W	 00. Alarm output after trip, automatic restart disabled 01. Resume operation after frequency matching 02. Resume operation after frequency matching 03. Resume previous freq. after freq. matching, then decelerate to stop and display trip info 04. Restart with active matching frequency 	1301h	04865	0 to 4	_
B002		Allowable under-voltage power failure time	R/W	The amount of time a power input under-voltage can occur without tripping the power failure alarm	1302h	04866	3 to 250	0.1 sec.

B

Call 1(800)985-6929 for Sales

			88-~	ters, "B" Group Fine Tuning Fun				
						Netw	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Damas	Dee
					hex	dec.	Range	Res.
B003		Retry wait time before motor restart	R/W	Time delay after a trip condition goes away before the inverter restarts the motor	1303h	04867	3 to 1000	0.1 sec.
B004	-	Instantaneous power failure / under-voltage trip alarm enable	R/W	00 .Disable01 .Enable02 .Disable during stop and ramp to stop	1304h	04868	0, 1, 2	_
B005		Number of restarts on power failure / under- voltage trip events	R/W	00 .Restart 16 times 01 .Always restart	1305h	04869	0, 1	_
B006	-	Phase loss detection enable	R/W	00 .Disable 01 .Enable	1306h	04870	0, 1	
B007	Н	Restart frequency thresh-	R/W	When the frequency of the motor	1307h	04871	0 to 40000	0.01 Hz
B007	L	old	R/W	is less than this value, the inverter will restart at 0 Hz	1308h	04872		
B008		Retry after trip select	R/W	 00 . Always retry after trip 01 . Start with 0 Hz 02 . Start with frequency matching 03 . Retry after deceleration and stop with matching frequency 04 . Start with active matching frequency 	1309h	04873	0 to 4	_
B009	-	Retry after undervoltage select	R/W	00 .Restart 16 times 01 .Unlimited	130Ah	04874	0, 1	
B010	-	Retry count select after overvoltage or overcurrent	R/W	1 to 3 (times)	130Bh	04875	1 to 3	times
B011	-	Retry wait time after trip	R/W	0.3 to 100.0 (seconds)	130Ch	04876	3 to 1000	0.1 sec.
B012		Electronic thermal setting (calculated within the inverter from current output)	R/W	Range is 0.2 * rated current to 1.2 * rated current	130Dh	04877	200 to 1000	0.1 %
B212		Electronic thermal setting (calculated within the inverter from current output), 2nd motor	R/W	Range is 0.2 * rated current to 1.2 * rated current	230Ch	08972	200 to 1000	0.1 %
B312		Electronic thermal setting (calculated within the inverter from current output), 3rd motor	R/W	Range is 0.2 * rated current to 1.2 * rated current	330Ch	13068	200 to 1000	0.1 %
B013	-	Electronic thermal charac- teristic	R/W	00 .Reduced torque 01 .Constant torque 02 .Free-setting	130Eh	04878	0, 1, 2	_
_	<u> </u>	(Reserved)			130Fh	04879	—	
B213	_	Electronic thermal charac- teristic, 2nd motor	R/W	00 .Reduced torque 01 .Constant torque 02 .Free-setting	230Dh	08973	0, 1, 2	_
—		(Reserved)		_	230Eh to 2501h	08974 to 09493	_	—

				ters, "B" Group Fine Tuning Fun				
							vork Data	
Func. C	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.		
B313	_	Electronic thermal charac- teristic, 3rd motor	R/W	00. Reduced torque 01. Constant torque 02. Free-setting	330Dh	13069	0, 1, 2	—
—		(Reserved)	_	_	330Eh to 3506h	13070 to 13574	—	—
B015		Free setting, electronic thermal frequency (1)	R/W	Data point coordinates for Hz axis (horizontal) in the free-form curve	1310h	04880	0 to 400	1 Hz
B016	_	Free setting, electronic thermal current (1)	R/W	Data point coordinates for Ampere axis (vertical) in the free-form curve	1311h	04881	0 to rated current	0.1 A
B017	-	Free setting, electronic thermal frequency (2)	R/W	Data point coordinates for Hz axis (horizontal) in the free-form curve	1312h	04882	0 to 400	1 Hz
B018	-	Free setting, electronic thermal current (2)	R/W	Data point coordinates for Ampere axis (vertical) in the free-form curve	1313h	04883	0 to rated current	0.1 A
B019	_	Free setting, electronic thermal frequency (3)	R/W	Data point coordinates for Hz axis (horizontal) in the free-form curve	1314h	04884	0 to 400	1 Hz
B020		Free setting, electronic thermal current (3)	R/W	Data point coordinates for Ampere axis (vertical) in the free-form curve	1315h	04885	0 to rated current	0.1 A
B021		Overload restriction opera- tion mode	R/W	 00. Disable 01. Enable for acceleration and constant speed 02. Enable for constant speed only 03. Enable for accel, decel, and constant speed 	1316h	04886	0 to 3	
B022	-	Overload restriction setting	R/W	(0.20 x rated current) to (1.80 x rated current) (A)	1317h	04887	200 to 2000	0.1 %
B023	—	Deceleration rate at overload restriction	R/W	0.10 to 30.00 (seconds)	1318h	04888	10 to 3000	0.1 sec.
B024	-	Overload restriction opera- tion mode (2)	R/W	 00. Disable 01. Enable for acceleration and constant speed 02. Enable for constant speed only 03. Enable for accel, decel, and constant speed 	1319h	04889	0 to 3	
B025	_	Overload restriction setting (2)	R/W	(0.20 x rated current) to (1.80 x rated current) (A)	131Ah	04890	200 to 2000	0.1 %
B026	—	Deceleration rate at overload restriction (2)	R/W	0.10 to 30.00 (seconds)	131Bh	04891	1 to 3000	0.01 sec
B027	—	Overcurrent suppression enable	R/W	00 . Disable 01 . Enable	131Ch	04892	0, 1	
B028	-	Current limit for active frequency-matching restart	R/W	(0.20 x rated current) to (1.80 x rated current) (A)	131Dh	04893	200 to 2000	0.1 %

B

						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
B029	_	Scan time constant for active freq. matching	R/W	10 to 3000	131Eh	04894	0.01 sec.	0.01 sec.
B030	_	Restart freq. select for active freq. matching	R/W	00 .Frequency at last shutoff 01 .Maximum frequency 02 .Set frequency	131Fh	04895		
B031		Software lock mode selec- tion	R/W	 00. Low-level access, [SFT] input blocks all edits 01. Low-level access, [SFT] input blocks edits (except F001 and Multi-speed parameters) 02. No access to edits 03. No access to edits except F001 and Multi-speed parameters 10. High-level access, including B031 	1320h	04896		
_		(Reserved)	_	—	1321h	04897		_
_		(Reserved)	_	_	1322h	04898		_
B034	Н	Run/power-on warning	R/W	0 to 9999. (0 to 99990), 1000 to	1323h	04899	0 to 65535	1 [10-
B034	L	time	R/W	6553 (10000 to 655300) (hours)	1324h	04900		hours]
B035	_	Rotational direction restriction	R/W	00 .Enable for fwd. and rev. 01 .Enable for forward only 02 .Enable for reverse only	1325h	04901	0, 1, 2	_
B036	—	Reduced voltage start selection	R/W	000 (short) to 255 (long)	1326h	04902	0 to 255	_
B037		Function code display restriction	R/W	 00 .Display all 01 .Display only utilized functions 02 .Display user-selected functions only 03 .Data comparison display 04 .Basic display 	1327h	04903	0 to 4	
B038		Initial display selection	R/W	00 . Last value dislayed when STR key was pressed 01 .D001 02 .D002 03 .D003 04 .D007 05 .F001	1328h	04904	0 to 5	
B039	-	Automatic user parameter function enable	R/W	00 .Disable 01 .Enable	1329h	04905	0, 1	_
B040		Torque limit selection	R/W	 00 .4-quadrant mode 01 .Selected by two input terminals 02 .From analog [O2] input 03 .From expansion card 1 04 .From expansion card 2 	132Ah	04906	0 to 4	
B041	_	Torque limit (1) (forward- driving in 4-quadrant mode)	R/W	0. to 200. (%), no (disable torque limit)	132Bh	04907	0 to 200, 255= (no)	1 %

		Holdin	g Regis	ters, "B" Group Fine Tuning Fun	ctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	_	_
					hex	dec.	Range	Res.
B042		Torque limit (2) (reverse- regenerating in 4-quadrant mode)	R/W	0. to 200. (%), no (disable torque limit)	132Ch	04908	0 to 200, 255= (no)	1 %
B043	-	Torque limit (3) (reverse- driving in 4-quadrant mode)	R/W	0. to 200. (%), no (disable torque limit)	132Dh	04909	0 to 200, 255= (no)	1 %
B044	_	Torque limit (4) (forward- regenerating in 4-quadrant mode)	R/W	0. to 200. (%), no (disable torque limit)	132Eh	04910	0 to 200, 255= (no)	1 %
B045	-	Torque limit LADSTOP enable	R/W	00 . Disable 01 . Enable	132Fh	04911	0, 1	_
B046	-	Reverse Run protection enable	R/W	00 . Disable 01 . Enable	1330h	04912	0, 1	_
		(Reserved)	_	—	1331h	04913	_	_
					to 1333h	to 04915		
B050		Controller deceleration and stop on power loss	R/W	 00. Disable 01. Constant decel to stop 02. Constant DC voltage control with resume 03. Constant DC voltage control 	1334h	04916	0 to 3	
B051	-	DC bus voltage trigger level during power loss	R/W	Sets trigger for controlled decel- eration and stop on power loss function	1335h	04917	0 to 10000	0.1 V
B052	_	Over-voltage threshold during power loss	R/W	Sets over-voltage threshold for controlled deceleration function	1336h	04918	0 to 10000	0.1 V
B053	Η	Deceleration time setting	R/W	0.01 to 99.99, 100.0 to 999.9,	1337h	04919	0 to 360000	0.01 se
B053	L	during power loss	R/W	1000 to 3600 (seconds)	1338h	04920	360000	
B054	_	Initial output frequency decrease during power loss	R/W	Sets the initial decrease in output frequency upon power loss	1339h	04921	0 to 1000	0.01 H
B055	_	Proportional gain setting for non-stop operation at power loss	R/W	0.00 to 2.55	133Ah	04922	0 to 255	0.01
B056	-	Integral time setting for non-stop operation at power loss	R/W	0.0 to 9.999, 10.00 to 65.55	133Bh	04923	0 to 65535	0.001 sec.
_		(Reserved)		_	133Ch to 133Eh	04924 to 04926	—	_
B060	-	[O] input max. limit level of window comparator	R/W	0. to 100. (%) Lower limit = B061 + B062 / 2	133Fh	04927	0 to 100	1 %
B061	-	[O] input min. limit level of window comparator	R/W	0. to 100. (%) Lower limit = B060 – B062 / 2	1340h	04928	0 to 100	1 %
B062		[O] input hysteresis width of window comparator	R/W	0. to 10. (%) Lower limit = B061 – B062 / 2	1341h	04929	0 to 10	1 %
B063	-	[OI] input max. limit level of window comparator	R/W	0. to 100. (%) Lower limit = B064 + B066 / 2	1342h	04930	0 to 100	1 %

Call 1(800)985-6929 for Sales

	Holdin	g Regis	ters, "B" Group Fine Tuning Fun	ctions			
					Netv	vork Data	
Func. Code	Name	R/W	Description	Reg	ister	-	
				hex	dec.	Range	Res.
B064 –	 [OI] input min. limit level of window comparator 	R/W	0. to 100. (%) Lower limit = B063 – B066 / 2	1343h	04931	0 to 100	1 %
B065 –	 [OI] input hysteresis width of window comparator 	R/W	0. to 10. (%) Lower limit = B063 – B064 / 2	1344h	04932	0 to 10	1 %
B066 —	 [O/OI/O2] input maximum limit level of window comparator 	R/W	-100. to 100. (%) Lower limit = B067 + B068 / 2	1345h	04933	0 to 100	1 %
B067 —	 [O/OI/O2] input minimum limit level of window comparator 	R/W	-100. to 100. (%) Lower limit = B066 – B068 / 2	1346h	04934	0 to 100	1 %
B068 —	- [O/OI/O2] input hysteresis width of window comparator	R/W	0. to 10. (%) Lower limit = B066 – B067 / 2	1347h	04935	0 to 10	1 %
	(Reserved)	_	—	1348h	04936		—
B070 –	 [O] input disconnect threshold 	R/W	0 to 100 (%); 255 = ignore setting	1349h	04937	0 to 100, 255	1 %
B071 –	 [OI] input disconnect threshold 	R/W	0 to 100 (%); 255 = ignore setting	134Ah	04938	0 to 100, 255	1 %
B072 –	 [O2] input disconnect threshold 	R/W	0 to 100 (%); 255 = ignore setting	134Bh	04939	0 to 100, 255	1 %
_	(Reserved)	—	_	134Ch to 1350h	04940 to 04944	_	—
B078 –	 Clear cumulative input power data 	R/W	00 .No change 01 .Clear the data	1351h	04945	0, 1	—
B079 –	 Cumulative input power display gain setting 	R/W	1. to 1000.	1352h	04946	1 to 1000	1
_	(Reserved)	—	_	1353h	04947	_	—
_	(Reserved)	—	—	1354h	04948		_
B082 –	- Start frequency adjustment	R/W	0.10 to 9.99 (Hz)	1355h	04949	10 to 999	0.01 Hz
B083 –	- Carrier frequency setting	R/W	Sets the PWM carrier (internal switching frequency)	1356h	04950	5 to 150	0.1 kHz
B084 —	 Initialization mode (parameters or trip history) 	R/W	00 . Trip history clear01 . Parameter initialization02 . Trip history clear and parameter initialization	1357h	04951	0, 1, 2	_
B085 —	- Country code for initializa- tion	R/W	00 .Japan version 01 .Europe version 02 .USA version	1358h	04952	0, 1, 2	—
B086 –	 Frequency scaling conversion factor 	R/W	Specify a constant to scale D007 to display in engineering units	1359h	04953	1 to 999	0.1
B087 —	- STOP key enable	R/W	00 .Enable 01 .Disable 02 .Disable only the STOP function	135Ah	04954	0, 1, 2	—

Call 1(800)985-6929 for Sales hitachiacdrive.com

		Holdin	g Regis	ters, "B" Group Fine Tuning Fun	ctions			
						Netv	work Data	
Func. C	ode	Name	R/W	Description	Reg	ister		_
					hex	dec.	Range	Res.
B088		Restart mode after FRS	R/W	 00. Restart from 0Hz 01. Restart from frequency detected from actual speed of motor 02. Restart from active matching frequency 	135Bh	04955	0, 1, 2	
_		(Reserved)		_	135Ch	04956	_	—
B090		Dynamic braking usage ratio	R/W	0.0 to 100.0 (%) Set = 0.0 to disable dynamic braking	135Dh	04957	0 to 1000	0.1 %
B091	-	Stop mode selection	R/W	00.DEC (decelerate and stop) 01.FRS (free run to stop)	135Eh	04958	0, 1	_
B092	-	Cooling fan control	R/W	00 . Fan always ON 01 . Fan ON during RUN, OFF during STOP	135Fh	04959	0, 1	_
_		(Reserved)	_	—	1360h	04960	—	_
_		(Reserved)		—	1361h	04961	—	
B095		Dynamic braking control	R/W	00. Disable 01. Enable during RUN only 02. Enable always	1362h	04962	0, 1, 2	—
B096	-	Dynamic braking activa- tion level	R/W	330 to 380 (V) (200V class), 660 to 760 (V) (400V class)	1363h	04963	330 to 380 660 to 760	1 V
_		(Reserved)		_	1364h	04964	_	—
B098	-	Thermistor for thermal protection control	R/W	00 . Disable 01 . Enable-PTC thermistor 02 . Enable-NTC thermistor	1365h	04965	0, 1, 2	_
B099	-	Thermal protection level setting	R/W	Thermistor resistance threshold at which trip occurs	1366h	04966	0 to 9999	1 Ω
B100	—	Free-setting V/f freq. (1)	R/W	0. to Free-setting V/f freq. (2)	1367h	04967	0 to V/f 2	1 Hz
B101	—	Free-setting V/f voltage (1)	R/W	0.0 to 800.0 (V)	1368h	04968	0 to 8000	0.1 V
B102	_	Free-setting V/f freq. (2)	R/W	0. to Free-setting V/f freq. (3)	1369h	04969	0 to V/f 3	1 Hz
B103	_	Free-setting V/f voltage (2)	R/W	0.0 to 800.0 (V)	136Ah	04970	0 to 8000	0.1 V
B104	_	Free-setting V/f freq. (3)	R/W	0. to Free-setting V/f freq. (4)	136Bh	04971	0 to V/f 4	1 Hz
B105	_	Free-setting V/f voltage (3)	R/W	0.0 to 800.0 (V)	136Ch	04972	0 to 8000	0.1 V
B106	_	Free-setting V/f freq. (4)	R/W	0. to Free-setting V/f freq. (5)	136Dh	04973	0 to V/f 5	1 Hz
B107	_	Free-setting V/f voltage (4)	R/W	0.0 to 800.0 (V)	136Eh	04974	0 to 8000	0.1 V
B108	_	Free-setting V/f freq. (5)	R/W	0. to Free-setting V/f freq. (6)	136Fh	04975	0 to V/f 6	1 Hz
B109	_	Free-setting V/f voltage (5)	R/W	0.0 to 800.0 (V)	1370h	04976	0 to 8000	0.1 V
B110	—	Free-setting V/f freq. (6)	R/W	0. to Free-setting V/f freq. (7)	1371h	04977	0 to V/f 7	1 Hz
B111	_	Free-setting V/f voltage (6)	R/W	0.0 to 800.0 (V)	1372h	04978	0 to 8000	0.1 V
B112	_	Free-setting V/f freq. (7)	R/W	0. to 400.0 (V)	1373h	04979	0 to V/f 8	1 Hz
B113	_	Free-setting V/f voltage (7)	R/W	0.0 to 800.0 (V)	1374h	04980	0 to 8000	0.1 V

B

		Holdin	g Regis	ters, "B" Group Fine Tuning Fun	ctions			
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
		(Reserved)		_	1375h to 137Ah	04981 to 04986	—	—
B120	-	Brake Control Enable	R/W	00 .Disable 01 .Enable	137Bh	04987	0, 1	—
B121	_	Brake Wait Time for Release	R/W	Sets time delay between arrival at release frequency and the brake release signal	137Ch	04977	0 to 500	0.01 sec.
B122	_	Brake Wait Time for Acceleration	R/W	Sets time delay from receipt of brake confirmation signal to start of motor acceleration	137Dh	04979	0 to 500	0.01 sec.
B123	_	Brake Wait Time for Stopping	R/W	Sets time delay from brake confirmation signal turns OFF to inverter deceleration to 0 H	137Eh	04990	0 to 500	0.01 sec.
B124	_	Brake Wait Time for Confirmation	R/W	Sets the wait time for confirma- tion after turn ON/OFF of brake release	137Fh	04991	0 to 500	0.01 sec.
B125	_	Brake Release Frequency Setting	R/W	Sets the frequency of the brake release output signal after delay set by B121	1380h	04992	0 to 40000	0.01 Hz
B126	_	Brake Release Current Setting	R/W	Sets the minimum inverter current level above which the brake release signal is permitted	1381h	04993	0 to 1800	0.1 %
B127	—	Braking frequency	R/W	0.00 to 99.99, 100.0 to 400.0 Hz	1382h	04994	0 to 40000	0.01 Hz
_		(Reserved)		—	1383h	04995	—	_
_		(Reserved)	_	—	1384h	04996	—	_
B130	_	Over-voltage LADSTOP enable	R/W	 00 .Disable 01 .Enable during deceleration and constant speed 02 .Enable during acceleration 	1385h	04997	0, 1, 2	_
B131	-	Over-voltage LADSTOP level	R/W	330 to 390 (V) for 200V class, 660 to 780 (V) for 400V class	1386h	04998	330 to 390 660 to 780	1 V
B132	_	Acceleration and decelera- tion rate at overvoltage suppression	R/W	0.10 to 30.00 (seconds)	1387h	04999	10 to 3000	0.01 sec.
B133	_	Overvoltage suppression proportional gain	R/W	0.00 to 2.55	1388h	05000	0 to 255	0.01
B134	-	Overvoltage suppression integral time	R/W	0.000 to 9.999, 10.00 to 63.53 (seconds)	1389h	05001		
		(Reserved)	—	_	1390h to 1400h	05002 to 05120	—	—

Call 1(800)985-6929 for Sales hitachiacdrive.com

		Holding Reg	isters, "	C" Group Intelligent Termina	al Functio	ons		
						Netv	vork Data	
Func. C	ode	Name	R/W	Description	Reg	ister	Damas	Dee
					hex	dec.	Range	Res.
C001	_	Terminal [1] function	R/W		1401h	05121	1 to 9,	
C002	—	Terminal [2] function	R/W		1402h	05122	11 to 18, 20 to 24,	
C003	—	Terminal [3] function	R/W		1403h	05123	26 to 29, 31 to 48,	
C004	—	Terminal [4] function	R/W	See <u>"Input Terminal</u>	1404h	05124	no 10 48,	
C005	—	Terminal [5] function	R/W	Configuration" on page 3–50	1405h	05125		
C006	—	Terminal [6] function	R/W		1406h	05126		
C007	—	Terminal [7] function	R/W		1407h	05127		
C008	—	Terminal [8] function	R/W		1408h	05128		
_		(Reserved)		—	1409h	05129	—	_
_		(Reserved)		—	140Ah	05130		_
C011	—	Terminal [1] active state	R/W	Select logic convention, two	140Bh	05131	0, 1	_
C012	—	Terminal [2] active state	R/W	option codes: 00Normally open (N.O.)	140Ch	05132		
C013	—	Terminal [3] active state	R/W	01Normally closed (N.C.)	140Dh	05133		
C014	—	Terminal [4] active state	R/W		140Eh	05134		
C015	—	Terminal [5] active state	R/W		140Fh	05135		
C016	—	Terminal [6] active state	R/W		1410h	05136		
C017	—	Terminal (7) active state	R/W		1411h	05137		
C018	—	Terminal [8] active state	R/W		1412h	05138		
C019	—	Terminal [FW] active state	R/W		1413h	05139		
_	•	(Reserved)	_	—	1414h	05140	—	_
C021	—	Terminal [11] function	R/W		1415h	05141	0 to 13,	
C022	—	Terminal [12] function	R/W		1416h	05142	19 to 26	
C023	—	Terminal [13] function	R/W	See <u>"Output Terminal</u>	1417h	05143		
C024	_	Terminal [14] function	R/W	Configuration" on page 3–55	1418h	05144		
C025	—	Terminal [15] function	R/W	<u>page 5–55</u>	1419h	05145		
C026	-	Alarm relay terminal function	R/W		141Ah	05146		
C027	-	[FM] signal selection	R/W	See <u>"Output Terminal</u>	141Bh	05147	0 to 10, 12	_
C028	—	[AM] signal selection	R/W	Configuration" on	141Ch	05148		
C029	-	[AMI] signal selection	R/W	<u>page 3–55</u>	141Dh	05149		
C030	-	Digital current monitor reference value	R/W	Current with digital current monitor output at 1.44 kHz	141Eh	05150	200 to 2000	0.1 %
C031	_	Terminal [11] active state	R/W	Select logic convention, two	141Fh	05151	0, 1	_
C032	—	Terminal [12] active state	R/W	option codes: 00Normally open (N.O.)	1420h	05152		
C033	-	Terminal [13] active state	R/W	01Normally closed (N.C.)	1421h	05153		
C034	_	Terminal [14] active state	R/W		1422h	05154		
C035	-	Terminal [15] active state	R/W		1423h	05155		
C036	—	Alarm relay active state	R/W	1	1424h	05156		

Call 1(800)985-6929 for Sales

						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
_		(Reserved)	—		1425h	05157	—	_
C038		Low current indication output mode select	R/W	00 . Output during accel/ decel and constant speed 01 . Output only during constant speed	1426h	05158	0, 1	
C039		Low current indication detection level	R/W	0.0 to 2.0 x rated inverter current	1427h	05159	0 to 1800	0.1 %
C040		Overload signal output mode	R/W	00 . During accel / decel / constant speed 01 . During constant speed	1428h	05160	0, 1	—
C041		Overload level setting	R/W	0.00 x rated current to 2.00 x rated current (A)	1429h	05161	0 to 1800	0.1 %
C042	Н	Frequency arrival setting	R/W	Sets the frequency arrival	142Ah	05162	0 to 40000	0.01 Hz
C042	L	for accel.	R/W	setting threshold for the output frequency during acceleration	142Bh	05163		
C043	Н	Arrival frequency setting	R/W	Sets the frequency arrival	142Ch	05164	0 to 40000	0.01 Hz
C043	L	for decel.	R/W	setting threshold for the output frequency during deceleration	142Dh	05165		
C044		PID deviation level setting	R/W	Sets the PID loop error threshold SP - PV (absolute value) to trigger intelligent output [OD]	142Eh	05166	0 to 1000	0.1 %
C045	Н	Frequency arrival setting	R/W	0.0 to 99.99,	142Fh	05167	0 to 40000	0.01 Hz
C045	L	for acceleration (2)	R/W	100.0 to 400.0 (Hz)	1430h	05168		
C046	Н	Frequency arrival setting	R/W	0.0 to 99.99,	1431h	05169	0 to 40000	0.01 Hz
C046	L	for deceleration (2)	R/W	100.0 to 400.0 (Hz)	1432h	05170		
_		(Reserved)		_	1433h to 1437h	05171 to 05175	—	_
C052		Maximum PID feedback (PV) data	R/W	0.0 to 100.0 (%)	1438h	05176	0 to 1000	0.1 %
C053	—	Minimum PID feedback (PV) data	R/W	0.0 to 100.0 (%)	1439h	05177	0 to 1000	0.1 %
_		(Reserved)	—	—	143Ah	05178		
C055	-	Over-torque (forward- driving) level setting	R/W	Threshold for intelligent output terminal [OTQ], quadrant I	143Bh	05179	0 to 180	1 %
C056	-	Over-torque (reverse regenerating) level setting	R/W	Threshold for intelligent output terminal [OTQ], quadrant II	143Ch	05180	0 to 180	1 %
C057		Over-torque (reverse driving) level setting	R/W	Threshold for intelligent output terminal [OTQ], quadrant III	143Dh	05181	0 to 180	1 %
C058		Over-torque (forward regenerating) level setting	R/W	Threshold for intelligent output terminal [OTQ], quadrant IV	143Eh	05182	0 to 180	1 %

		Holding Reg	isters, "	C" Group Intelligent Termina	al Functio	ons		
						Netv	work Data	
Func. C	ode	Name	R/W	Description	Reg	ister	Demos	Des
					hex	dec.	Range	Res.
		(Reserved)		—	143Fh	05183	—	
_		(Reserved)	—	—	1440h	05184	—	—
C061	-	Electronic thermal warning level setting	R/W	Sets the threshold for intelligent output [THM]	1441h	05185	0 to 100	1 %
C062	-	Alarm code output	R/W	00Disable 01Enable – 3-bit code 02Enable – 4-bit code	1442h	05186	0, 1, 2	—
C063	—	Zero speed detection level	R/W	0.00 to 99.99 / 100.0 (Hz)	1443h	05187	0 to 10000	0.01 Hz
C064	-	Heatsink overheat warning level	R/W	Alarm temperature thresh- old for heatsink in inverter	1444h	05188	0 to 200	1 °C
_	•	(Reserved)		—	1445h	05189	_	
					to 144Ah	to 05194		
C071	-	Communication speed selection	R/W	02Test 032400 (bps) 044800 (bps) 059600 (bps) 0619200 (bps)	144Bh	05195	2 to 6	_
C072		Node allocation	R/W	Set the address of the inverter on the network	144Ch	05196	1 to 32	_
C073	-	Communication data length selection	R/W	077-bit data 088-bit data	144Dh	05197	7, 8	bits
C074		Communication parity selection	R/W	00No parity 01Even parity 02Odd parity	144Eh	05198	0, 1, 2	_
C075	-	Communication stop bit selection	R/W	011 Stop bit 022 Stop bits	144Fh	05199	1, 2	bits
C076		Action upon communica- tion error selection	R/W	00Trip 01Trip after deceleration and stop 02No action (ignore errors) 03Free-run stop 04Decelerate and stop	1450h	05200	0 to 4	—
C077	-	Communication timeout before trip	R/W	0.00 to 99.99 (seconds)	1451h	05201	0 to 9999	0.01 sec.
C078	_	Communication wait time	R/W	Time the inverter waits after receiving a message before it transmits	1452h	05202	0 to 1000	1 msec.
C079	-	Communication protocol select	R/W	00ASCII 01ModBus RTU	1453h	05203	0, 1	—
_		(Reserved)	_	—	1454h	05204	—	_
C081	-	[O] input span calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	1455h	05205	0 to 65530	1
C082	-	[OI] input span calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	1456h	05206	0 to 65530	1
C083	-	[O2] input span calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	1457h	05207	0 to 65530	1
_		(Reserved)	—	_	1458h	05208	_	—


Call 1(800)985-6929 for Sales

SJ7002 Inverter

20
63

Appendix B

						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
C085	-	Thermistor input tuning	R/W	0.0 to 999.9., 1000	1459h	05209		
_	1	(Reserved)	—	_	145Ah to 145Eh	05210 to 05214	—	
C091		Debug mode enable	R	00 . No display 01 . Display	145Fh	05215	0, 1	_
	_	(Reserved)	—	_	1460h to 1468h	05216 to 05224	—	
C101		Up/Down memory mode selection	R/W	00 . Clear last freq. (return to default freq. F001) 01 . Keep last frequency adjusted by UP/DWN	1469h	05225	0, 1	_
C102		Reset mode selection	R/W	00. Cancel trip state, stop inverter output, reset CPU; clear position counter at ON transition 01. Cancel trip state, stop inverter output, reset CPU; clear position counter at OFF transition 02. Cancel trip state and clear position counter; no effect if a trip does not exist 03. Cancel trip state but does not clear position counter; no effect if a trip does not exist	146Ah	05226	0 to 3	
C103		Restart mode after reset	R/W	00 . Restart at 0 Hz 01 . Resume operation after frequency matching 02 . Restart with active matching frequency	146Bh	05227		
_		(Reserved)	—	—	146Ch	05228	—	_
C105	-	FM gain adjustment	R/W	50. to 200. (%)	146Dh	05229	50 to 200	1 %
C106	-	AM gain adjustment	R/W	50. to 200. (%)	146Eh	05230	50 to 200	1 %
C107	-	AMI gain adjustment	R/W	50. to 200. (%)	146Fh	05231	50 to 200	1 %
_		(Reserved)	—	—	1470h	05232	—	_
C109	-	AM bias adjustment	R/W	0. to 100. (%)	1471h	05233	0 to 100	1 %
C110	—	AMI bias adjustment	R/W	0. to 100. (%)	1472h	05234	0 to 100	1 %
C111		Overload setting (2)	R/W	0.00 x rated current to 2.00 x rated current (A)	1473h	05235	0 to 1800	0.1 %
		(Reserved)		-	1474h to 147Ch	05236 to 05244	—	
C121		[O] input zero calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	147Dh	05245	0 to 65530	1
C122		[OI] input zero calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	147Eh	05246	0 to 65530	1

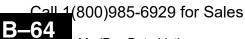

							_	
							vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.		
C123	—	[O2] input zero calibration	R/W	0. to 9999., 1000 to 6553 (10000 to 65530)	147Fh	05247	0 to 65530	1
_		(Reserved)	_	—	1480h to 1485h	05248 to 05253	—	_
C130	—	Term. [11] ON-delay time	R/W	0.0 to 100.0 (seconds)	1486h	05254	0 to 1000	0.1 sec
C131	_	Term. [11] OFF-delay time	R/W	0.0 to 100.0 (seconds)	1487h	05255	0 to 1000	0.1 sec
C132		Term. [12] ON-delay time	R/W	0.0 to 100.0 (seconds)	1488h	05256	0 to 1000	0.1 sec
C133	_	Term. [12] OFF-delay time	R/W	0.0 to 100.0 (seconds)	1489h	05257	0 to 1000	0.1 sec
C134	_	Term. [13] ON-delay time	R/W	0.0 to 100.0 (seconds)	148Ah	05258	0 to 1000	0.1 sec
C135	—	Term. [13] OFF-delay time	R/W	0.0 to 100.0 (seconds)	148Bh	05259	0 to 1000	0.1 sec
C136	_	Term. [14] ON-delay time	R/W	0.0 to 100.0 (seconds)	148Ch	05260	0 to 1000	0.1 sec
C137	_	Term. [14] OFF-delay time	R/W	0.0 to 100.0 (seconds)	148Dh	05261	0 to 1000	0.1 sec
C138	_	Term. [15] ON-delay time	R/W	0.0 to 100.0 (seconds)	148Eh	05262	0 to 1000	0.1 sec
C139	_	Term. [15] OFF-delay time	R/W	0.0 to 100.0 (seconds)	148Fh	05263	0 to 1000	0.1 sec
C140	-	Relay output ON-delay time	R/W	0.0 to 100.0 (seconds)	1490h	05264	0 to 1000	0.1 sec
C141	-	Relay output OFF-delay time	R/W	0.0 to 100.0 (seconds)	1491h	05265	0 to 1000	0.1 sec
C142		Logic output 1 function A	R/W	All programmable output	1492h	05266	_	_
C143	—	Logic output 1 function B	R/W	functions available (except LOG1 to LOG6)	1493h	05267		
C144	—	Logic output 1 operator	R/W	00AND 01OR 02XOR (exclusive OR)	1494h	05268	0, 1, 2	_
C145	_	Logic output 2 function A	R/W	All programmable output	1495h	05269		_
C146		Logic output 2 function B	R/W	functions available (except	1496h	05270		
C147	—	Logic output 2 operator	R/W	LOG1 to LOG6) 00AND 01OR	1497h	05271	0, 1, 2	_
a t t =	-	T	D *	02XOR (exclusive OR)	1.10	0.5255		
C148	-	Logic output 3 function A	R/W	All programmable output functions available (except	1498h	05272	—	_
C149	-	Logic output 3 function B	R/W	LOG1 to LOG6)	1499h	05273		
C150	_	Logic output 3 operator	R/W	00AND 01OR 02XOR (exclusive OR)	149Ah	05274	0, 1, 2	_
C151	—	Logic output 4 function A	R/W	All programmable output	149Bh	05275	_	
C152	—	Logic output 4 function B	R/W	functions available (except LOG1 to LOG6)	149Ch	05276		
C153	-	Logic output 4 operator	R/W	00AND 01OR 02XOR (exclusive OR)	149Dh	05277	0, 1, 2	
C154	_	Logic output 5 function A	R/W	All programmable output	149Eh	05278		_
C155	_	Logic output 5 function B	R/W	functions available (except LOG1 to LOG6)	149Fh	05279		

SJ7002 Inverter

		Holding Reg	isters, "	C" Group Intelligent Termina	al Functio	ons		
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.	Kange	Res.
C156	-	Logic output 5 operator	R/W	00 . AND 01 . OR 02 . XOR (exclusive OR)	14A0h	05280	0, 1, 2	
C157	—	Logic output 6 function A	R/W	All programmable output	14A1h	05281		_
C158	—	Logic output 6 function B	R/W	functions available (except LOG1 to LOG6)	14A2h	05282		
C159	—	Logic output 6 operator	R/W	00 . AND 01 . OR 02 . XOR (exclusive OR)	14A3h	05283	0, 1, 2	_
C160	—	Terminal [1] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A4h	05284	0 to 200	2 ms
C161	—	Terminal [2] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A5h	05285	0 to 200	2 ms
C162	—	Terminal [3] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A6h	05286	0 to 200	2 ms
C163		Terminal [4] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A7h	05287	0 to 200	2 ms
C164		Terminal [5] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A8h	05288	0 to 200	2 ms
C165		Terminal [6] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14A9h	05289	0 to 200	2 ms
C166	—	Terminal [7] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14AA h	05290	0 to 200	2 ms
C167	-	Terminal [8] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14ABh	05291	0 to 200	2 ms
C168	—	Terminal [FW] input response time setting	R/W	0. to 200. (x 2 milliseconds)	14ACh	05292	0 to 200	2 ms
C169		Multi-speed position deter- mination time	R/W	0. to 200. (x 2 milliseconds)	14AD h	05293	0 to 200	2 ms
		(Reserved)		_	14AEh to 1500h	05294 to 05376	_	

Call 1(800)985-6929 for Sales hitachiacdrive.com

		Holding Re	gisters,	"H" Group Motor Constants	Functior	IS		
						Netw	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		_
					hex	dec.	Range	Res.
H001		Auto-tuning setting	R/W	00Auto-tuning OFF 01Auto-tune 02Auto-tune (rotate motor)	1501h	05377	0, 1, 2	
H002		Motor data selection, 1st motor	R/W	00Standard motor data 01Auto-tuning data 02Adaptive tuning data	1502h	05378	0, 1, 2	
H202		Motor data selection, 2nd motor	R/W	00Standard motor data 01Auto-tuning data 02Adaptive tuning data	2502h	9474	0, 1, 2	_
H003	—	Motor capacity, 1st motor	R/W	0.20 to 75.00 (kW)	153h	05379	00 to 36	
H203	—	Motor capacity, 2nd setting	R/W	0.20 to 75.00 (kW)	2503h	9475	(see next table)	
H004		Motor poles setting, 1st motor	R/W	002 poles 014 poles 026 poles 038 poles 0410 poles	1504h	05380	0 to 4	
H204		Motor poles setting, 2nd motor	R/W	002 poles 014 poles 026 poles 038 poles 0410 poles	2504h	9476	0 to 4	
H005	Н	Motor speed constant, 1st	R/W	Motor proportional gain	1505h	05381	0 to 80000	0.001
H005	L	motor	R/W	constant, factory set	1506h	05382		
H205	Н	Motor speed constant, 2nd	R/W	Motor proportional gain	2505h	9477	0 to 80000	0.001
H205	L	motor	R/W	constant, factory set	2506h	9478		
H006	_	Motor stabilization constant	R/W	0. to 255. (factory set)	1507h	05383	0 to 255	1
_		(Reserved)		_	1508h to 1514h	05384 to 05396	_	_
H206	—	Motor stabilization constant, 2nd motor	R/W	0. to 255. (factory set)	2507h	09479	0 to 255	1
		(Reserved)	_	—	2508h to 2514h	09480 to 09292	_	_
H306	—	Motor stabilization constant, 3rd motor	R/W	0. to 255. (factory set)	3507h	13575	0 to 255	1
		(Reserved)	_	—	3508h to end	13576 to end	—	
H020	Н	Motor constant R1, 1st	R/W	0.001 to 9.999, 10.00 to	1515h	05397	1 to 65530	0.001 Ω
H020	L	motor	R/W	65.53 (Ohms)	1516h	05398		
H220	Н	Motor constant R1, 2nd	R/W	0.001 to 9.999, 10.00 to	2515h	09293	1 to 65530	0.001 Ω
H220	L	motor	R/W	65.53 (Ohms)	2516h	09294		
H021	Н	Motor constant R2, 1st	R/W	0.001 to 9.999, 10.00 to	1517h	05399	1 to 65530	0.001 Ω
H021	L	motor	R/W	65.53 (Ohms)	1518h	05400		

			- ,	"H" Group Motor Constan		5		
						Netv	work Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Dener	Dee
					hex	dec.	Range	Res.
H221	Н	Motor constant R2, 2nd	R/W	0.001 to 9.999, 10.00 to	2517h	09495	1 to 65530	0.001 Ω
H221	L	motor	R/W	65.53 (Ohms)	2518h	09496		
H022	Н	Motor constant L, 1st	R/W	0.01 to 99.99,	1519h	05401	1 to 65530	0.01 mH
H022	L	motor	R/W	100.0 - 655.3 (mH)	151Ah	05402		
H222	Η	Motor constant L, 2nd	R/W	0.01 to 99.99,	2519h	09497	1 to 65530	0.01 mH
H222	L	motor	R/W	100.0 - 655.3 (mH)	251Ah	09498		
H023	Η	Motor constant Io	R/W	0.01 to 99.99,	151Bh	05403	1 to 65530	0.01 A
H023	L		R/W	100.0 - 655.3 (A)	151Ch	05404		
H223	Н	Motor constant Io, 2nd	R/W	0.01 to 99.99,	251Bh	09499	1 to 65530	0.01 A
H223	L	motor	R/W	100.0 - 655.3 (A)	251Ch	09500		
H024	Н	Motor Constant J	R/W	0.001 to 9.999,	151Dh	05405	1 to	—
H024	L		R/W	10.00 to 99.99, 100.0 to 999.9,	151Eh	05406	9999000	
				1000 to 9999.				
—		(Reserved)	_	—	151Fh to	05407 to	—	—
					1523h	05411		
H224	Н	Motor constant J, 2nd	R/W	0.001 to 9.999,	251Dh	09501	1 to	_
H224	L	motor	R/W	10.00 to 99.99, 100.0 to 999.9, 1000 to 9999.	251Eh	09502	9999000	
_		(Reserved)		_	221Fh	09503	_	_
					to 2523h	to 09507		
H030	Н	Auto constant R1, 1st	R/W	0.001 to 9.999,	1524h	05412	1 to 65530	0.001 Ω
H030	L	motor	R/W	10.00 to 65.53 (Ohms)	1525h	05413	-	
H230	Н	Auto constant R1, 2nd	R/W	0.001 to 9.999,	2524h	09508	1 to 65530	0.001 Ω
H230	L	motor	R/W	10.00 to 65.53 (Ohms)	2525h	09509	-	
H031	Н	Auto constant R2, 1st	R/W	0.001 to 9.999,	1526h	05414	1 to 65530	0.001 Ω
H031	L	motor	R/W	10.00 to 65.53 (Ohms)	1527h	05415	1	
H231	Н	Auto constant R2, 2nd	R/W	0.001 to 9.999,	2526h	09510	1 to 65530	0.001 Ω
H231	L	motor	R/W	10.00 to 65.53 (Ohms)	2527h	09511	1	
H032	Н	Auto constant L, 1st motor	R/W	0.01 to 99.99,	1528h	05416	1 to 65530	0.01 mH
H032	L		R/W	100.0 to 655.3 (mH)	1529h	05417	1	
H232	Н	Auto constant L, 2nd	R/W	0.01 to 99.99,	2528h	09512	1 to 65530	0.01 mH
H232	L	motor	R/W	100.0 to 655.3 (mH)	2529h	09513	1	
H033	Н	Auto constant Io, 1st motor	R/W	0.01 to 99.99,	152Ah	05418	1 to 65530	0.01 mH
H033	L		R/W	100.0 to 655.3 (mH)	152Bh	05419	1	
H233	Н	Auto constant Io, 2nd	R/W	0.01 to 99.99,	252Ah	09514	1 to 65530	0.01 mH
H233	L	motor	R/W	100.0 to 655.3 (mH)	252Bh	09515	1	

		Holding Re	gisters,	"H" Group Motor Consta	ants Function	IS		
						Netv	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister	Range	Res.
					hex	dec.	Kange	Kes.
H034	Н	Auto constant J, 1st motor	R/W	0.001 to 9.999,	152Ch	05420	1 to	0.001
H034	L		R/W	10.00 to 99.99, 100.0 to 999.9, 1000 to 9999.	152Dh	05421	9999000	
H234	Н	Auto constant J, 1st motor	R/W	0.001 to 9.999,	252Ch	09516	1 to	0.001
H234	L		R/W	10.00 to 99.99, 100.0 to 999.9, 1000 to 9999.	252Dh	09517	9999000	
		(Reserved)	_		152Eh	05422	_	_
					to 153Ch	to 05436		
H050	-	PI proportional gain for 1st motor	R/W	0.0 to 999.9, 1000.	153Dh	05437	0 to 10000	0.1 %
H250	-	PI proportional gain for 2nd motor	R/W	0.0 to 999.9, 1000.	253Dh	09533	0 to 10000	0.1 %
H051	—	PI integral gain for 1st motor	R/W	0.0 to 999.9, 1000.	153Eh	05438	0 to 10000	0.1 %
H251	—	PI integral gain for 2nd motor	R/W	0.0 to 999.9, 1000.	253Eh	09534	0 to 10000	0.1 9
H052	—	P proportional gain setting for 1st motor	R/W	0.01 to 10.00	153Fh	05439	0 to 1000	0.01
		(Reserved)	_	—	1540h to 1546h	05440 to 05446	—	_
H252	—	P proportional gain setting for 2nd motor	R/W	0.01 to 10.00	253Fh	09535	0 to 1000	0.01
_		(Reserved)		_	2540h to 2546h	09536 to 09542	—	_
H060	_	Zero LV limit for 1st motor	R/W	0.0 to 100.0	1547h	05447	0 to 1000	0.1 %
H260	—	Zero LV limit for 2nd motor	R/W	0.0 to 100.0	2547h	09543	0 to 1000	0.1 %
H061	—	Zero LV starting boost current for 1st motor	R/W	0. to 50. (%)	1548h	05448	0 to 50	1 %
—		(Reserved)	_	—	1549h to 1550h	05449 to 05456	—	_
H261	-	Zero LV starting boost current for 2nd motor	R/W	0. to 50. (%)	2548h	09544	0 to 50	1 %
—		(Reserved)		_	2549h to 3102h	09545 to 12546	—	_
H070	_	Terminal selection PI proportional gain setting	R/W	0.0 to 999.9, 1000	1551h	05457	0 to 10000	0.1 %
H071	-	Terminal selection PI integral gain setting	R/W	0.0 to 999.9, 1000	1552h	05458	0 to 10000	0.1 %
H072	-	Terminal selection P proportional gain setting	R/W	0.00 to 10.00	1553h	05459	0 to 1000	0.01

Call 1(800)985-6929 for Sales

		Holding Re	gisters,	"H" Group Motor Constants	Function	IS		
						Netw	vork Data	
Func. Co	ode	Name	R/W	Description	Register		Range	Res.
					hex	dec.	Kange	Res.
H073	—	Gain switching time	R/W	0. to 999. (milliseconds)	1554h	05460	0 to 9999	1 msec.
_		(Reserved)		_	1555h to 1600h	05461 to 05632	_	

Use the codes in the table below to return parameters for H003 and H203 (motor capacity selection).

Code Data	00	01	02	03	04	05	06	07	08	09	10
Japan or U.S.A. mode (B085 = 00 or 02)	0.2 kW	—	0.4	—	0.75	—	1.5	2.2	—	3.7	
EU mode (B085=01)	0.2 kW	0.37	_	0.55	0.75	1.1	1.5	2.2	3.0	_	4.0
Code Data	11	12	13	14	15	16	17	18	19	20	21
Japan or U.S.A. mode (B085 = 00 or 02)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
EU mode (B085=01)	5.5 kW	7.5	11	15	18.5	22	30	37	45	55	75
Code Data	22	23	24	25	26	27	28	29	30	31	32
Japan or U.S.A. mode (B085 = 00 or 02)	90 kW	110	132	150	160	185	200	220	250	280	300
EU mode (B085=01)	90 kW	110	132	150	160	185	300	220	250	280	300
Code Data	33	34	35	36							
Japan or U.S.A. mode (B085 = 00 or 02)	315 kW	340	355	400							
EU mode (B085=01)	315 kW	340	355	400							

						Net	vork Data	
Func. C	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
P001	-	Operation mode on expan- sion card 1 error	R/W	00Trip (stop motor) 01Continuous operation	1601h	05633	0, 1	—
P002	-	Operation mode on expan- sion card 2 error	R/W	00Trip (stop motor) 01Continuous operation	1602h	05634	0, 1	_
	•	(Reserved)	—	—	1603h to 160Ah	05635 to 05642	_	_
P011	-	Encoder pulse-per-revolu- tion (PPR) setting	R/W	128 to 65000 (pulses per revolution)	160Bh	05643	128 to 65000	1
P012		Control pulse setting	R/W	00Automatic Speed Regulation (ASR) mode 01Automatic Position Regulation (APR) mode 02Absolute Position Control 03High-resolution Absolute Position Control	160Ch	05644	0, 1	_
P013	-	Pulse line mode setting	R/W	00Quadrature mode 01Count and direction 02Separate forward and reverse pulse trains	160Dh	05645	0, 1, 2	_
P014	—	Home search stop position setting	R/W	0. to 4095. (pulses)	160Eh	05646	0 to 4095	1 pulse
P015	_	Home search speed setting	R/W	Start frequency to maximum frequency (up to 120.0) (Hz)	160Fh	05647	0 to 12000	0.01 H
P016	_	Home search direction setting	R/W	00Forward 01Reverse	1610h	05648	0, 1	_
P017	_	Home search completion range setting	R/W	0. to 9999., 1000 (10,000) (pulses)	1611h	05649	0 to 10000	1
P018	-	Home search completion delay time setting	R/W	0.00 to 9.99 (seconds)	1612h	05650	0 to 999	0.01 se
P019	—	Electronic gear set position selection	R/W	00Position feedback side 01Position command side	1613h	05651	0, 1	—
P020	-	Electronic gear ratio numerator setting	R/W	0. to 9999.	1614h	05652	1 to 9999	—
P021	—	Electronic gear ratio denominator setting	R/W	1 to 9999	1615h	05653	1 to 9999	—
P022		Feed-forward gain setting	R/W	0.00 to 99.99, 100.0 to 655.3	1616h	05654	0 to 65535	0.01
P023	_	Position loop gain setting	R/W	0.00 to 99.99, 100.0	1617h	05655	0 to 10000	0.01
P024	—	Position bias setting	R/W	-204 (-2048) / -999. to 2048	1618h	05656	-2048 to 2048	1
P025	-	Temperature compensa- tion thermistor enable	R/W	00No compensation 01With compensation	1619h	05657	0, 1	
P026	_	Over-speed error detection level setting	R/W	0.0 to 150.0 (%)	161Ah	05658	0 to 1500	0.1 %
P027	-	Speed deviation error detection level setting	R/W	0.00 to 99.99, 100.0 to 120.0 (Hz)	161Bh	05659	0 to 12000	0.01 H

Call 1(800)985-6929 for Sales

sales@hitachiacdrive.com

						Netw	vork Data	
Func. Co	ode	Name	R/W	Description	Reg	ister		
					hex	dec.	Range	Res.
P028	-	Numerator of motor gear ratio	R/W	0. to 9999.	161Ch	05660	1 to 9999	1
P029	-	Denominator of motor gear ratio	R/W	1 to 9999	161Dh	05661	1 to 9999	1
		(Reserved)	_	—	161Eh	05662	—	_
P031	_	Accel/decel time input selection	R/W	00 . Inverter 01 . Expansion card 1 02 . Expansion card 2	161Fh	05663	0, 1, 2	_
P032	_	Positioning command input selection	R/W	00 . Inverter 01 . Expansion card 1 02 . Expansion card 2	1620h	05664	0, 1, 2	_
P033		Torque command input selection	R/W	00. [O] terminal 01. [OI] terminal 02. [O2] terminal 03. Inverter keypad (P034)	1621h	05665	0 to 3	
P034	-	Torque command setting	R/W	0. to 200. (%)	1622h	05666	0 to 180	1 %
P035		Torque command polarity selection	R/W	00 . Indicated by signal polarity 01 . Depends on motor direction	1623h	05667	0, 1	_
P036	-	Torque bias mode	R/W	00.Disable 01.Inverter keypad (P037) 02.[O2] terminal input	1624h	05668	0, 1, 2	
P037	—	Torque bias value	R/W	-200. to 200. (%)	1625h	05669	0 to 180	1
P038	_	Torque bias polarity selection	R/W	00 . Indicated by polarity 01 . Depends on motor direction	1626h	05670	0, 1	_
P039	Н	Forward maximum speed	R/W	0.00 to Maximum frequency	1627h	05671	0 to max.	0.01 H
P039	L	for torque-controlled operation	R/W	(Hz)	1628h	05672	frequency (up to 40000)	
P040	Н		R/W	0.00 to Maximum frequency	1629h	05673	0 to max.	0.01 H
P040	L	for torque-controlled operation	R/W	(Hz)	162Ah	05674	frequency (up to 40000)	
_	•	(Reserved)	—	—	162Bh	05675	—	
_		(Reserved)	—	—	162Ch	05676	—	-
_		(Reserved)	—	—	162Dh	05677	—	-
P044		DeviceNet comm watchdog timer	R/W	0.00 to 99.99 (seconds)	162Eh	05678	0 to 9999	0.01 se
P045		Inverter action on DeviceNet comm error	R/W	00. Trip 01. Decelerate and trip 02. Hold last speed 03. Free run stop 04. Decelerate and stop	162Fh	05679	0 to 4	
P046	-	DeviceNet polled I/O: Output instance number	R/W	20, 21, 100	1630h	05680	20, 21, 100	-

		Holding Ro				••	1.5	
Func. Co	ada	Name	R/W	Description	Bog		vork Data	
runc. Co	bue	Ivanie	K/ W	Description	hex	ister dec.	Range	Res.
P047	1-	DeviceNet polled I/O:	R/W	70, 71, 101	1631h	05681	70, 71,	
		Input instance number					101	
P048		Inverter action on DeviceNet idle mode	R/W	00Trip 01Decelerate and trip 02Hold last speed 03Free run stop 04Decelerate and stop	1632h	05682	0 to 4	_
P049	-	Motor poles setting for RPM	R/W	00 to 38 (even numbers only)	1633h	05683	0 to 19	1 = 2 poles
_	—	(Reserved)	_	—	1634h	05684	—	_
					to 1638h	to 05688		
P055	1_	Pulse train frequency span	R/W	1.0 to 50.0 (kHz)	1639h	05689	10 to 500	0.1 kHz
P056	-	Pulse train frequency time constant	R/W	0.01 to 2.00 (seconds)	163Ah	05690	1 to 200	0.01 sec
P057	-	Pulse train frequency bias	R/W	-100. to 100. (%)	163Bh	05691	-100 to 100	1 %
P058		Pulse train frequency limit	R/W	0. to 100. (%)	163Ch	05692	0 to 100	1 %
		(Reserved)	—	—	163Dh	05693	—	_
P060	Н	Multi-stage position	R/W	Reverse side to forward side	163Eh	05694	—	_
P060	L	setting 0	R/W	(upper four digits including sign "–")	163Fh	05695		
P061	Н	Multi-stage position	R/W	Reverse side to forward side	1640h	05696	—	—
P061	L	setting 1	R/W	(upper four digits including sign "–")	1641h	05697		
P062	Н	Multi-stage position	R/W	Reverse side to forward side	1642h	05698		_
P062	L	setting 2	R/W	(upper four digits including sign "–")	1643h	05699		
P063	Н	Multi-stage position	R/W	Reverse side to forward side	1644h	05700		_
P063	L	setting 3	R/W	(upper four digits including sign "-")	1645h	05701	-	
P064	Н	Multi-stage position	R/W	Reverse side to forward side	1646h	05702		_
P064	L	setting 4	R/W	(upper four digits including sign "–")	1647h	05703	1	
P065	Н	Multi-stage position	R/W	Reverse side to forward side	1648h	05704		
P065	L	setting 5	R/W	(upper four digits including sign "–")	1649h	05705	-	
P066	Н	Multi-stage position	R/W	Reverse side to forward side	164Ah	05706		
P066	L	setting 6	R/W	(upper four digits including sign "–")	164Bh	05707	-	
P067	Н	Multi-stage position	R/W	Reverse side to forward side	164Ch	05708		
P067	L	setting 7	R/W	(upper four digits including sign "–")	164Dh	05709		
P068	-	Home position mode selection	R/W	00Low 01High 02High 2	164Eh	05710	0, 1, 2	-
P069	-	Home position direction selection	R/W	00Forward 01Reverse	164Fh	05711	0, 1	—

Call 1(800)985-6929 for Sales

		Holding R	egisters	, "P" Group Expansion Card	Function	s		
Func. Code			R/W	Description	Network Data			
		Name			Register		Range	Dec
					hex dec.			Res.
P070	-	Low speed homing frequency	R/W	0.00 to 10.00 (Hz)	1650h	05712	0 to 1000	0.01 Hz
P071		High speed homing frequency	R/W	0.00 to 99.99 / 100.0 to maximum frequency setting, 1st motor (Hz)	1651h	05713	0 to 40000	0.01 Hz
P072	Н	1 0	R/W	0 to 536870912 (when P012	1652h	05714	See	1
P072	L	setting	R/W	= 02), 0 to 2147483647 (when P013 = 03) (upper four digits)	1653h	05715	descrip- tion	
P073	Н	Reverse position range	R/W	0 to 536870912 (when P012	1654h	05716	See	1
P073	L		R/W	= 02), 0 to 2147483647 (when P013 = 03) (upper four digits)	1655h	05717	descrip- tion	
		(Reserved)	_	_	1656h to 1665h	05718 to 05733	_	_
P100	-	Easy sequence parameter (U00)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1666h	05734	0 to 65530	1
P101	—	Easy sequence parameter (U01)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1667h	05735	0 to 65530	1
P102	—	Easy sequence parameter (U02)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1668h	05736	0 to 65530	1
P103	—	Easy sequence parameter (U03)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1669h	05737	0 to 65530	1
P104	—	Easy sequence parameter (U04)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Ah	05738	0 to 65530	1
P105	-	Easy sequence parameter (U05)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Bh	05739	0 to 65530	1
P106	—	Easy sequence parameter (U06)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Ch	05740	0 to 65530	1
P107	—	Easy sequence parameter (U07)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Dh	05741	0 to 65530	1
P108	—	Easy sequence parameter (U08)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Eh	05742	0 to 65530	1
P109	-	Easy sequence parameter (U09)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	166Fh	05743	0 to 65530	1
P110	—	Easy sequence parameter (U10)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1670h	05744	0 to 65530	1
P111	—	Easy sequence parameter (U11)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1671h	05745	0 to 65530	1
P112	-	Easy sequence parameter (U12)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1672h	05746	0 to 65530	1
P113	-	Easy sequence parameter (U13)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1673h	05747	0 to 65530	1
P114	-	Easy sequence parameter (U14)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1674h	05748	0 to 65530	1
P115	-	Easy sequence parameter (U15)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1675h	05749	0 to 65530	1

					Network Data			
Func. Code		Name	R/W	Description	Register		D	P
					hex	dec.	Range	Res.
P116	—	Easy sequence parameter (U16)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1676h	05750	0 to 65530	1
P117	-	Easy sequence parameter (U17)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1677h	05751	0 to 65530	1
P118	-	Easy sequence parameter (U18)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1678h	05752	0 to 65530	1
P119	—	Easy sequence parameter (U19)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1679h	05753	0 to 65530	1
P120	-	Easy sequence parameter (U20)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Ah	05754	0 to 65530	1
P121	-	Easy sequence parameter (U21)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Bh	05755	0 to 65530	1
P122	-	Easy sequence parameter (U22)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Ch	05756	0 to 65530	1
P123	-	Easy sequence parameter (U23)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Dh	05757	0 to 65530	1
P124	-	Easy sequence parameter (U24)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Eh	05758	0 to 65530	1
P125	-	Easy sequence parameter (U25)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	167Fh	05759	0 to 65530	1
P126	-	Easy sequence parameter (U26)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1680h	05760	0 to 65530	1
P127	-	Easy sequence parameter (U27)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1681h	05761	0 to 65530	1
P128	-	Easy sequence parameter (U28)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1682h	05762	0 to 65530	1
P129	-	Easy sequence parameter (U29)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1683h	05763	0 to 65530	1
P130	—	Easy sequence parameter (U30)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1684h	05764	0 to 65530	1
P131	—	Easy sequence parameter (U31)	R/W	0. to 9999., 1000 to 6553 (10000 to 65535)	1685h	05765	0 to 65530	1
		(Reserved)	-	_	1686h to 2102h	05766 to 08450	—	_

B

Drive Parameter Settings Tables



In This Appendix	page
- Introduction	<u>2</u>
— Parameter Settings for Keypad Entry	<u>2</u>

Introduction

Introduction


This appendix lists the user-programmable parameters for the SJ7002 series inverters and the default values for European, U.S. and Japanese product types. The right-most column of the tables is blank so you can record values you have changed from the default. This involves just a few parameters for most applications.

Parameter Settings for Keypad Entry

SJ7002 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model

MFG. No.

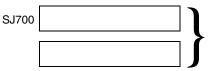

This information is printed on the specification label located on the right side of the inverter.

Main Profile Parameters

	"F" Group Parameters	I	User			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting	
F001	Output frequency setting	0.00	0.00	0.00		
F002	Acceleration (1) time setting	30.0	30.0	30.0		
F202	Acceleration (1) time setting, 2nd motor	30.0	30.0	30.0		
F302	Acceleration (1) time setting, 3rd motor	30.0	30.0	30.0		
F003	Deceleration (1) time setting	30.0	30.0	30.0		
F203	Deceleration (1) time setting, 2nd motor	30.0	30.0	30.0		
F303	Deceleration (1) time setting, 3rd motor	30.0	30.0	30.0		
F004	Keypad Run key routing	00	00	00		

C–3

Standard
Functions

	"A" Group Parameters	I	Default Setting	g	User
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting
A001	Frequency source setting	01	01	02	
A002	Run command source setting	01	01	02	
A003	Base frequency setting	50.	60.	60.	
A203	Base frequency setting, 2nd motor	50.	60.	60.	
A303	Base frequency setting, 3rd motor	50.	60.	60.	
A004	Maximum frequency setting	50.	60.	60.	
A204	Maximum frequency setting, 2nd motor	50.	60.	60.	
A304	Maximum frequency setting, 3rd motor	50.	60.	60.	
A005	[AT] selection	00	00	00	
A006	[O2] selection	03	03	03	
A011	[O]–[L] input active range start frequency	0.00	0.00	0.00	
A012	[O]–[L] input active range end frequency	0.00	0.00	0.00	
A013	[O]–[L] input active range start voltage	0.	0.	0.	
A014	[O]–[L] input active range end voltage	100.	100.	100.	
A015	[O]–[L] input start frequency enable	01	01	01	
A016	External frequency filter time const.	8.	8.	8.	
A017	Easy sequence function enable	00	00	00	
A019	Multi-speed operation selection	00	00	00	
A020	Multi-speed frequency setting	0.00	0.00	0.00	
A220	Multi-speed frequency setting, 2nd motor	0.00	0.00	0.00	
A320	Multi-speed frequency setting, 3rd motor	0.00	0.00	0.00	
A021	Multi-speed 1 setting	0.00	0.00	0.00	
A022	Multi-speed 2 setting	0.00	0.00	0.00	
A023	Multi-speed 3 setting	0.00	0.00	0.00	
A024	Multi-speed 4 setting	0.00	0.00	0.00	
A025	Multi-speed 5 setting	0.00	0.00	0.00	
A026	Multi-speed 6 setting	0.00	0.00	0.00	
A027	Multi-speed 7 setting	0.00	0.00	0.00	
A028	Multi-speed 8 setting	0.00	0.00	0.00	
A029	Multi-speed 9 setting	0.00	0.00	0.00	
A030	Multi-speed 10 setting	0.00	0.00	0.00	
A031	Multi-speed 11 setting	0.00	0.00	0.00	
A032	Multi-speed 12 setting	0.00	0.00	0.00	
A033	Multi-speed 13 setting	0.00	0.00	0.00	

	"A" Group Parameters	Default Setting			User
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting
A034	Multi-speed 14 setting	0.00	0.00	0.00	
A035	Multi-speed 15 setting	0.00	0.00	0.00	
A038	Jog frequency setting	1.00	1.00	1.00	
A039	Jog stop mode	00	00	00	
A041	Torque boost method selection	00	00	00	
A241	Torque boost method selection, 2nd motor	00	00	00	
A042	Manual torque boost value	1.0	1.0	1.0	
A242	Manual torque boost value, 2nd motor	1.0	1.0	1.0	
A342	Manual torque boost value, 3rd motor	1.0	1.0	1.0	
A043	Manual torque boost frequency adjustment	5.0	5.0	5.0	
A243	Manual torque boost frequency adjustment, 2nd motor	5.0	5.0	5.0	
A343	Manual torque boost frequency adjustment, 3rd motor	5.0	5.0	5.0	
A044	V/F characteristic curve selection	00	00	00	
A244	V/F characteristic curve selection, 2nd motor	00	00	00	
A344	V/F characteristic curve selection, 3rd motor	00	00	00	
A045	V/f gain setting	100.	100.	100.	
A046	Automatic torque boost voltage gain	100.	100.	100.	
A246	Automatic torque boost voltage gain, 2nd motor	100.	100.	100.	
A047	Automatic torque boost slip gain	100.	100.	100.	
A247	Automatic torque boost slip gain, 2nd motor	100.	100.	100.	
A051	DC braking enable	00	00	00	
A052	DC braking frequency setting	0.50	0.50	0.50	
A053	DC braking wait time	0.0	0.0	0.0	
A054	DC braking force during deceleration	0.	0.	0.	
A055	DC braking time for deceleration	0.0	0.0	0.0	
A056	DC braking / edge or level detection for [DB] input	01	01	01	
A057	DC braking force for starting	0.	0.	0.	
A058	DC braking time for starting	0.0	0.0	0.0	
A059	DC braking carrier frequency setting	5.0	5.0	5.0	
A061	Frequency upper limit setting	0.00	0.00	0.00	
A261	Frequency upper limit setting, 2nd motor	0.00	0.00	0.00	
A062	Frequency lower limit setting	0.00	0.00	0.00	
A262	Frequency lower limit setting, 2nd motor	0.00	0.00	0.00	
A063, A065, A067	Jump (center) frequency setting	0.00	0.00	0.00	

C–4

Call 1(800)985-6929 for Sales

C–5

	"A" Group Parameters	I	Default Setting	g	- User Setting
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	
A064, A066, A068	Jump (hysteresis) frequency width setting	0.50	0.50	0.50	
A069	Acceleration stop frequency setting	0.00	0.00	0.00	
A070	Acceleration stop time frequency setting	0.0	0.0	0.0	
A071	PID Function Enable	00	00	00	
A072	PID proportional gain	1.0	1.0	1.0	
A073	PID integral time constant	1.0	1.0	1.0	
A074	PID derivative gain	0.0	0.0	0.0	
A075	PV scale conversion	1.00	1.00	1.00	
A076	PV source setting	00	00	00	
A077	Reverse PID action	00	00	00	
A078	PID output limit	0.00	0.00	0.00	
A079	PID feed forward select	00	00	00	
A081	AVR function select	00	00	02	
A082	AVR voltage select	230/400	230/460	200/400	
A085	Operation mode selection	00	00	00	
A086	Energy saving mode tuning	50.0	50.0	50.0	
A092	Acceleration (2) time setting	15.0	15.0	15.0	
A292	Acceleration (2) time setting, 2nd motor	15.0	15.0	15.0	
A392	Acceleration (2) time setting, 3rd motor	15.0	15.0	15.0	
A093	Deceleration (2) time setting	15.0	15.0	15.0	
A293	Deceleration (2) time setting, 2nd motor	15.0	15.0	15.0	
A393	Deceleration (2) time setting, 3rd motor	15.0	15.0	15.0	
A094	Select method to switch to Acc2/Dec2 profile	00	00	00	
A294	Select method to switch to Acc2/Dec2, 2nd motor	00	00	00	
A095	Acc1 to Acc2 frequency transition point	0.0	0.0	0.0	
A295	Acc1 to Acc2 frequency transition point, 2nd motor	0.0	0.0	0.0	
A096	Dec1 to Dec2 frequency transition point	0.0	0.0	0.0	
A296	Dec1 to Dec2 frequency transition point, 2nd motor	0.0	0.0	0.0	
A097	Acceleration curve selection	00	00	00	
A098	Deceleration curve setting	00	00	00	
A101	[OI]–[L] input active range start frequency	0.00	0.00	0.00	
A102	[OI]–[L] input active range end frequency	0.00	0.00	0.00	
A103	[OI]–[L] input active range start current	20.	20.	20.	
A104	[OI]–[L] input active range end current	100.	100.	100.	

	"A" Group Parameters	I	User		
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting
A105	[OI]–[L] input start frequency enable	01	01	01	
A111	[O2]–[L] input active range start frequency	0.00	0.00	0.00	
A112	[O2]–[L] input active range end frequency	0.00	0.00	0.00	
A113	[O2]–[L] input active range start voltage	-100.	-100.	-100.	
A114	[O2]–[L] input active range end voltage	100.	100.	100.	
A131	Acceleration curve constants setting	02	02	02	
A132	Deceleration curve constants setting	02	02	02	
A141	A input select for calculate function	02	02	02	
A142	B input select for calculate function	03	03	03	
A143	Calculation symbol	00	00	00	
A145	ADD frequency	0.00	0.00	0.00	
A146	ADD direction select	00	00	00	
A150	EL-S curve acceleration ratio 1	25.	25.	25.	
A151	EL-S curve acceleration ratio 2	25.	25.	25.	
A152	EL-S curve acceleration ratio 3	25.	25.	25.	
A153	EL-S curve acceleration ratio 4	25.	25.	25.	

C-7

Fine Tuning Functions

	"B" Group Parameters	I	Default Setting	g	T
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting
B001	Selection of restart mode	00	00	00	
B002	Allowable under-voltage power failure time	1.0	1.0	1.0	
B003	Retry wait time before motor restart	1.0	1.0	1.0	
B004	Instantaneous power failure / under-voltage trip alarm enable	00	00	00	
B005	Number of restarts on power failure / under-voltage trip events	00	00	00	
B006	Phase loss detection enable	00	00	00	
B007	Restart frequency threshold	0.00	0.00	0.00	
B008	Retry after trip select	00	00	00	
B009	Retry after undervoltage select	00	00	00	
B010	Retry count select after overvoltage or overcurrent	3	3	3	
B011	Retry wait time after trip	1.0	1.0	1.0	
B012	Electronic thermal setting (calculated within the inverter from current output)	Rated cu	irrent for each	inverter	
B212	Electronic thermal setting (calculated within the inverter from current output), 2nd motor	Rated current for each inverter			
B312	Electronic thermal setting (calculated within the inverter from current output), 3rd motor	Rated cu	urrent for each	inverter	
B013	Electronic thermal characteristic	01	01	00	
B213	Electronic thermal characteristic, 2nd motor	01	01	00	
B313	Electronic thermal characteristic, 3rd motor	01	01	00	
B015	Free setting, electronic thermal frequency (1)	0.	0.	0.	
B016	Free setting, electronic thermal current (1)	0.0	0.0	0.0	
B017	Free setting, electronic thermal frequency (2)	0.	0.	0.	
B018	Free setting, electronic thermal current (2)	0.0	0.0	0.0	
B019	Free setting, electronic thermal frequency (3)	0.	0.	0.	
B020	Free setting, electronic thermal current (3)	0.0	0.0	0.0	
B021	Overload restriction operation mode	01	01	01	
B022	Overload restriction setting	Rat	ted current x 1	.50	
B023	Deceleration rate at overload restriction	1.0	1.0	1.0	
B024	Overload restriction operation mode (2)	01	01	01	
B025	Overload restriction setting (2)	Rat	ted current x 1	.50	
B026	Deceleration rate at overload restriction (2)	1.00	1.00	1.00	
B027	Overcurrent suppression enable	01	01	01	
B028	Current limit for active frequency-matching restart	Ra	ited current x	1.0	

	"B" Group Parameters	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting
B029	Scan time constant for active freq. matching	0.50	0.50	0.50	
B030	Restart freq. select for active freq. matching	00	00	00	
B031	Software lock mode selection	01	01	01	
B034	Run/power-on warning time	0.	0.	0.	
B035	Rotational direction restriction	00	00	00	
B036	Reduced voltage start selection	06	06	06	
B037	Function code display restriction	04	04	04	
B038	Initial display selection	01	01	01	
B039	Automatic user parameter function enable	00	00	00	
B040	Torque limit selection	00	00	00	
B041	Torque limit (1) (forward-driving in 4-quadrant mode)	150.	150.	150.	
B042	Torque limit (2) (reverse-regenerating in 4-quadrant mode)	150.	150.	150.	
B043	Torque limit (3) (reverse-driving in 4-quadrant mode)	150.	150.	150.	
B044	Torque limit (4) (forward-regenerating in 4-quadrant mode)	150.	150.	150.	
B045	Torque limit LADSTOP enable	00	00	00	
B046	Reverse Run protection enable	00	00	00	
B050	Controller deceleration and stop on power loss	00	00	00	
B051	DC bus voltage trigger level during power loss	0.0	0.0	0.0	
B052	Over-voltage threshold during power loss	360.0/720.0	360.0/720.0	360.0/720.0	
B053	Deceleration time setting during power loss	1.00	1.00	1.00	
B054	Initial output frequency decrease during power loss	0.00	0.00	0.00	
B055	Proportional gain setting for non-stop operation at power loss	0.20	0.20	0.20	
B056	Integral time setting for non-stop operation at power loss	.100	.100	.100	
B060	[O] input max. limit level of window comparator	100	100	100	
B061	[O] input min. limit level of window comparator	0	0	0	
B062	[O] input hysteresis width of window comparator	0	0	0	
B063	[OI] input max. limit level of window comparator	100	100	100	
B064	[OI] input min. limit level of window comparator	0	0	0	
B065	[OI] input hysteresis width of window comparator	0	0	0	
B066	[O2] input maximum limit level of window comparator	100	100	100	
B067	[O2] input minimum limit level of window comparator	-100	-100	-100	

C–9

	"B" Group Parameters	I	g	User	
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting
B068	[O2] input hysteresis width of window comparator	0	0	0	
B070	[O] input disconnect threshold	255(no)	255(no)	255(no)	
B071	[OI] input disconnect threshold	255(no)	255(no)	255(no)	
B072	[O2] input disconnect threshold	127(no)	127(no)	127(no)	
B078	Clear cumulative input power data	00	00	00	
B079	Cumulative input power display gain setting	1	1	1	
B082	Start frequency adjustment	0.50	0.50	0.50	
B083	Carrier frequency setting	3.0 2.1 1.9	3.0 2.1 1.9	3.0 2.1 1.9	
B084	Initialization mode (parameters or trip history)	00	00	00	
B085	Country code for initialization	01	02	00	
B086	Frequency scaling conversion factor	1.0	1.0	1.0	
B087	STOP key enable	00	00	00	
B088	Restart mode after FRS	00	00	00	
B089	Automatic carrier frequency reduction				
B090	Dynamic braking usage ratio	0.0	0.0	0.0	
B091	Stop mode selection	00	00	00	
B092	Cooling fan control	00	00	00	
B095	Dynamic braking control	00	00	00	
B096	Dynamic braking activation level	360/720	360/720	360/720	
B098	Thermistor for thermal protection control	00	00	00	
B099	Thermal protection level setting	3000.	3000.	3000.	
B100	Free-setting V/f frequency (1)	0.	0.	0.	
B101	Free-setting V/f voltage (1)	0.0	0.0	0.0	
B102	Free-setting V/f frequency (2)	0.	0.	0.	
B103	Free-setting V/f voltage (2)	0.0	0.0	0.0	
B104	Free-setting V/f frequency (3)	0.	0.	0.	
B105	Free-setting V/f voltage (3)	0.0	0.0	0.0	
B106	Free-setting V/f frequency (4)	0.	0.	0.	
B107	Free-setting V/f voltage (4)	0.0	0.0	0.0	
B108	Free-setting V/f frequency (5)	0.	0.	0.	
B109	Free-setting V/f voltage (5)	0.0	0.0	0.0	
B110	Free-setting V/f frequency (6)	0.	0.	0.	
B111	Free-setting V/f voltage (6)	0.0	0.0	0.0	
B112	Free-setting V/f frequency (7)	0.	0.	0.	
B113	Free-setting V/f voltage (7)	0.0	0.0	0.0	

	"B" Group Parameters	I	T		
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting
B120	Brake Control Enable	00	00	00	
B121	Brake Wait Time for Release	0.00	0.00	0.00	
B122	Brake Wait Time for Acceleration	0.00	0.00	0.00	
B123	Brake Wait Time for Stopping	0.00	0.00	0.00	
B124	Brake Wait Time for Confirmation	0.00	0.00	0.00	
B125	Brake Release Frequency Setting	0.00	0.00	0.00	
B126	Brake Release Current Setting	Rated cu	urrent for each	inverter	
B127	Braking frequency	0.00	0.00	0.00	
B130	Over-voltage LADSTOP enable	00	00	00	
B131	Over-voltage LADSTOP level	380/760	380/760	380/760	
B132	Acceleration and deceleration rate at overvoltage suppression	1.0	1.0	1.0	
B133	Overvoltage suppression proportional gain	0.50	0.50	0.50	
B134	Overvoltage suppression integral time	0.060	0.060	0.060	

Intelligent Terminal Functions

	"C" Group Parameters	I	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
C001	Terminal [1] function	18	18	18		
C002	Terminal [2] function	16	16	16		
C003	Terminal [3] function	06	06	06		
C004	Terminal [4] function	11	11	11		
C005	Terminal [5] function	09	09	09		
C006	Terminal [6] function	03	13	03		
C007	Terminal [7] function	02	02	02		
C008	Terminal [8] function	01	01	01		
C011	Terminal [1] active state	00	00	00		
C012	Terminal [2] active state	00	00	00		
C013	Terminal [3] active state	00	00	00		
C014	Terminal [4] active state	00	00	00		
C015	Terminal [5] active state	00	00	00		
C016	Terminal [6] active state	00	00	00		
C017	Terminal (7) active state	00	00	00		
C018	Terminal [8] active state	00	00	00		

	"C" Group Parameters	I	Default Setting		
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting
C019	Terminal [FW] active state	00	00	00	
C021	Terminal [11] function	01	01	01	
C022	Terminal [12] function	00	00	00	
C023	Terminal [13] function	03	03	03	
C024	Terminal [14] function	07	07	07	
C025	Terminal [15] function	08	08	08	
C026	Alarm relay terminal function	05	05	05	
C027	[FM] signal selection	00	00	00	
C028	[AM] signal selection	00	00	00	
C029	[AMI] signal selection	00	00	00	
C030	Digital current monitor reference value	Ra	ated current x	1.0	
C031	Terminal [11] active state	00	00	00	
C032	Terminal [12] active state	00	00	00	
C033	Terminal [13] active state	00	00	00	
C034	Terminal [14] active state	00	00	00	
C035	Terminal [15] active state	00	00	00	
C036	Alarm relay active state	01	01	01	
C038	Low current indication output mode select	01	01	01	
C039	Low current indication detection level	Ra	ated current x	1.0	
C040	Overload signal output mode	01	01	01	
C041	Overload level setting	Rated cu	urrent for each	inverter	
C042	Frequency arrival setting for accel.	0.00	0.00	0.00	
C043	Arrival frequency setting for decel.	0.00	0.00	0.00	
C044	PID deviation level setting	3.0	3.0	3.0	
C045	Frequency arrival setting for acceleration (2)	0.00	0.00	0.00	
C046	Frequency arrival setting for deceleration (2)	0.00	0.00	0.00	
C052	Maximum PID feedback (PV) data	0.00	0.00	0.00	
C053	Minimum PID feedback (PV) data	100.0	100.0	100.0	
C055	Over-torque (forward-driving) level setting	100.	100.	100.	
C056	Over-torque (reverse regenerating) level setting	100.	100.	100.	
C057	Over-torque (reverse driving) level setting	100.	100.	100.	
C058	Over-torque (forward regenerating) level setting	100.	100.	100.	
C061	Electronic thermal warning level setting	80.	80.	80.	
C062	Alarm code output	00	00	00	
C063	Zero speed detection level	0.00	0.00	0.00	
C064	Heatsink overheat warning level	120	120	120	

	"C" Group Parameters	l	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
C071	Communication speed selection	04	04	04		
C072	Node allocation	1.	1.	1.		
C073	Communication data length selection	7	7	7		
C074	Communication parity selection	00	00	00		
C075	Communication stop bit selection	1	1	1		
C076	Action upon communication error selection	02	02	02		
C077	Communication timeout before trip	0.00	0.00	0.00		
C078	Communication wait time	0.	0.	0.		
C079	Communication protocol select	00	00	00		
C081	[O] input span calibration	Factory set	Factory set	Factory set		
C082	[OI] input span calibration	Factory set	Factory set	Factory set		
C083	[O2] input span calibration	Factory set	Factory set	Factory set		
C085	Thermistor input tuning	105.0	105.0	105.0		
C086	[AM] terminal offset tuning	0.0	0.0	0.0		
C087	[AMI] terminal meter tuning	80.	80.	80.		
C088	[AMI] terminal offset tuning	Factory set	Factory set	Factory set		
C091	Debug mode enable	00	00	00	Do not edit	
C101	Up/Down memory mode selection	00	00	00		
C102	Reset mode selection	00	00	00		
C103	Restart mode after reset	00	00	00		
C105	FM gain adjustment	100.	100.	100.		
C106	AM gain adjustment	100.	100.	100.		
C107	AMI gain adjustment	100.	100.	100.		
C109	AM bias adjustment	0.	0.	0.		
C110	AMI bias adjustment	20.	20.	20.		
C111	Overload setting (2)	Rated curre	ent for each inv	verter model		
C121	[O] input zero calibration		Factory set			
C122	[OI] input zero calibration		Factory set			
C123	[O2] input zero calibration		Factory set			
C130	Terminal [11] ON-delay time	0.0	0.0	0.0		
C131	Terminal [11] OFF-delay time	0.0	0.0	0.0		
C132	Terminal [12] ON-delay time	0.0	0.0	0.0		
C133	Terminal [12] OFF-delay time	0.0	0.0	0.0		
C134	Terminal [13] ON-delay time	0.0	0.0	0.0		
C135	Terminal [13] OFF-delay time	0.0	0.0	0.0		
C136	Terminal [14] ON-delay time	0.0	0.0	0.0		

Call 1(800)985-6929 for Sales

	"C" Group Parameters	1	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
C137	Terminal [14] OFF-delay time	0.0	0.0	0.0		
C138	Terminal [15] ON-delay time	0.0	0.0	0.0		
C139	Terminal [15] OFF-delay time	0.0	0.0	0.0		
C140	Relay output ON-delay time	0.0	0.0	0.0		
C141	Relay output OFF-delay time	0.0	0.0	0.0		
C142	Logic output 1 function A	00	00	00		
C143	Logic output 1 function B	00	00	00		
C144	Logic output 1 operator	00	00	00		
C145	Logic output 2 function A	00	00	00		
C146	Logic output 2 function B	00	00	00		
C147	Logic output 2 operator	00	00	00		
C148	Logic output 3 function A	00	00	00		
C149	Logic output 3 function B	00	00	00		
C150	Logic output 3 operator	00	00	00		
C151	Logic output 4 function A	00	00	00		
C152	Logic output 4 function B	00	00	00		
C153	Logic output 4 operator	00	00	00		
C154	Logic output 5 function A	00	00	00		
C155	Logic output 5 function B	00	00	00		
C156	Logic output 5 operator	00	00	00		
C157	Logic output 6 function A	00	00	00		
C158	Logic output 6 function B	00	00	00		
C159	Logic output 6 operator	00	00	00		
C160	Terminal [1] input response time setting	1	1	1		
C161	Terminal [2] input response time setting	1	1	1		
C162	Terminal [3] input response time setting	1	1	1		
C163	Terminal [4] input response time setting	1	1	1		
C164	Terminal [5] input response time setting	1	1	1		
C165	Terminal [6] input response time setting	1	1	1		
C166	Terminal [7] input response time setting	1	1	1		
C167	Terminal [8] input response time setting	1	1	1		
C168	Terminal [FW] input response time setting	1	1	1		
C169	Multi-speed position determination time	0	0	0		

Motor Constants Functions

	"H" Group Parameters]	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
H001	Auto-tuning setting	00	00	00		
H002	Motor data selection, 1st motor	00	00	00		
H202	Motor data selection, 2nd motor	00	00	00		
H003	Motor capacity, 1st motor		Factory set			
H203	Motor capacity, 2nd setting		Factory set			
H004	Motor poles setting, 1st motor	4	4	4		
H204	Motor poles setting, 2nd motor	4	4	4		
H005	Motor speed constant, 1st motor	1.590	1.590	1.590		
H205	Motor speed constant, 2nd motor	1.590	1.590	1.590		
H006	Motor stabilization constant, 1st motor	100.	100.	100.		
H206	Motor stabilization constant, 2nd motor	100.	100.	100.		
H306	Motor stabilization constant, 3rd motor	100.	100.	100.		
H020	Motor constant R1, 1st motor	Accord	ding to inverte	r rating		
H220	Motor constant R1, 2nd motor	Accord	According to inverter rating			
H021	Motor constant R2, 1st motor	Accord	According to inverter rating			
H221	Motor constant R2, 2nd motor	Accord	According to inverter rating			
H022	Motor constant L, 1st motor	Accord	ding to inverte	r rating		
H222	Motor constant L, 2nd motor	Accord	ding to inverte	r rating		
H023	Motor constant Io	Accord	ding to inverte	r rating		
H223	Motor constant Io, 2nd motor	Accord	ding to inverte	r rating		
H024	Motor Constant J	Accord	ding to inverte	r rating		
H224	Motor constant J, 2nd motor	Accord	ding to inverte	r rating		
H030	Auto constant R1, 1st motor	Accord	ding to inverte	r rating		
H230	Auto constant R1, 2nd motor	Accord	ding to inverte	r rating		
H031	Auto constant R2, 1st motor	Accord	ding to inverte	r rating		
H231	Auto constant R2, 2nd motor	Accord	ding to inverte	r rating		
H032	Auto constant L, 1st motor	Accord	According to inverter rating			
H232	Auto constant L, 2nd motor	Accord	According to inverter rating			
H033	Auto constant Io, 1st motor	Accord	According to inverter rating			
H233	Auto constant Io, 2nd motor	Accore	According to inverter rating			
H034	Auto constant J, 1st motor	Accore	ding to inverte	r rating		
H234	Auto constant J, 2nd motor	Accore	ding to inverte	r rating		
H050	PI proportional gain for 1st motor	100.0	100.0	100.0		
H250	PI proportional gain for 2nd motor	100.0	100.0	100.0		

"H" Group Parameters Default Setting						
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
H051	PI integral gain for 1st motor	100.0	100.0	100.0		
H251	PI integral gain for 2nd motor	100.0	100.0	100.0		
H052	P proportional gain setting for 1st motor	1.00	1.00	1.00		
H252	P proportional gain setting for 2nd motor	1.00	1.00	1.00		
H060	Zero LV limit for 1st motor	100.	100.	100.		
H260	Zero LV limit for 2nd motor	100.	100.	100.		
H061	Zero LV starting boost current for 1st motor	50.	50.	50.		
H261	Zero LV starting boost current for 2nd motor	50.	50.	50.		
H070	Terminal selection PI proportional gain setting	100.0	100.0	100.0		
H071	Terminal selection PI integral gain setting	100.0	100.0	100.0		
H072	Terminal selection P proportional gain setting	1.00	1.00	1.00		
H073	Gain switching time	100.	100.	100.		

Expansion Card Functions

	"P" Group Parameters]]	Default Setting	g	T
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting
P001	Operation mode on expansion card 1 error	00	00	00	
P002	Operation mode on expansion card 2 error	00	00	00	
P011	Encoder pulse-per-revolution (PPR) setting	1024	1024	1024	
P012	Control pulse setting	00	00	00	
P013	Pulse line mode setting	00	00	00	
P014	Home search stop position setting	0.	0.	0.	
P015	Home search speed setting	5.00	5.00	5.00	
P016	Home search direction setting	00	00	00	
P017	Home search completion range setting	5	5	5	
P018	Home search completion delay time setting	0.00	0.00	0.00	
P019	Electronic gear set position selection	00	00	00	
P020	Electronic gear ratio numerator setting	1.	1.	1.	
P021	Electronic gear ratio denominator setting	1.	1.	1.	
P022	Feed-forward gain setting	0.00	0.00	0.00	
P023	Position loop gain setting	0.50	0.50	0.50	
P024	Position bias setting	0.	0.	0.	
P025	Temperature compensation thermistor enable	00	00	00	
P026	Over-speed error detection level setting	135.0	135.0	135.0	
P027	Speed deviation error detection level setting	7.50	7.50	7.50	
P028	Numerator of motor gear ratio	1.	1.	1.	
P029	Denominator of motor gear ratio	1.	1.	1.	
P031	Accel/decel time input selection	00	00	00	
P032	Positioning command input selection	00	00	00	
P033	Torque command input selection	00	00	00	
P034	Torque command setting	0.	0.	0.	
P035	Torque command polarity select	00	00	00	
P036	Torque bias mode	00	00	00	
P037	Torque bias value	0.	0.	0.	
P038	Torque bias polarity selection	00	00	00	
P039	Forward maximum speed for torque-controlled operation	0.00	0.00	0.00	
P040	Reverse maximum speed for torque-controlled operation	0.00	0.00	0.00	
P044	DeviceNet comm watchdog timer	01	01	01	

	"P" Group Parameters	1	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
P045	Inverter action on DeviceNet comm error	21	21	21		
P046	DeviceNet polled I/O: Output instance number	71	71	71		
P047	DeviceNet polled I/O: Input instance number	01	01	01		
P048	Inverter action on DeviceNet idle mode	0	0	0		
P049	Motor poles setting for RPM	01	01	01		
P055	Pulse train frequency span	25.0	25.0	25.0		
P056	Pulse train frequency time constant	0.10	0.10	0.10		
P057	Pulse train frequency bias	0.	0.	0.		
P058	Pulse train frequency limit	100.	100.	100.		
P060	Multi-stage position setting 0	0	0	0		
P061	Multi-stage position setting 1	0	0	0		
P062	Multi-stage position setting 2	0	0	0		
P063	Multi-stage position setting 3	0	0	0		
P064	Multi-stage position setting 4	0	0	0		
P065	Multi-stage position setting 5	0	0	0		
P066	Multi-stage position setting 6	0	0	0		
P067	Multi-stage position setting 7	0	0	0		
P068	Home position mode selection	00	00	00		
P069	Home position direction selection	00	00	00		
P070	Low speed homing frequency	0.00	0.00	0.00		
P071	High speed homing frequency	0.00	0.00	0.00		
P072	Forward position range setting	268435455	268435455	268435455		
P073	Reverse position range setting	268435455	268435455			
P074	Position teaching selection	00	00	00		
P100	Easy sequence parameter (U00)	0.	0.	0.		
P101	Easy sequence parameter (U01)	0.	0.	0.		
P102	Easy sequence parameter (U02)	0.	0.	0.		
P103	Easy sequence parameter (U03)	0.	0.	0.		
P104	Easy sequence parameter (U04)	0.	0.	0.		
P105	Easy sequence parameter (U05)	0.	0.	0.		
P106	Easy sequence parameter (U06)	0.	0.	0.		
P107	Easy sequence parameter (U07)	0.	0.	0.		
P108	Easy sequence parameter (U08)	0.	0.	0.		
P109	Easy sequence parameter (U09)	0.	0.	0.		
P110	Easy sequence parameter (U10)	0.	0.	0.		
P111	Easy sequence parameter (U11)	0.	0.	0.		

"P" Group Parameters		1	Default Setting			
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	User Setting	
P112	Easy sequence parameter (U12)	0.	0.	0.		
P113	Easy sequence parameter (U13)	0.	0.	0.		
P114	Easy sequence parameter (U14)	0.	0.	0.		
P115	Easy sequence parameter (U15)	0.	0.	0.		
P116	Easy sequence parameter (U16)	0.	0.	0.		
P117	Easy sequence parameter (U17)	0.	0.	0.		
P118	Easy sequence parameter (U18)	0.	0.	0.		
P119	Easy sequence parameter (U19)	0.	0.	0.		
P120	Easy sequence parameter (U20)	0.	0.	0.		
P121	Easy sequence parameter (U21)	0.	0.	0.		
P122	Easy sequence parameter (U22)	0.	0.	0.		
P123	Easy sequence parameter (U23)	0.	0.	0.		
P124	Easy sequence parameter (U24)	0.	0.	0.		
P125	Easy sequence parameter (U25)	0.	0.	0.		
P126	Easy sequence parameter (U26)	0.	0.	0.		
P127	Easy sequence parameter (U27)	0.	0.	0.		
P128	Easy sequence parameter (U28)	0.	0.	0.		
P129	Easy sequence parameter (U29)	0.	0.	0.		
P130	Easy sequence parameter (U30)	0.	0.	0.		
P131	Easy sequence parameter (U31)	0.	0.	0.		

User-selectable Menu Functions

	"P" Group Parameters	I	User		
Func. Code	Name	FEF2, FE2 (Europe)	FU2, FU2 (U.S.A.)	FF2, F2 (Japan)	Setting
U001		no	no	no	
U002		no	no	no	
U003		no	no	no	
U004		no	no	no	
U005		no	no	no	
U006	User-selected function "no" = disabled,	no	no	no	
U007	or use any of the functions D001 to P049	no	no	no	
U008		no	no	no	
U009		no	no	no	
U010		no	no	no	
U011		no	no	no	
U012		no	no	no	



CE–EMC Installation Guidelines



In This Appendix	page
— <u>CE–EMC Installation Guidelines</u>	<u>2</u>
— Precautions for EMC, Models SJ700-004 to -1500	<u>4</u>
— Precautions for EMC, Models SJ700-1850 to -4000	<u>5</u>

CE–EMC Installation Guidelines

Call 1(800)985-6929 for Sales

CE–EMC Installation Guidelines

You are required to satisfy the EMC directive (89/336/EEC) when using an SJ7002 inverter in an EU country. To satisfy the EMC directive and to comply with standard, follow the guidelines in this section.

- **1.** As user you must ensure that the HF (high frequency) impedance between adjustable frequency inverter, filter, and ground is as small as possible.
 - Ensure that the connections are metallic and have the largest possible contact areas (zincplated mounting plates).
- 2. Avoid conductor loops that act like antennas, especially loops that encompass large areas.
 - Avoid unnecessary conductor loops.
 - Avoid parallel arrangement of low-level signal wiring and power-carrying or noise-prone conductors.
- 3. Use shielded wiring for the motor cable and all analog and digital control lines.
 - Allow the effective shield area of these lines to remain as large as possible; i.e., do not strip away the shield (screen) further away from the cable end than absolutely necessary.
 - With integrated systems (for example, when the adjustable frequency inverter is communicating with some type of supervisory controller or host computer in the same control cabinet and they are connected at the same PE-potential), connect the shields of the control lines to ground + PE (protective earth) at both ends. With distributed systems (for example the communicating supervisory controller or host computer is not in the same control cabinet and there is a distance between the systems), we recommend connecting the shield of the control lines only at the end connecting to the adjustable frequency inverter. If possible, route the other end of the control lines directly to the cable entry section of the supervisory controller or host computer. The shield conductor of the motor cables always must connected to PE at both ends.
 - To achieve a large area contact between shield and PE-potential, use a PG screw with a metallic shell, or use a metallic mounting clip.
 - Use only cable with braided, tinned copper mesh shield (type "CY") with 85% coverage.
 - The shielding continuity should not be broken at any point in the cable. If the use of reactors, contactors, terminals, or safety switches in the motor output is necessary, the unshielded section should be kept as short as possible.
 - Some motors have a rubber gasket between terminal box and motor housing. Very often, the terminal boxes, and particularly the threads for the metal PG screw connections, are painted. Make sure there is always a good metallic connection between the shielding of the motor cable, the metal PG screw connection, the terminal box, and the motor housing. If necessary, carefully remove paint between conducting surfaces.
- 4. Take measures to minimize interference that is frequently coupled in through installation cables.
 - Separate interfering cables with 0.25m minimum from cables susceptible to interference. A particularly critical point is laying parallel cables over longer distances. If two cables intersect (one crosses over the other), the interference is smallest if they intersect at an angle of 90°. Cables susceptible to interference should therefore only intersect motor cables, intermediate circuit cables, or the wiring of a rheostat at right angles and never be laid parallel to them over longer distances.
- 5. Minimize the distance between an interference source and an interference sink (interference-threatened device), thereby decreasing the effect of the emitted interference on the interference sink.
 - You should use only interference-free devices and maintain a minimum distance of 0.25 m from the adjustable frequency inverter.

sales@hitachiacdrive.com


-3

6. Follow safety measures in the filter installation.

• Ensure that the protective earth terminal (PE) of the filter is properly connected to the PE terminal of the adjustable frequency inverter. An *HF ground connection* via metal contact between the housings of the filter and the adjustable frequency inverter, or solely via cable shield, *is not permitted as a protective conductor connection*. The *filter must be solidly and permanently connected with the ground potential* so as to preclude the danger of electric shock upon touching the filter if a fault occurs.

To achieve a protective ground connection for the filter:

- Ground the filter with a conductor of at least 10 mm² cross-sectional area.
- Connect a second grounding conductor, using a separate grounding terminal parallel to the protective conductor. (The cross section of each single protective conductor terminal must be sized for the required nominal load.)

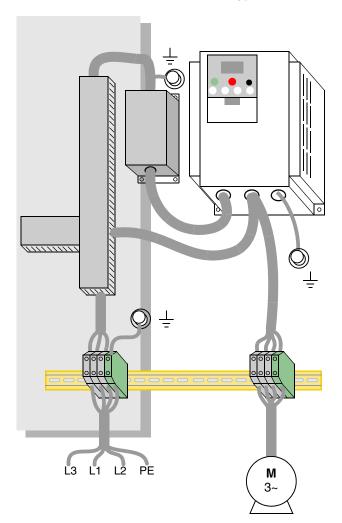

SJ7002 inverter with book-type filter

Precautions for EMC, Models SJ700-004 to -1500

The SJ7002 series inverter conforms to the requirements of Electromagnetic Compatibility (EMC) Directive (2004/108/EC). However, when using the inverter in Europe, you must comply with the following specifications and requirements to meet the EMC Directive and other standards in Europe:



Call 1(800)985-6929 for Sales

WARNING: This equipment must be installed, adjusted, and maintained by qualified engineers who have expert knowledge of electric work, inverter operation, and the hazardous circumstances that can occur. Otherwise, personal injury may result.

Use the following checklist to ensure the inverter is within proper operating ranges and conditions.

- 1. Power supply requirements
 - **a.** Voltage fluctuation must be -15% to +10% or less.
 - **b.** Voltage imbalance must be $\pm 3\%$ or less.
 - c. Frequency variation must be $\pm 4\%$ or less
 - **d.** Total harmonic distortion (THD) of voltage must be $\pm 10\%$ or less.
- 2. Installation requirement
 - **a.** A special filter intended for the SJ7002 series inverter must be installed.
- 3. Wiring requirements
 - **a.** A shielded wire (screened cable)must be used for motor wiring, and the length must be according to the following table below.
 - **b.** The carrier frequency must be set according to the following table to meet an EMC requirement.
 - c. The main circuit wiring must be separated from the control circuit wiring.
- 4. Environmental requirements (to be met when a filter is used)
 - **a.** Ambient temperature must be within the range -10° C to 40° C.
 - **b.** Relative humidity must be within the range 20% to 90% (non-condensing).
 - c. Vibrations must be
 5.9 m/sec² (0.6 G) (10 to 55Hz) or less (0.4 to 22kW).
 2.94 m/sec² (0.3 G) (10 to 55Hz) or less (30 to 150kW).
 - **d.** The inverter must be installed indoors (not exposed to corrosive gases and dust) at an altitude of 1,000 m or less.

Models	Cat.	Cable length (m)	Carrier freq. (kHz)	Models	Cat.	Cable length (m)	Carrier freq. (kHz)
SJ700-004L	C3	5	2.5		_		_
SJ700-007L	C3	5	2.5	SJ700-007H	C3	5	2.5
SJ700-015L	C3	5	2.5	SJ700-015H	C3	5	2.5
SJ700-022L	C3	5	2.5	SJ700-022H	C3	5	2.5
SJ700-037L	C3	5	2.5	SJ700-040H	C3	5	2.5
SJ700-055L	C3	1	1	SJ700-055H	C3	1	2.5
SJ700-075L	C3	1	1	SJ700-075H	C3	1	2.5
SJ700-110L	C3	1	1	SJ700-110H	C3	1	2.5
SJ700-150L	C3	1	1	SJ700-150H	C3	1	2.5
SJ700-185L	C3	1	1	SJ700-185H	C3	1	2.5
SJ700-220L	C3	5	2.5	SJ700-220H	C3	1	2.5

sales@hitachiacdrive.cc

SJ7002 Inverter

D-5

Models	Cat.	Cable length (m)	Carrier freq. (kHz)	Models	Cat.	Cable length (m)	Carrier freq. (kHz)
SJ700-300L	C3	5	2.5	SJ700-300H	C3	1	2.5
SJ700-370L	C3	5	2.5	SJ700-370H	C3	1	2.5
SJ700-450L	C3	5	2.5	SJ700-450H	C3	5	2.5
SJ700-550L	C3	5	2.5	SJ700-550H	C3	5	2.5
				SJ700-750H	C3	10	2.5
				SJ700-900H	C3	10	2.5
				SJ700-1100H	C3	10	2.5
				SJ700-1320H SJ700-1500H	C3	10	2.5

Precautions for EMC, Models SJ700-1850 to -4000


The SJ7002 series inverter conforms to the requirements of Electromagnetic Compatibility (EMC) Directive (2004/108/EC). However, when using the inverter in Europe, you must comply with the following specifications and requirements to meet the EMC Directive and other standards in Europe:



WARNING: This equipment must be installed, adjusted, and maintained by qualified engineers who have expert knowledge of electric work, inverter operation, and the hazardous circumstances that can occur. Otherwise, personal injury may result.

Use the following checklist to ensure the inverter is within proper operating ranges and conditions.

- 1. Power supply requirements
 - **a.** Voltage fluctuation must be -15% to +10% or less.
 - **b.** Voltage imbalance must be $\pm 3\%$ or less.
 - c. Frequency variation must be $\pm 4\%$ or less.
 - **d.** Total harmonic distortion (THD) of voltage must be $\pm 10\%$ or less.
- 2. Installation requirements
 - **a.** A special filter and a ferrite core intended for the SJ7002 large capacity series inverter must be installed, shown in the table below.
 - b. A provided direct reactor with the SJ700 large capacity series inverter must be installed.

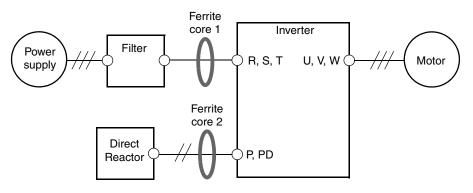

Precautions for EMC, Models SJ700-1850 to -4000

	Category C2			Category C3		
Models	Filter	Ferrite Core 1	Ferrite Core 2	Filter	Ferrite Core 1	Ferrite Core 2
SJ700-1850HFU2/HFE2	~	~	×	×	×	×
SJ700-3150HFU2/HFE2	~	×	×	×	×	×
SJ700-4000HFU2/HFE2	~	~	×	×	×	×

✓ = Installation

 \mathbf{X} = No installation


3. Wiring requirements

- **a.** Shielded wire (screened cable) is required for motor wiring but is not required for direct reactor wiring. And, the length of the cable must be according to the following table.
- **b.** The carrier frequency setting must be less than 3 kHz (derated is required) to meet an EMC requirement.
- c. The main circuit wiring must be separated from the control circuit wiring.
- 4. Environmental requirements (to be met when a filter is used)
 - **a.** Ambient temperature must be within the range -10° C to 40° C.
 - **b.** Relative humidity must be within the range 20% to 90% (non-condensing).
 - c. Vibrations must be $1.96 \text{ m/sec}^2 (0.2 \text{ G}) (10 \text{ to } 55 \text{Hz})$ or less.
 - **d.** The inverter must be installed indoors (not exposed to corrosive gas and dust) at an altitude of 1,000 m or less.

Models	Cable length (m)				
Widdels	to motor	to DC reactor			
SJ700-1850HFU2/HFE2	5	5			
SJ700-3150HFU2/HFE2	10	5			
SJ700-4000HFU2/HFE2	10	5			

hitachiacdrive.com

Index

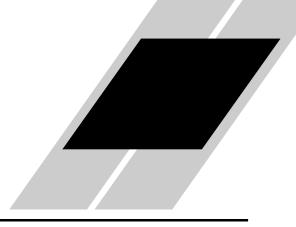

Α

A Group functions 3-10Absolute Position Control Mode 3-72 AC reactors 5-3Acceleration 1-16, 3-9characteristic curves 3-26second function 3-24two-stage 4-20 Acceleration stop function 3-21Access levels <u>3–5</u>, <u>3–38</u>, <u>4–23</u> Access to terminals 2-2Accessories 5-2 Adaptive auto-tuning 4-73ADD frequency enable 4-34Alarm signal 4-47 Algorithms 3-66 Algorithms, torque control 3-5Ambient temperature 2-8, A-2 Analog disconnect detection 4-55Analog input settings 3-11, 3-27 Analog inputs current/voltage select 4-24operation 4-63sampling filter 4-63wiring examples 4-65Analog outputs FM type <u>4-67</u> operation <u>4-66</u> PWM type <u>4-66</u> Analog signal calibration 3-62Anti-windmilling <u>3–18</u>, <u>3–21</u> Arrival frequency A-2ASCII code table B-19ASCII mode communications **B-5** Automatic restart 3-30Automatic voltage regulation 3-23Auto-tuning 4-71, A-2 adaptive 4-73procedure <u>4-72</u> Auto-tuning constants 3-66 AVR <u>3–23</u>

В

B Group functions 3–30 Base frequency 2–32, A–2 Bibliography A–6 Block check code <u>B–19</u> Brake control, external 3–48, 4–32, 4–54 Braking <u>1–16</u> dynamic 5–6 Braking resistor 2–5, A–2 Braking resistor selection 5–7 Braking unit 2–5 Braking, dynamic <u>1–19</u> Break-away torque <u>A–2</u>

С

C Group functions 3-50 Capacitor life curve 6-20 Capacitor life warning 4-58 Capacitor replacement 6-21 Carrier frequency 3-44, A-2 Catching a spinning motor 3-45, 3-62 CE approval A-2 CE-EMC guidelines D-2 Chassis ground connection 2-26Choke 2-5, A-2 Choke, DC link 5-4 Chopper frequency 3-44Circuit breaker sizes xv Clear cumulative power value 4-36Clearance 2-8 Coasting 3-45, 3-62 Commercial power source enable 4-22Communication test mode B-20Communications 3-61 Communications protocol, ASCII B-5 Communications protocol, ModBus B-21 Communications, serial $\underline{B-2}$ Constant torque 3-15Constant volts/hertz operation 1-14

Control algorithms 3-14Control gain switching 4-26Controlled deceleration 3-42Controlled deceleration at power loss 4-4

<u>Call 1(800)</u>985-6929 for Sales

Index**-2**

Cooling fan control 3-47Copy Unit 1-3Current forcing 4-37Current overload 3-36Current overload restriction 4-29

D

D Group parameters 3-6DC braking <u>4–18</u>, <u>4–19</u>, <u>A–2</u> derating 3-20settings <u>3–18</u> DC link A-2 choke 5-4Deadband A-2 Deceleration <u>1-16</u>, <u>3-9</u>, <u>4-18</u> characteristic curves 3-26second function 3-24two-stage 4-20 Default parameter values C-2Default settings restoring 6-16 Derating DC braking 3-20 Derivative gain 3-22DeviceNet 5-5 Digital operator 2-29, 3-3force operation 4-28removal 2-4 Digital operator panel <u>A–2</u> Digital operators 1-3Dimensions inverter 2-9 terminals 2-20Diode A-3Display restriction 3-39Droop control 4-27 Duty cycle A-3Dynamic braking 5-6, A-3 usage ratio <u>3-47</u>, <u>5-6</u>

Ε

Easy sequence 4–38 Editing parameters 2–29, 2–32 in Run Mode 3–5, 3–38, 4–23 Electromagnetic compatibility D–2 Electronic thermal overload 3–32 Elevator braking 3–48 EMC installation guidelines D–2 EMC installation precautions D–4 Emergency Stop function 2–37 EMI A–3 EMI filter 5–4 Encoder feedback 3–17 Energy savings mode 3–23 Error PID loop <u>4–46</u>, <u>A–3</u> Error codes programming <u>3–75</u> trip events <u>6–6</u> Event clearing <u>4–24</u> Expansion bay <u>2–4</u> Expansion card functions <u>3–69</u> Expansion cards digital input <u>5–5</u> encoder feedback <u>5–5</u> input signals <u>4–34</u> output signals <u>4–54</u> External brake control <u>4–32</u>, <u>4–54</u>

F

F Group functions <u>3–9</u> Factory settings, restoring 6-16Fan default setting 3-47Fan outlet 2-8, 2-26Fan replacement 6-23 Fan unit, Filler plate 1-4FAQ <u>1–18</u> Features <u>1-2</u>, <u>2-2</u> Ferrite core 5–4 Filters noise suppression 5-2 Fine-tuning functions 3-30 Force operation from digital operator 4-28Force terminal mode 4-35Forward run command 4-15Forward/reverse drive stop 4-41Forward/reverse rotation signals 4-61Four-quadrant operation A-3Free-run stop <u>3-45</u>, <u>3-62</u>, <u>4-18</u>, <u>4-20</u>, <u>A-3</u> Frequency arrival signals 4-44 Frequency matching 3-45, 3-62 Frequency setting A-3Frequency-related functions 3-20 Frequently asked questions 1-18Functions 1-16 Fuse ratings 2-18Fuse sizes xv Fuzzy logic accel/decel 3-23

G

Gain settings 4-26General output signals 4-60General purpose inputs 4-38Glossary of terms A-2 Grommets 2-17

hitachiacdrive.com

sales@hitachiacdrive.com SJ7002 Inverter

Η

H Group parameters <u>3–66</u> Harmonics <u>A–3</u> Heatsink overheat warning <u>4–59</u> History of trip events <u>3–8</u> Home search <u>A–4</u> Horsepower <u>A–3</u>

1 1

I

IGBT <u>1–14</u>, <u>A–3</u> test method 6-27Index of terminal functions 4-11Inertia A-3Initialization 6-16Input active range 3-27Input circuits 4-13Input terminals 2-22Inspection electrical measurements 6-25IGBT test method 6-27measurement techniques 6-26procedures 6-17 unpacking 2-2 Installation 2-6 Instantaneous power failure 4-48Insulation test 6-19Integral gain 3-22 Intelligent input terminals 3-50, 4-13 Intelligent input wiring examples 4-13 Intelligent output terminals 3-55, 4-43 Intelligent terminal functions 3-50Intelligent terminal index 4-11 Intelligent terminals A-3Inverter <u>1-18</u> Inverter definition A-3Inverter ready signal 4-61Inverter specifications 1-6Isolation transformer A-4

J

Jog command 4-18Jog frequency settings 3-13Jogging operation A-4 Jump frequency 3-21, A-4

Κ

Keypad features <u>2–29</u>, <u>3–3</u> navigation <u>2–31</u>, <u>3–4</u> navigation, trip events <u>6–15</u> Keypad features <u>2–29</u> Keypads <u>1–3</u>, <u>3–2</u>

L

LEDs 2–29, 3–3 Line reactor A–4 Linear accel/decel 3–26 Logic connector 4–9 Logic output signals 4–58 Logic terminals 3–50, 3–55 input wiring examples 4–13 Low cooling fan speed 4–59 Low output current signal 4–60

Μ

Main profile parameters <u>3–9</u> Maintenance procedures 6-17Major failure signal 4-61Megger test 6-19ModBus mode communications B-21Model number convention 1-5Momentum A-4 Monitor mode 2-31, 2-35, 2-36, 3-4 Monitoring functions 3-6Motor constants <u>3-66</u>, <u>4-69</u> auto-tuning 4-71 manual setting of 4-74Motor load A-4 Motor poles 2-34Motor selection 1-19Motor wiring 2-26Mounting location 2-6Multiple motors configuration 4-76 Multi-speed operation 4-15, 4-17, A-4 Multi-speed profiles 1-16 Multi-speed settings 3-13 Multi-stage position select 4-39

Ν

Nameplate <u>1–5</u> Navigational map <u>2–31</u>, <u>3–4</u> trip events <u>6–15</u> NEC <u>A–4</u> NEMA <u>A–4</u> NEMA compliance <u>2–17</u> NEMA rating <u>2–8</u> Network detection signal <u>4–57</u> Noise filters <u>5–2</u> AC reactor <u>2–5</u> Noise suppression <u>1–19</u>

0

Open-collector outputs 4-43, A-4 Operational modes 3-5Operator interfaces 1-3Optimal accel/decel 3-23 Optional components 2-5Options <u>1–2</u> Orientation A-4 Output circuits 4-43Output deviation for PID control 4-46 Output frequency 3-9Output overload 3-36Output terminals 2-26 Over-current trip 3-30Overload advance notice signal 4-46Overload restriction 3-36, 4-29 Over-torque signal 4-48

Ρ

P Group functions 3-69 P/PI selection 4-26Parameter editing 2–29, 2–32 Parameter settings tables C-2Parameters 1-16 Phase loss 3-30 PID feedback second stage output 4-56PID loop <u>1–19</u>, <u>A–4</u> Clear integrator 4-26Disable <u>4–26</u> error A-3 operation 4-75 output deviation 4-46process variable A-4 setpoint A-5 settings 3-22 PLC, connecting to 4-7Poles <u>1–19</u> Poles of motor 2-34Potentiometer 2-33, 4-65 Power factor A-4Power failure 4-48Power failure response 3-30Power loss <u>4-4</u> Power loss response 3-42Power source switching 4-22Power-on time over signal 4-51Powerup test 2-27observations 2-36Powerup, unattended start 4-21Process variable A-4 Program mode <u>2–31</u>, <u>2–36</u>, <u>3–4</u> Programming device 3-2Programming error codes 3-75Programming error monitoring 3-8Proportional gain 3-22 Pulse counter signals 4-42Pulse-width modulation 4-66PWM <u>A-4</u>

R

Ratings label 1-5 Reactance <u>A-5</u> Read/write copy unit 1-3, 3-2Rectifier <u>A-5</u> Reduced torque 3-15Regenerative braking A-5Regulation A-5Regulatory agency approvals 1-5Relay alarm contacts 4-47 Remote control <u>4–28</u> Removable components 1-4Reset function 4-24 Reset Mode 3-62 Restart Mode <u>3-45</u>, <u>3-62</u> Retention screws 2-4Reverse run command 4-15Reverse torque A-5Reverse U-shape accel/decel 3-26 Rotor A-5 Run command 4-15 Run mode <u>2–36</u>, <u>3–5</u> Run signal 4-44 Running the motor 2-35Run-time edits <u>3–5</u>, <u>3–38</u>, <u>4–23</u> Run-time signal 4-51

S

Safety messages i Saturation voltage A=5Second motor 4-19 Second stage output, PID 4-56 Sensorless vector control 3-14, 3-16, A-5 Serial communications 3-61, B-2 Set 2nd/3rd motors 4-19 Setpoint A-5 Sigmoid accel/decel 3-26 Single-phase power A-5Sinking I/O 4–7 Slip A-5 Software lock <u>3–5</u>, <u>3–38</u>, <u>4–23</u> Sourcing I/O 4-7 Spare parts 6-20 Specifications general <u>1-10</u> logic signals <u>4-9</u> Speed control <u>1-14</u>, <u>1-16</u>, <u>4-15</u>, <u>4-17</u> Speed loop gains 4-26Speed pot 2-33Speed servo ON 4-37 Speed/position control select 4-41Squirrel cage A-5Standard functions 3-10 Start frequency A-5Starting contact signal 4-59Stator A-5

hitachiacdrive.com

sales@hitachiacdrive.com

SJ7002 Inverter

Stop command 4-15Stop Mode 3-45Supply wiring 2-22Switching frequency 3-44Symbol definitions <u>i</u> System description 2-5

Т

Tachometer A-5 Teaching (position) function 3-73Technical support 1-xxTerm definitions A-2Terminal block <u>1-4</u> Terminal listing 4-11Thermal overload 3-32Thermal protection 4-25Thermal switch A-6Thermal warning 4-52Thermistor A-6 Thermistor input 4-25Third motor 4-19Three-phase power A-6motor phase connections 1-15Three-wire interface 4-25Torque 1-14Torque boost 3-17Torque control algorithms 3-5, 3-14, 3-66 tuning 4-69Torque control enable 4-35Torque limit 4-30Torque limit signal 4-51Torque specs, terminals 2-20 Torque, definition A-6Transistor A-6 Transporting the inverter 2-7Trip events 3-8clearing 6-5 definition A-6error codes 6-6external 4-21 history <u>6–15</u> monitoring 6-5 Trip history 6–15 Trip mode 4-24Troubleshooting tips 6-3Two-stage accel/decel 4-20

U

U Group functions 3-74UL instructions <u>xii</u> Unattended start protection 4-21Under-voltage signal 4-48Under-voltage trip 3-30Unpacking 2-2Up/Down functions 4-28User-selectable menu functions 3-74U-shape accel/decel 3-26

V

V/f control <u>3–14</u> V/f control setting <u>3–47</u> V/f free-setting <u>3–16</u> Variable torque <u>3–15</u> Variable-frequency drives introduction <u>1–14</u> Velocity profile <u>1–16</u> Ventilation <u>2–8</u>, <u>2–26</u>

W

Warnings operating procedures 4-3Warranty 6-29 Watt loss A-6Windmilling 3-18, 3-21Window comparator signals 4-62Wiring analog inputs 4-65gauge 2-18 intelligent input wiring examples 4-13logic <u>2–26</u> logic connector 4-9output <u>2-26</u> power input 2-22 preparation 2-17 serial communications $\underline{B-3}$ system diagram 4-8

Ζ

Zero-phase reactor 5-4Zero-return functions 4-40

