









## To Set the Stop Mode


- 1 Press the 1 (Menu) soft key to enter Programming Mode
- 2 Press enter to select Scroll Mode
- 3 Press down until A: Standard Functions is reached
- 4 Press the enter key
- 5 Press the down key until AA115 is reached
- 6 Press enter to select parameter AA115
- 7 Now you can select the Stop Mode from the options below

0- Decel. To STOP

1- Free run STOP

- 8 Press 2 (Save) soft key to save the data

**BE SURE TO PRESS 2 (SAVE) SOFT KEY TO SAVE THE DATA TO EEPROM**

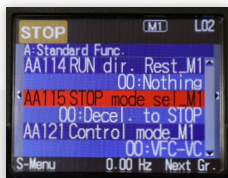

### TECH SUPPORT

980-500-7141

### WEBSITE

[www.hitachi-america.us/ice/inverters](http://www.hitachi-america.us/ice/inverters)

### EMAIL

[inverterinfo@hal.hitachi.com](mailto:inverterinfo@hal.hitachi.com)



SCAN THIS QR CODE  
to access the manual  
or register your  
product for warranty