

To Set the Run Command Source

- 1 Press ESC to enter programming mode
- 2 Press ESC until parameter A001 is on the display of your drive
- 3 Press the UP key until A002 is reached
- 4 Then press the SET key to enter the A002 parameter
- 5 Now you can select the run command source from the options below

01- To use the digital input via the terminals

02- When your application calls for using the Keypad for run command

03- Use this option when commanding your drive to run via your Modbus communication network

04- Option card used for run

- 6 Press the SET key to save the data



To Set the Frequency or Speed

- 1 Press ESC to enter programming mode
- 2 Press ESC until parameter F001 is on the display of your drive
- 3 Then press the SET key to enter the F001 parameter
- 4 Now you can adjust the speed of your drive based on your application
- 5 Press the SET key to save the data

F001 parameter can be adjusted with your drive stopped or running.



To Set the Acceleration Time

- 1 Press ESC to enter programming mode
- 2 Press ESC until parameter F001 is on the display of your drive
- 3 Press the UP key until F002 is reached
- 4 Then press the SET key to enter the F002 parameter
- 5 Now you can adjust the acceleration time of your drive based on your application. The time is adjusted using the UP and Down keys
- 6 Finally, press the SET key to save the data



To Set the Deceleration Time

- 1 Press ESC to enter programming mode
- 2 Press ESC until parameter F001 is on the display of your drive
- 3 Press the Up key until F003 is reached
- 4 Then press the SET key to enter the F003 parameter
- 5 Now you can adjust the deceleration time of your drive based on your application. The time is adjusted using the UP and Down keys
- 6 Press the SET key to save the data



To Set the Stop Mode

- 1 Press ESC to enter programming mode
- 2 Press ESC until parameter b001 is on the display of your drive
- 3 Press and hold the UP key until b091 is reached
- 4 Then press the SET key to enter the b091 parameter
- 5 Now you can select the Stop Mode from the options below

00- decelerate to stop
(controlled stop)

01- free run stop
(coast)

- 6 Press the SET key to save the data



TECH SUPPORT

980-500-7141

WEBSITE

www.hitachi-america.us/ice/inverters

EMAIL

inverterinfo@hal.hitachi.com



SCAN THIS QR CODE
to access the manual
or register your
product for warranty

HITACHI
Inspire the Next